


# E.C. Cutter<sup>®</sup>


## Electric Scissors Kit

E.C. Cutter can be used with the Rechargeable D.C. Battery or A.C. Adapter and Power Cord.


**D.C. Battery must be charged before using the first time.**

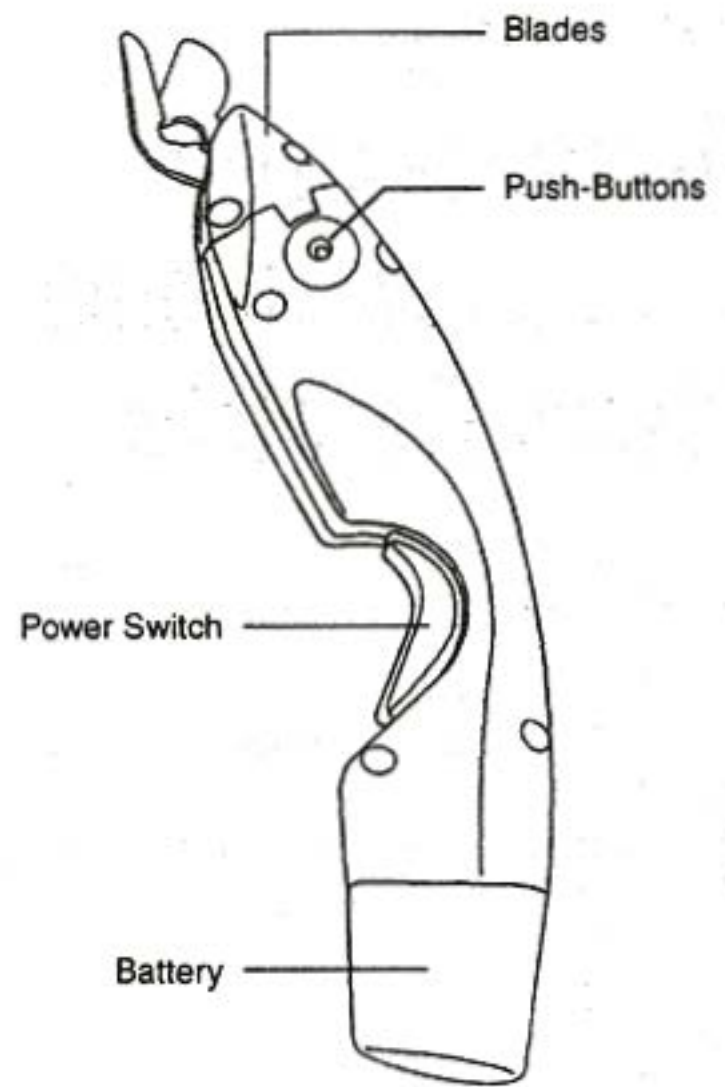

Rechargeable  
D.C. Battery  
Batterie  
rechargeable  
Bateria  
recargable de  
C.D.

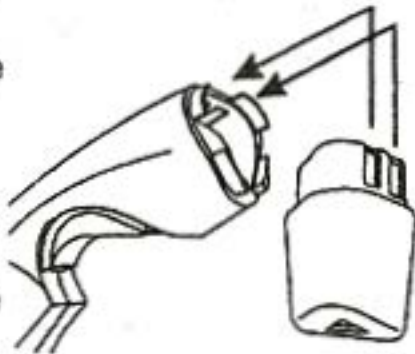

A.C. Adapter & Charger/  
Power Cord

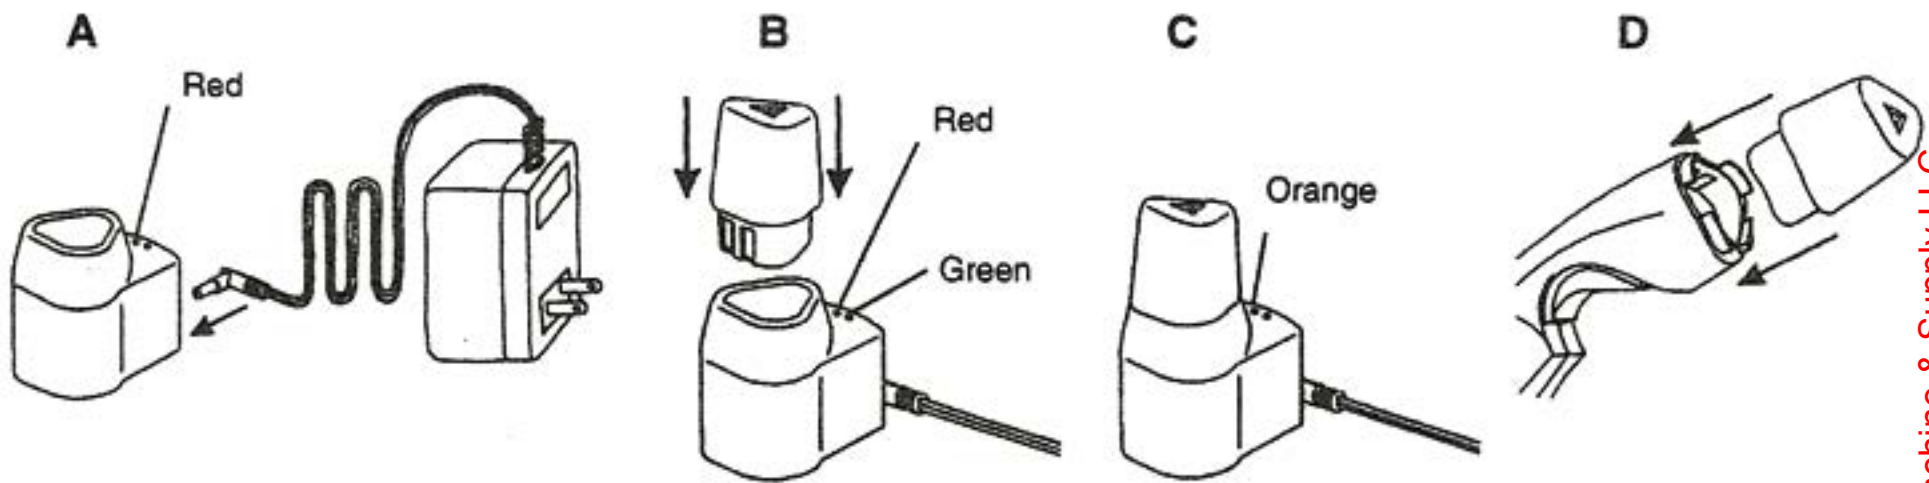

## How to Charge D.C. Battery

*Note: The Charger should only be operated on standard household electric power (110 Volts or 220 Volts). Do not use with any other voltage. The enclosed Charger and D.C. Battery are specially designed to work together. Do not charge Battery with any other Charger.*

1. Plug Power Cord into Charger Base and then into electrical outlet. The red light will come on (A).

2. Insert D.C. Battery into Charger Base, lining up contact points, and push down into place. The green light will come on indicating that the charging procedure has started (B).


3. When the battery is fully charged (3-5 hours), the green light will disappear and the red light will change to orange (C).

4. Insert charged D.C. Battery into end of scissors, lining up contact points, and push into place (D). Press Power Switch to operate scissors. Battery will last for 3-4 hours of use.

5. Repeat the above steps to recharge the battery after it has discharged. The battery does not need to be completely discharged before recharging.

*Note: If the discharged Battery is placed into the Charger and the green light does not appear, unplug from the electrical outlet. After the red light disappears, plug back into the electrical outlet. The red and green light will be on. The Battery is now charging.*



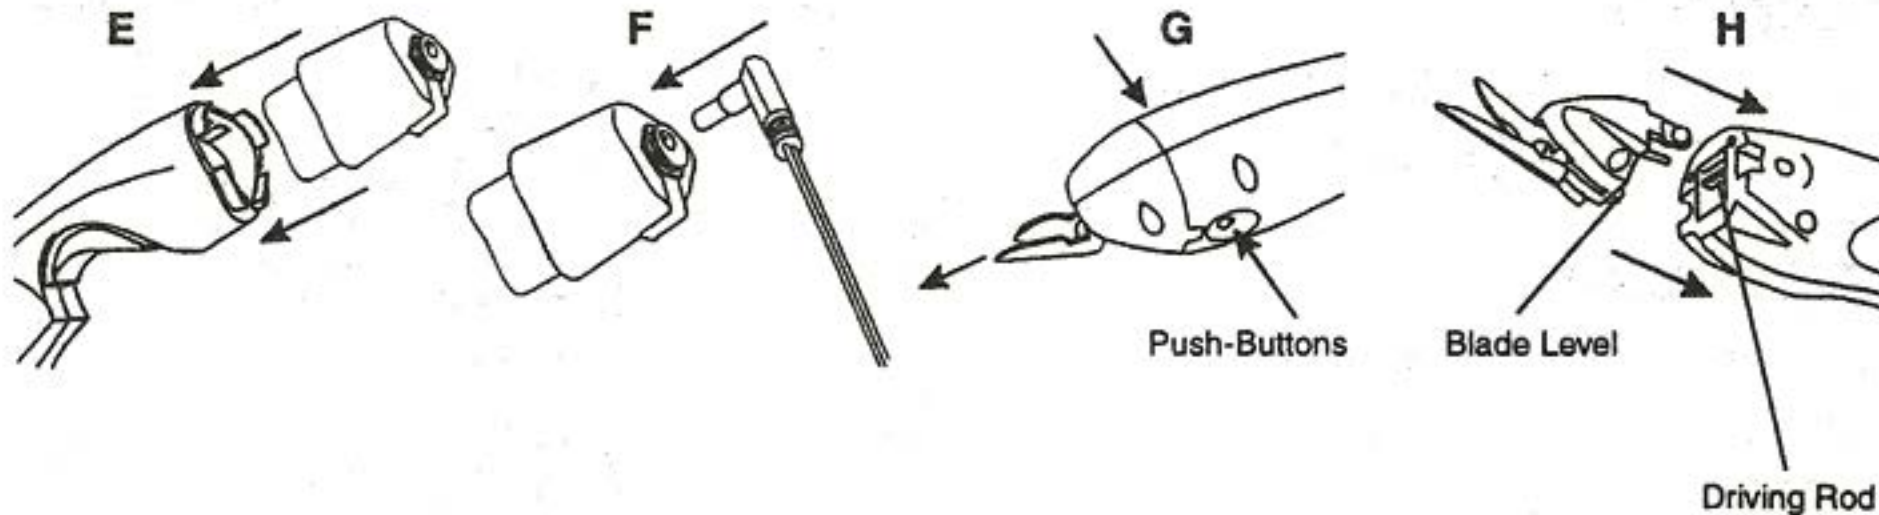

### How to Use A.C. Adapter

1. Insert A.C. Adapter into end of scissors, lining up contact points, and push into place (E).
2. Insert Power Cord into A.C. Adapter (F).
3. Plug Power Cord into electrical outlet. Press Power Switch to operate scissors.

*Note: Be sure to keep cord away from cutting area.*

### How to Change Blades


1. For safety, remove D.C. Battery or A.C. Adapter from end of scissors.
2. Firmly press yellow Push-Button on each side of scissors and pull out blades (G).
3. To insert new blades: Move upper blade up and down to position blade level fitting so it matches the motor driving rod inside scissors (H).
4. Gently squeeze Push-Buttons and snap blades into place.

### Important Safety Instructions:


- This is not a toy. Keep out of the reach of children.
- Do not drop scissors. This could cause damage to the blades and internal mechanisms.
- Keep fingers away from blades. Do not place fingers between the blades.
- Do not cut any metals or hard objects.
- Blades are made of carbide steel and never need to be sharpened.

**WARNING:**

To prevent damage, do not insert A.C. Adapter into Charger Base.

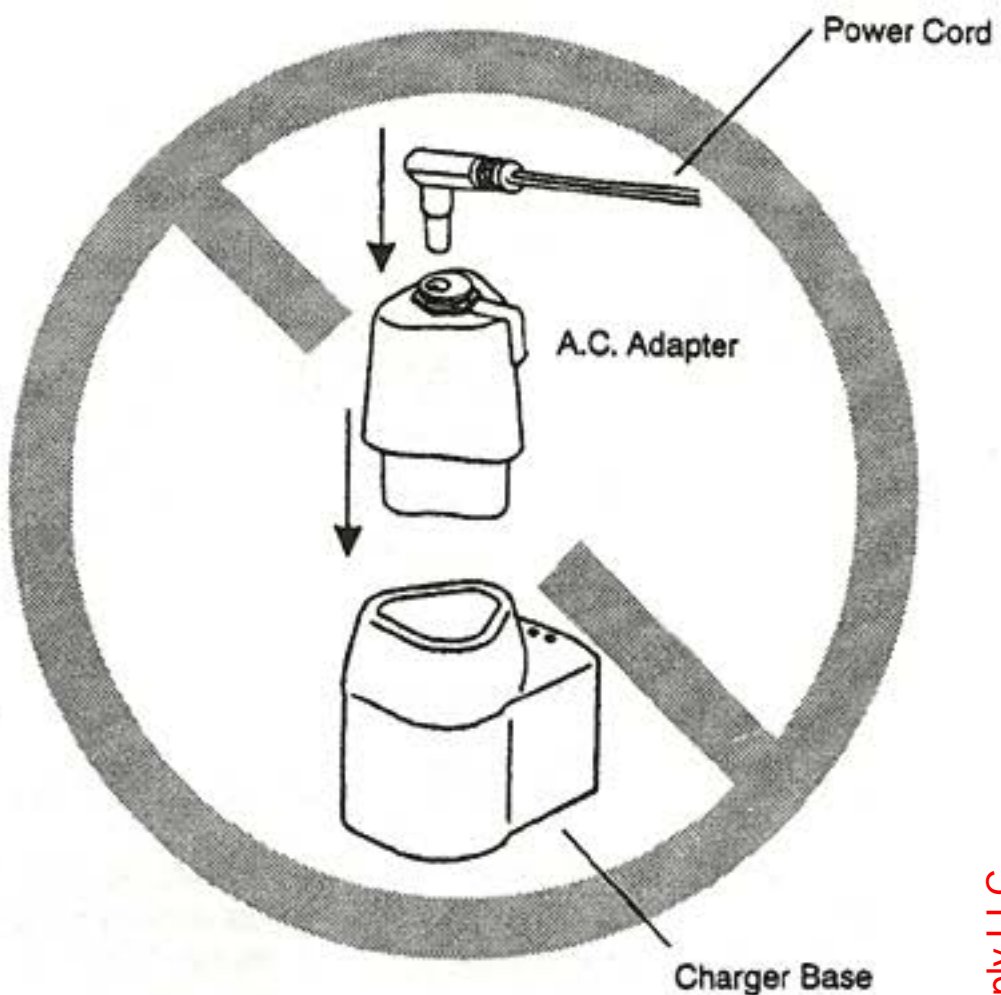

Only use A.C. Adapter to operate Scissors when using electricity.

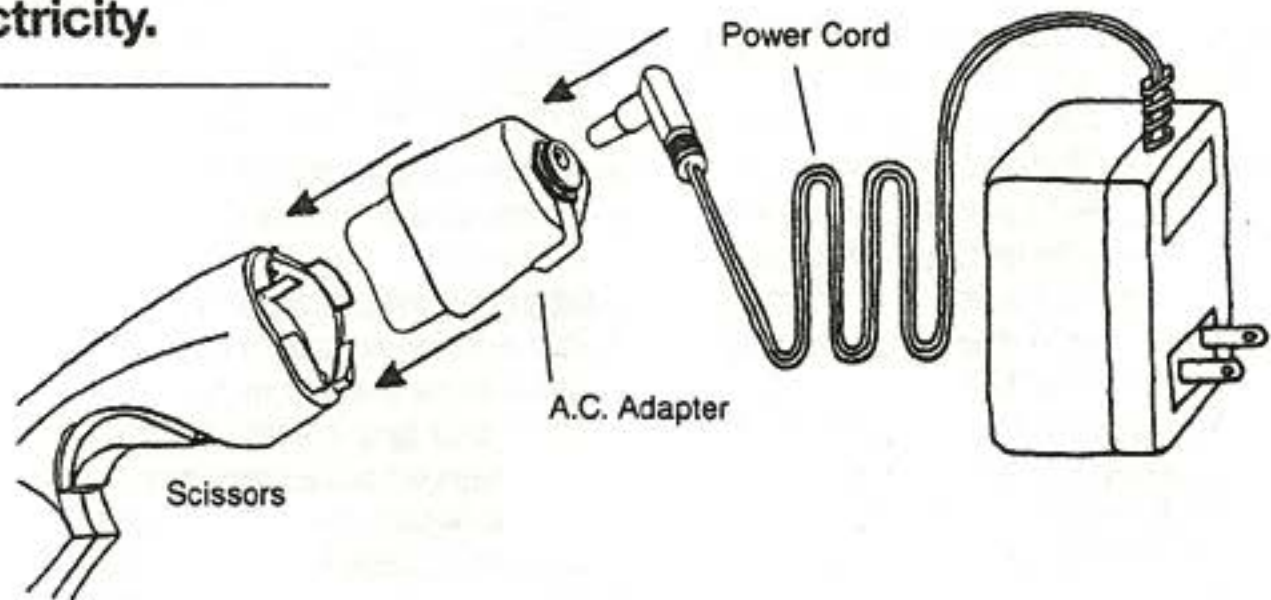

Charger Base should only be used with D.C. Battery.

