

# THREADING THE MACHINE

Rotate the hand wheel to right and place the thread take-up to the highest position.

1. Pass the needle thread in the order shown by the figure.
2. Pass the thread to the needle eye from left to right.
3. Pull out about 10 cm (4") of the thread from the needle eye.

