

## \* THREADING THE MACHINE

- \* Pass the needle thread as shown in the illustration.
- \* When passing the thread through the needle, use the thread passing instrument in the accessory box. Pass it as follows :
  - 1 Pass the tip of the instrument from front to the opposite side through the needle eye.
  - 2 Catch the needle thread on the tip of the passing instrument.
  - 3 If the instrument is pulled towards you in that condition, the needle thread will pass through the needle eye and will be pulled toward front.
- \* Pull out about 15 cm (6") of the needle thread which passed the needle eye and when the sewing is to be started, press this pulled out thread lightly on the right side of the bed. If it's pulled too forcefully to front, sometimes the needle might break. Be careful.

