

Thread the machine according to the following illustration; (Note that the right, middle and left threads must be passed through the inside, middle and outside thread holes respectively in the take-up lever)
Threads ①, ② and ③ are the needle threads (excepting thread ② for the 2-needle machine).
Thread ⑤ is the spreading thread (the spreading thread is used only by MF-880 and MF-890).

