

3. Passing the needle thread

Pass the needle thread in accordance with the order shown in the illustration after the needle bar has been brought up to it's highest position.

1. At the needle, pass the needle thread from the operator's side toward the far side.
2. Pull the thread out of the needle eye by about 10cm(4").

