

3) How to pass the needle thread

With the needle bar raised to its highest position, pass the thread in the order as shown in the figure.

1. Pass the thread to the needle hole toward the opposite side of the operator from the operator side.
2. Pull out the thread which was passed through the needle about 10 cm (4").

