


5. THREADING THE MACHINE HEAD

MS-1190

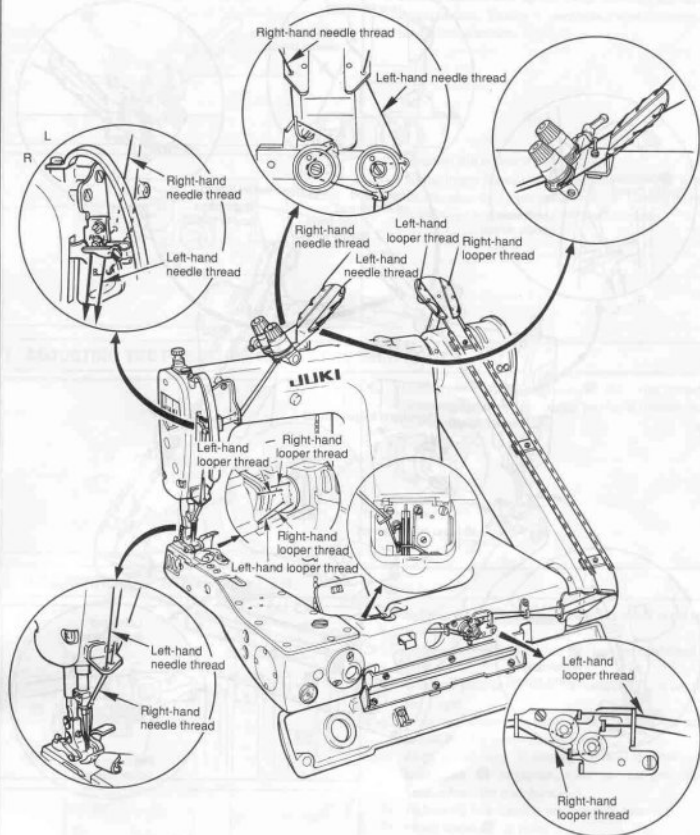

Thread the machine head in the order shown in the figure.

* Pass the needle threads along the marks L and R.

L : Left-hand needle thread R : Right-hand needle thread