


CONSEW

MODEL 210, 210A & 210B

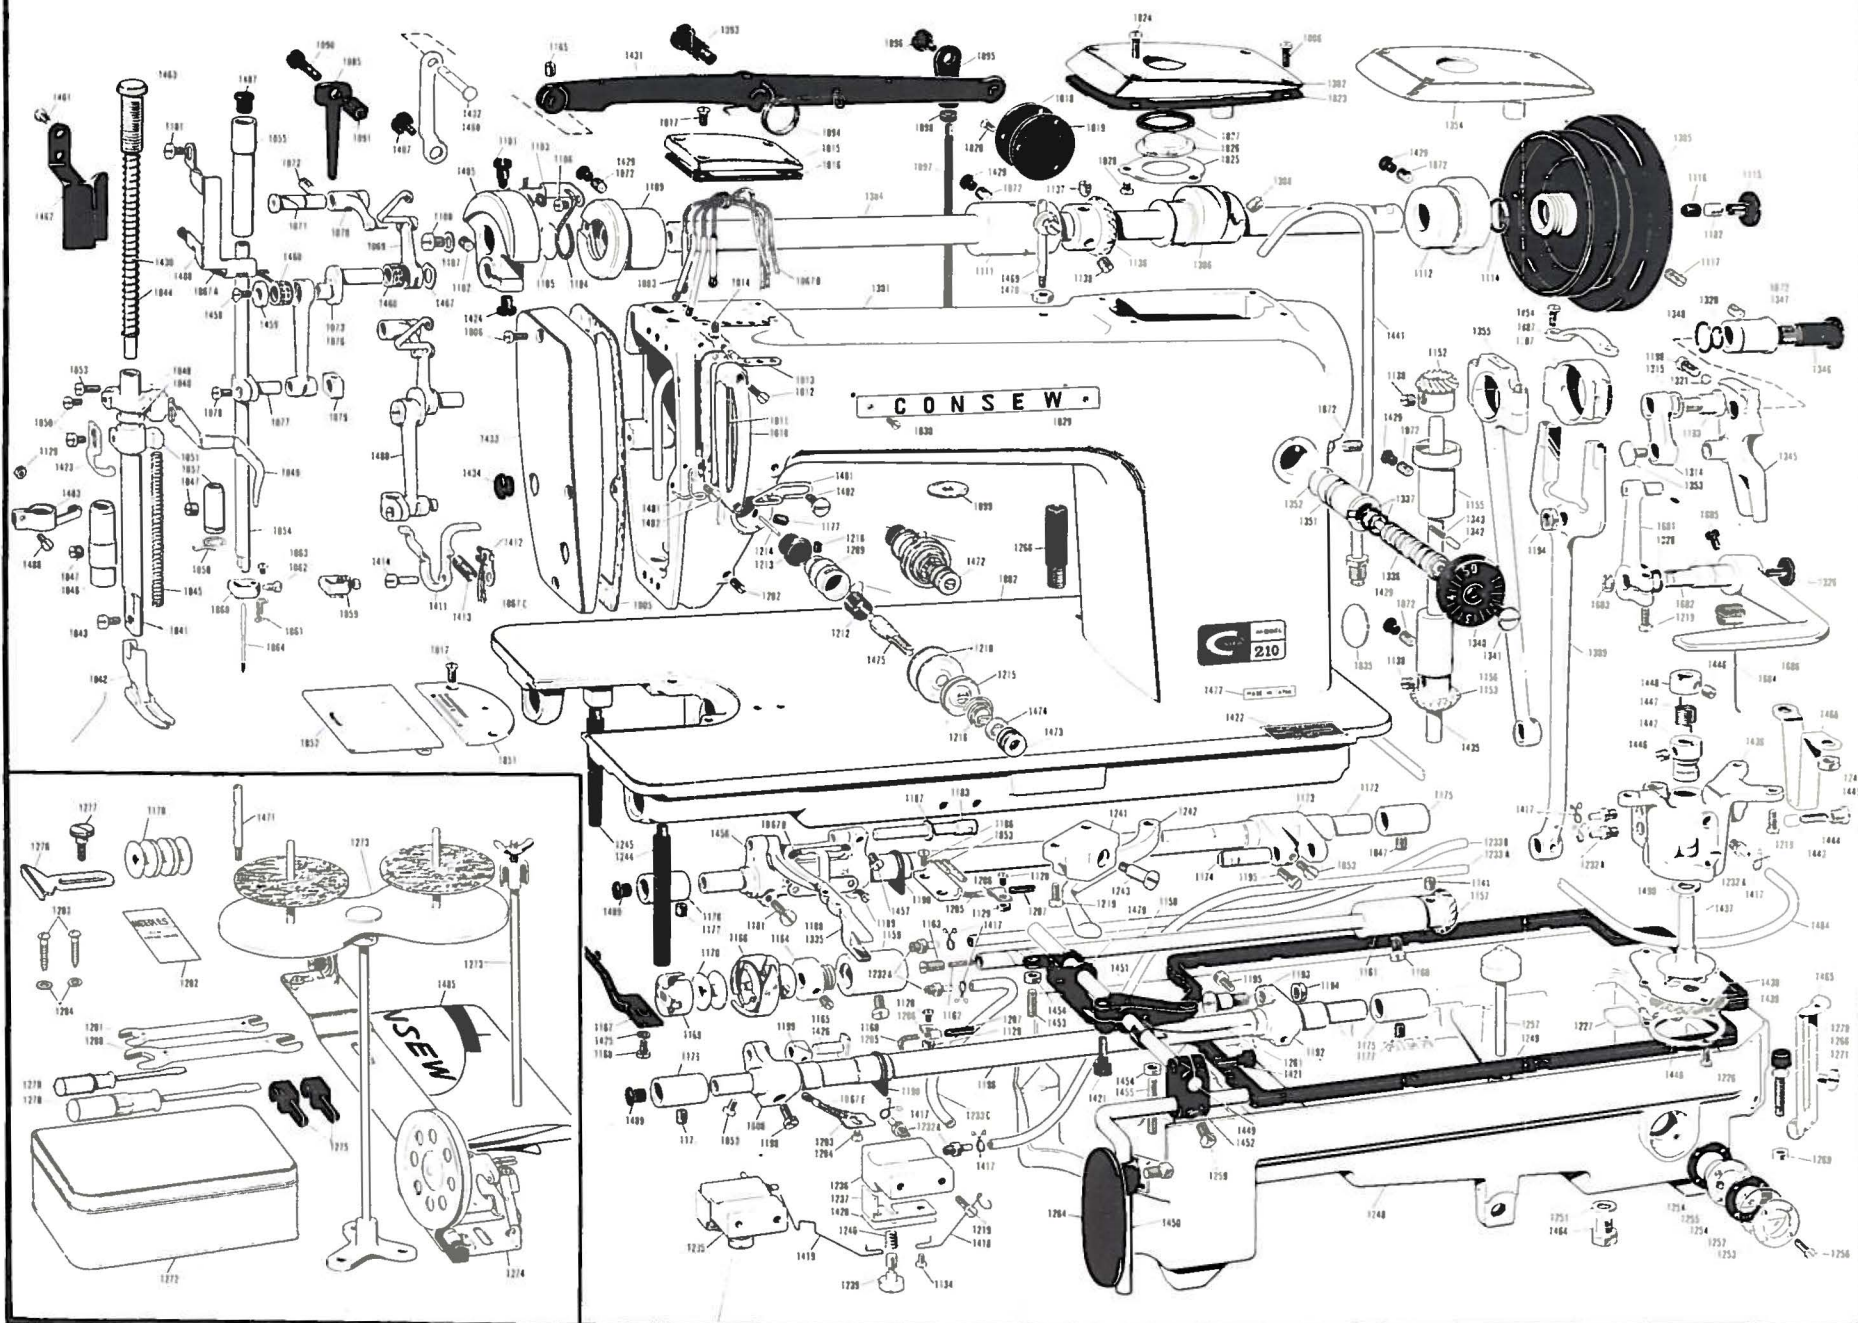

CONSEW

PARTS FOR MODELS 210, 210A, 210B

Parts No.	Name	Parts No.	Name	Parts No.	Name
1002	BED ONLY	1157	HOOK SHAFT GEAR	1282	NEEDLES
1005	GASKET FOR 1433	1158	HOOK SHAFT ONLY	1283	WOOD SCREW FOR 1274
1006	SCREW FOR 1433	1159	HOOK SHAFT FRONT BUSHING	1284	WASHER FOR 1283
1010	GUARD FOR TAKE UP LEVER	1160	SET SCREW FOR 1159 & 1161	1301	ARM ONLY
1011	GASKET FOR 1010	1161	HOOK SHAFT REAR BUSHING	1302	TOP COVER PLATE ONLY
1012	SCREW FOR 1010	1162	FELT FOR 1158	1304	TOP SHAFT ONLY
1013	THREAD GUIDE WITH THREE HOLES	1163	SET SCREW FOR 1162	1305	HAND WHEEL
1014	SET SCREW FOR 1013	1164	OIL DEFLECTOR FOR 1159	1306	FEED CAM
1015	COVER PLATE FOR OIL WELL	1165	SET SCREW FOR 1164	1307	GUIDE FOR FEED FORK
1016	GASKET FOR 1015	1166	ROTATING HOOK ASSEMBLY	1308	SET SCREW FOR 1306
1017	SCREW FOR 1015	1167	HOOK RETAINER	1309	FEED FORK
1018	BACK COVER PLATE	1168	SCREW FOR 1167	1314	FEED REGULATOR LINK
1019	GASKET FOR 1018	1169	BOBBIN CASE ASSEMBLY	1315	ADJUSTING WASHER FOR 1193
1020	SCREW FOR 1018	1170	BOBBIN	1320	PACKING FOR 1346
1023	GASKET FOR 1302	1172	FEED ROCK SHAFT	1321	SOFT PLUG FOR 1346
1024	SCREW FOR 1302	1173	FEED ROCK ARM	1326	CAP SCREW FOR 1606
1025	FRAME FOR 1026	1174	HINGED PIN FOR 1173	1328	OIL SEAL FOR 1602
1026	OIL GAUGE WINDOW	1175	REAR BUSHING FOR 1172	1335	FEED BAR
1027	PACKING FOR 1026	1176	FRONT BUSHING FOR 1172	1336	FEED REGULATOR DIAL SHAFT
1028	SCREW FOR 1025	1177	SET SCREW FOR 1176	1337	OIL SEAL FOR 1336
1029	NAME PLATE	1181	CLAMP SCREW FOR 1456	1340	FEED REGULATOR DIAL
1030	SCREW FOR 1029	1183	FEED BAR SHAFT	1341	LOCK SCREW FOR 1340
1035	PLUG FOR BED HOLE	1186	SCREW FOR 1853	1342	STOP PIN FOR 1340
1040	THRUST WASHER FOR 1041	1187	THRUST WASHER FOR 1183	1343	SPRING FOR 1342
1041	PRESSER BAR ONLY	1188	OIL WICK HOLDER	1345	FEED REGULATOR FORK
1042	HINGED FOOT COMPLETE	1189	SCREW FOR 1188	1346	FULCRUM SHAFT FOR 1345
1043	SCREW FOR 1042	1190	RUBBER FLANGE	1347	BUSHING FOR 1345
1044	PRESSER SPRING OUTER	1192	FEED LIFTING BELT CRANK	1348	OIL SEAL FOR 1347
1045	PRESSER SPRING INNER	1193	JOINT SCREW FOR 1192	1351	FEED REGULATOR DIAL BUSHING
1046	BUSHING FOR 1041	1194	NUT FOR 1193	1352	OIL SEAL FOR 1351
1047	SET SCREW FOR 1046 & 1057	1195	SET SCREW FOR 1192	1353	CAP SCREW FOR 1314
1048	PRESSER BAR GUIDE BRACKET	1196	FEED LIFTING SHAFT	1354	TOP COVER PLATE
1049	THREAD REGULATOR	1198	CLAMP SCREW FOR 1608	1355	CRANK ROD COMPLETE
1050	SCREW FOR 1049 & 1423	1199	SLIDING BLOCK FOR 1335	1401	THREAD GUIDE, RIGHT
1051	PRESSER BAR LIFTER	1202	SCREW FOR 1414	1402	SET SCREW FOR 1401
1053	SET SCREW FOR 1048	1203	OIL WICK SUPPORT	1405	TAKE UP LEVER CRANK
1054	NEEDLE BAR ONLY	1204	SCREW FOR 1203	1407	HINGE SCREW FOR 1431
1055	NEEDLE BAR UPPER BUSHING	1205	OIL WICK FOR FEED SHAFT	1408	OIL WICK RETAINER
1057	NEEDLE BAR LOWER BUSHING	1206	OIL WICK CONTROL BAND	1411	THREAD TENSION RELEASE
1058	THREAD GUIDE FOR 1057	1207	VINYL SLEEVE FOR 1205	1412	OIL WICK RETAINER
1059	NEEDLE CLAMP COMPLETE	1209	TENSION BARREL	1413	SPRING FOR 1411
1060	NEEDLE CLAMP BODY	1210	TENSION DISC	1414	SHAFT FOR 1411
1061	THREAD GUIDE FOR 1060	1212	CHECK SPRING	1417	OIL HOSE CLIP
1062	SCREW FOR 1060	1213	PACKING FOR 1472	1418	OIL HOSE SUPPORTER (A)
1063	SCREW FOR 1061	1214	TENSION RELEASE PIN	1419	OIL HOSE SUPPORTER (B)
1064	NEEDLE	1215	TENSION RELEASE WASHER	1420	OIL REGULATING PLATE
1067A	OIL WICK	1216	TENSION SPRING	1421	CLAMP SCREW FOR 1451 & 1452
1069	TAKE UP LEVER BODY	1218	SET SCREW FOR 1475	1422	NEEDLE SIZE PLATE
1070	TAKE UP LEVER LINK	1219	SCREW FOR OIL PUMP	1423	ADJUST PLATE FOR TENSION RELEASE
1071	HINGED STUD FOR 1070	1226	SCREW FOR 1440	1424	CLAMP SCREW FOR 1480
1072	SET SCREW FOR 1071	1227	MAGNET	1425	SPRING WASHER FOR 1168
1073	NEEDLE BAR CRANK	1232A	OIL HOSE NIPPLE	1426	STUD FOR 1199
1076	NEEDLE BAR CRANK CONNECTION	1233A	OIL HOSE (A)	1429	PLUG FOR SCREW HOLE
1077	NEEDLE BAR BRACKET	1233B	OIL HOSE (B)	1430	PRESSURE REGULATOR BAR
1078	CLAMP SCREW FOR 1077	1233C	OIL HOSE (C)	1431	KNEE LIFTER LEVER
1079	SLIDING BLOCK FOR 1077	1235	OIL REGULATOR COMPLETE	1432	KNEE LIFTER BAR
1083	GUIDE TUBE FOR 1067B	1236	OIL REGULATOR BODY	1433	FACE COVER PLATE
1085	PRESSER BAR LIFTER LEVER	1237	OIL REGULATOR PLATE	1434	PLUG FOR 1433
1090	HINGE SCREW FOR 1085	1239	OIL REGULATING VALVE	1435	VERTICAL SHAFT ONLY
1091	LOCK NUT FOR 1085	1240	SPRING FOR 1239	1436	OIL PUMP BODY
1093	HINGE SCREW FOR 1431	1241	BRACKET FOR 1242	1437	OIL PUMP IMPELOR
1094	SPRING FOR 1431	1242	KNEE LIFTER RELEASE LEVER	1438	OIL PUMP COVER
1095	KNEE LIFTER LINK	1243	HINGE SCREW FOR 1242	1439	OIL PUMP FILTER
1096	LINK SCREW FOR 1095	1244	BED LEG FRONT	1440	FRAME FOR 1439
1097	KNEE LIFTER PULL ROD	1245	BED LEG REAR	1441	OIL FEED TUBE COMPLETE
1098	NUT FOR 1097	1247	NUT FOR 1466	1442	OIL RETURN CAM SHAFT
1099	FELT WASHER FOR 1097	1248	OIL PAN ONLY	1443	PIN FOR 1442
1101	SET SCREW FOR 1405	1249	OIL PAN GASKET	1444	SPRING FOR 1443
1102	SET SCREW FOR 1480	1251	PACKING FOR 1464	1445	SCREW FOR 1444
1103	RETAINER PLATE FOR 1104	1252	OIL GAUGE WINDOW	1446	SET SCREW FOR 1442
1104	OIL WICK FOR 1480	1253	FRAME FOR 1252	1447	SPRING JOINT
1105	SPRING FOR 1104	1254	PACKING FOR 1252	1448	COLLAR FOR 1447
1106	SCREW FOR 1103	1255	OIL GAUGE COVER	1449	KNEE LIFTER SHAFT
1107	TOP SHAFT FRONT PACKING	1256	SCREW FOR 1253	1450	KNEE LIFTER ARM
1108	SCREW FOR 1107	1257	KNEE LIFTER PLUNGER	1451	KNEE LIFTER LOWER LEVER
1109	TOP SHAFT FRONT BUSHING	1259	SET SCREW FOR KNEE LIFTER	1452	KNEE LIFTER ARM JOINT
1111	TOP SHAFT CENTER BUSHING	1261	SPRING FOR 1451	1453	ADJUST SCREW FOR 1448
1112	TOP SHAFT REAR BUSHING	1264	KNEE LIFTER PAD	1454	NUT FOR 1453
1114	PACKING FOR 1305	1266	GUIDE SLEEVE FOR 1097	1455	ADJUST SCREW FOR 1451
1115	CAP SCREW FOR 1305	1268	OIL PAN HOLDING SCREW	1456	FEED BAR BELL CRANK
1116	TOP SHAFT OIL STOPPER	1269	NUT FOR 1268	1457	SET SCREW FOR 1183
1117	SET SCREW FOR 1305	1270	OIL PAN CUSHION RUBBER	1458	CAP SCREW FOR 1459
1128	SCREW FOR 1206	1271	SCREW FOR 1465	1459	THRUST WASHER FOR 1460
1129	NUT FOR 1128	1272	ACCESSORY BOX	1460	BEARING ROLLERS COMPLETE
1134	SCREW FOR 1418 & 1419	1273	SPOOL HOLDER	1461	SET SCREW FOR 1462
1136	TOP SHAFT GEAR	1274	BOBBIN WINDER ASSEMBLY	1462	OIL STOPPER
1137	SET SCREW FOR CAM & GEAR	1275	BED HINGE COMPLETE	1463	PRESSURE REGULATOR SCREW
1138	SET SCREW FOR 1136	1276	CLOTH GUIDE	1464	DRAIN PLUG
1141	SET SCREW FOR 1157	1277	CLOTH GUIDE THUMB SCREW	1465	OIL PAN SUPPORT
1152	VERTICAL SHAFT UPPER GEAR	1278	SCREW DRIVER, LARGE	1466	BED LEG, RIGHT
1153	VERTICAL SHAFT LOWER GEAR	1279	SCREW DRIVER, SMALL	1467	THRUST WASHER FOR 1480
1155	VERTICAL SHAFT UPPER BUSHING	1280	WRENCH, LARGE		
1156	VERTICAL SHAFT LOWER BUSHING	1281	WRENCH, SMALL		

(CONTINUED on next page.)

(CONTINUED from previous page.)

Parts No.	Name	Parts No.	Name
1468	KNEE LIFTER PLATE	1487	RUBBER CAP FOR 1055
1469	SPOOL PIN COMPLETE	1488	SCREW FOR 1483
1470	NUT FOR 1469	1489	RUBBER CAP FOR 1172 & 1196
1471	SPOOL PIN	1490	WASHER FOR 1437
1472	TENSION COMPLETE	1601	FEED REGULATOR ARM
1473	TENSION ADJUSTING KNOB	1602	REGULATOR SHAFT
1474	RATCHET FOR 1473	1603	STOP RING FOR 1604
1475	TENSION STUD	1604	SPRING FOR 1602
1477	EXPORTATION MARK	1605	CLUMP SCREW FOR 1606
1479	KNEE LIFTER CONTROLLER	1606	FEED REGULATOR HAND LEVER
1480	TAKE UP LEVER COMPLETE	1607	BRIDGE FOR 1309
1481	THREAD GUIDE, LEFT	1608	FEED LIFTING BELL ARM
1482	SET SCREW FOR 1481	1851	NEEDLE PLATE
1483	LOWER CLAMP FOR 1484	1852	SLIDE PLATE
1484	OIL RETURN TUBE	1853	FEED DOG
1485	MACHINE HEAD COVER	1854	SET SCREW FOR 1607


PART TO BE USED MODEL 210A ONLY

- 1501 TAKE UP LEVER COMPLETE
- 1502 NEEDLE BAR
- 1503 SET SCREW FOR 1504
- 1504 NEEDLE
- 1505 NEEDLES

PART TO BE USED MODEL 210B ONLY

- 1506 TAKE UP LEVER COMPLETE
- 1507 RETAINER PLATE FOR OIL WICK
- 1508 ADJUSTING PLATE FOR TENSION RELEASE
- 1509 NEEDLE BAR LOWER BUSHING
- 1510 HINGED FOOT COMPLETE
- 1511 NEEDLE PLATE
- 1512 FEED DOG
- 1514 ROTATING HOOK ASSEMBLY
- 1515 NEEDLE

PARTS TO BE USED FOR MODEL 210A ONLY

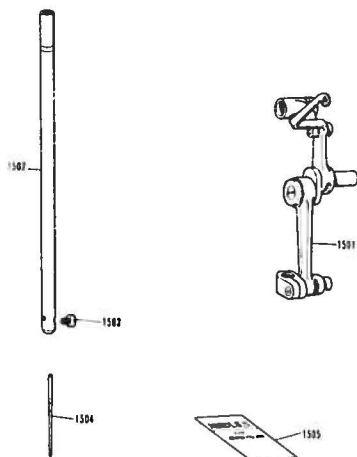

PARTS TO BE USED FOR MODEL 210B ONLY

