

Order parts by both reference and part number.

PART NO.	PART NAME	PART	PART NAME	PART	PART NAME	PART	PART NAME	PART		PART NAME
	DM DED ACCEMBLY	NO.		NO.		NO.		NO.		
	RM BED ASSEMBLY IL HOSE CLIP	61	NEEDLE BAR ONLY	117			SET SCREW FOR 177			LE PLATE
	IL GAUGE WINDOW	62	SET SCREW FOR 56 SET SCREW FOR 65	118	SPRING FOR 117	177	OIL WICK RETAINER	233		W FOR 232
	UBBER PLUG	64	A STATE OF THE STA	119	HINGE SHAFT FOR 117	178	HINGED PIN FOR 196	234	HOOK SU	
	UG FOR BED HOLE	65	NEEDLE BAR UPPER BUSHING NEEDLE BAR LOWER BUSHING	120	PRESSER BAR LIFTER CRANK ARM	179	FEED REGULATOR ARM	235	WASHER	
	UG FOR SCREW HOLE	66	SET SCREW FOR 67, ETC.	121 122	CAP SCREW FOR 120	180	SPRING FOR 179	236	KNIFE HO	
7 W	ASHER FOR 27	67	TAKE UP LEVER COMPLETE	123	HINGE SCREW FOR 123	181	STOP PIN FOR 199	237		W FOR 238
8 AL	DJUST SCREW FOR 19	68	THREAD GUIDE WITH THREE HOLES	123	PRESSER BAR LIFTER LEVER	182	SPRING FOR 181	238	TOP KNIF	
9 SE	ET SCREW FOR 11	69	NUT FOR 68	125	THREAD TENTION RELEASE SPRING FOR 124	183	NUT FOR 193	239 240	WASHER	
	UT FOR 8 & 17	70	SET SCREW FOR 71, 72 & 73	126	ADJUST PLATE FOR TENTION	184 185	FEED FORK FEED REGULATOR BODY COMPLETE	241		HAND LEVER W FOR 242
	IL PAN SUPPORT COMPLETE	71	THREAD GUIDE RIGHT	120	RELEASE	186	SOFT PLUG FOR 185	242	GUIDE FO	
	L PAN	72	THREAD GUIDE LEFT	127	SET SCREW FOR 126	187	FRONT BUSHING FOR 175, 194,	243		W FOR 228
	L PAN PACKING	73	THREAD GUIDE LOWER	128	SHAFT FOR 124	107	ETC.	244	- 171000 A	DRIVE ARM
	RAIN SCREW	74	SET SCREW FOR 75	129	SET SCREW FOR 128	188	REAR BUSHING FOR 175, 194,	245		BAR LOWER BUSHING
	ACKING FOR 14	75	THREAD GUIDE CENTER	130	GEAR COMPLETE		MTC.	246		W FOR 245
	UIDE PIPE	76	TENTION COMPLETE	131	BALANCE WEIGHT	189	SET SCREW FOR 187 & 188	247		BAR UPPER BUSHING
	DJUST SCREW FOR 24	76-7	CHECK SPRING	132	ADJUST SCREW FOR 139	190	SET SCREW FOR 191 & 192	248		RS GUIDE BOOK
	AP SCREW FOR 19 & 22	77	SET SCREW FOR 76	133	SET SCREW FOR 136	191	OIL STOPPER FOR 194	249	ACCESSO	
	NEE LIFTER LOWER LEVER	78	SLIDE PLATE COMPLETE	134	OIL STOP SCREW FOR 135	192	OIL STOPPER FOR 175		TOP KNIF	
	NEE LIFTER PLUNGER ET SCREW FOR 88		A SET SCREW FOR 78-B	135	TOP SHAFT ONLY	193	JOINT SCREW FOR 166	(745 A.S	HINGE SE	
			3 SPRING FOR 78	136	TOP SHAFT OIL STOPPER REAR	194	FEED LIFTING SHAFT ONLY			CREW FOR 238
	NEE LIFTER ARM JOINT ASHER FOR 24	79	PRESSER BAR ONLY	137	PACKING FOR 134	195	SET SCREW FOR 178		NEEDLES	
	NEE LIFTER CONTROLLER	80	PRESSER SPRING OUTER	138	WASHER FOR 136	196	FEED ROCK ARM			RIVER LARGE
	NEE LIFTER CONTROLLER	81	PRESSER SPRING INNER	139	OIL FELT FOR 135 & 142	197	OIL SEAL OUTER FOR 200			PLATE WITH CHIP 3/1
	RING FOR 19	82	HINGE SCREW FOR 84	140	CAP SCREW FOR 152	198	LOCK SCREW FOR 199	249-0	SCREW D	RIVER SMALL
	T SCREW FOR 20	83	PRESSER BAR LIFTER	141	OIL DEFLECTOR FOR 155	199	FEED REGULATOR DIAL	249-1	CAP SCRE	W FOR 249-B
	ASHER FOR 30	84	KNEE LIFTER PLATE	142	HOOK SHAFT ONLY	200	FEED REGULATOR BUSHING	249-1	WRENCH	
10000	JT FOR 30	85	PRESSER REGULATOR SCREW	143	SET SCREW FOR 139		COMPLETE	249-J	HINGED I	FOOT COMPLETE 3/10
	D LEG RIGHT	86 87	PRESSER REGULATOR ROD	144	VERTICAL SHAFT ONLY	201	CAPSCREW FOR 131	249-1	BED HING	GE .
	ED LEG FRONT	88	KNEE LIFTER PAD COMPLETE	145	BOBBIN CASE COMPLETE	202	OIL SEAL INNER FOR 205 & 211		WASTE C	HUTE
	D LEG REAR	89	KNEE LIFTER ARM	146	ROTATING HOOK ASSEMBLY	203	OIL SEAL OUTER FOR 205		BOBBIN V	
	DE COVER PLATE	90	SET SCREW FOR 90	147	BOBBIN	204	SET SCREW FOR 131	251		SIZE PLATE
	CKING FOR 33	91	NEEDLE PLATE WITH CHIP 1/8" SET SCREW FOR 92	148	TOP SHAFT FRONT BUSHING	205	FULCRUM SHAFT AND BUSHING	252	MODEL P	
35 SE	T SCREW FOR 33	92	BUSHING FOR 79	150	TOP SHAFT CENTER BUSHING		FOR 185	253	COTTON :	STAND
36 PA	CKING FOR 37	93	HINGED FOOT COMPLETE 1/8"		TOP SHAFT REAR BUSHING	206	WASHER FOR 208			
37 TO	OP COVER PLATE	94	SET SCREW FOR 93	151 152	PACKING FOR 152 HAND WHEEL	207	CAP SCREW FOR 208			
38 SE:	T SCREW FOR 37	95	RUBBER RING FOR 96	153	SET SCREW FOR 157	208	FEED REGULATOR HAND LEVER			
	JARD FOR TAKE UP LEVER	96	PRESSER BAR GUIDE BRACKET	154	SET SCREW FOR 155	209	CAP SCREW FOR 208			
	T SCREW FOR 39	'	COMPLETE	155	HOOK SHAFT FRONT BUSHING	210	STOP RING FOR 180			
	OP RING FOR 44	97	STOP RING FOR 84	156	OIL HOSE NIPPLE	211	REGULATOR SHAFT			
	RING FOR 43	98	KNEE LIFTER BELL CRANK PIN	157	HOOK SHAFT REAR BUSHING	212	MAGNET OIL FEED TUBE COMPLETE			
	RIVING ARM	99	KNEE LIFTER BELL CRANK LEFT	158	VERTICAL SHAFT UPPER BUSHING	213	OIL FEED TOBE COMPLETE			
	RIVING ARM SHAFT	100	STOP RING FOR 102	159	VERTICAL SHAFT LOWER BUSHING	214	COLLAR COMPLETE FOR 216	1		
	SH BUTTON	101	RUBBER RING FOR 107		SPRING WASHER FOR 161	216	SPRING JOINT	1		
	CE PLATE	102	KNEE LIFTER BELL CRANK SHAFT	161	SET SCREW FOR 162	217	OIL REGULATING SCREW	1		
	T SCREW FOR 44	103	HINGE SCREW FOR 104		HOOK RETAINER	218	SPRING FOR 217	1		
	CKING FOR 46	104	KNEE LIFTER BELL CRANK RIGHT		SET SCREW FOR 164	219	HOSE RETAINER			
	JBBER CAP FOR 64	105	JOINT SCREW FOR 106	164	FEED CAM	220	OIL PUMP COMPLETE			
11117° (T.E.)	IDING BLOCK FOR 67	106	KNEE LIFTER ROD	165	GUIDE FOR FEED FORK	221	OIL WICK CLAMP	l		
	T SCREW FOR 53	107	BUSHING FOR 102	166	CRANK ROD COMPLETE	222	CUTTER DRIVE CAM			
	P SCREW FOR 53	108	SET SCREW FOR 107		SLIDING BLOCK FOR 168	223	CUTTER GUIDE BRACKET			
	KE UP LEVER CRANK T SCREW FOR 67	109	HINGED SCREW FOR 110	168	FEED LIFTER BELL ARM	224	CUTTER DRIVE BELL ARM			
	AMP SCREW FOR 67	110	KNEE LIFTER BELL CRANK LINK	169	SET SCREW FOR 167	225	CUTTER DRIVE SHAFT	1		
	EEDLE No. 14	111	KNEE LIFTER PULL ROD	170	WASHER FOR 173	226	CUTTER BAR SPRING	1		
	ASHER FOR 67	112	NUT FOR [1]	171	FEED BAR	227	CUTTER CRANK ROD	1		
- Tui	B TENTION COMPLETE	113	SET SCREW FOR 116 & 185		FEED DOG	228	CUTTER CRANK ROD PIN			
	READ GUIDE PLATE	114	STOP RING FOR 115	173	FEED BAR SHAFT	229	COLLAR FOR 225			
	CKING FOR 76	115	JOINT FOR 111		PLUG FOR 175 & 194	230	CUTTER BAR			
-v . n		116	BRACKET FOR 117	175	FEED ROCK SHAFT ONLY	231	CUTTER BAR ARM			
60 PAG	CKING FOR 76	116	BRACKET FOR 117							