

# 1181 1183

## ADJUSTMENT MANUAL

This adjustment manual applies to machines  
from the following serial numbers onwards:

# 6 500 122 →

The reprinting, copying or translation of PFAFF Service Manuals, whether in whole or in part, is only permitted with our previous authorization and with written reference to the source.

**PFAFF Industriesysteme  
und Maschinen AG**

Hans-Geiger-Str. 12 - IG Nord  
D-67661 Kaiserslautern

	Contents .....	Page
<b>1</b>	<b>Adjustment .....</b>	<b>5</b>
1.01	Tools, gauges and other accessories for adjusting .....	5
1.02	Abbreviations .....	5
1.03	Explanation of the symbols.....	5
1.04	Checking and adjusting aids.....	6
1.05	Adjusting the basic machine .....	7
1.05.01	Basic position of the machine drive .....	7
1.05.02	Preadjusting the needle height .....	8
1.05.03	Bottom feed neutral position .....	9
1.05.04	Neutral position of the needle feed (only on PFAFF 1181) .....	10
1.05.05	Bottom feed lifting motion .....	11
1.05.06	Bottom feed dog height .....	12
1.05.07	Feed dog motion of bottom feed dog .....	13
1.05.08	Feeding motion of needle feed (only on PFAFF 1181).....	14
1.05.09	Needle in needle hole center (only on PFAFF 1183).....	15
1.05.10	Needle to needle hole centre (on PFAFF 1181).....	16
1.05.11	Synchronous strokes of needle- and drop feed (only on PFAFF 1181) .....	17
1.05.12	Hook shaft bearing and toothed belt tension .....	18
1.05.13	Hook lubrication .....	19
1.05.14	Needle rise, hook-to-needle clearance, needle height and bobbin case position finger.....	20
1.05.15	Thread check spring and slack thread regulator .....	21
1.05.16	Position of knee lever.....	22
1.05.17	Knee lever stop .....	23
1.05.18	Bobbin winder.....	24
1.05.19	Limiting the stitch length .....	25
1.05.20	Presser foot pressure .....	26
1.05.21	Modifying the needle bar stroke .....	27
1.06	Adjusting the edge trimmer -731/01 .....	28
1.06.01	Zero position of the knife .....	28
1.06.02	Cutting motion .....	29
1.06.03	Knife height.....	30
1.06.04	Cutting angle of the knife.....	31
1.06.05	Knife position in sewing direction .....	32
1.06.06	Knife position crosswise to sewing direction.....	33
1.07	Adjusting the thread trimming device -900/24.....	34
1.0.01	Adjusting the solenoid / preliminary adjustment of the control cam .....	34

	Contents .....	Page
1.07.02	Lateral alignment of the thread catcher .....	35
1.07.03	Knife position .....	36
1.07.04	Front point of reversal of the thread catcher .....	37
1.07.05	Manual trimming check.....	38
1.07.06	Needle thread tension release.....	39
1.07.07	Readjusting the control cam .....	40
1.08	Adjusting the automatic presser foot lift -910/06 .....	41
1.09	Adjusting the back-tacking mechanism –911/37 .....	42
1.10	Basic position of the machine drive unit .....	43
1.10.01	On machines with EcoDrive and control unit P40 ED .....	43
1.10.02	On machines with PicoDrive and control unit P40 PD2 .....	43
1.10.03	On machines with control unit MD-4-95-220-CE .....	44

## 1 Adjustment



On the **PFAFF 1181** and **1183** do not use a screw clamp on the needle bar! The special coating of the needle bar could be damaged.



Please observe all notes from Chapter 1 Safety of the instruction manual! In particular care must be taken to see that all protective devices are refitted properly after adjustment, see Chapter 1.06 Danger warnings of the instruction manual!

If not otherwise stated, the machine must be disconnected from the electrical power supply.

Danger of injury due to unintentional starting of the machine!

### Notes on adjustment

All following adjustments are based on a fully assembled machine and may only be carried out by expert staff trained for this purpose. Machine covers, which have to be removed and replaced to carry out checks and adjustments, are not mentioned in the text.

The order of the following chapters corresponds to the most logical work sequence for machines which have to be completely adjusted. If only specific individual work steps are carried out, both the preceding and following chapters must be observed.

Screws, nuts indicated in brackets ( ) are fastenings for machine parts, which must be loosened before adjustment and tightened again afterwards.

### 1.01 Tools, gauges and other accessories for adjusting

- 1 set of screwdrivers with blade widths from 2 to 10 mm
- 1 set of wrenches with jaw widths from 7 to 14 mm
- 1 set of Allan keys from 1.5 to 6 mm
- 1 metal rule, (Part No. 08-880 218-00)
- 1 feed dog adjustment gauge, Part No. 61-111 639-71
- 1 adjustment pin (5 mm dia.), Part No. 13-033 346-05
- Adjustment gauge, part No. 61-111 639-73
- 1 adjustment gauge for tightening the hook drive belt, Part-No. 61-111 639-76

### 1.02 Abbreviations

TDC = top dead center

 
BDC = bottom dead center

### 1.03 Explanation of the symbols

In this adjustment manual, symbols emphasize operations to be carried out or important information. The symbols used have the following meaning:



Note, information

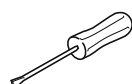

Service, repair, adjustment, maintenance  
(work to be carried out by qualified staff only)

## Checking and adjusting aids



With the aid of blocking pin 1 (part No. 13-033346-05) and if necessary adjustment gauge 3 (part No. 61-111 639-73) the machine can be blocked in the following positions for adjustment


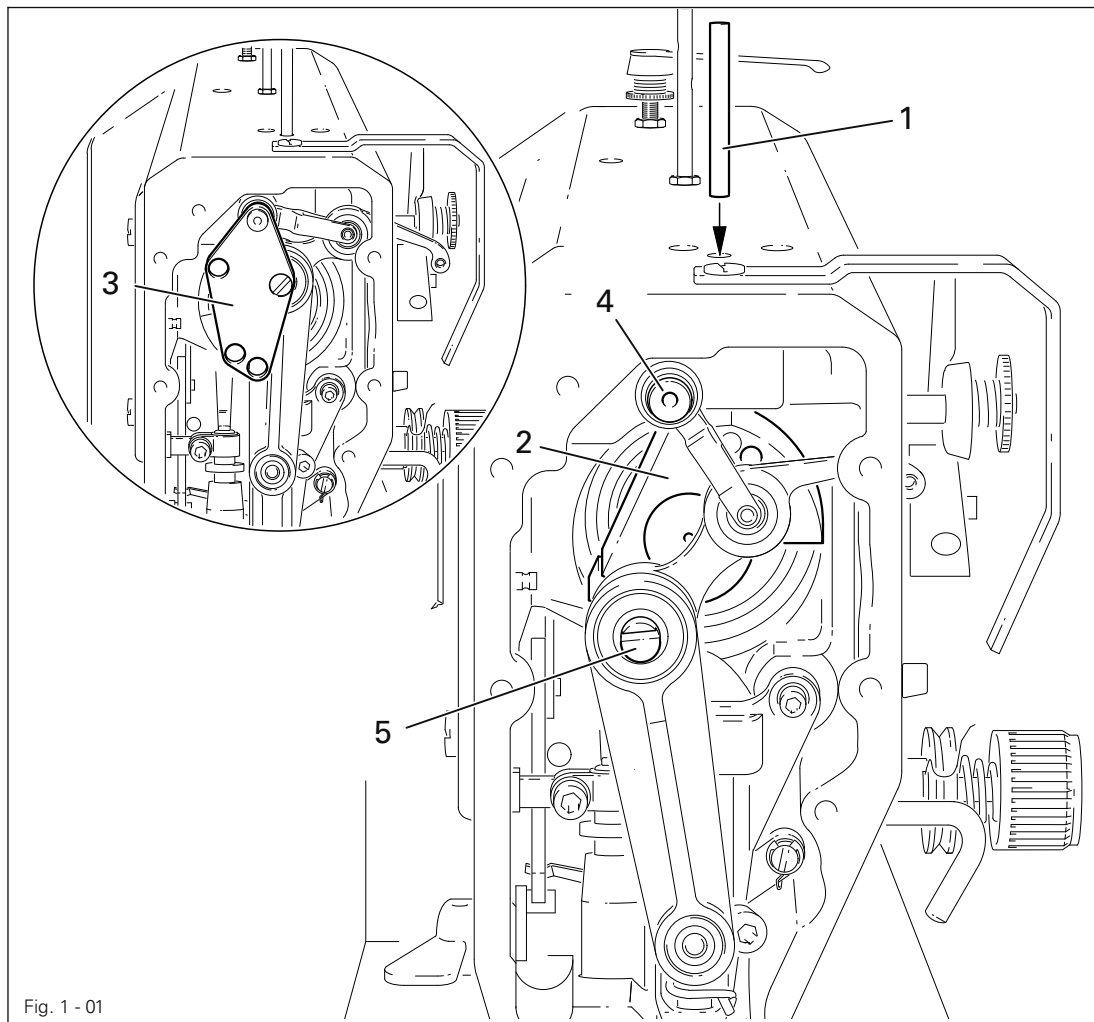


Fig. 1 - 01

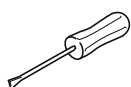 

### Needle bar position 1.8 mm past b.d.c.

- Turn balance wheel until needle bar is roughly in required position
- Insert blocking pin 1 in hole
- Turn balance wheel slightly back and forth until blocking pin engages crank 2

### Needle bar position 0.6 mm past t.d.c.

- Set needle bar roughly at required position
- Place adjustment gauge 3 onto pins 4 and 5, making sure right side is used (for 30 or 36 mm needle bar stroke)

### Needle bar position 0.6 mm past b.d.c.

- Set needle bar roughly at required position
- Place adjustment gauge 3 onto pins 4 and 5, making sure right side is used (for 30 or 36 mm needle bar stroke)

## 1.05 Adjusting the basic machine

### 1.05.01 Basic position of the machine drive



This adjustment is only required if toothed belt **2** has been removed.

#### Requirement

When the needle bar is positioned **0,6 mm** past b.d.c., the markings **3** and **4** should be in alignment..


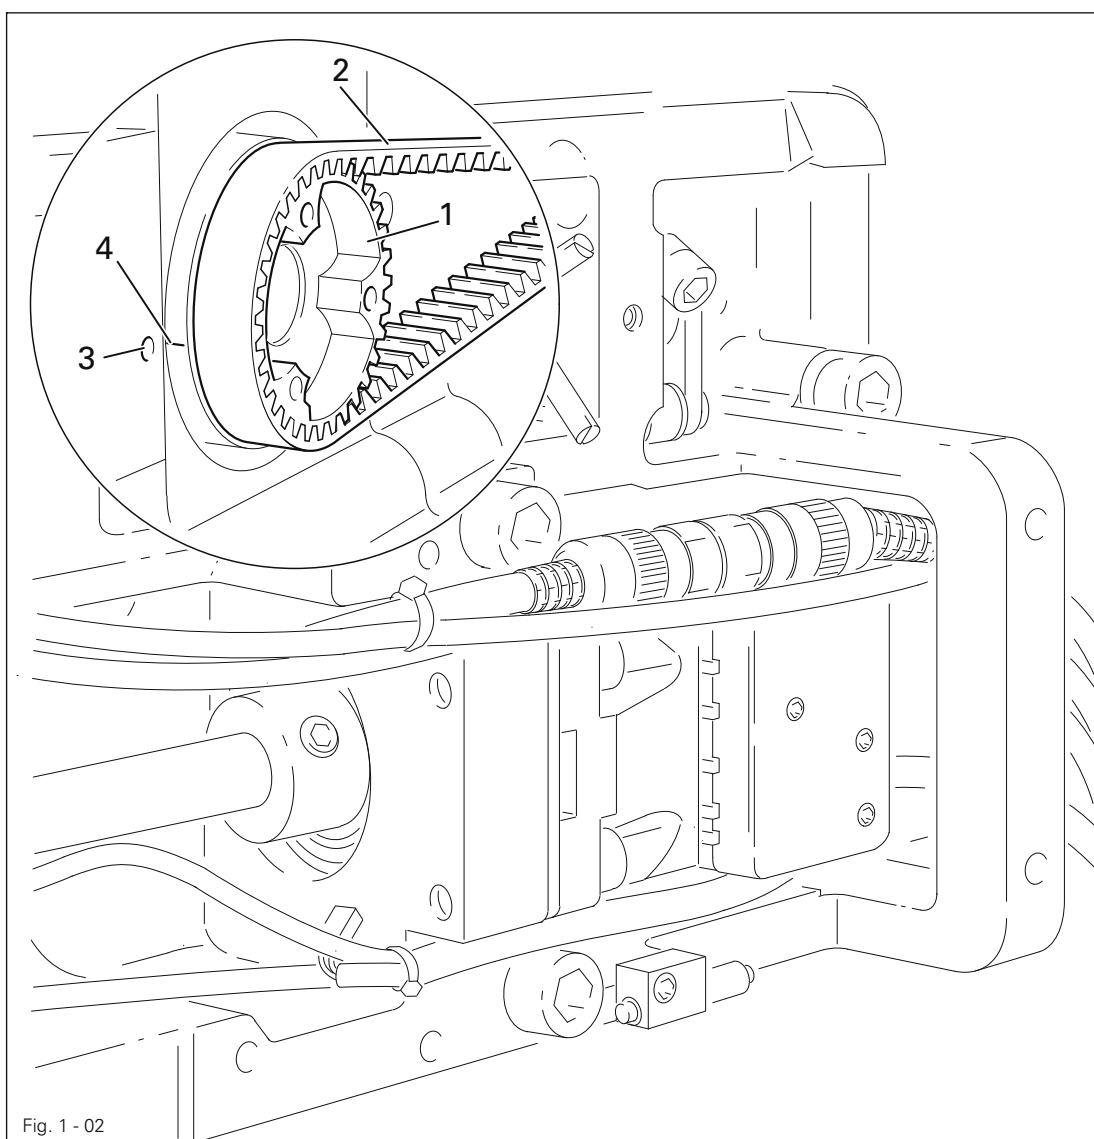


Fig. 1 - 02

 

- Turn toothed belt sprocket **1** according to **Requirement** and push on toothed belt **2**.


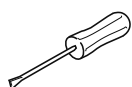


When installing the motor pay attention to the correct position of shaft flange, shock absorber and motor flange!

## 1.05.02 Preadjusting the needle height
 
### Requirement

When the needle bar is positioned **1.8 mm** above BDC, the mark on the needle bar **1** must be flush with the bottom edge of the needle bar frame **3**.

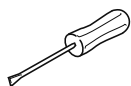
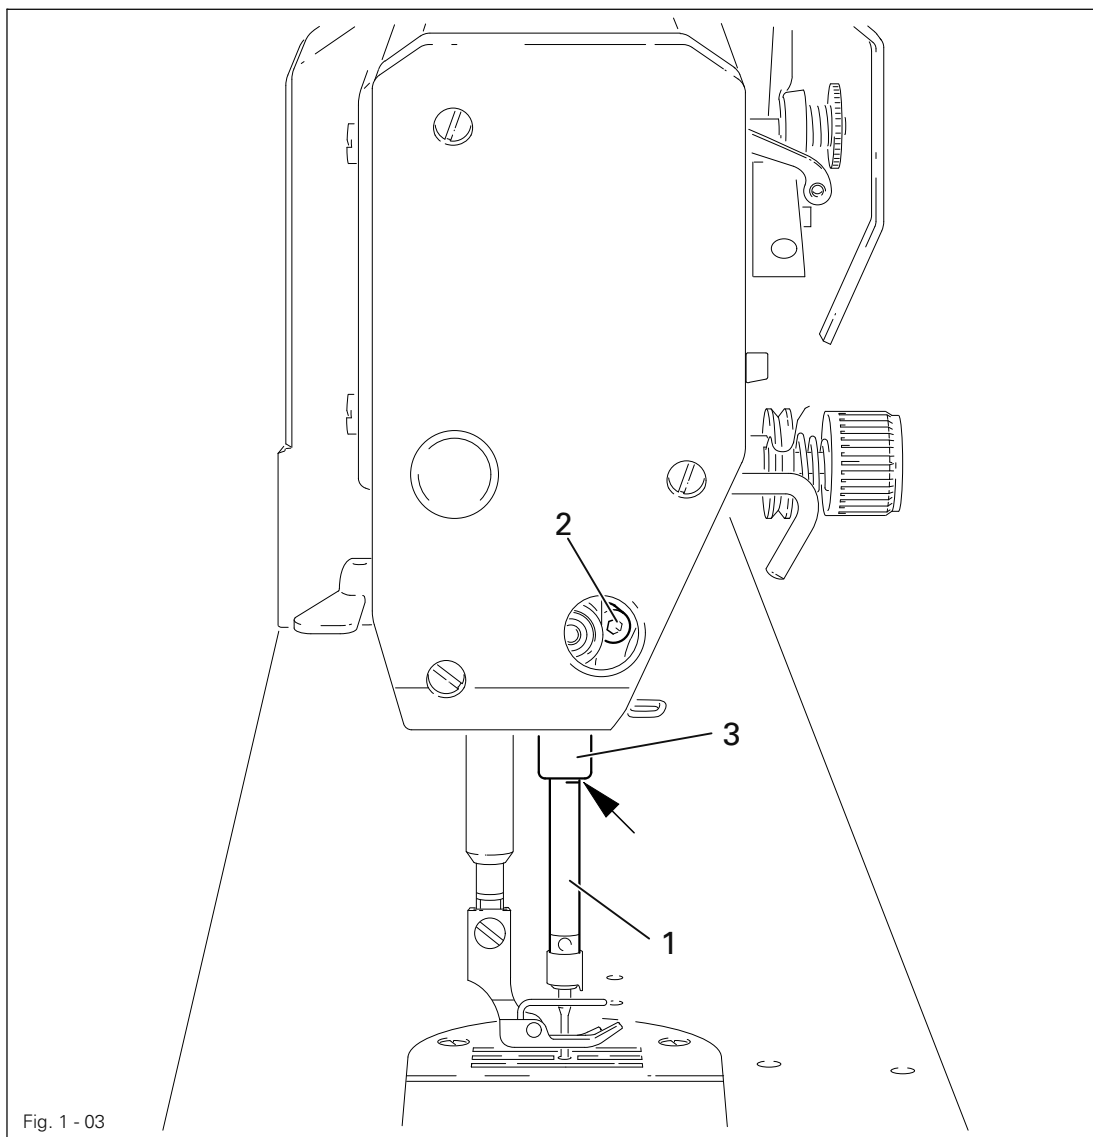


- Set needle bar at **1.8 mm** past b.d.c. and block machine with blocking pin, see Chapter **1.04 Checking and adjusting aids**.
- Move needle bar **1** (screw **2**), without turning it, according to the **requirement**.

## 1.05.03 Bottom feed neutral position
 
### Requirement

At stitch length setting "0", cranks 1 and 3 must be flush and the feed dog must not make any feeding motion when the balance wheel is turned.

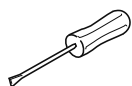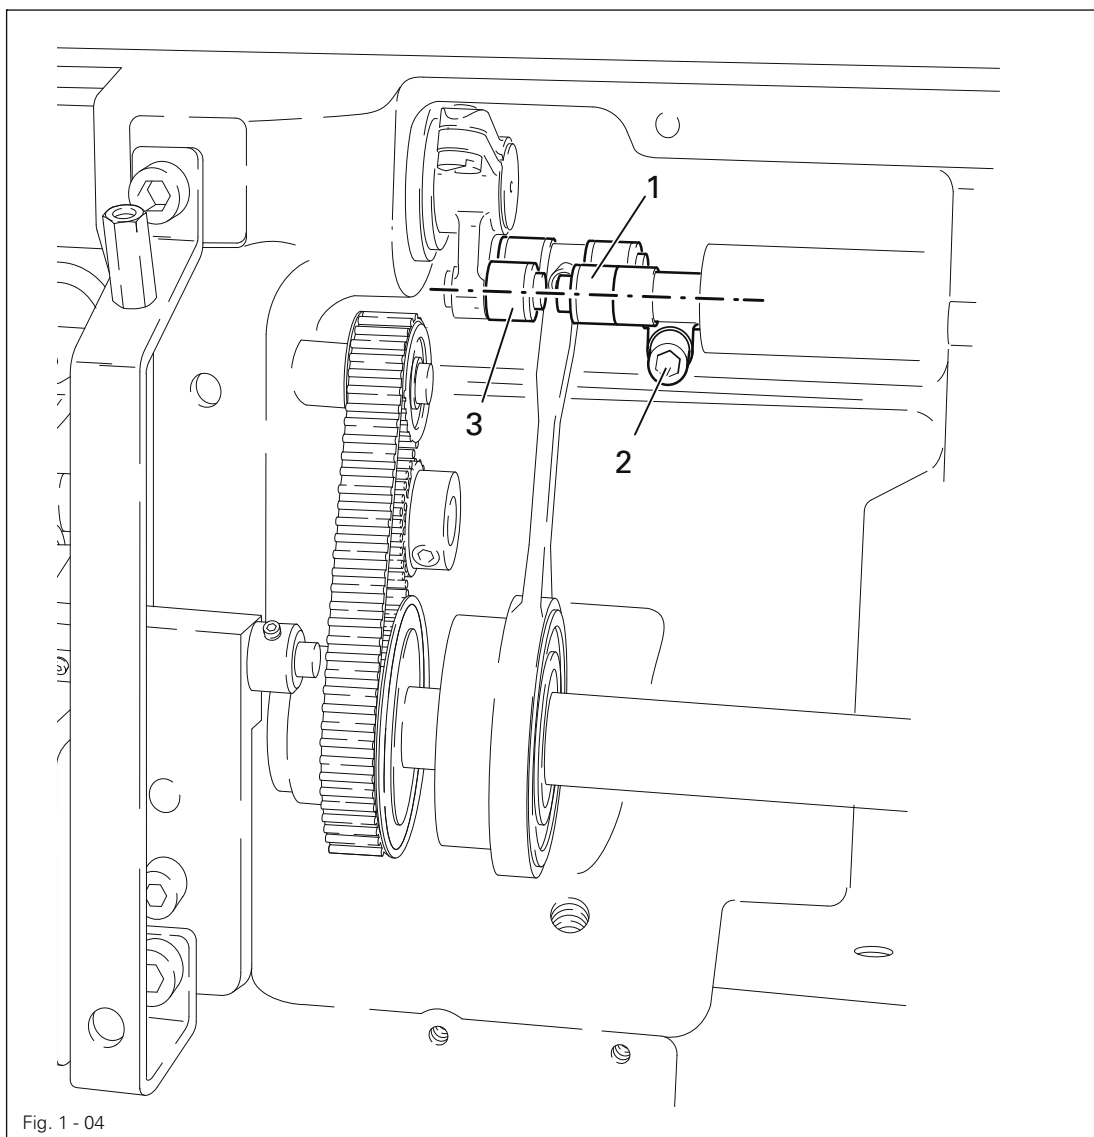



- Raise the presser foot and set the stitch length to "0".
- Turn crank 1 (screw 2) according to the **requirement**.

## Adjustment
 
### 1.05.04 Neutral position of the needle feed (only on PFAFF 1181)

#### Requirement

At stitch length setting "0" the needle bar must not make any feeding motion when the balance wheel is turned.

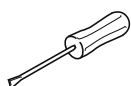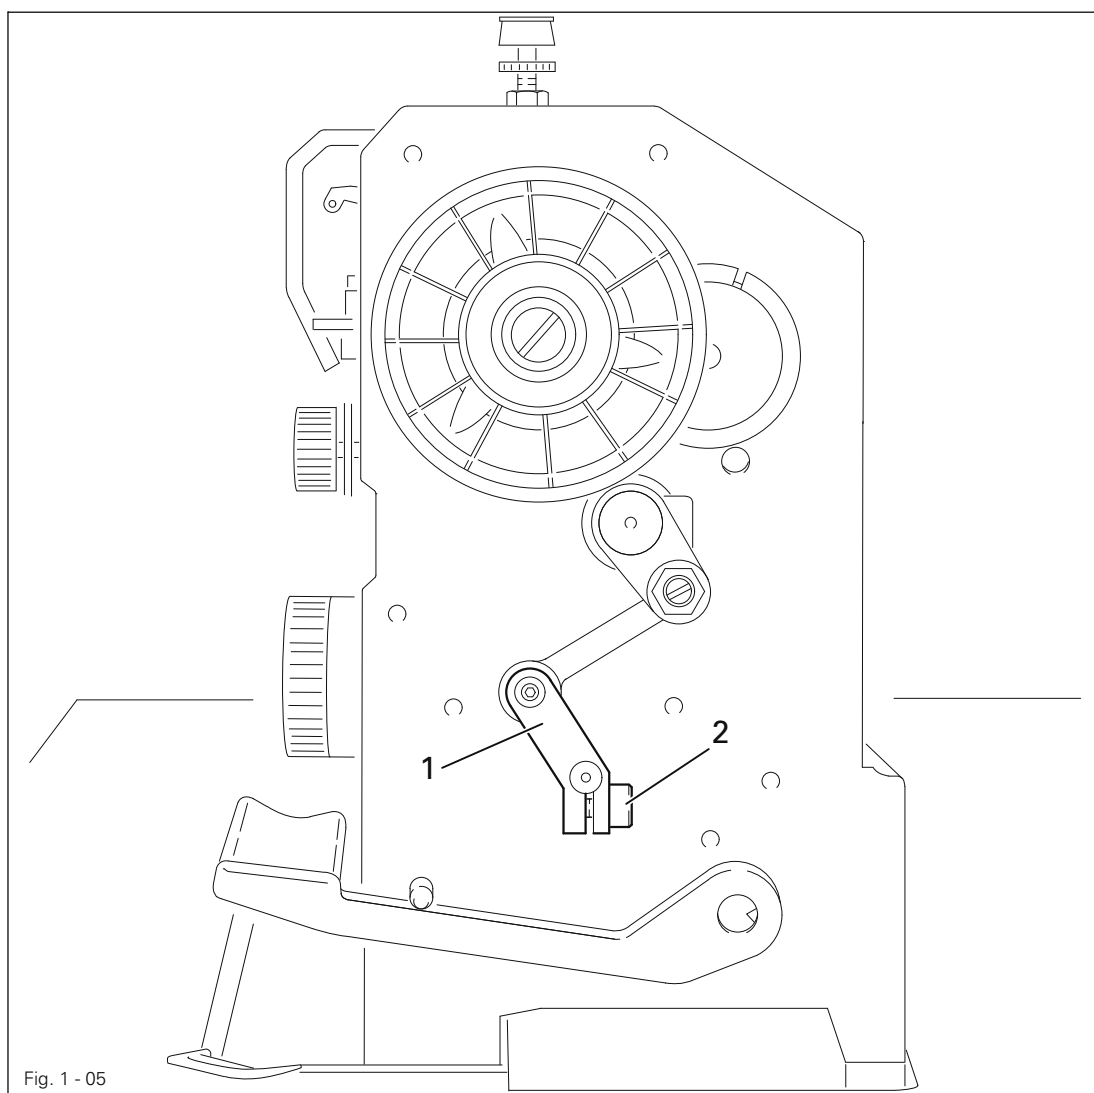



- Set stitch length "0".
- Turn crank 1 (screw 2) according to **Requirement**.

## 1.05.05 Bottom feed lifting motion

### Requirement

At stitch length setting "0" and needle bar position 0.6 past b.d.c. on the PFAFF 1181 and at needle bar position t.d.c. on the PFAFF 1183,

1. the bottom feed dog must be at its highest position,
2. control cam 3 must rest on lifting eccentric 1.

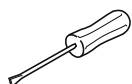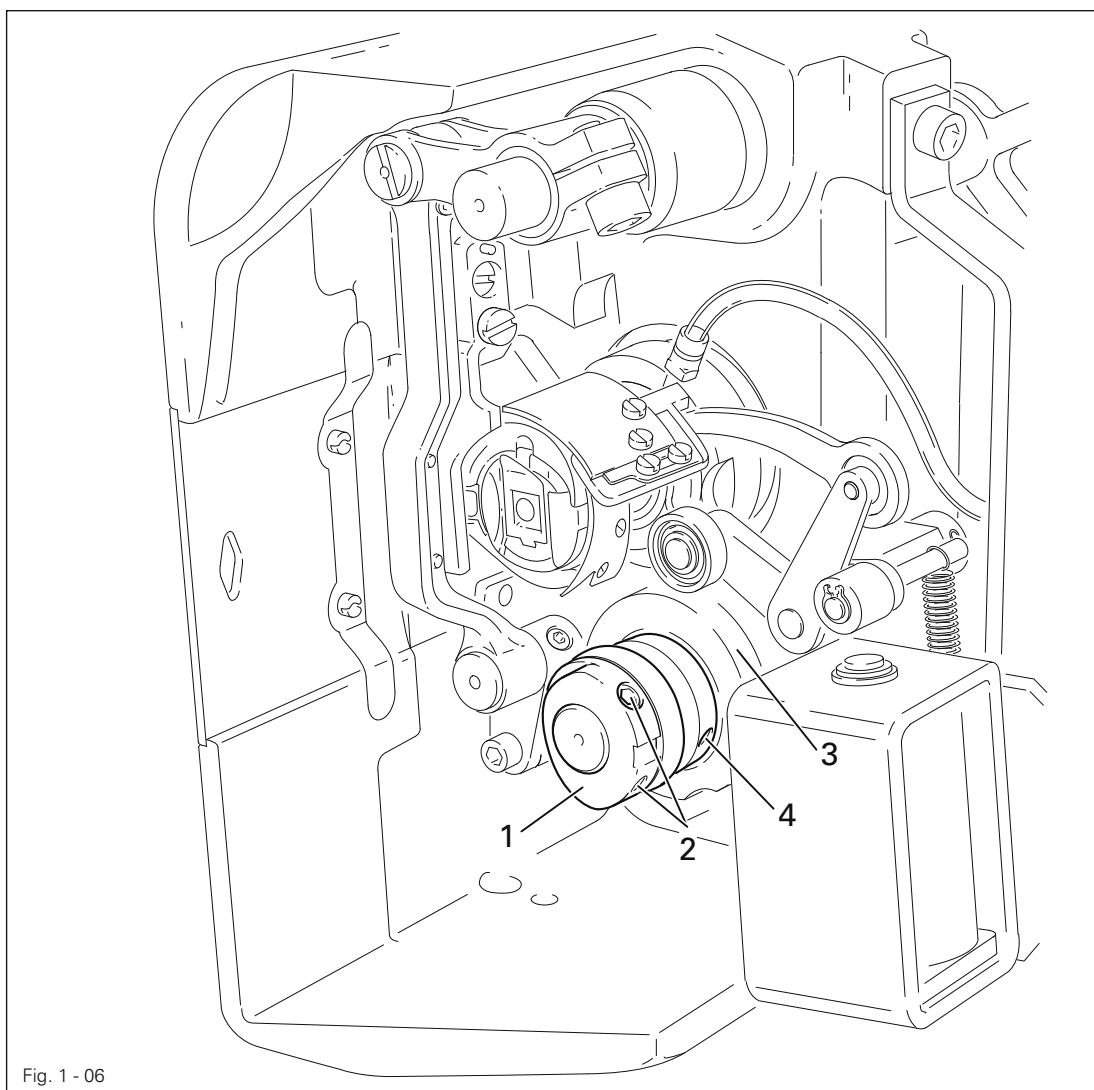



- Set stitch length "0" and set needle bar at required position
- Turn eccentric 1 (screws 2) according to Requirement 1.
- Adjust control cam 3 (screws 4) according to Requirement 2.

## 1.05.06 Bottom feed dog height
 
### Requirement

When feed dog **1** is at its highest point at stitch length setting "0" it must

1. be centred in the feed slot crosswise and in feeding direction
2. Rest on feed dog adjustment gauge **2** over its entire length.

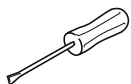
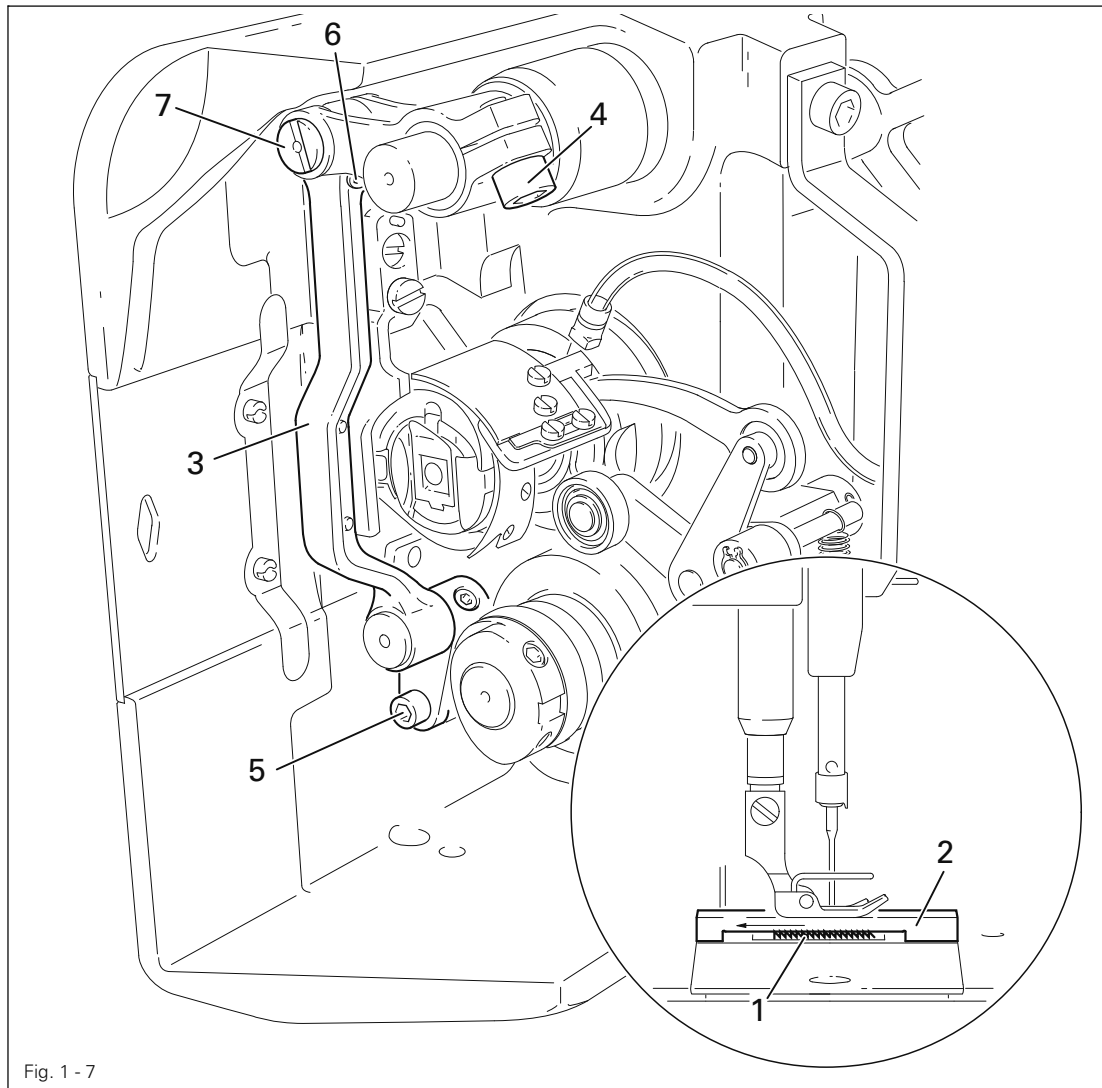


- Set stitch length at "0" and feed dog **1** at its highest position
- Raise the presser foot.
- Place feed dog adjustment gauge **2** on the needle plate cutout with the arrow in sewing direction so that it is flush with the front edge, and lower the presser foot onto it.
- Adjust feed bar **3** (screws **4**) according to **Requirement 1**.
- Loosen screws **5** and **6**.
- Adjust feed bar **3** or eccentric **7** according to **Requirement 2**.
- Tighten screws **5** and **6** firmly.

## 1.05.07 Feed dog motion of bottom feed dog
 
### Requirement

With the needle bar at a position **0.6** past b.d.c. on the **PFAFF 1181** or in position **0.6** past t.d.c. on the **PFAFF 1183** the feed dog must not make any feeding motion when reverse-feed lever **3** is operated at the longest stitch length setting.

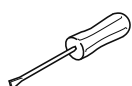
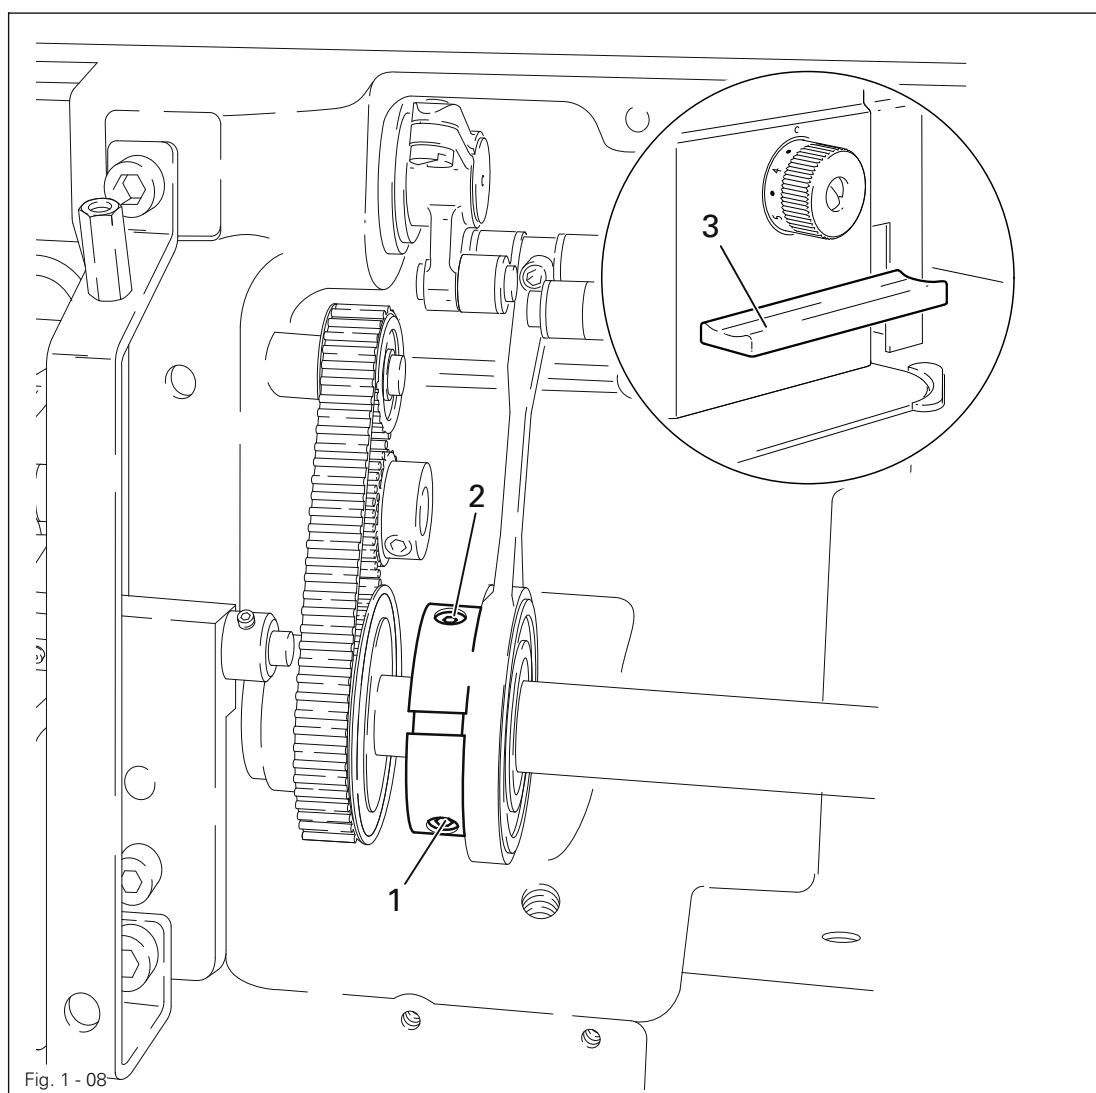


- Set the longest stitch and the needle bar at the corresponding position.
- Adjust eccentric **1** (loosen screws **2** a little) according to **Requirement**, but make sure it is not moved sideways.

## 1.05.08 Feeding motion of needle feed (only on PFAFF 1181)

### Requirement

When the longest stitch length is set and the needle bar is positioned **0.6 mm** past b.d.c., the needle should not move when the reverse-feed key **4** is operated..

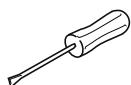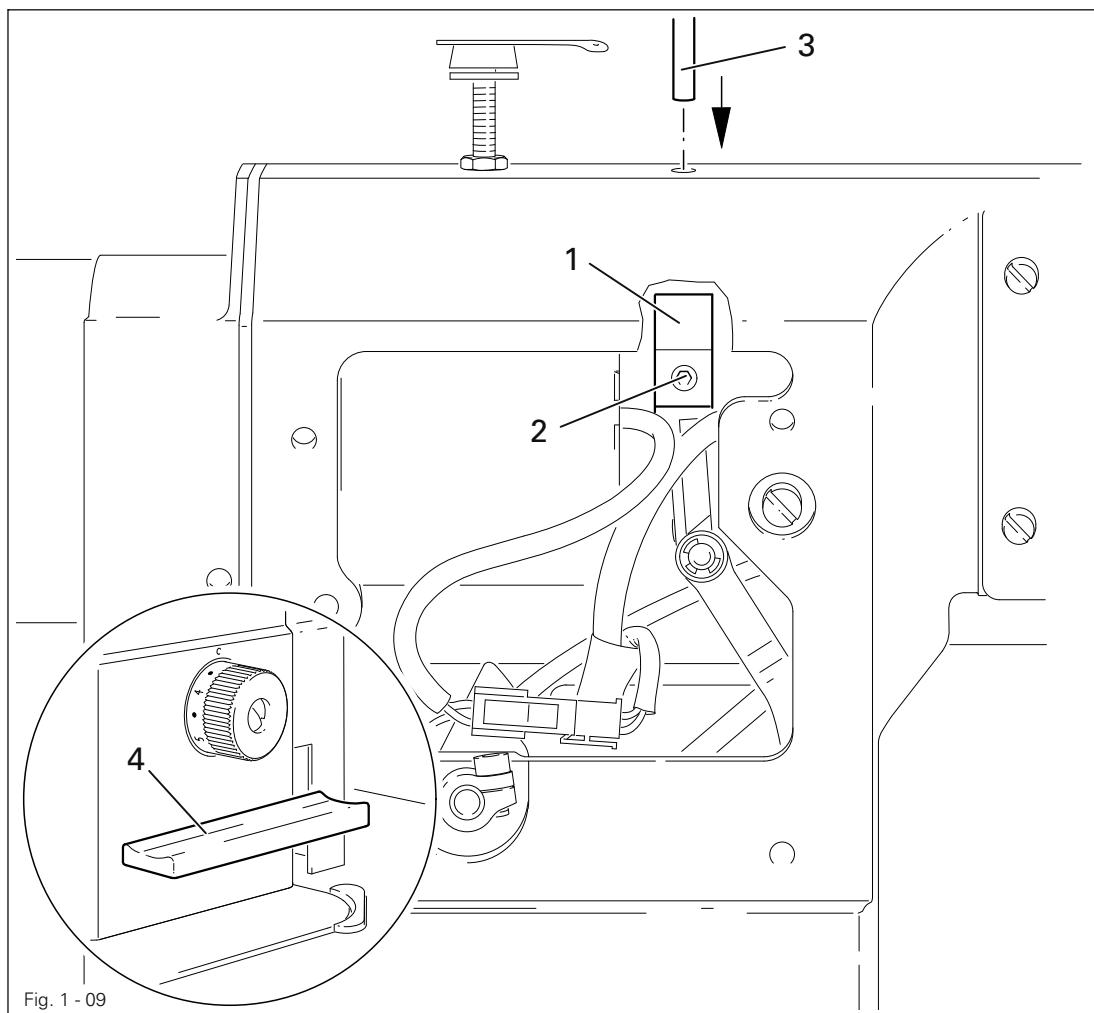

- Bring the needle bar into the position **0.6 mm** past t.d.c.
- Turn eccentric **1** (screws **2**) until the adjustment pin **3** locks into place.

## 1.05.09 Needle in needle hole center (only on PFAFF 1183)

### Requirement

The needle must penetrate the needle hole exactly in the middle.


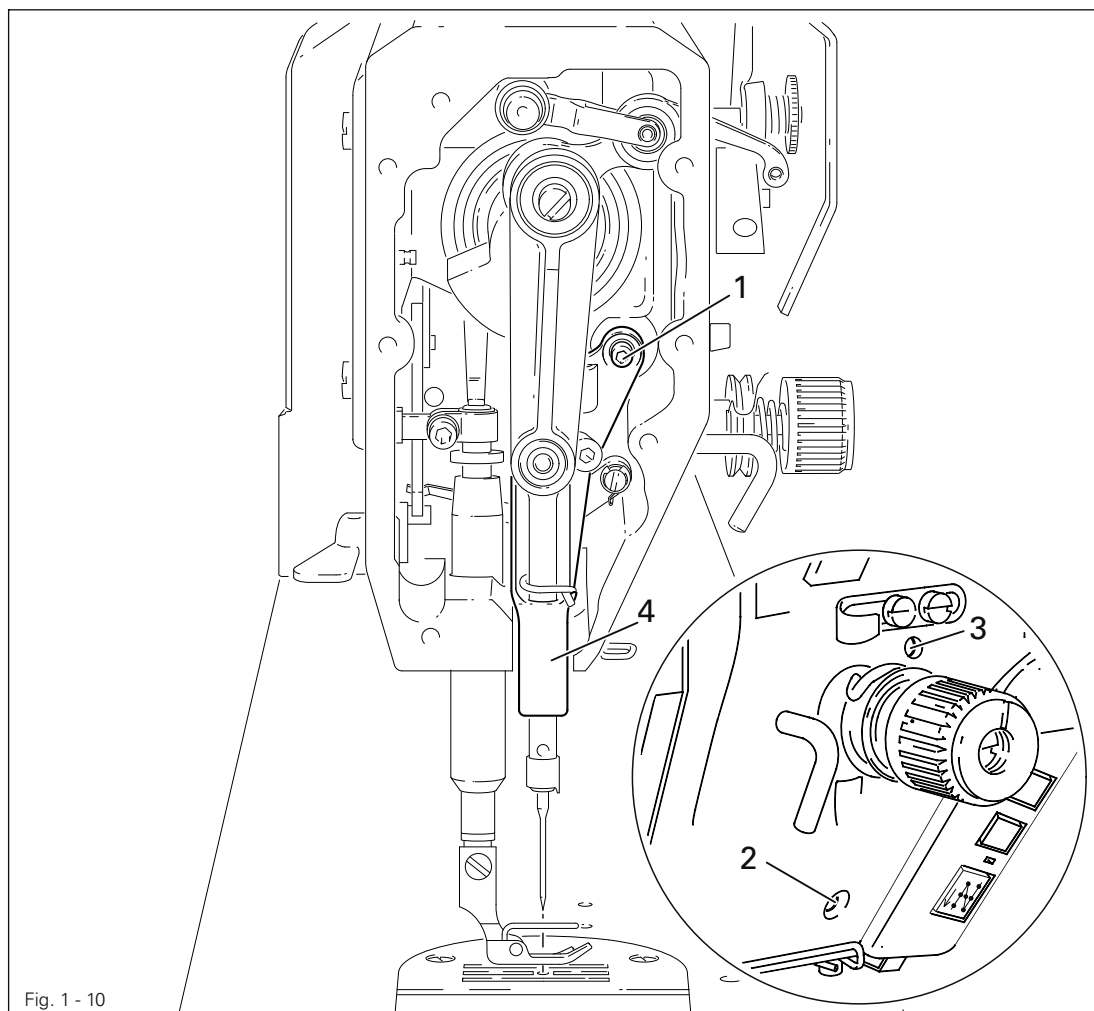


Fig. 1 - 10


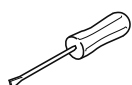 


- Set the needle in the needle hole.
- Loosen screws 1, 2 and 3.
- Move the needle bar frame 4 according to the requirement.
- Tighten screw 2 and turn screw 3 slightly.
- Via screw 1, bring the retracted guide bolt to the eye of the needle bar frame 4 and tighten it.
- Turn the handwheel a few times to prevent distortion to the needle bar frame 4.
- Tighten screw 3

## 1.05.10 Needle to needle hole centre (on PFAFF 1181)
 
### Requirement

The needle must enter exactly in the centre of the needle hole.

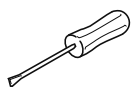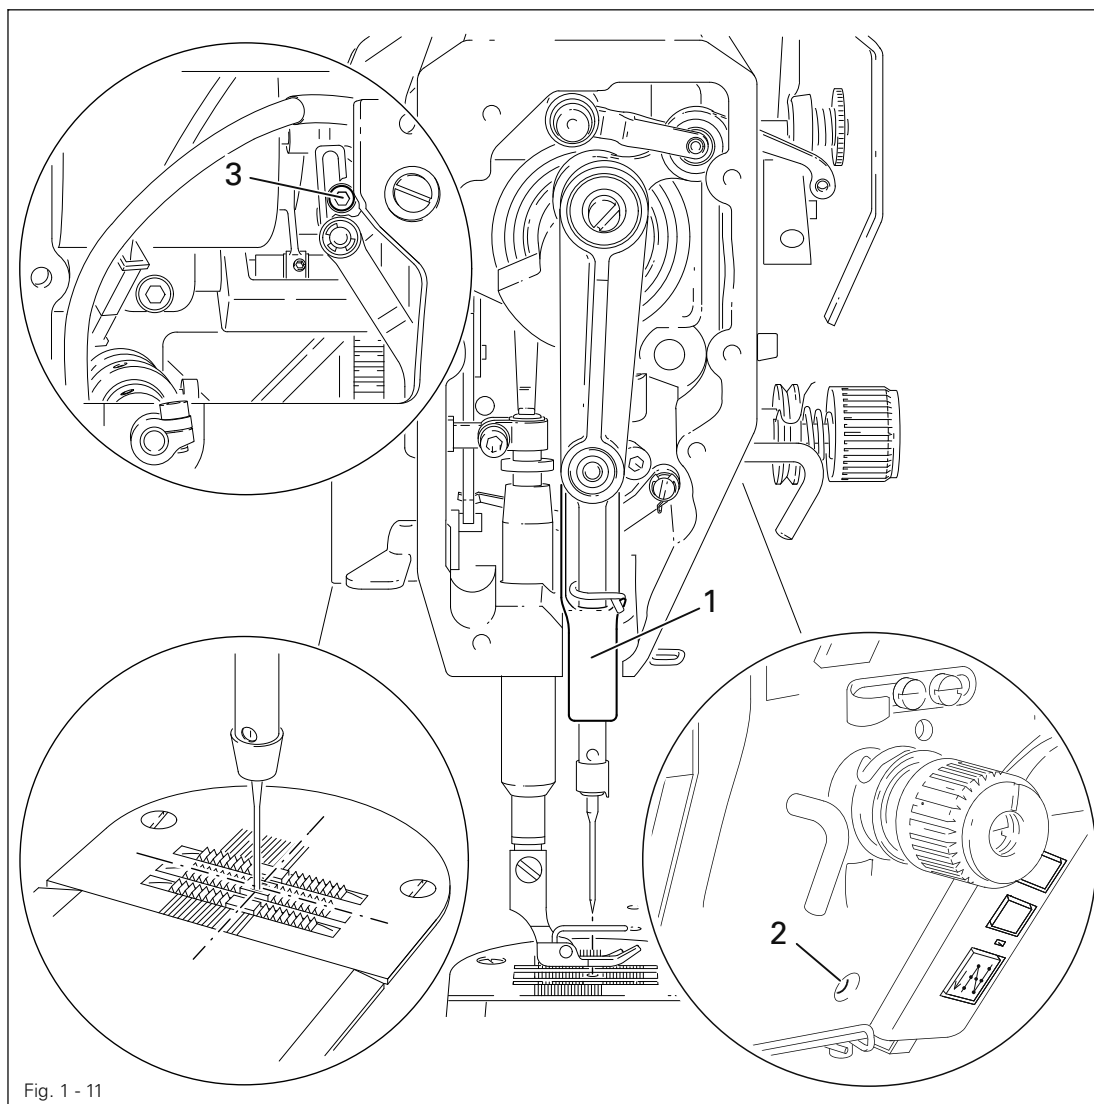

- Set stitch length "0".
- Set the needle in the needle hole by turning the balance wheel
- Turn needle bar frame 1 (screws 2 and 3) according to **Requirement**.

## 1.05.11 Synchronous strokes of needle- and drop feed (only on PFAFF 1181)

### Requirement

At the longest stitch length setting the needle and feed dog must move by the same stroke when the balance wheel is turned.


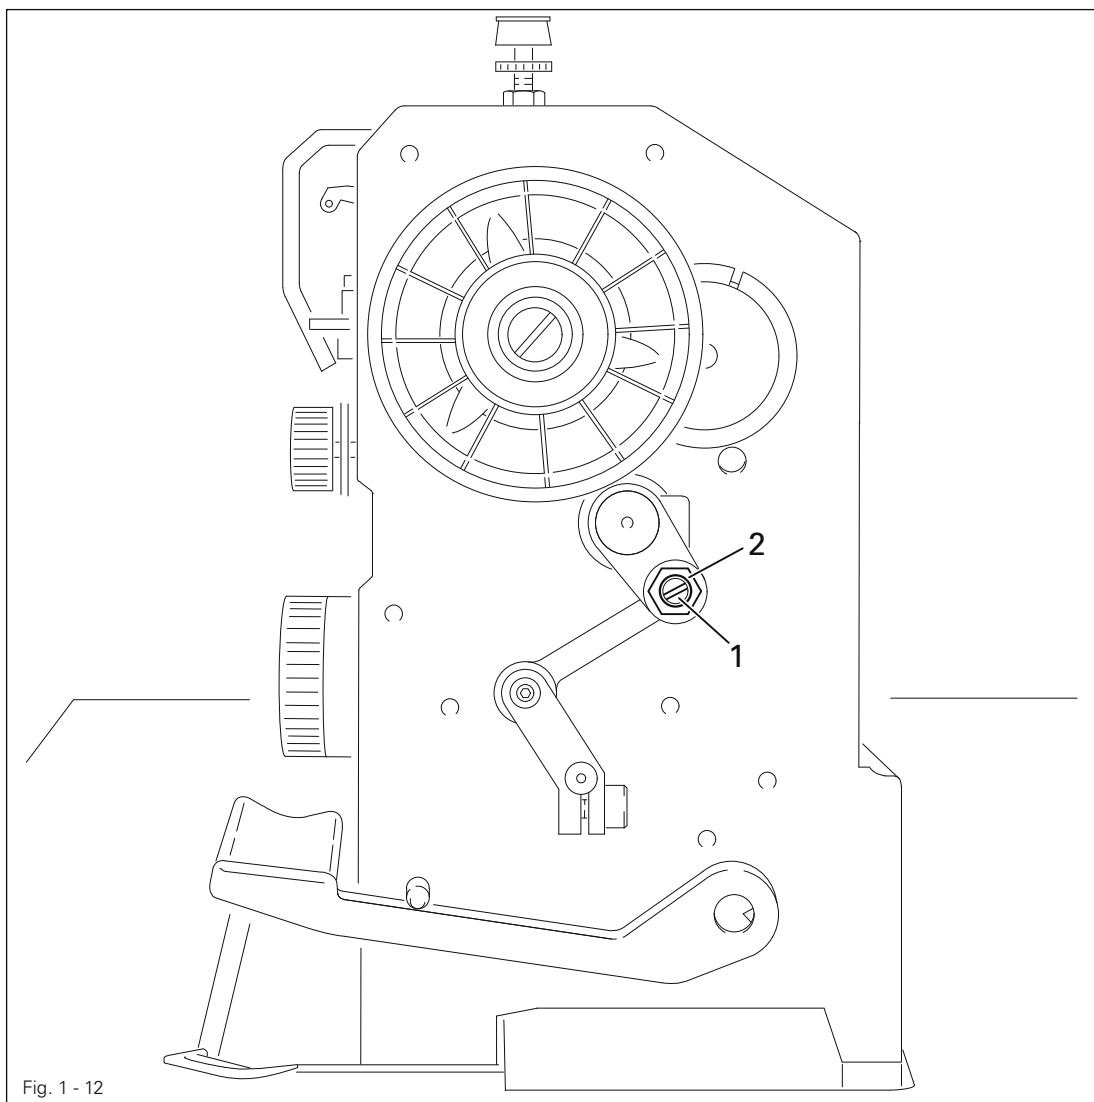


Fig. 1 - 12

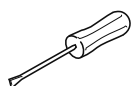 

- Set the longest stitch.
- Turn eccentric 1 (nut 2) according to **Requirement**.

## 1.05.12 Hook shaft bearing and toothed belt tension

### Requirement

1. The front edge of the hook shaft **6** must be at a distance of **14.5 mm** to the needle center. At the same time, the slot in the hook shaft bearing **1** (see arrow) must be parallel to the bedplate and pointing opposite to the direction of sewing.
2. The toothed belt should be tightened in such a way that, when the gauge is pushed onto the toothed belt, the marking in the gauge window corresponds to the marking on the bushing.


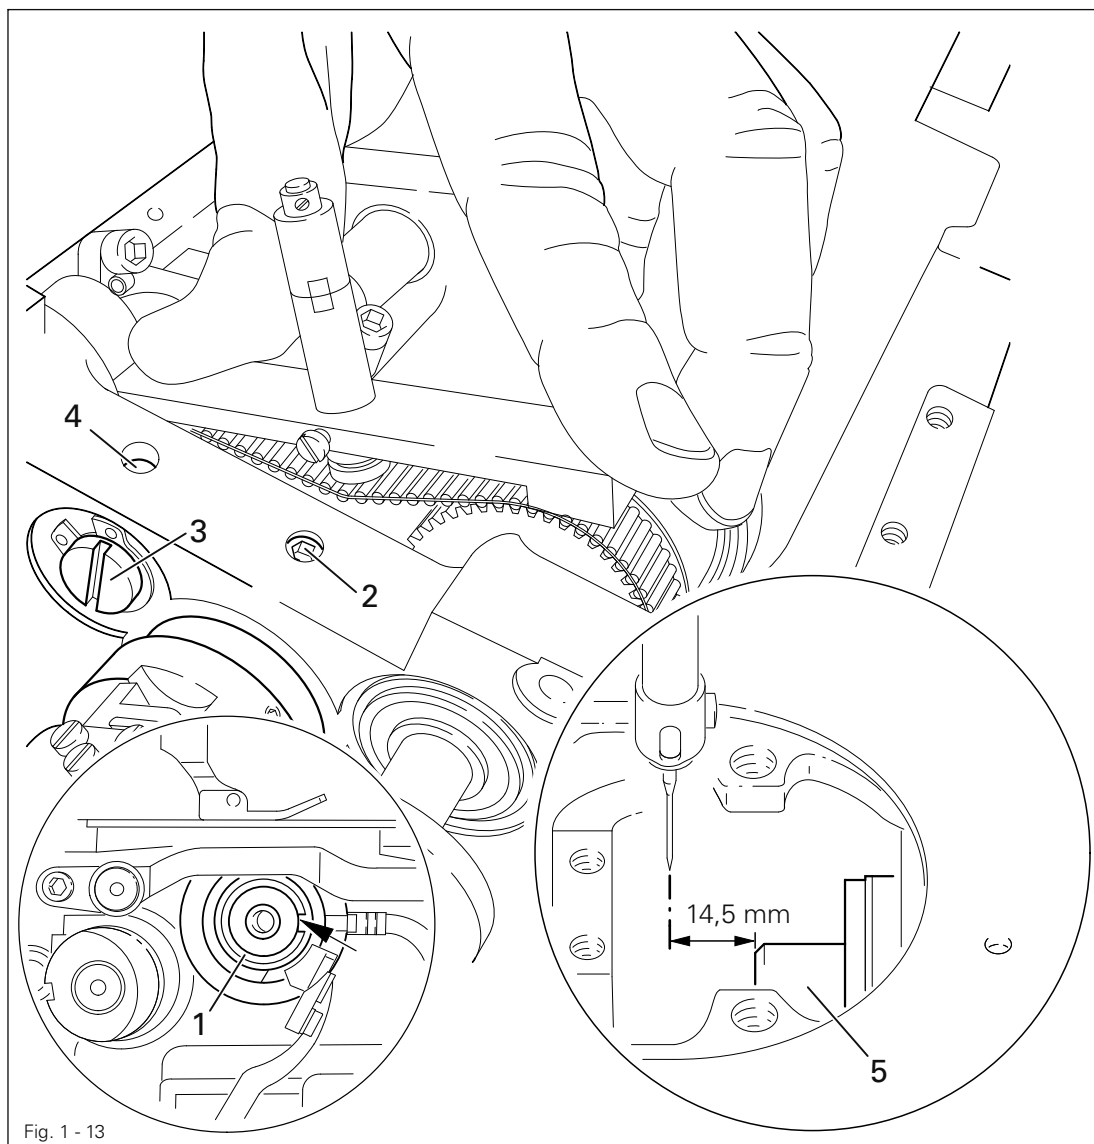


Fig. 1 - 13

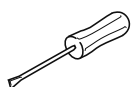 


- Align hook shaft bearing **1** (screw **2**) according to **requirement 1**.
- Push the gauge (Part-No. **61-111 639-76**) onto the toothed belt so that it is centred to the toothed belt and touching the bearing of the sliding shaft. The gauge window must be facing the hook.
- Eccentric **3** (screw **4**) clockwise in accordance with **requirement 2**, taking care that the axial position of eccentric **3** is not altered.


## 1.05.13 Hook lubrication

### Requirement

1. The centrifugal disk **1** must be positioned **1.5 mm** in front of the oil ring **3**.
2. When the machine is running at full speed, after approx. **10** seconds a mark should be made by a fine stripe of oil on the strip of paper placed over the needle plate cutout.

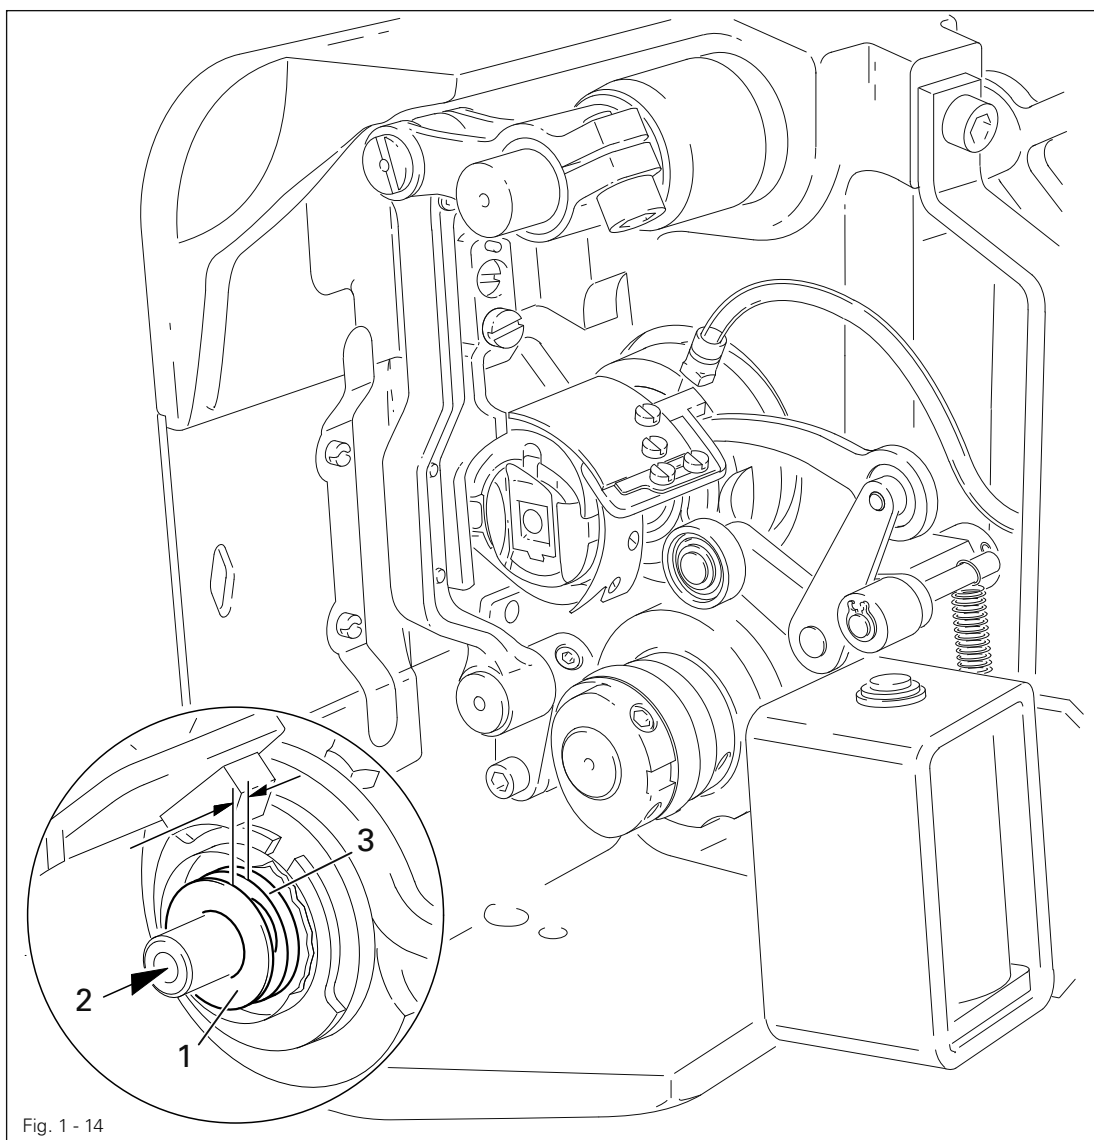

 The adjustment is only necessary if the wick has been replaced.  
When replacing the wick, make sure that the new wick is impregnated with oil.

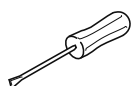



- Move the centrifugal disk **1** (screw **2**) according to **requirement 1**.
- Check **requirement 2**. If necessary, move centrifugal disk **1**.

## 1.05.14 Needle rise, hook-to-needle clearance, needle height and bobbin case position finger
 
### Requirement

With the needle at **1.8 mm** after BDC,

1. the hook point **6** must point to the middle of the needle and be at a distance of **0.05 mm - 0.1 mm** to the clearance cut of the needle, and
2. the top edge of the needle eye must be **0.8 mm** below the hook point.
3. Between the projection of the bobbin case position finger **4** and the bottom of the retaining groove there should be a distance of **0.5 mm**.

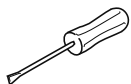
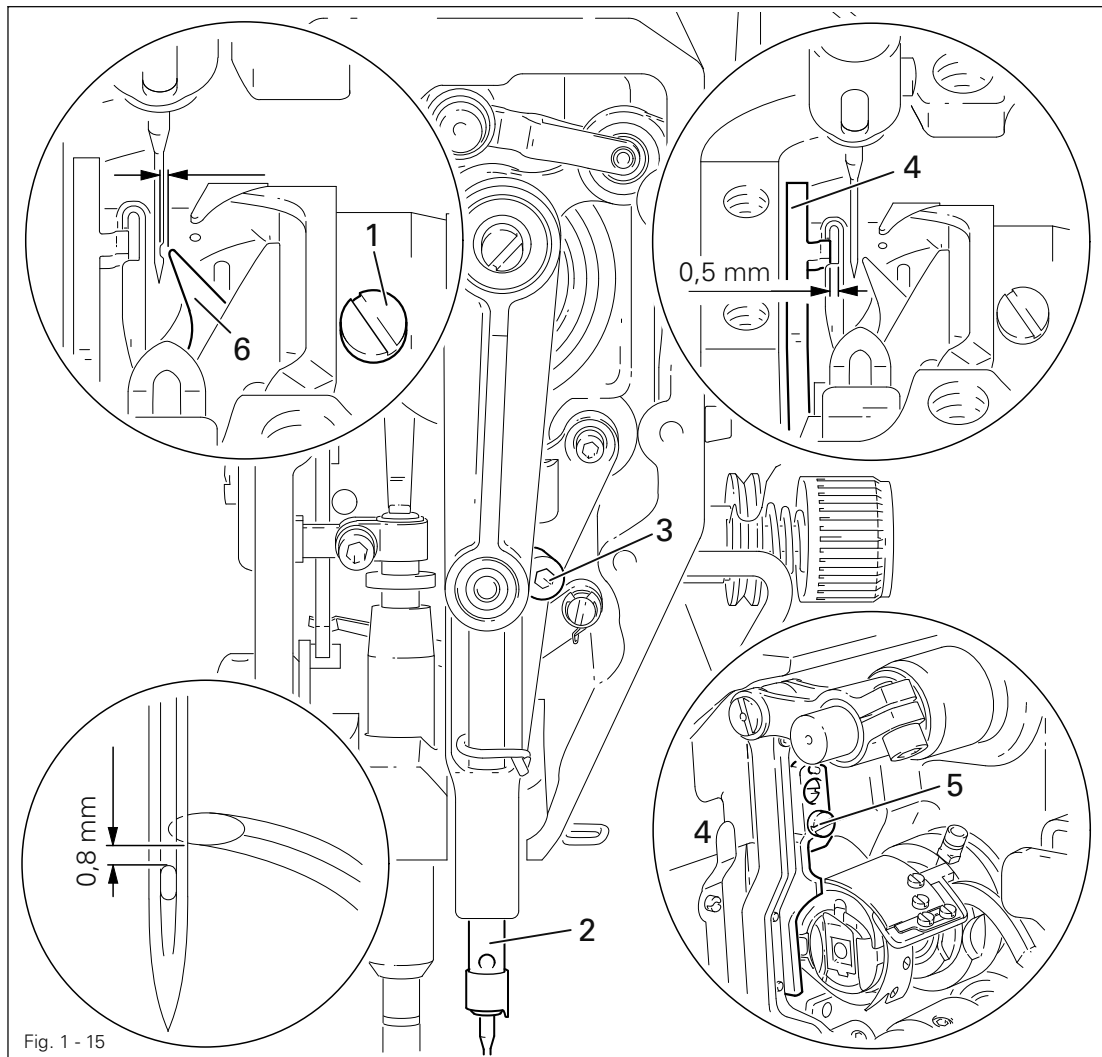


- Using the adjustment pin, position the needle bar at **1.8 mm** after BDC.
- Adjust the hook according to **requirement 1**.
- Tighten screw **1**.
- Move needle bar **2** (screw **3**) without turning it according to **requirement 2**.
- Align bobbin case position finger **4** (screw **5**) according to **requirement 3**.

## 1.05.15 Thread check spring and slack thread regulator

### Requirement

1. The motion of the thread check spring must be completed when the needle point enters the material (spring stroke approx. **7 mm**).
2. When the thread loop is at its largest when going around the hook, the thread check spring must have moved by approx. **1 mm**.

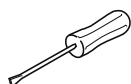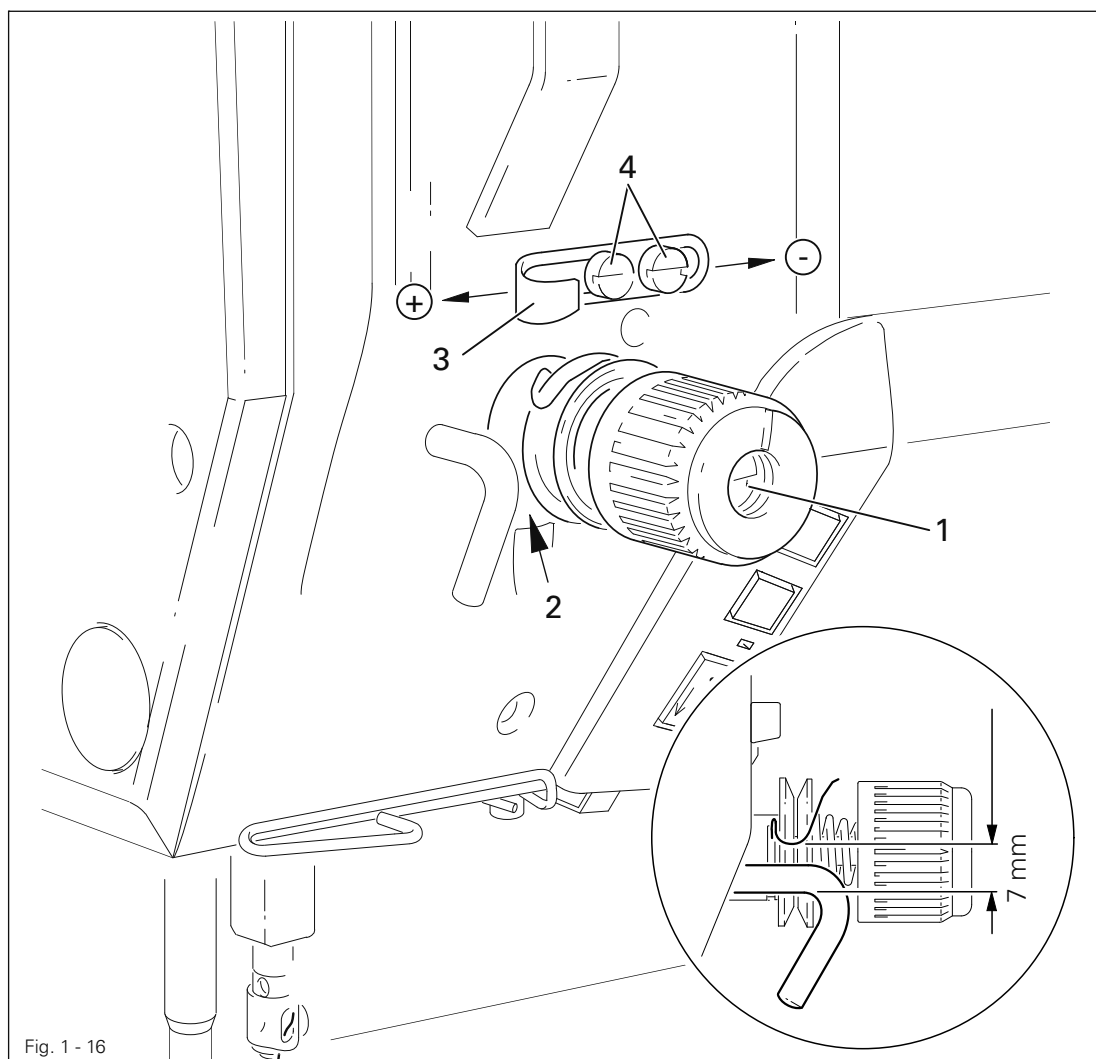

- Turn thread tension **1** (screw **2**) according to **requirement 1**.
- Turn thread tension **3** (screw **4**) according to **requirement 2**.





Due to technical sewing reasons it may be necessary to deviate from the spring stroke indicated above.

Move the slack thread regulator **3** (screw **4**) toward the "+" (= more thread) or toward the "-" (= less thread)

## 1.05.16 Position of knee lever

### Requirement

1. When the knee lever is in its resting position, the axle 5 must be parallel to the bedplate.
2. When the presser foot is resting on the needle plate, the presser bar lifting lever 6 must be touching the circlip 8 lightly and be at a distance of approx. **1 mm** from lifting piece 7.

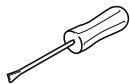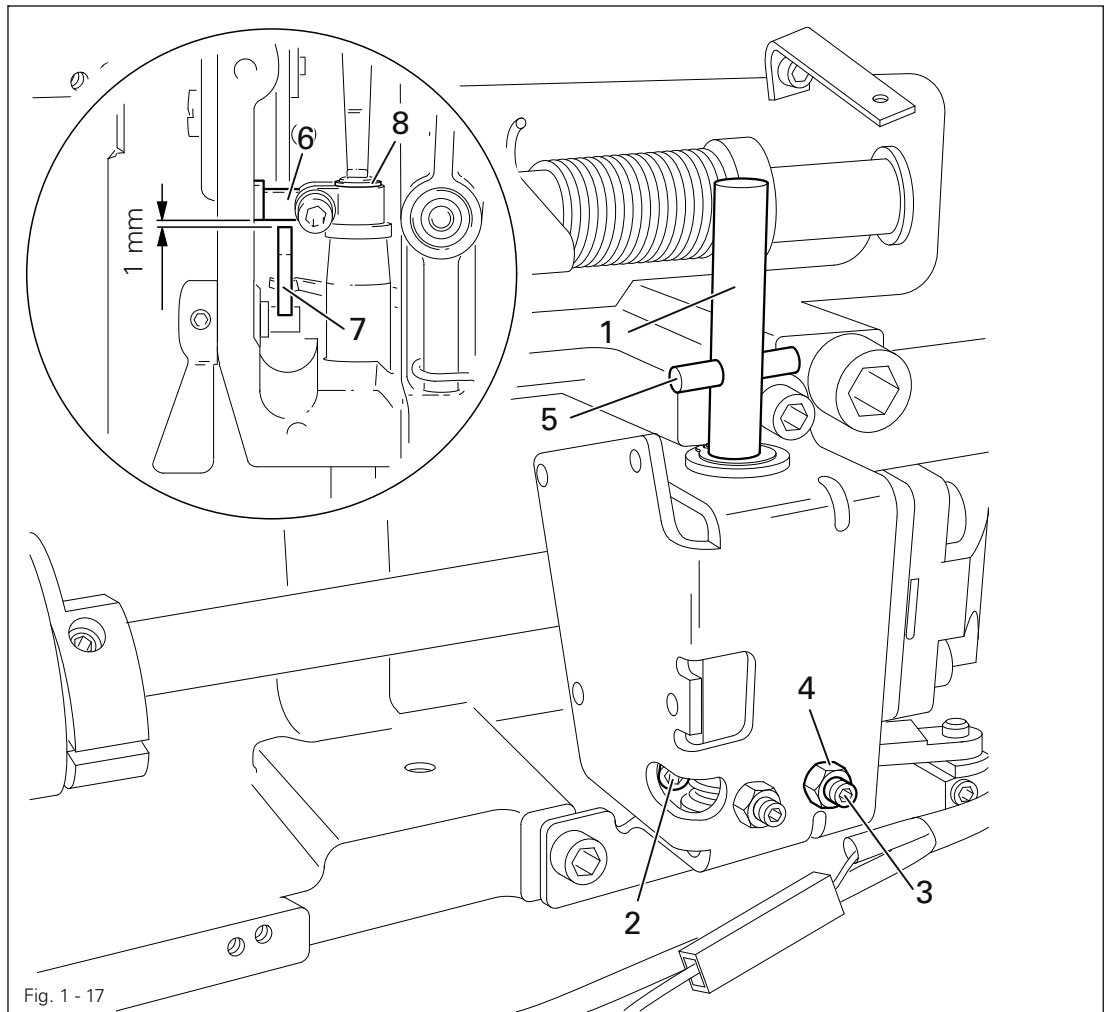

- Lower the presser foot onto the needle plate.
- Turn shaft 1 (screws 2) according to **Requirement 1**.
- Turn screw 3 (nut 4) according to **Requirement 2**.

## 1.05.17 Knee lever stop

### Requirement

When the knee lever is fully actuated,

1. the presser foot must be raised approx. **9 mm** (or approx. **13 mm** for a large needle bar stroke) above the needle plate, and
2. lever **3** must swing down automatically.


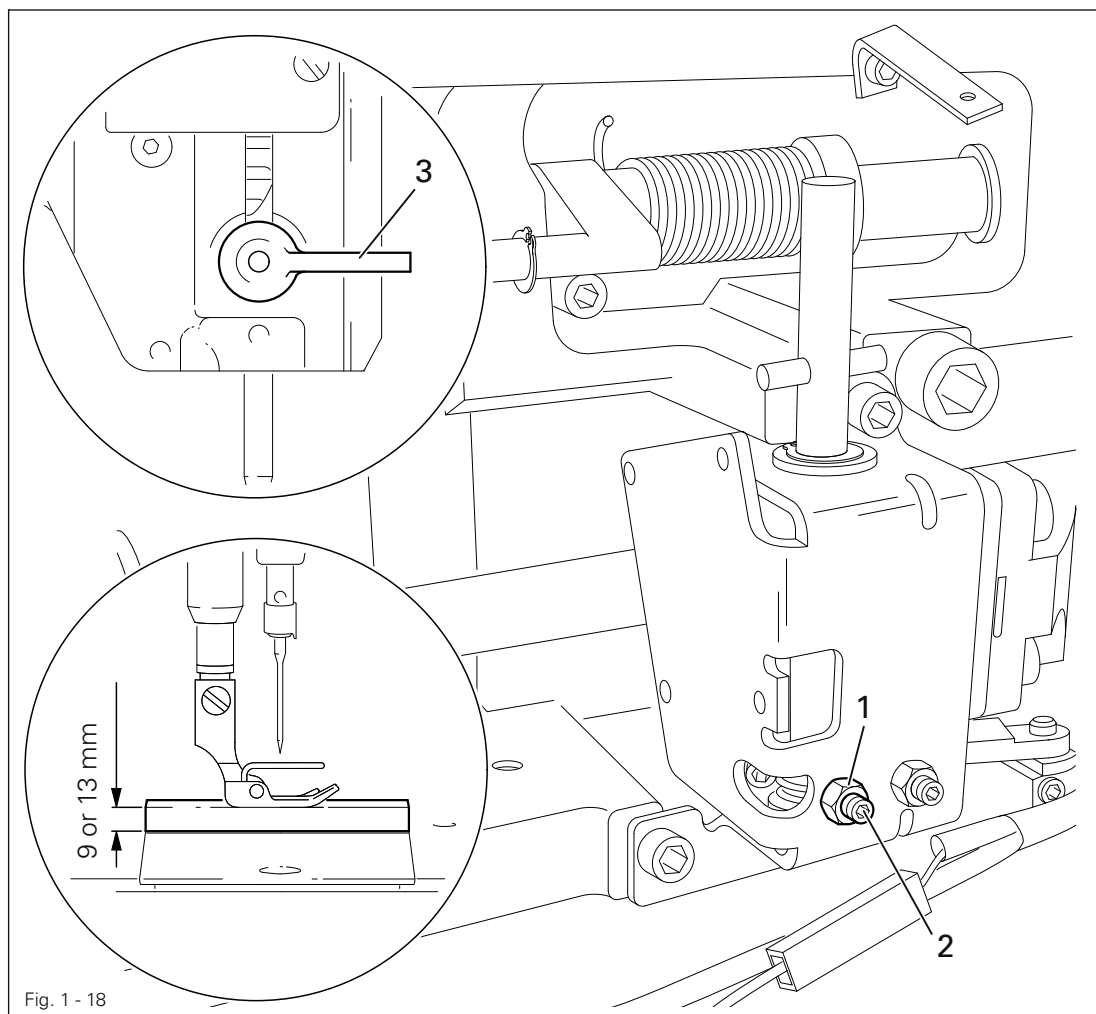




Fig. 1 - 18

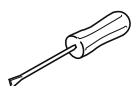 

- Loosen nut **1** and unscrew screw **2** a few turns.
- Raise the presser foot and slide a **9 mm** (for small needle bar stroke) or **13 mm** (for large needle bar stroke) thick spacer under the presser foot.
- Swing down lever **3**
- Move the knee lever until it is fully actuated. The presser foot must remain on the spacer.
- Now turn screw **2** as far as it will go.
- Turn screw **2** a half turn back and tighten nut **1**.

## Requirement

 1. With the bobbin winder on, the drive wheel **1** must engage reliably.
2. With the bobbin winder off, the friction wheel **5** must not be driven by the drive wheel **1**.
3. The bobbin winder must turn off automatically when the thread level is approx. **1 mm** from the edge of the bobbin.

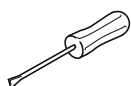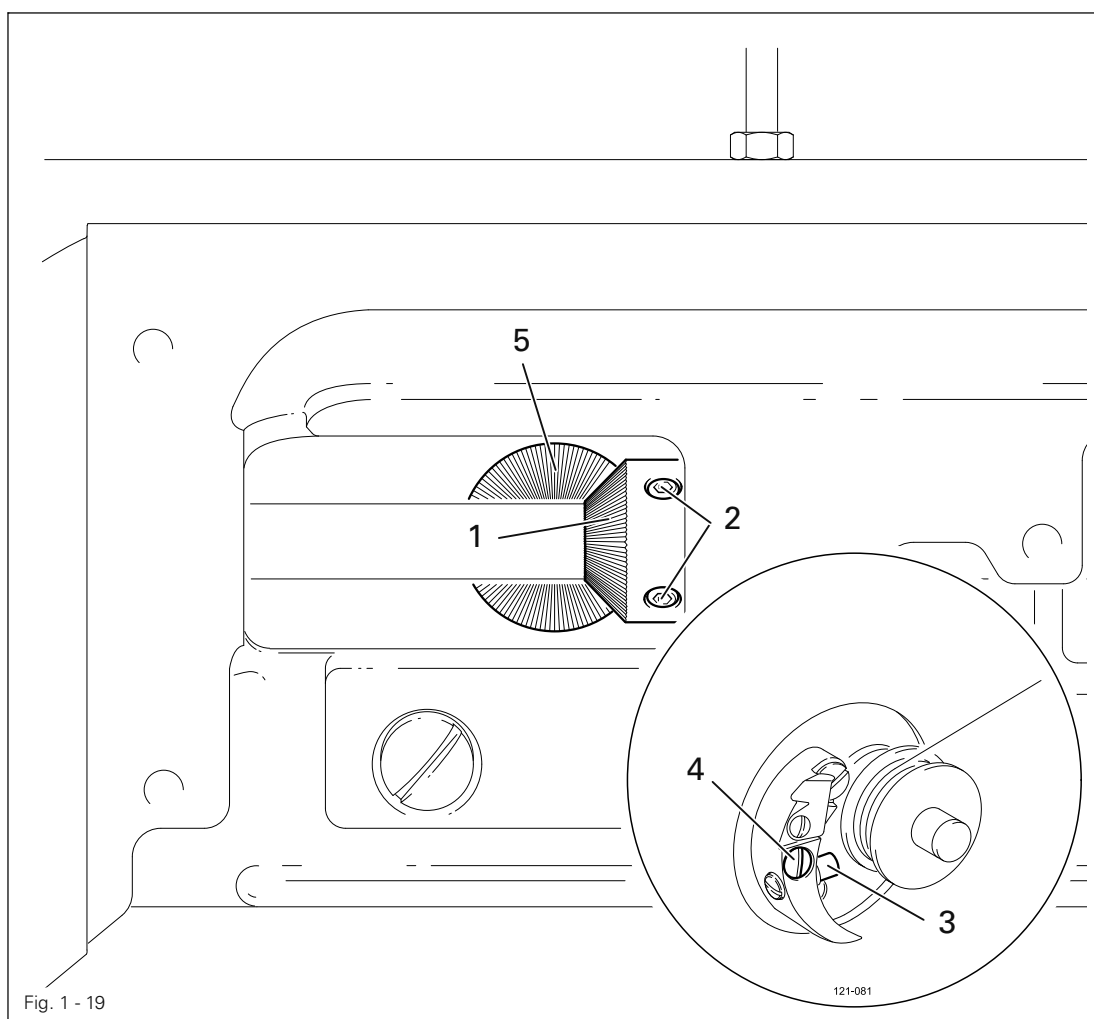


- Move drive wheel **1** (screws **2**) in accordance with **requirement 1** and **2**.
- Move bolt **3** (screw **4**) in accordance with **requirement 3**.


## 1.05.19 Limiting the stitch length



The maximum stitch length which can be selected can be limited mechanically.

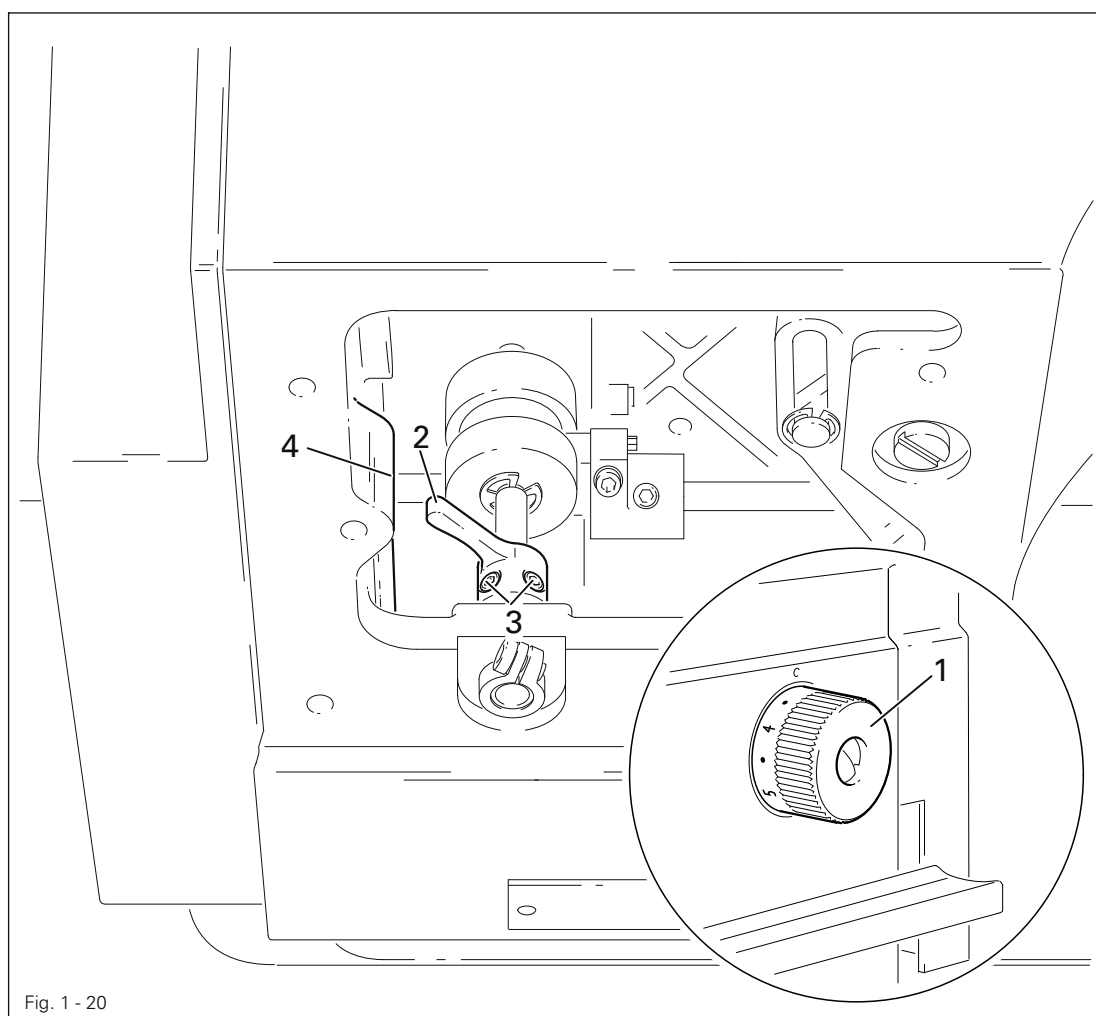

 When using Version **A** and **B** part sets, the maximum adjustable stitch length must **not be larger** than **3.0** or **4.5 mm** (see chapter **3 Specifications**, in the instruction manual)!


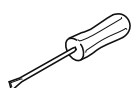


- Set the desired maximum stitch length with regulator disk **1**.
- Move crank **2** (screws **3**) down against stop **4**.

## 1.05.20 Presser foot pressure
 
### Requirement

The material must be fed reliably. In the process, pressure marks on the material must not be made.

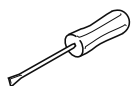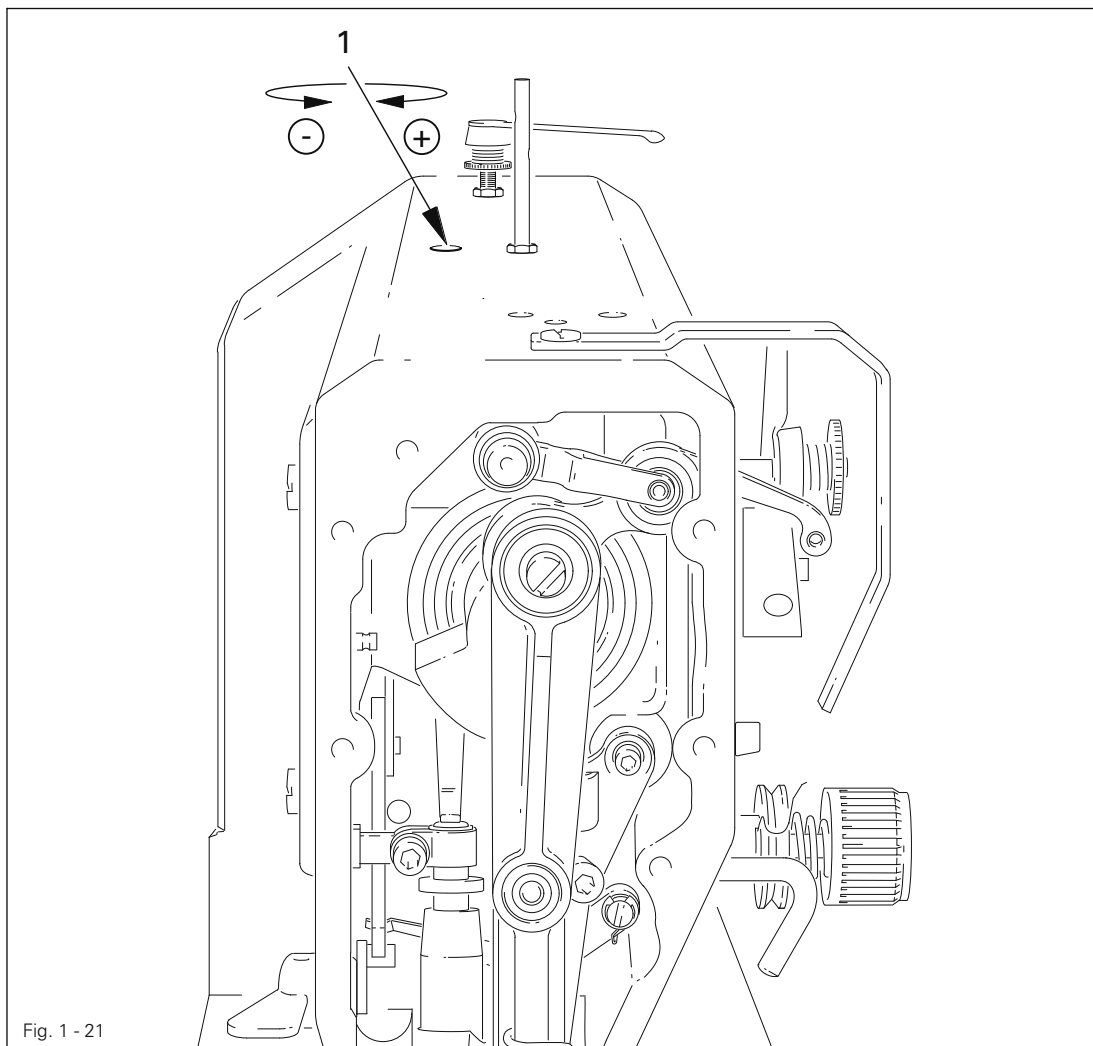

- Turn screw 1 in accordance with the **requirement**.

## 1.05.21 Modifying the needle bar stroke



The needle bar stroke is preset in the factory according to **requirement**. The needle bar stroke can be modified later if specific operating conditions make it necessary to do so.


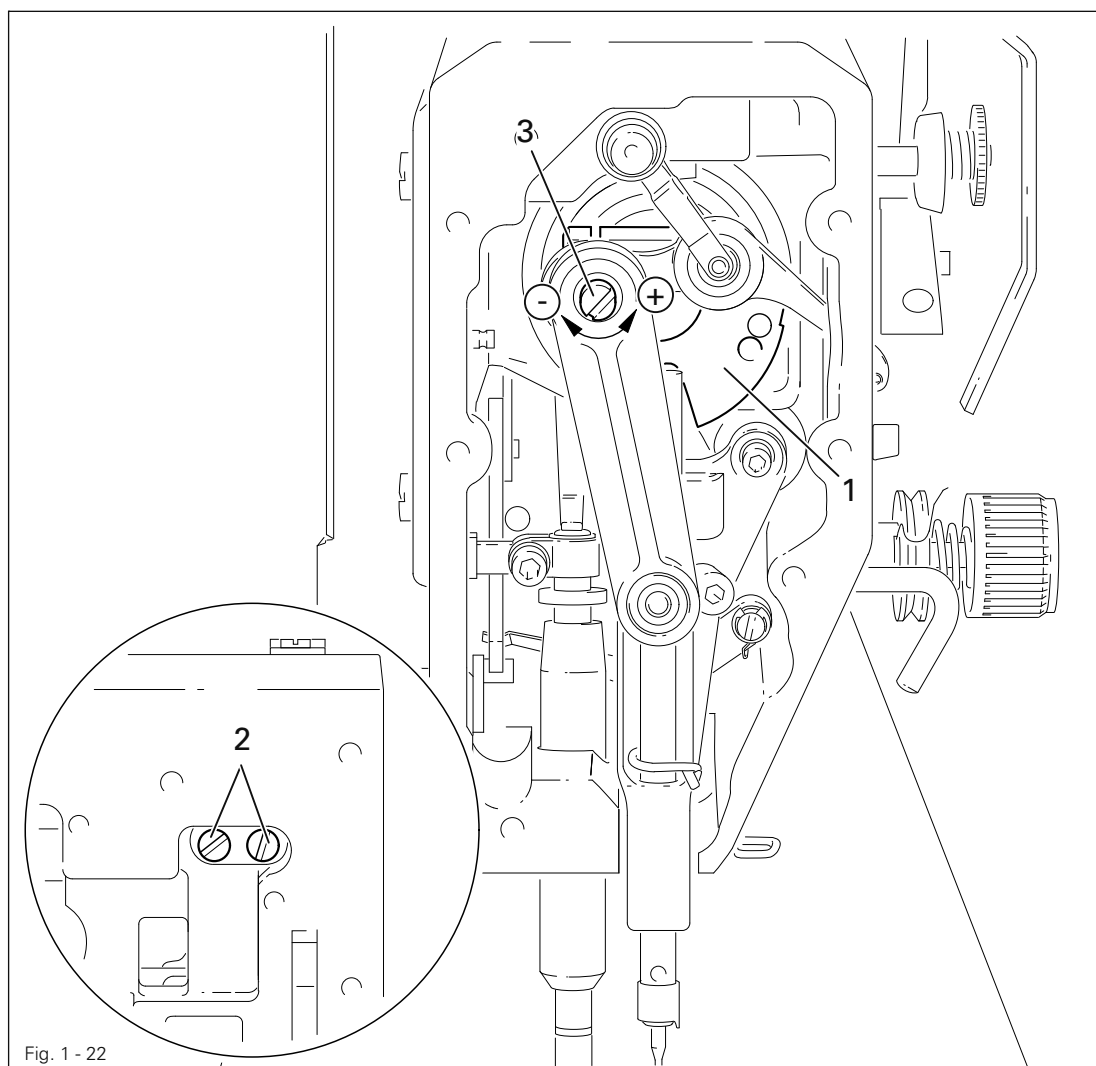


Fig. 1 - 22



When the needle bar stroke is altered, it is absolutely necessary to readjust the needle height! With a **36 mm** needle bar stroke, the maximum speed must be limited to **3800** spm.

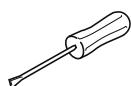

- Via the hand wheel, turn crank **1** until the screws **2** can be accessed from the side opening of the housing.
- Turn eccentric **3** (screws **2**) as far as possible toward "+" (= large needle bar stroke) or toward "-" (= small needle bar stroke).
- Adjust needle height (see chapter **1.05.02 Preadjusting the needle height** and /or chapter **1.05.14 Needle rise, hook-to-needle clearance, needle height and bobbin case position finger**).



## Adjustment
 
### 1.06 Adjusting the edge trimmer -731/01

#### 1.06.01 Zero position of the knife

##### Requirement

With the edge trimmer switched off, the knife should not move when the balance wheel is turned.

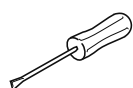
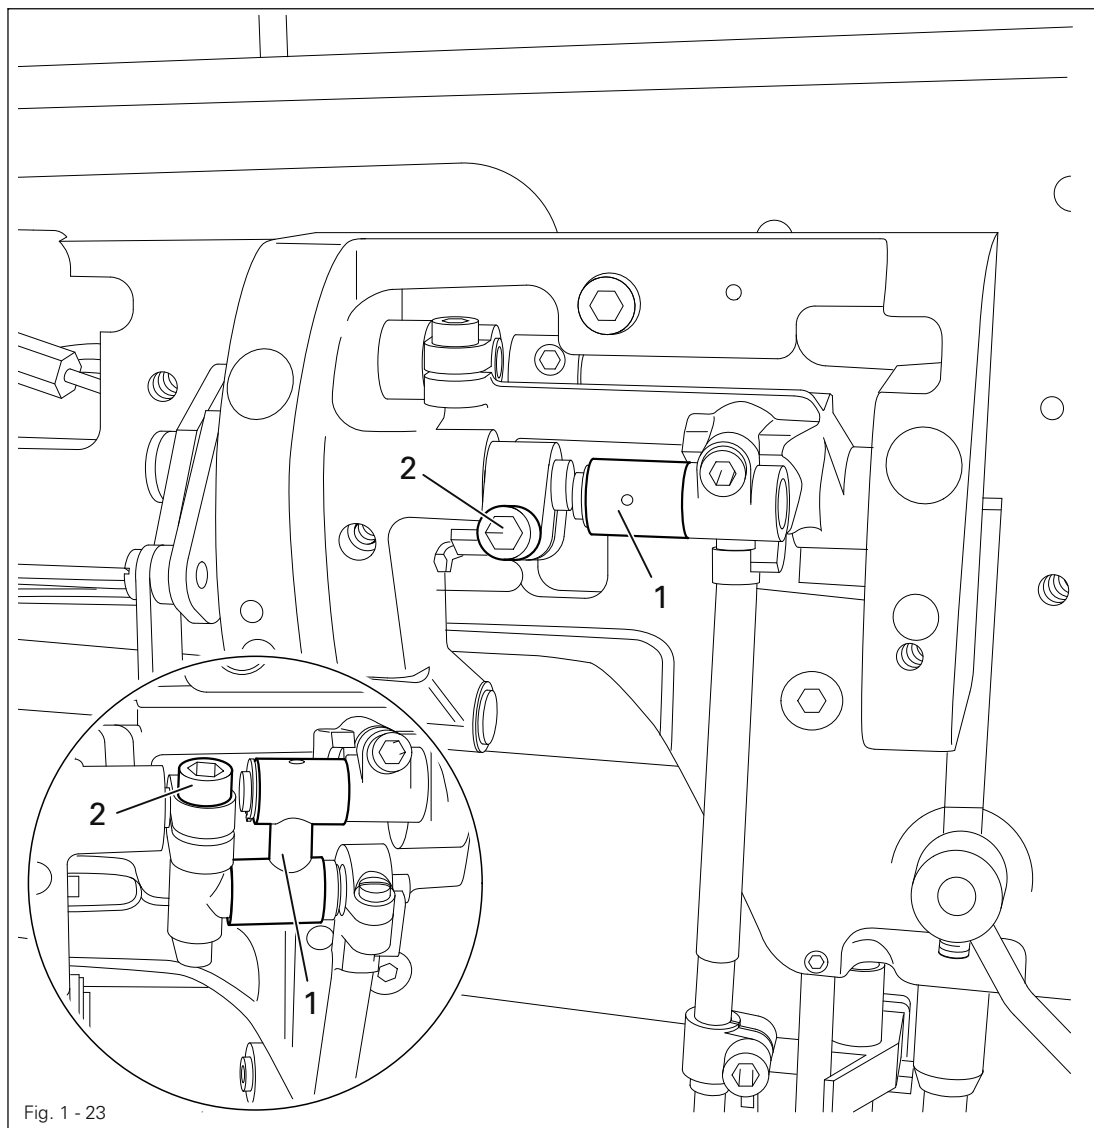


- Turn crank 1 (screw 2) according to the requirement.

## 1.06.02 Cutting motion
 
### Requirement

With the edge trimmer switched on and the needle bar at its t.d.c. on the **PFAFF 1183**, or at its b.d.c. on the **PFAFF 1181**, the knife should be at the top of its stroke.

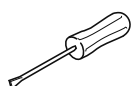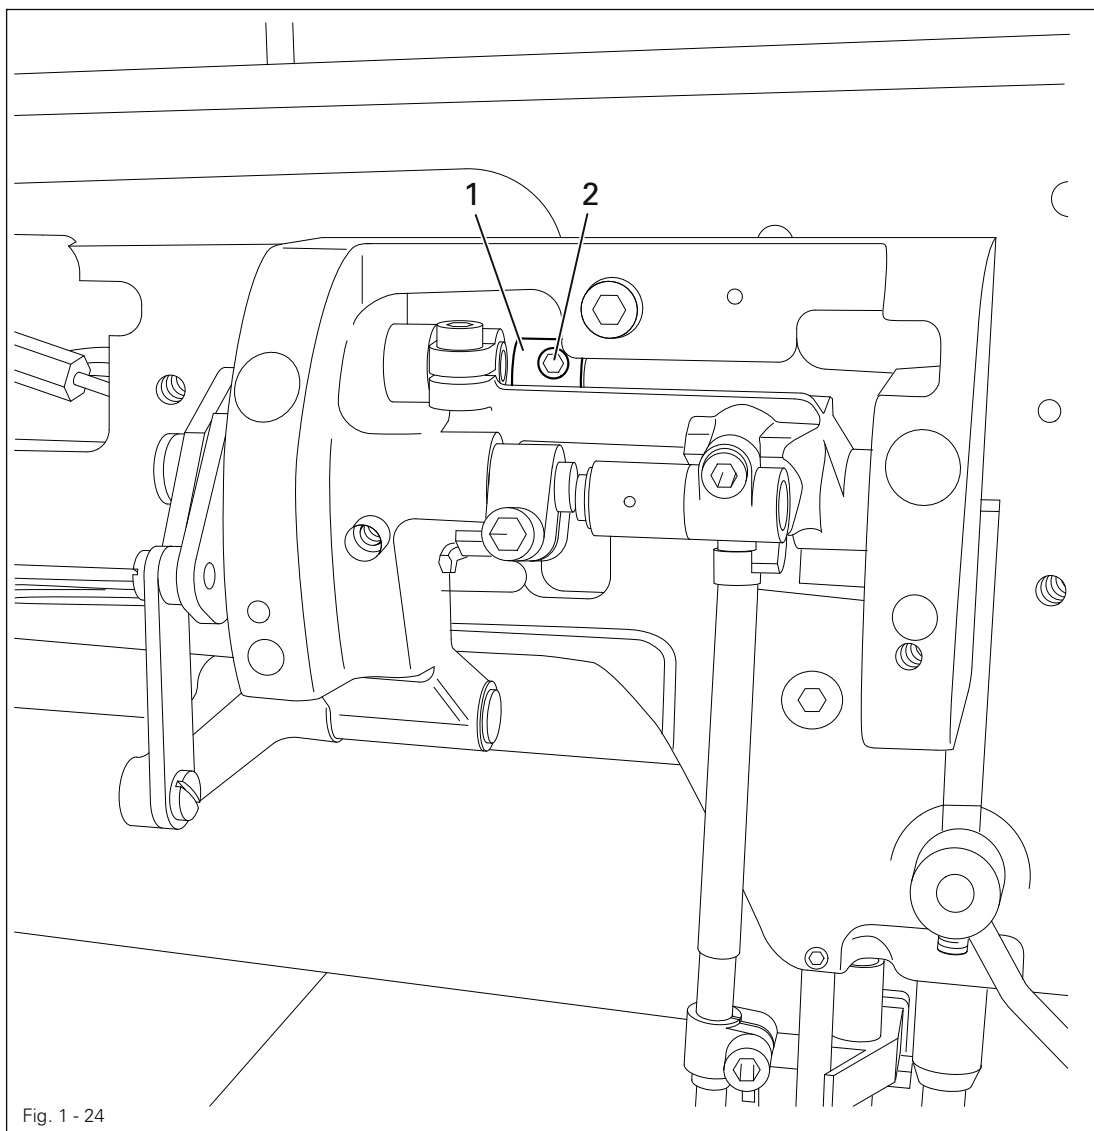

- Switch on the edge trimmer and bring the needle bar to t.d.c. or b.d.c. (see **requirement**).
- Turn eccentric 1 (two screws 2) according to the **requirement**.

## 1.06.03 Knife height

### Requirement

When the knife is at the bottom of its stroke, the front edge of the knife blade should be approx. **0.5 mm** below the top edge of the stationary knife.


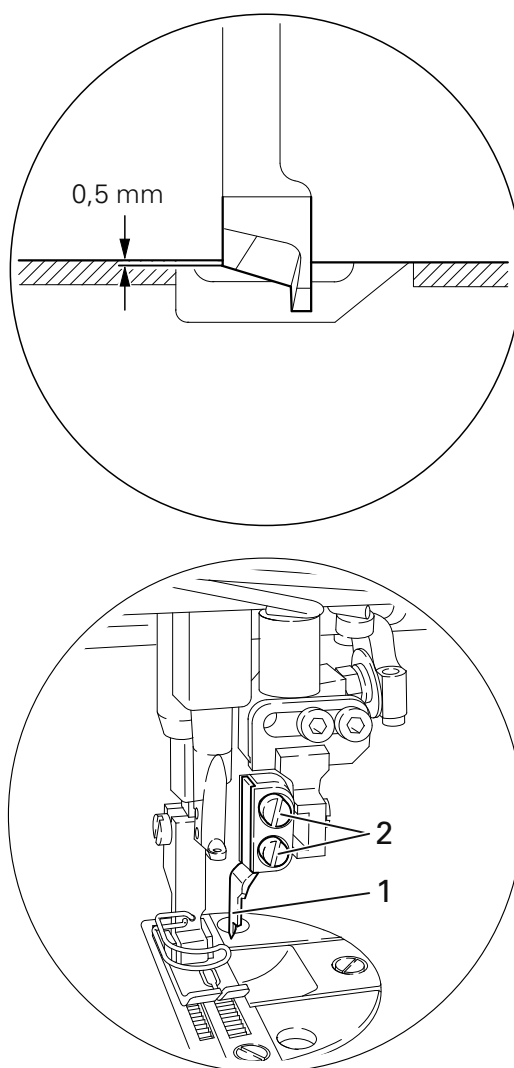


Fig. 1 - 25

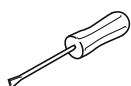 



- Switch on the edge trimmer and bring the knife to the bottom of its stroke.
- Adjust knife 1 (screws 2) according to the **requirement**.

## 1.06.04 Cutting angle of the knife

### Requirement

The knife should be

1. Touching the stationary knife **6** without counter pressure and
2. Be at a **0.1 mm** slant to the stationary knife **6**.

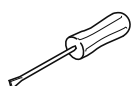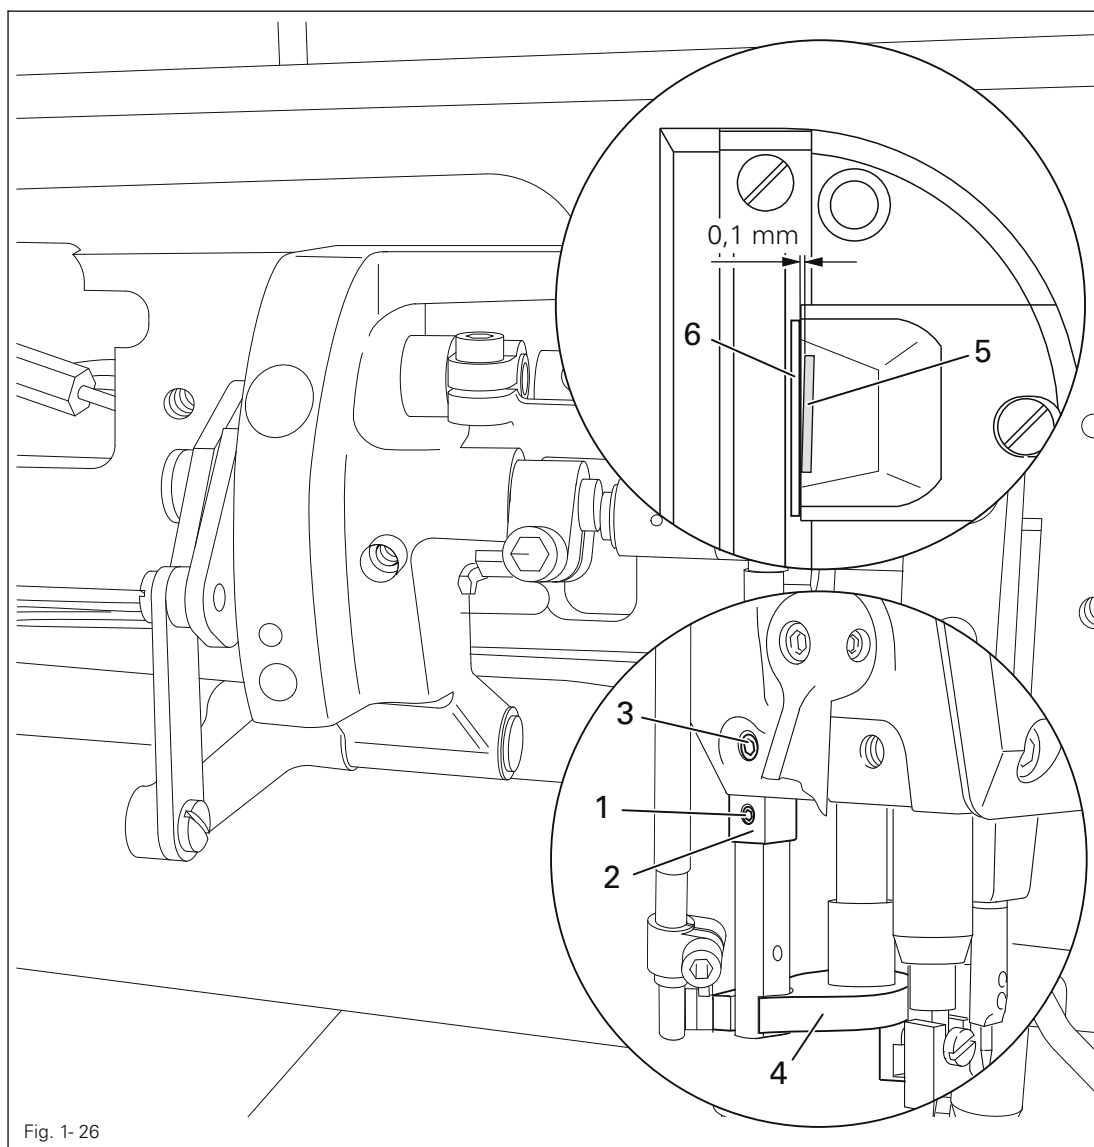

- Loosen screws **1**.
- Adjust eccentric **2** (screw **3**) in accordance with the requirements.
- Tighten screws **1**.



Make sure that knife guide **4** is moving smoothly!

## 1.06.05 Knife position in sewing direction

### Requirement

When the needle is at its b.d.c., the centre of the knife blade should be positioned at "needle centre".


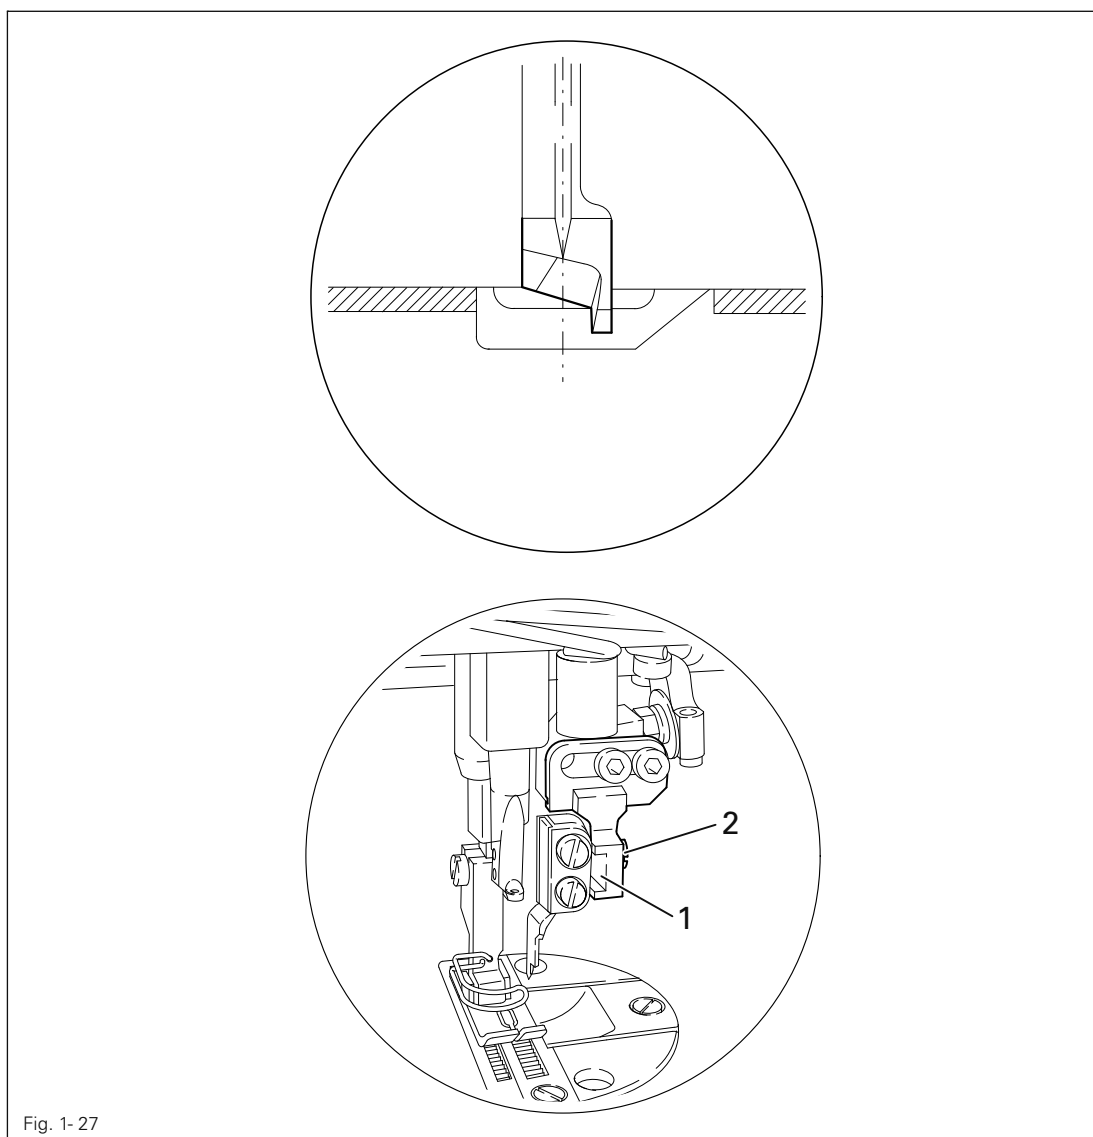


Fig. 1- 27

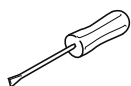 

- Adjust knife bracket 1 (screw 2) according to the requirement.

## 1.06.06 Knife position crosswise to sewing direction

### Requirement

The knife should be resting on the stationary knife **3** with light pressure.


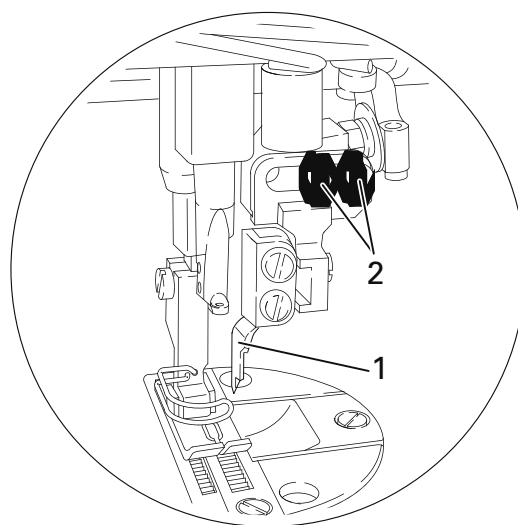


Fig. 1- 28

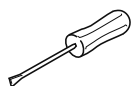 

- Adjust knife bracket **1** (screw **2**) according to the **requirement**.



## Adjustment

 1.07 Adjusting the thread trimming device -900/24

1.0.01 Adjusting the solenoid / preliminary adjustment of the control cam

### Requirement

1. When solenoid **3** is completely extended, roller lever **4** should be at the lowest point of the control cam.
2. When the needle bar is positioned at **1.8 mm** after b.d.c. (needle rise position), roller lever **4** should engage in the appropriate recess of the control cam.

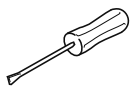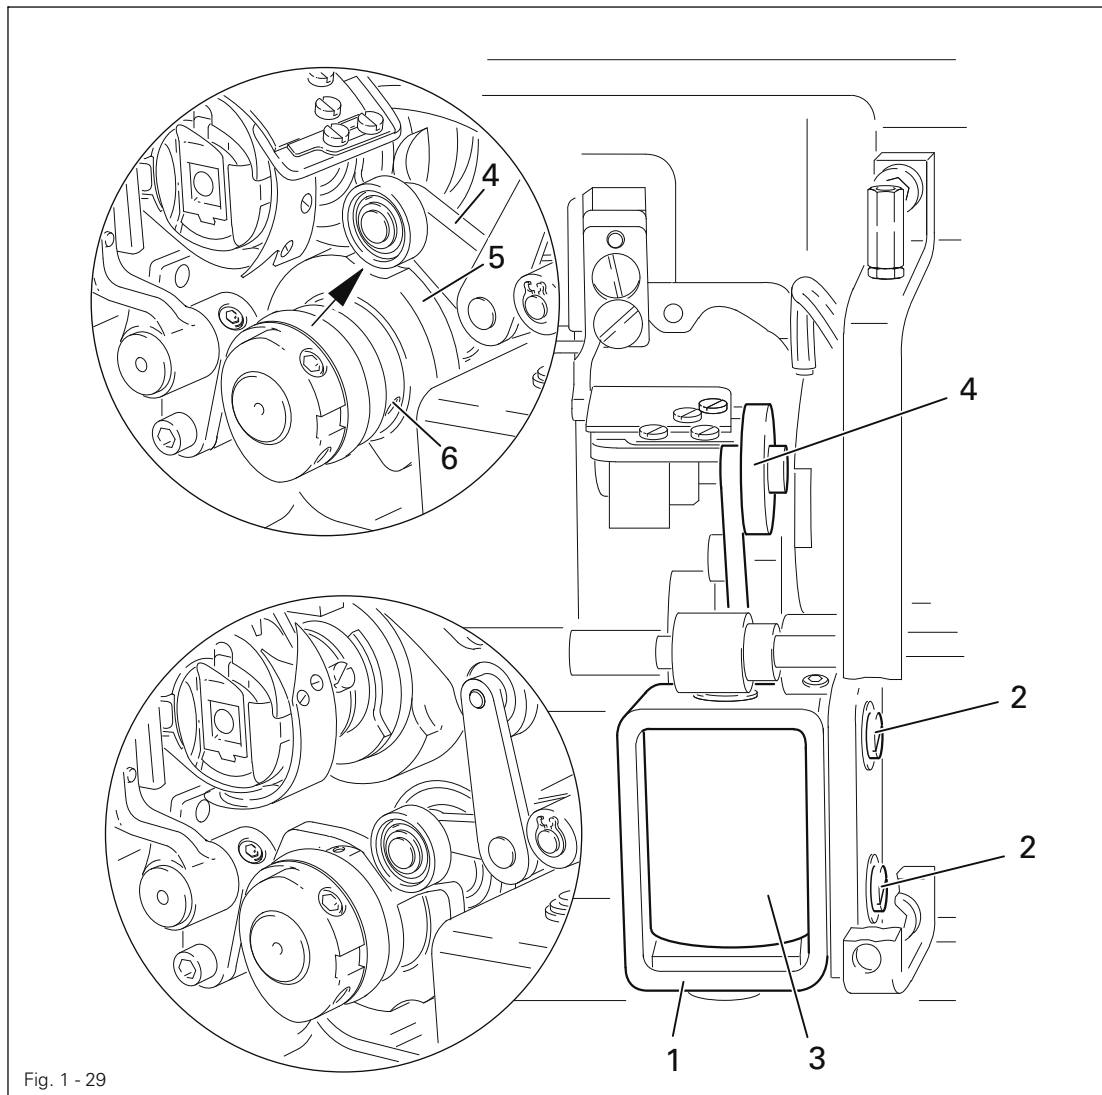

- Adjust solenoid holder **1** (screws **2**) in accordance with **requirement 1**.
- Adjust control cam **5** (screws **6**) in accordance with **requirement 2**.

## 1.07.02 Lateral alignment of the thread catcher

### Requirement

1. The tip of the thread catcher **5** must point exactly to the center of the needle.
2. The thread catcher **5** must be horizontal. It must not graze anything when it is operating.


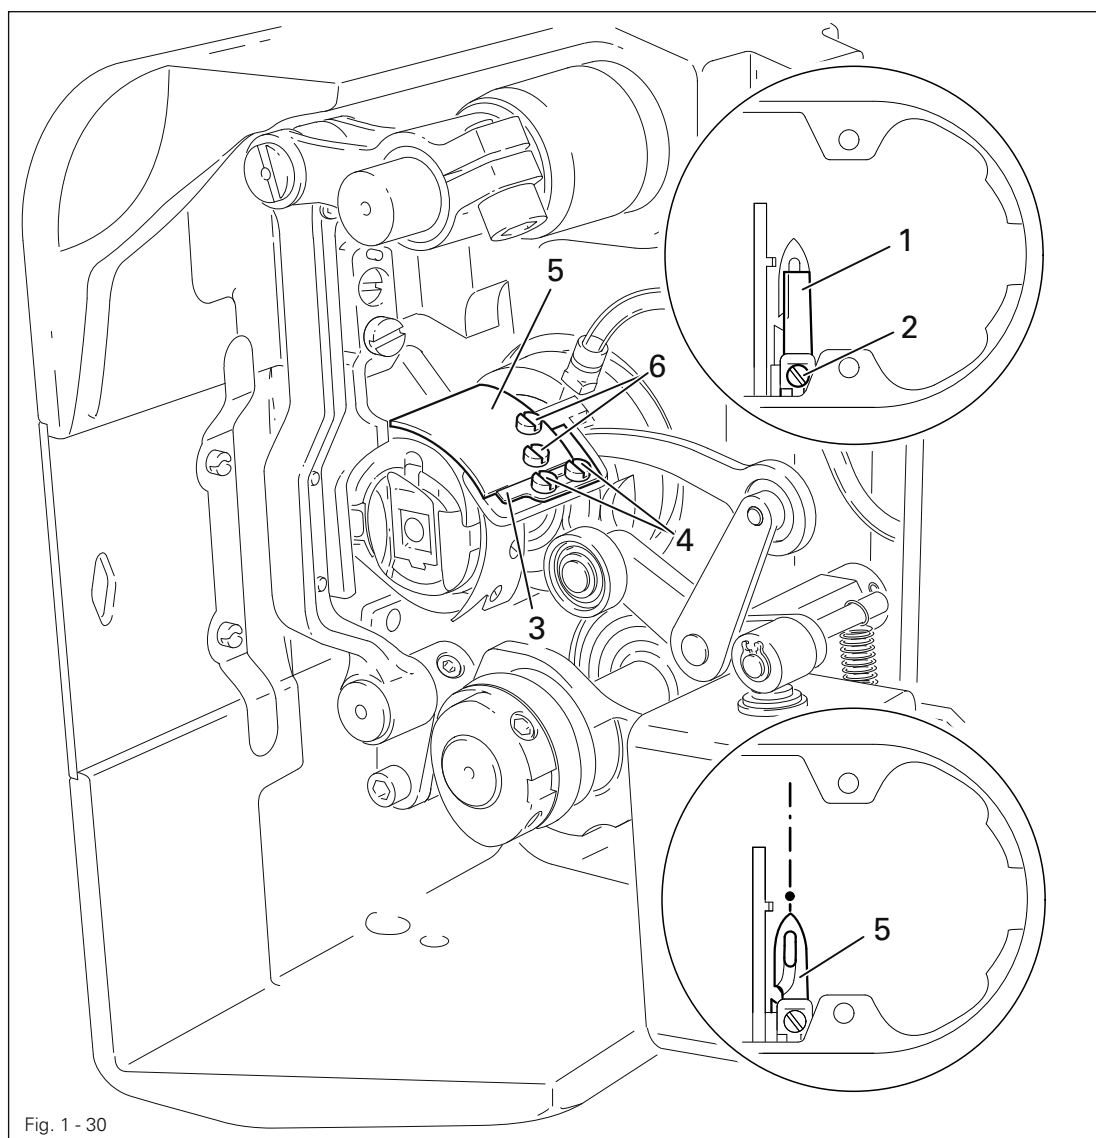


Fig. 1 - 30



- Remove knife **1** (screw **2**).
- Move needle bar to its BDC.
- Loosen stop **3** (screws **4**).
- Position thread catcher **5** (screw **6**) manually in front of the needle.
- Align thread catcher **5** (screws **7**) according to the **requirements**.


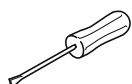


For further adjustments, leave knife **1** removed and stop **3** loosened.

## 1.07.03 Knife position
 
### Requirement

1. There must be a distance of **4 mm** between the cutting edge of the knife and the needle.
2. The right edge of the knife **1** must not extend beyond the right edge of the thread catcher (see arrow).

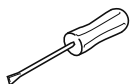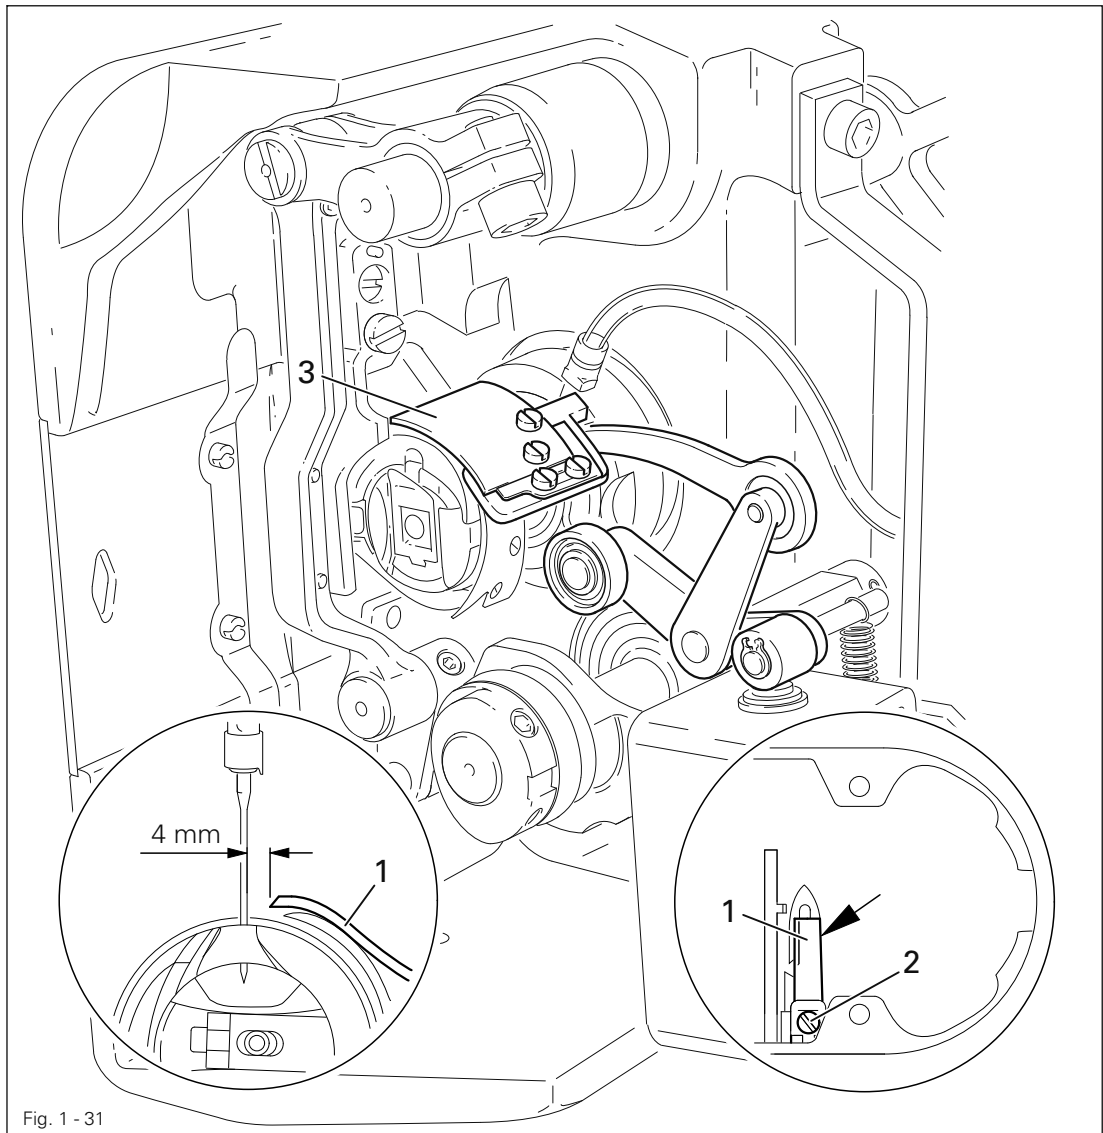

- Bring the needle bar to BDC.
- Slide knife **1** under the locking tab and align according to **requirement 1**.
- Tighten screw **2** lightly.
- Adjust thread catcher carrier **3** by hand until the wedge point in the thread catcher is positioned just in front of the cutting edge of the knife.
- Align knife **1** according to **requirement 2** and tighten screw **2**.

## 1.07.04 Front point of reversal of the thread catcher

### Requirement

At the front point of reversal of thread catcher **4**, the tip of the thread catcher cutout should be **1 mm** in front of the bobbin case position finger **5**.


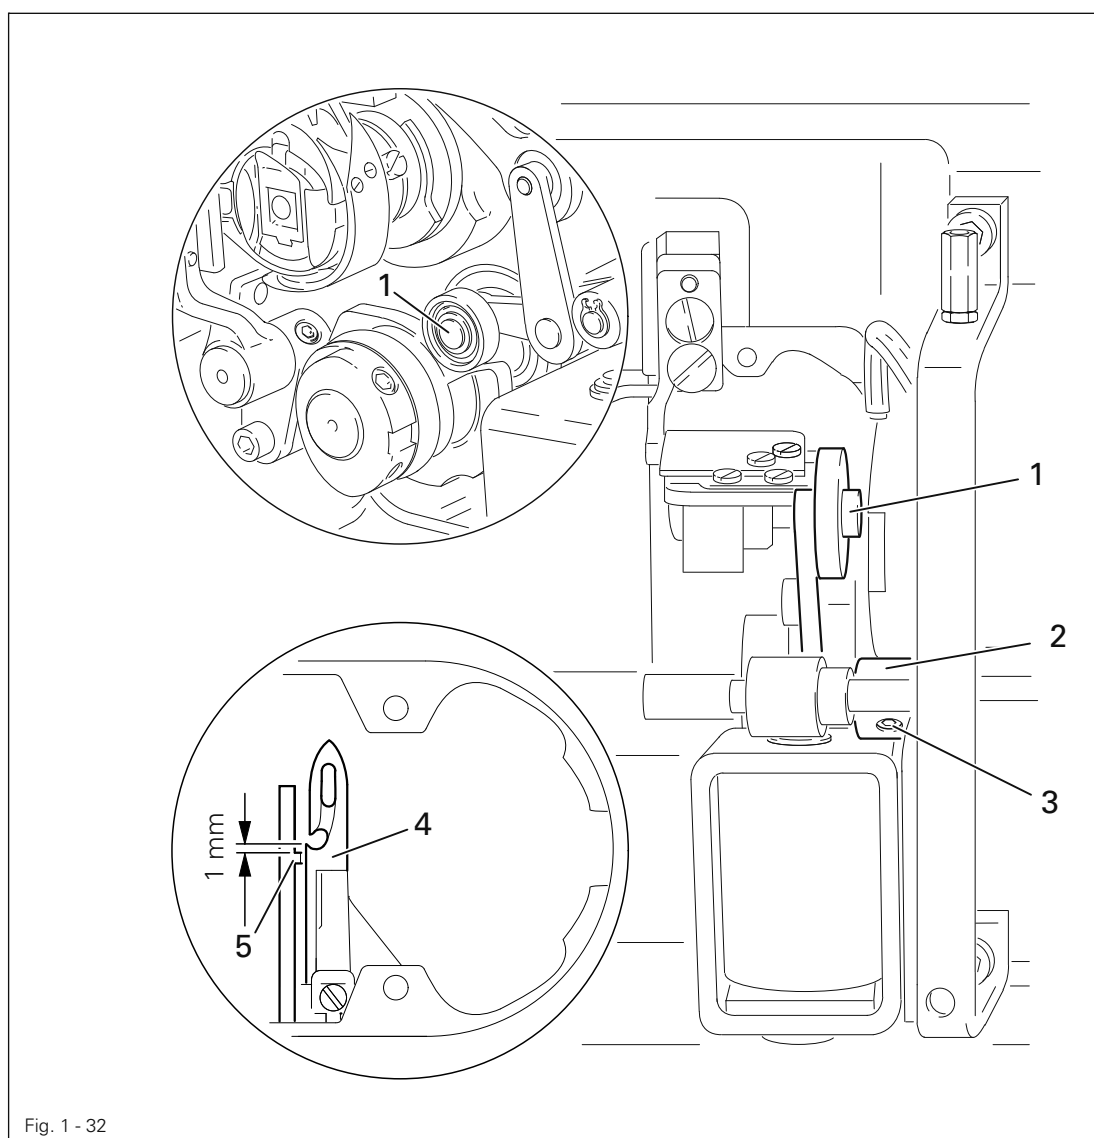


Fig. 1 - 32

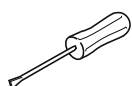

- Position roller lever **1** at the lowest point of the control cam.
- Adjust bush **2** (screws **3**) according to the **requirement**.

## 1.07.05 Manual trimming check

### Requirement

Two threads must be cut perfectly both left and right in the cutout of thread catcher 1.


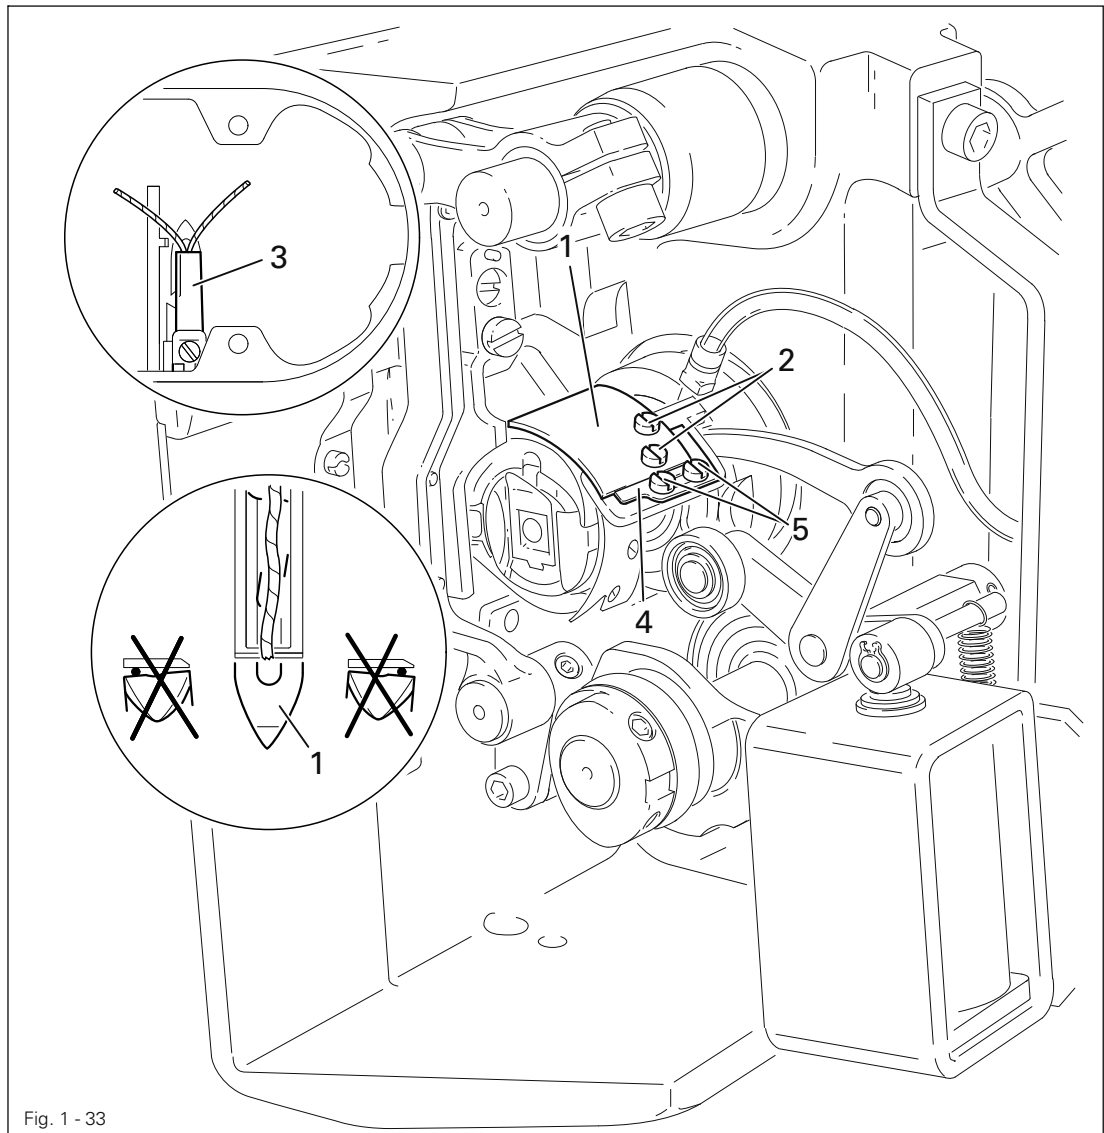


Fig. 1 - 33


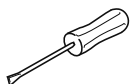 


- Move thread catcher 1 by hand to its front point of reversal.
- Double the thread and insert into catcher cutout.
- Carry out trimming operation manually.
- If the threads are not cut according to the **requirement**, align thread catcher 1 (screws 2) with knife 3 accordingly.
- Move stop 4 against thread catcher 1 and tighten screws 5.
- Check chapter 1.07.02 **Lateral alignment of the thread catcher**, and readjust if necessary.

## 1.07.06 Needle thread tension release
 
### Requirement

1. The magnet lift should be **1.5 mm**.
2. When the magnet **5** is operated by hand, there should be a distance of at least **0.5 mm** between the tension discs **6**.

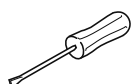
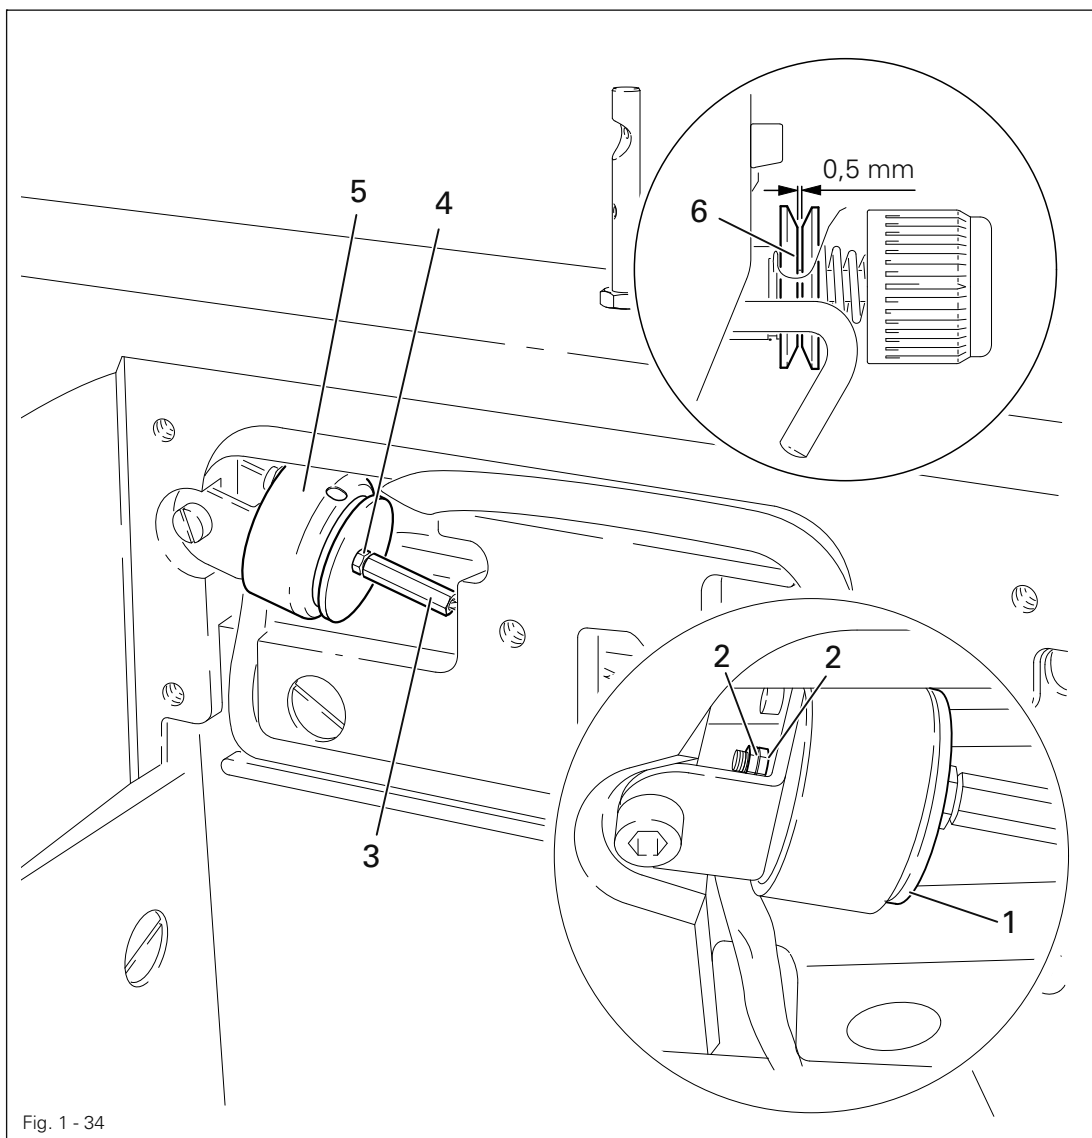


- Adjust disc **1** (nuts **2**) according to the **requirement**.
- Adjust screw **3** (nut **4**) according to the **requirement**.

## 1.07.07 Readjusting the control cam
 
### Requirement

When the take-up lever is in its t.d.c., control cam 1 should have moved thread catcher 3.

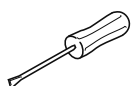
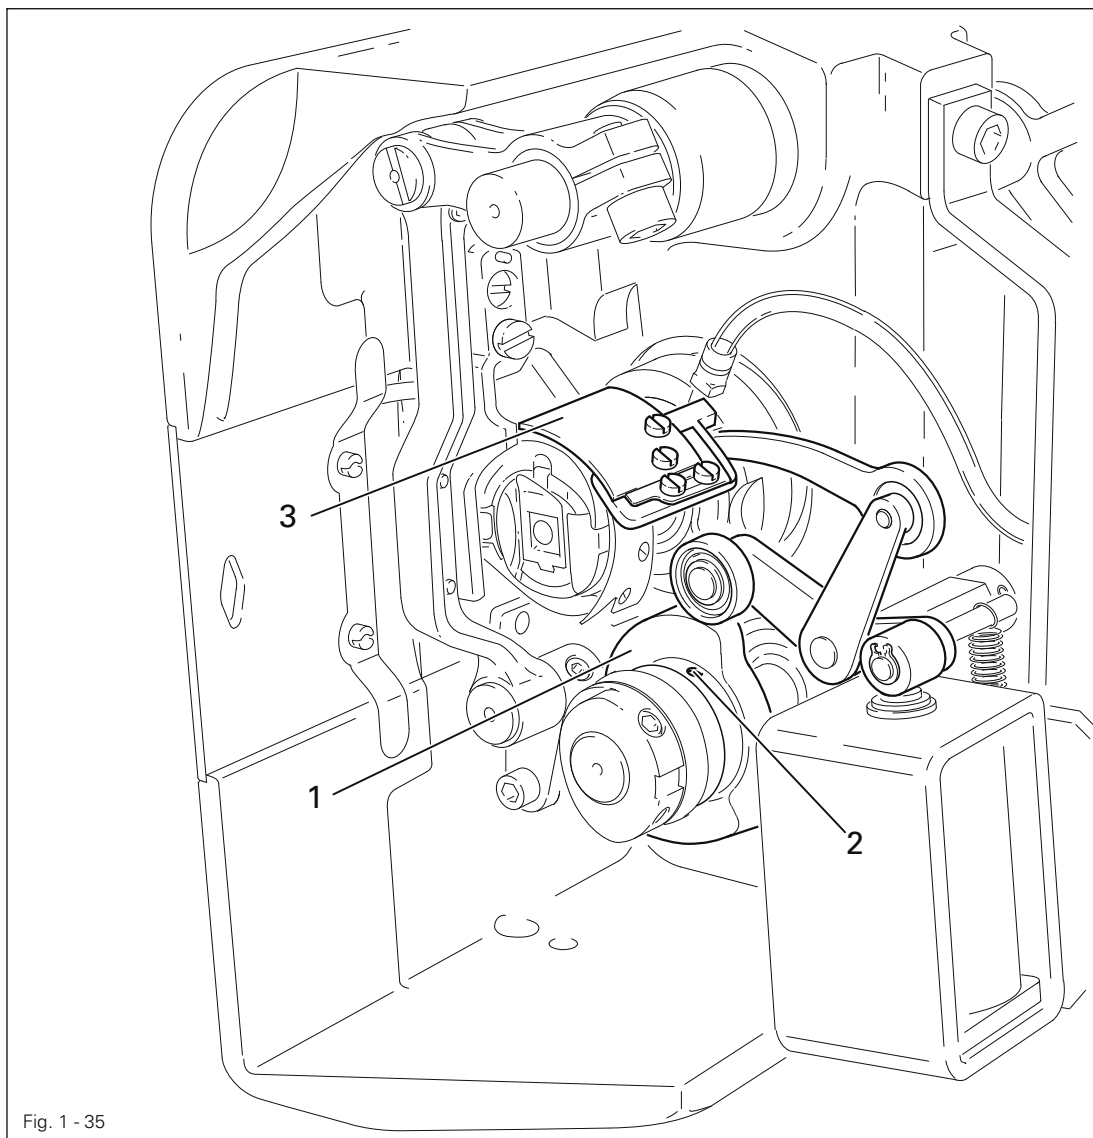


- Adjust control cam 1 (screws 2) according to the requirement.

## 1.08 Adjusting the automatic presser foot lift -910/06

 **Requirement**



When the automatic presser foot lift is operated, the clearance between the presser foot and the needle plate must be **9 mm** for a small needle bar stroke and **13 mm** for a large needle bar stroke.

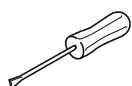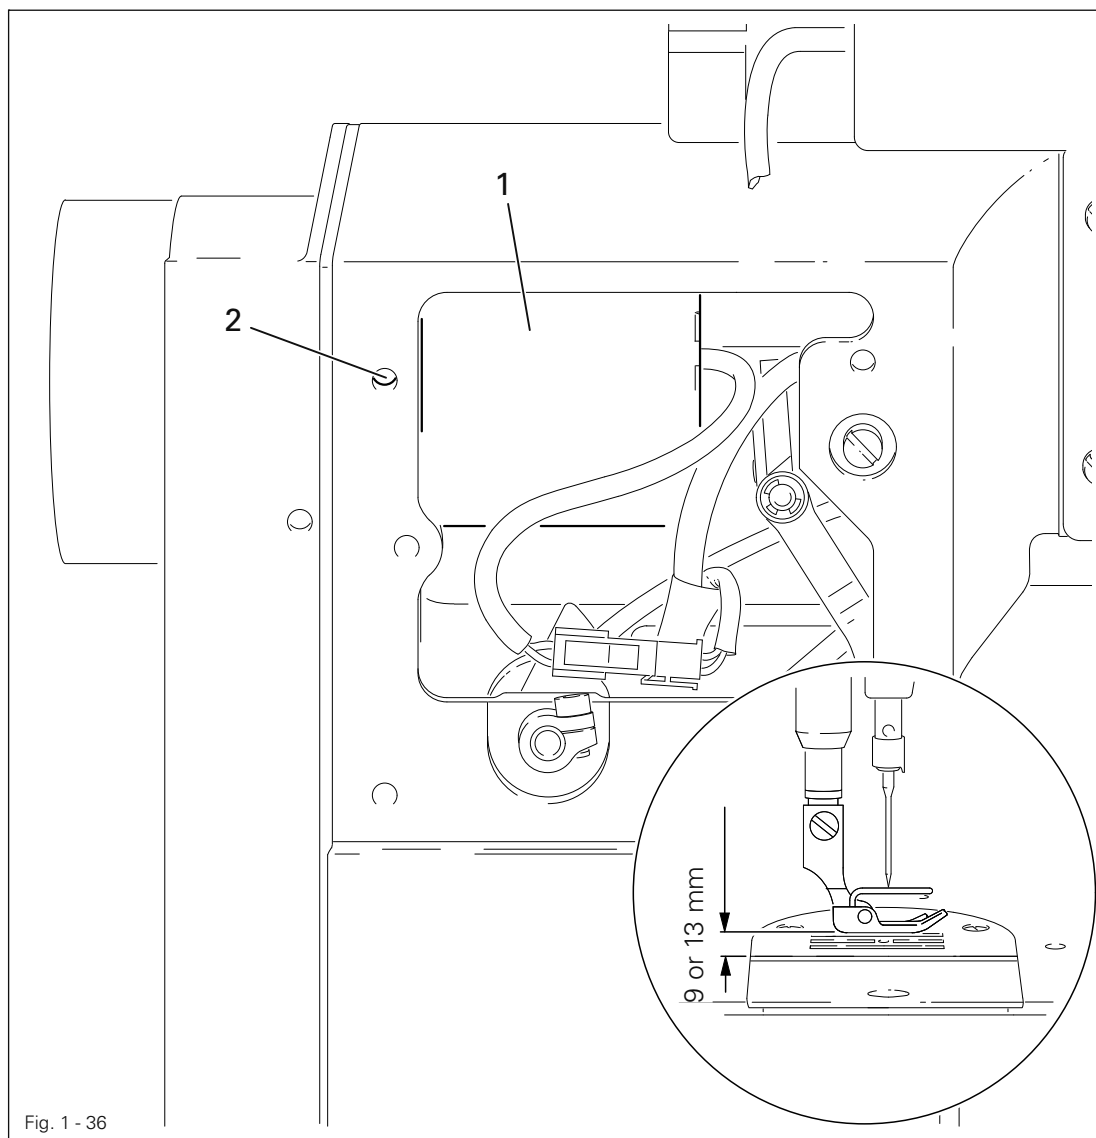

- Move magnet 1 (screw 2) according to the requirement.

### Requirement

 When the longest stitch length is set, the reverse-feed control switch **3** operated and the plunger extended, lever **1** should not touch the bed-plate..

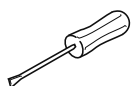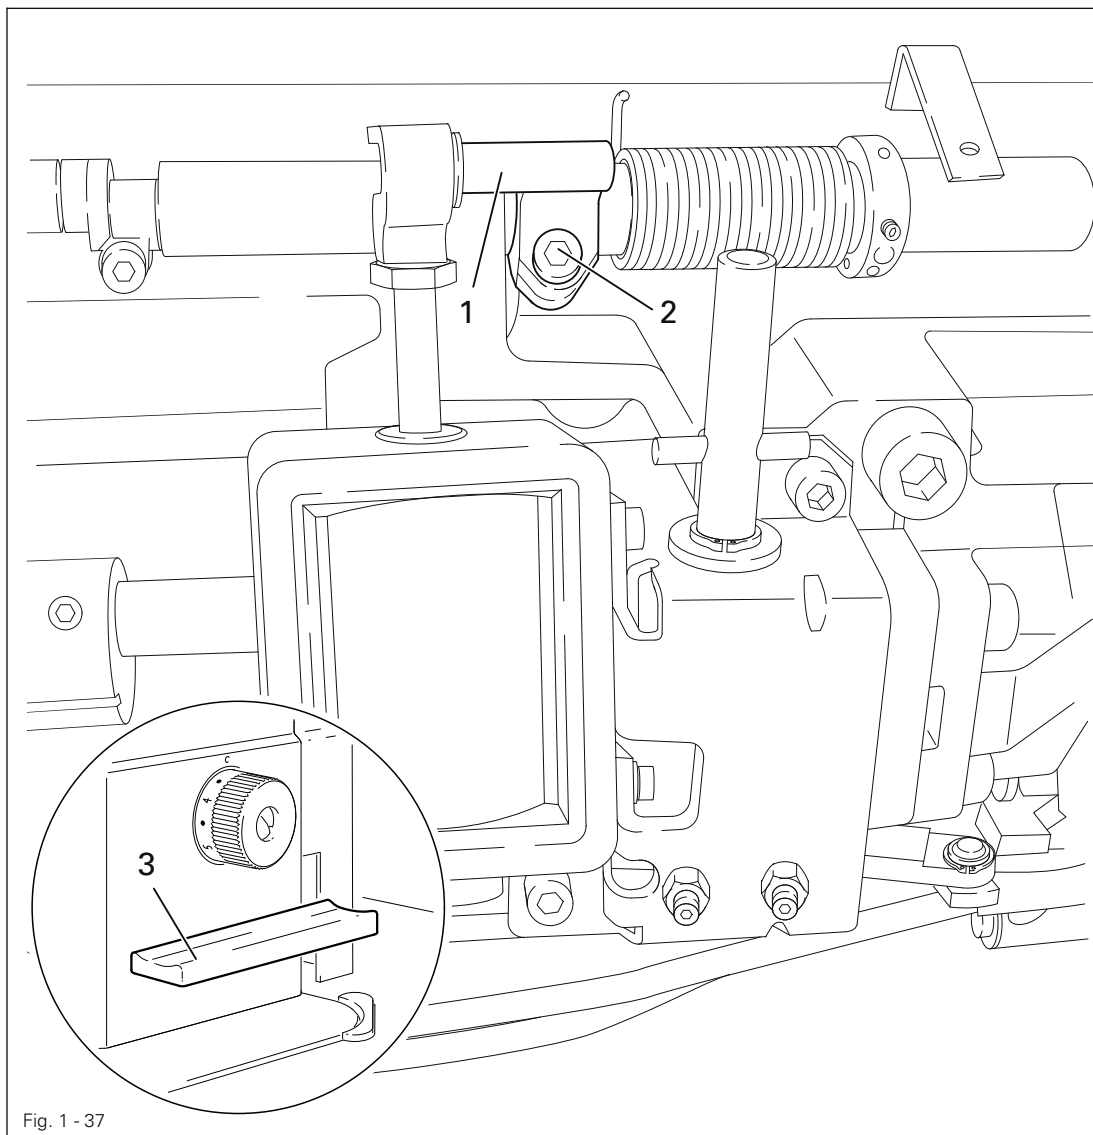

- Adjust lever **1** (screw **2**) according to the **requirement**.

## 1.10 Basic position of the machine drive unit

### 1.10.01 On machines with EcoDrive and control unit P40 ED

- Switch on the machine.
- Press the **TE/speed key** twice to select the input mode.
- Select parameter "**798**" by pressing the corresponding **+/- key**, and select service level **C**, see Chapter **Selecting the user level** in the instruction manual for the control panel.
- By pressing the corresponding **+/- key** select the parameter "**799**" (Selecting the machine class).
- Check whether value "**1**" is set, and correct it if necessary.



If the parameter has to be altered, operate the **TE/Speed** key and then switch off the machine and switch it on again. Then select service level **C** again as described above.

- By pressing the corresponding **+/- key**, select parameter "**800**" (selecting the sewing direction).
- By pressing the corresponding **+/- key**, select the value for the parameter at "**0**".
- By pressing the corresponding **+/- key**, select parameter "**700**".
- Sew a stitch by operating the pedal.
- Turn the balance wheel in the sewing direction until the descending needle is level with the top edge of the needle plate.
- Then check the parameter values listed in the parameter list (see Chapter **10.04 Parameter Settings**) and adjust them if necessary.
- Conclude the adjustment of the sewing motor by pressing the **TE/Speed key**.

### 1.10.02 On machines with PicoDrive and control unit P40 PD2

- Switch on the machine.
- Call up the parameter input by pressing the "**scroll**" key.
- To switch the function keys to input (LED in the **TE** key lights up), press the **TE key**.
- By pressing the corresponding **+/- keys**, select parameter "**798**" and service level **C**, see Chapter **Selecting the User Level** in the separate Control Panel Instruction Manual.
- Select parameter "**799**" by pressing the corresponding **+/- keys**.
- Check whether the value is set at "**2**" and alter if necessary.
- Switch the machine off and then on again.
- Select parameter "**800**" by pressing the corresponding **+/- keys**.
- Check whether the value is set at "**0**" (balance wheel turns towards the operator) and alter if necessary.
- Select parameter "**802**" by pressing the corresponding **+/- keys**.
- Check whether the value is set at "**0**" (= no reduction ratio) and alter if necessary.

- .By pressing the corresponding +/- key, select parameter "700"
- Sew a stitch by operating the pedal.
- Turn the balance wheel in the sewing direction until the descending needle is level with the top edge of the needle plate.
- Conclude the adjustment of the sewing motor by pressing the "scroll" key

## 1.10.03 On machines with control unit MD-4-95-220-CE



- Press and hold button and switch on machine.
- Parameter 47 is displayed.



- Call up input level.



- Set Code " 62" from the machine manufacturer.
- Confirm entry and switch off machine.



- Press and hold button and switch on machine.
- Parameter 208 is displayed.



- Call up parameter 236.



- Confirm entry.

 
- Set value from the machine typ (0 = PFAFF 1183, 1 = PFAFF 1181).



- Confirm entry and switch off machine.



- Press and hold button and switch on machine.
- Parameter 176 is displayed.

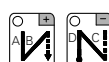

- Call up parameter 192.



- Press button D+ to turn function "on".



- Call up parameter 181.



 
- Call up input level.

- Sew a stitch with the pedal function.

- Turn the handwheel in rotational direction until the needle point (approaching from above) is on the upper edge of the needle plate.



- Confirm entry.

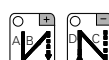

- Call up parameter 192.



- Press button D+ to turn function "off".



- Press button "S" to exit input.

[illegible]



**Europäische Union**  
Wachstum durch Innovation — EFRE



## PFAFF Industriesysteme und Maschinen AG

Hans-Geiger-Str. 12 - IG Nord  
D-67661 Kaiserslautern

Telefon: +49-6301 3205 - 0  
Telefax: +49-6301 3205 - 1386  
E-mail: [info@pfaff-industrial.com](mailto:info@pfaff-industrial.com)