


Kumudu

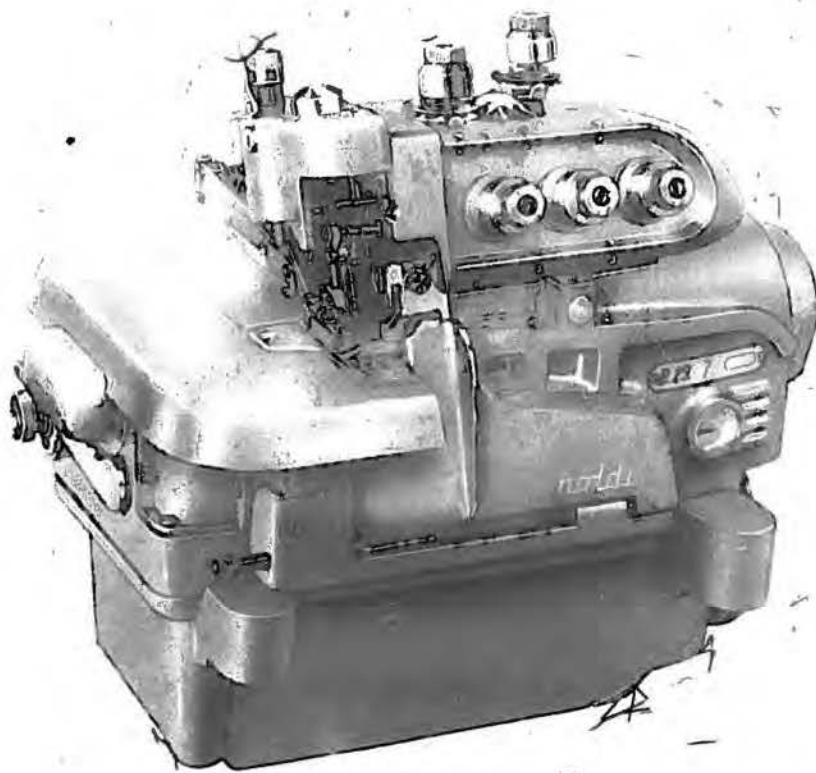

**SPARE PARTS CATALOG
class B29-7 and
sub-classes**

n·4

a) Identification Numbers

1. Each machine is identified by;
 - Class or Sub-Class Number
 - Serial Number
2. The Class or Sub-Class Number is indicated on the Name-Plate, held by two screws on the base of the machine.
3. The Serial Number is punched on the back of the machine base.

II. TECHNICAL DATA BY MACHINE CLASS

The machines depicted in this catalog are overedging machines of 2 needles, the needle to the left forming a chain stitch and the needle to the right for the overedging. Thus this stitch formation becomes a 'safety stitch'.
The machines have the following, general characteristics:

1. Straight Needle, system RIM 27 - thickness 80-90-100-110.
2. Differential can be regulated while machine is running.
3. Push-Button Stitch Length Adjustment.
4. Stitch Length Variation from 7 to 18 stitches per inch.
5. Differential Feed Ratio: up to 3,5 : 1 as well as 4:1.
6. Width of Bight: from 5/32 inch to 7/16 inch.
7. Speed: up to 5,600 RPM.
8. Lubrication: by pump.
9. Motor: 1/3 HP or 1/2 HP, depending on the type of application and manufacture.
10. Outer dimensions of machine head: 12" x 9.3/4".
11. Weight: about 46 lbs.

III. TECHNICAL SPECIFICATIONS

MACHINE SUBCLASS	TECHNICAL CHARACTERISTICS						SPECIFIC APPLICATIONS
	N. of threads	gauge	width of bight	N. of stitches to the inch	knives	ATTACHMENTS	
B.29.0	4 5	3/32" 2,5 mm.	5,5	7,5-18	yes		Shirts; cloth in general
B.29.1	4 5	3/64 1 mm.	4	7,5-18	yes		Shirts, cloth in general
B.29.1/B	4 5	3/64 1 mm.	4	7,5-18	yes		Shirts, fine cloth in general
B.29.1/PDB	4 5	3/64 1 mm.	4	7,5-18	yes	Shirring Attachment	Curtains, bed-spreads, cloth in general
B.29.1/PDBO	4 5	3/64 1 mm.	4,5	7,5-18	yes	Shirring Attachment	Cloth in general, insertion of folded tape and ornamental cord
B.29.17	4 5	13/64 5 mm.	10,5	7-16	yes		Trousers - confection in general
B.29.17/PDB	4 5	13/64 5 mm.	10,5	7-16	yes	Shirring Attachment	Bed-spreads, curtains, etc.
B.29.17/PDBG	4 5	13/64 5 mm.	11	7-16	yes	Shirring Attachment	Cloth in general, insertion of folded tape and ornamental cord
B.29.174	4 5	13/64 5 mm.	10,5	7-16	yes		Trousers - confection in general
B.29.7	4 5	3/32 2,5 mm.	6 7	7,5-18	yes		Shirts-cloth-confection in general
B.29.7/R	4 5	3/32 2,5 mm.	6	7,5-18	yes		Reinforcing tape insertion into seams
B.29.7/W	4 5	3/32 2,5 mm.	6 7	7,5-18	yes	Electric cutter chain	Shirts-cloth-confection in general
B.29.7/PDB	4 5	3/32 2,5 mm.	6 7	7,5-18	yes	Shirring Attachment	Cloth in general, bed-spreads, curtains
B.29.7/PDBO	4 5	3/32 2,5 mm.	6,5 7,5	7,5-18	yes	Shirring Attachment	Cloth in general, insertion of folded tape and ornamental cord
B.29.78	4 5	3/32 2,5 mm.	6,5	7,5-18	yes		Cloth in general-overedged seam curled downward

**INSTALLATION
and TIMING
- THREADING
- MAINTENANCE**

a) Positioning of head

- After motor is mounted on stand, proceed as follows:
1. See that machine cradle is square to table top (fig. 1).
 2. See that machine rests evenly on all four rubber insulators.

b) Assembly of transmission

1. Line up driving belt square to machine and motor pulleys (fig. 1).
 2. Make sure that back of driving belt rides firmly and squarely on top of pump pulley. It is very important that the driving belt is lined up so that it will not slip from the pump pulley.
 3. Check the tensions of the belt by loosening the clamp of the motor.
 4. Level the head of the machine by means of the machine cradle bolts.
 5. Lock the counter nuts of the machine cradle bolts.
- NOTE: the driving wheel of the machine runs in a clockwise, and the pump in a counter-clockwise rotation.

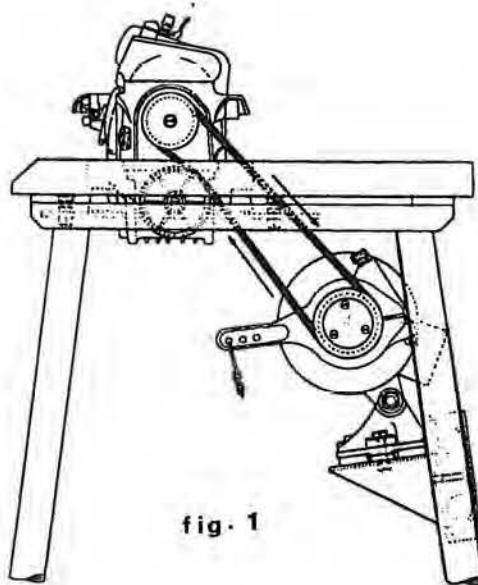


fig. 1

c) Lubrication

1. Unscrew cap 'A' (fig. 2).
 2. Pour one quart Teresso 43 oil into machine using funnel 'B'.
 3. Check Oil-level (red tip of oil indicator must be between both red lines of oil level indicator glass 'G').
 4. Replace and tighten cap 'A'.
 5. Put a few drops of oil on the needle clamp guide rod and upper looper bar before starting machine.
 6. Start machine slowly making sure that oil is circulating (check spyhole 'A'). After 5 Minutes, increase speed gradually to normal working speed.
- NOTE: Change oil every three months. Rinse out reservoir and filters with kerosene or other commercial cleanser and replace with fresh oil. Insure thorough removal of cleanser before replacing fresh oil.

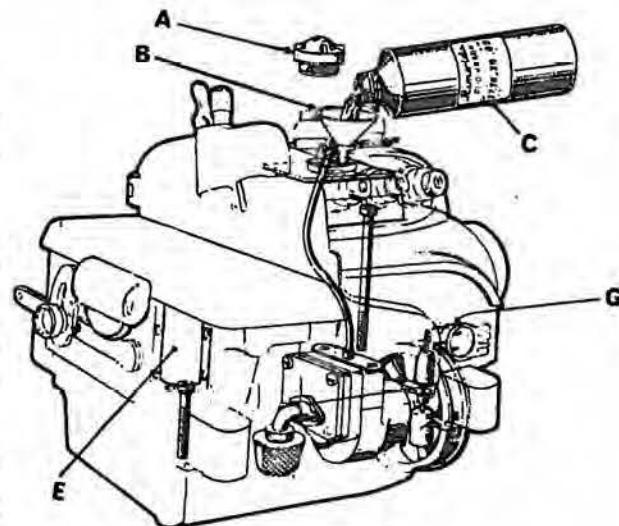


fig. 2

d) Assembling and adjusting sewing parts

Note: the following operations serve to adjust the timing of the machine:

1. Timing gauges required:
 - S 1665.00 for all operations of overedging except No. 4 (fig. 4) and chainstitch operation (fig. 11 & 12).
 - S 1555.00 for operation No. 4 (fig. 4).
 - S 1708.00 for chainstitch (fig. 11 & 12)
2. Preliminary Disassembly of:
 - Front Cover Plate
 - Both thread take-ups of lower looper holder
 - Side Cover Plate (casing) of needle movement
 - Main Feed Dog
 - Upper Plate holding thread tensions
 - Upper Plate with oil indicator cap
 - Front cover of chainstitch rod assembly

7 - Setting the chain stitch looper (fig. 11)

- Insert holder bushing on leg of Chain Stitch Looper.
- Set this on looper holder and tighten it slightly with set-screw 'A'.
- Check angle of looper using gauge No. S 1708 (fig. 12).
- Tighten screw 'A'.
- With the looper in its furthest position on the left, set distance between needle and point of the looper using eccentric 'B'.
- While doing this, be sure to have the maximum eccentricity of eccentric 'B', downward.
- Tighten the eccentric with set-screw 'C'.
- Slightly loosen screw 'D' and move looper holder 'F' so that the point of looper 'C' enters the needle scarf as close as possible without touching.
- Tighten screw 'D'
- Set the needle plate and move the needle downward so that its point protrudes the lower surface of the needle plate.
- Pull the needle forward, towards the operator, with slight pressure, and continue moving the needle downward.
- This is to check that the point of the needle does not pass in front of the looper, but always leans on the looper blade.



fig. 12

8-Setting of trimmer knives

SETTING LOWER TRIMMER KNIVES (fig. 13)

- Loosen screw 'A'.
- Slide bottom knife 'D' upward until cutting-edge of knife is flush with the top surface of the needle plate.
- Retighten screw 'A'.

SETTING UPPER TRIMMER KNIFE (fig. 13 a)

- Place upper knife 'C' in upper knife holder 'A'.
- Mount upper knife holder block 'D' and trimming guards 'E' and 'G' with screw 'F'.
- Turn handwheel clockwise until upper knife holder block 'A' is in its lowest position.
- Slide upper knife 'C' against lower knife 'D' (fig. 13) and check to see that cutting edge of top knife overlaps 1/16 inch the cutting edge of the bottom knife. If adjustment is required, move upper knife holder block 'A' left or right until the conditions described above, are obtained.
- Retighten screw 'F'.
- Turn handwheel clockwise until upper knife holder block 'A' is in its uppermost position.
- Loosen screw 'N' (fig. 13).
- Activate lower knife holder 'C' by hand to the left.
- Release lower knife holder so that knife holder pressure spring will apply the correct pressure to the cutting edges of the trimmer knives. At no time should pressure be applied against screw 'A' when setting the trimmer knives.
- Retighten screw 'N'.
- Set needle guard 'P' for chain stitch needle, on knife holder and slightly tighten it with screw 'Q' (fig. 13).
- Set the needle so that the point of the looper is in its scarf to the right barely touches the needle.


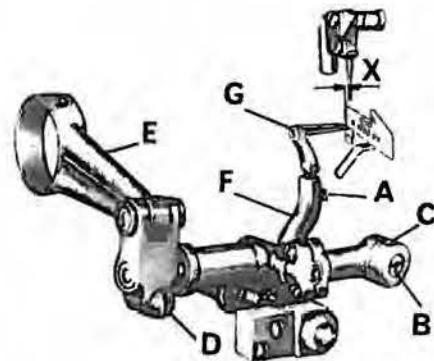


fig. 11

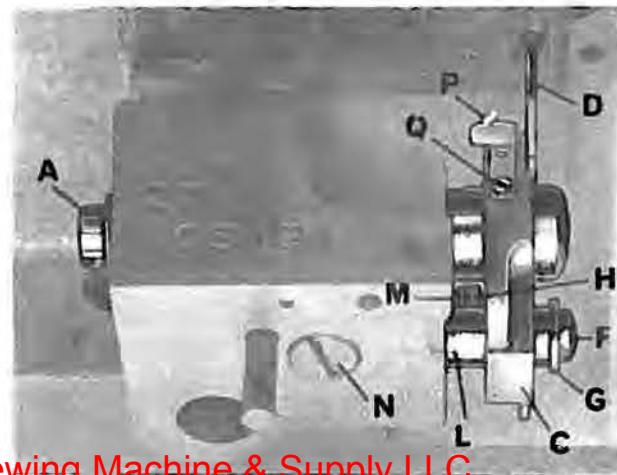

REAR AND CHAINING FEED DOG

- Remove plexiglass plate under work plate.
- Turn handwheel clockwise until needle point is just entering the needle hole in the needle plate.
- At this point loosen screw 'F' (fig. 14) and raise or lower feed dogs 'C' and 'D' so that half the depth of the teeth of the feed dog are above the top surface of the needle plate.
- Retighten screw 'F' (fig. 14).

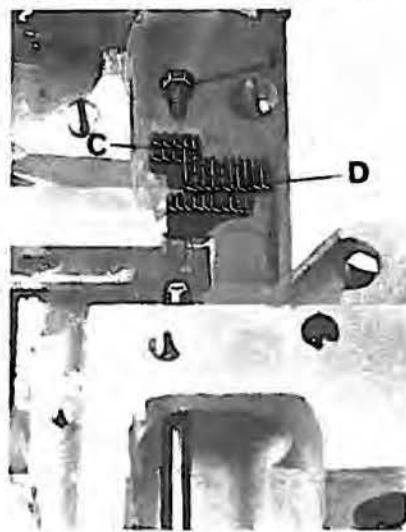


fig. 14

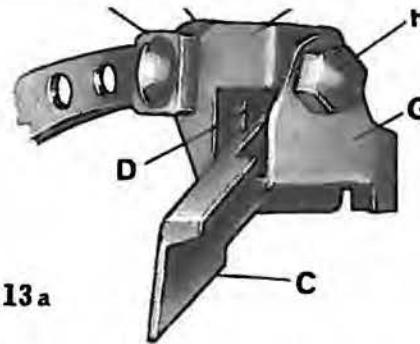


fig. 13a

DIFFERENTIAL OR FRONT FEED DOG

- Set the front feed dog 'E' (fig. 15) in slot on differential feed lever with screw 'G'
- Loosen screw 'G' slightly.
- Raise or lower front feed dog until its height is even with the rear feed dog.
- Retighten screw 'G' (fig. 15). It may be necessary in some cases to lower chaining feed dog 'C' (fig. 14) for chaining off purposes.
- In the event it is found necessary to tilt feed dogs, loosen screw 'A' (fig. 15) and turn eccentric 'B' (fig. 15) in the direction required to get the proper setting.
- Retighten screw 'A'.
- Replace plexiglass cover.



10-Adjustment of differential or front feed (fig. 16)

Note: the machines depicted in this catalog, are delivered with the feed already set for the work to which they are destined.

For eventual, other adjustments of feed, proceed as follows.

Annulling of Differential feed:

- Loosen nut 'B' by means of wrench 'A' supplied with machine
- Raise lever 'Z' to its highest position
- Retighten nut 'B'
- Lower lever 'H' to stop 'F' and tighten nut 'R'

Differential Feed Ratio 2 : 1

- Loosen nut 'B'
- Raise screw 'Q' to its highest position
- Retighten nut 'B'

- Set lever 'H' against stop 'G'

Differential Feed Ratio 3,5 : 1

- Loosen nut 'B'
- Set screw 'Q' to its lowest point
- Retighten nut 'B'

- Set lever 'H' against stop 'G'

Differential Feed Ratio 4 : 1

- Raise 'C' to its highest position on slide-bar 'S'
 - Loosen nut 'B'
 - Set screw 'Q' to its lowest position
 - Retighten nut 'B'
 - Set lever 'H' against stop 'G'
 - Using lever 'E' one obtains the required Differential adjustment while machine is running.
- Netagive Differential Feed
- Loosen nut 'B'
 - Set screw 'Q' to its highest position
 - Set 'C' to lowest position on slide-bar 'S',

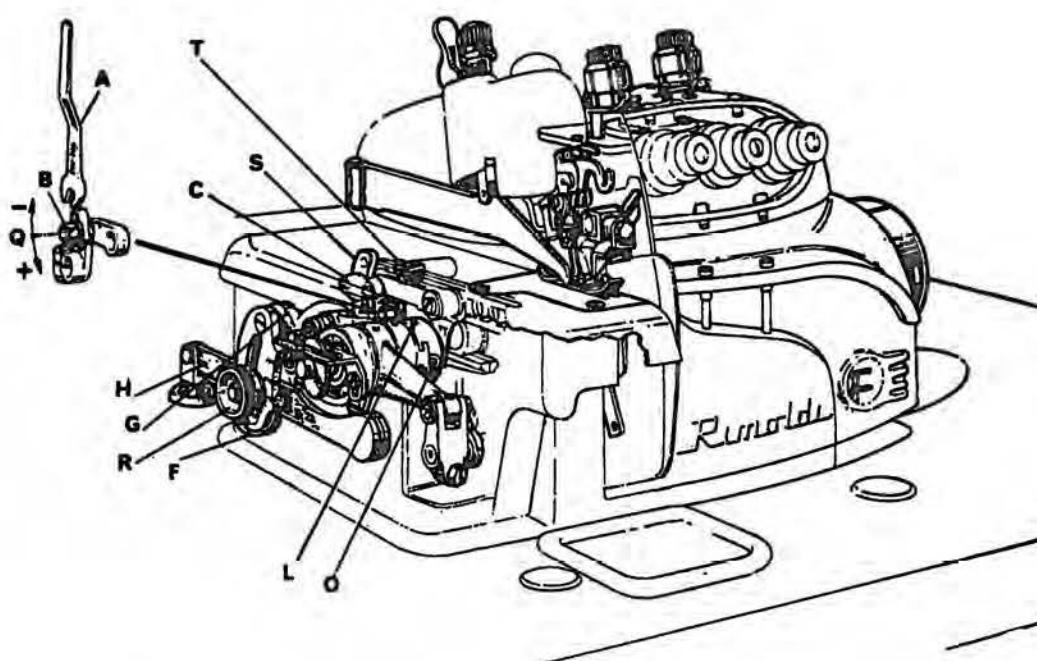


fig. 16

e) Positioning of presserfoot arm (fig. 18)

- Press down on lever 'B' (fig. 22) and swing out presserfoot holder 'D' (fig. 18)
- Loosen slightly screw 'B' (fig. 18) to release spring pressure on lifter lever arm 'A' (fig. 18).
- With lifter lever arm 'A' in a vertical position, press down on presserfoot arm 'L' until it rests on pin in casting.
- Holding presserfoot arm shaft 'L' in its lowest position, apply spring pressure to lifter lever arm 'A' by setting it in approximately a 45° angle.
- Remove end-play in presserfoot arm shaft 'L' by applying slight pressure on lifter arm 'A' and presserfoot arm shaft against bushing 'C'.
- Retighten screw 'B'.

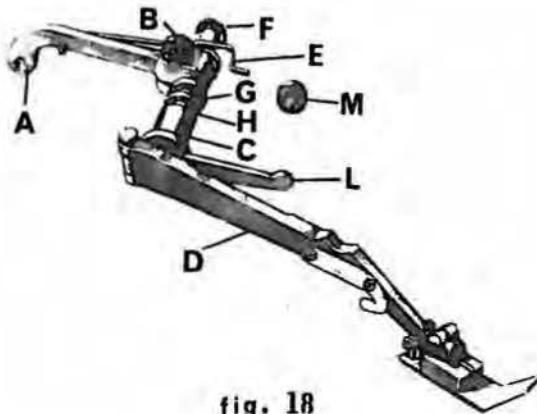


fig. 18

- Swing back in position presserfoot holder 'D'.
- Lift up lever 'B' (fig. 22) to engage presserfoot holder arm.
- Connect presserfoot lifting foot pedal with lifter arm 'A'.
- Rotate handwheel clockwise until secondary looper has completed its movement to the left.
- Loosen screw in stop 'M' (fig. 18).
- With presserfoot raised in its highest position, set stop 'M' so that presserfoot does not strike looper.
- Retighten screw in stop 'M'.

f) Setting of front cover plate (fig. 19)

- Setting of the front cover plate 'C' (fig. 19) is done with the cover plate closed.
- The movable part 'C', should be set as far to the left as possible without interfering with the front needle guard or the lower knife holder.
- If adjustment is required, loosen nut 'A' and move cover plate 'C' to the right or left as may be necessary by adjusting screw 'B'.
- Lock nut 'A'

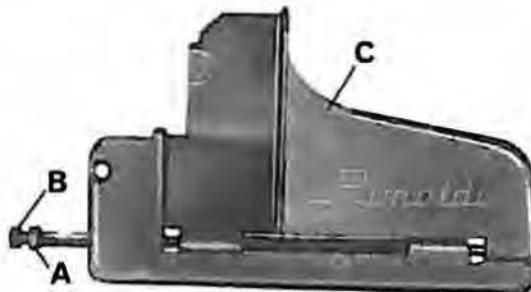


fig. 19

g) Needle thread take up adjustment (No. 5 - table 9)

- When sewing very hard cloth, set the needle thread take up 270-274/2 sliding it forward, towards the operator.

h) Setting of thread take up cam (fig. 20)


- Slightly loosen both screws of cam.
- Rotate machine pulley clockwise.
- Before needle reaches its uppermost position, the highest profile of the cam must begin to take up the thread of the looper.
- Retighten both screws of cam.



fig. 20

II. USE

a) threading

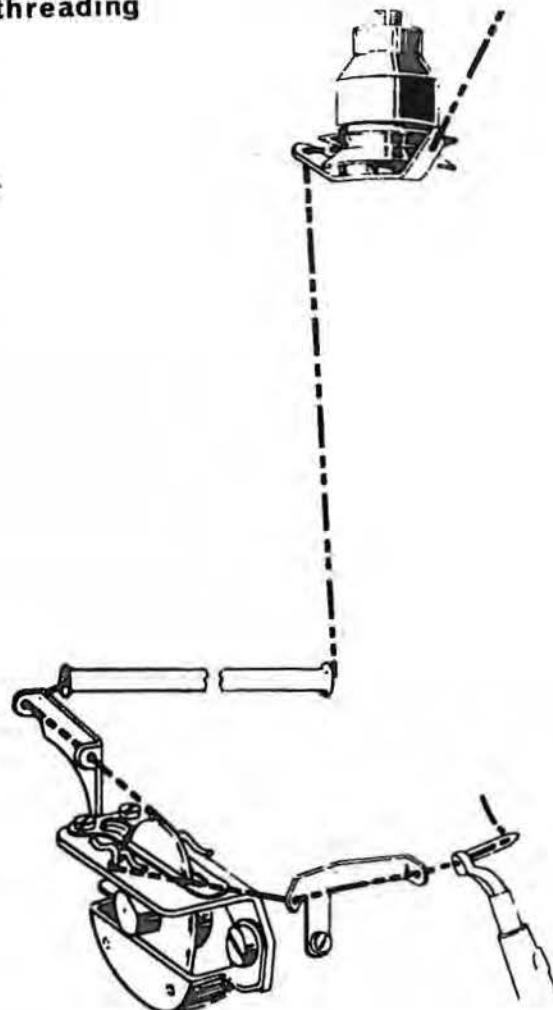

THREADING OF CHAINSTITCH LOOPER

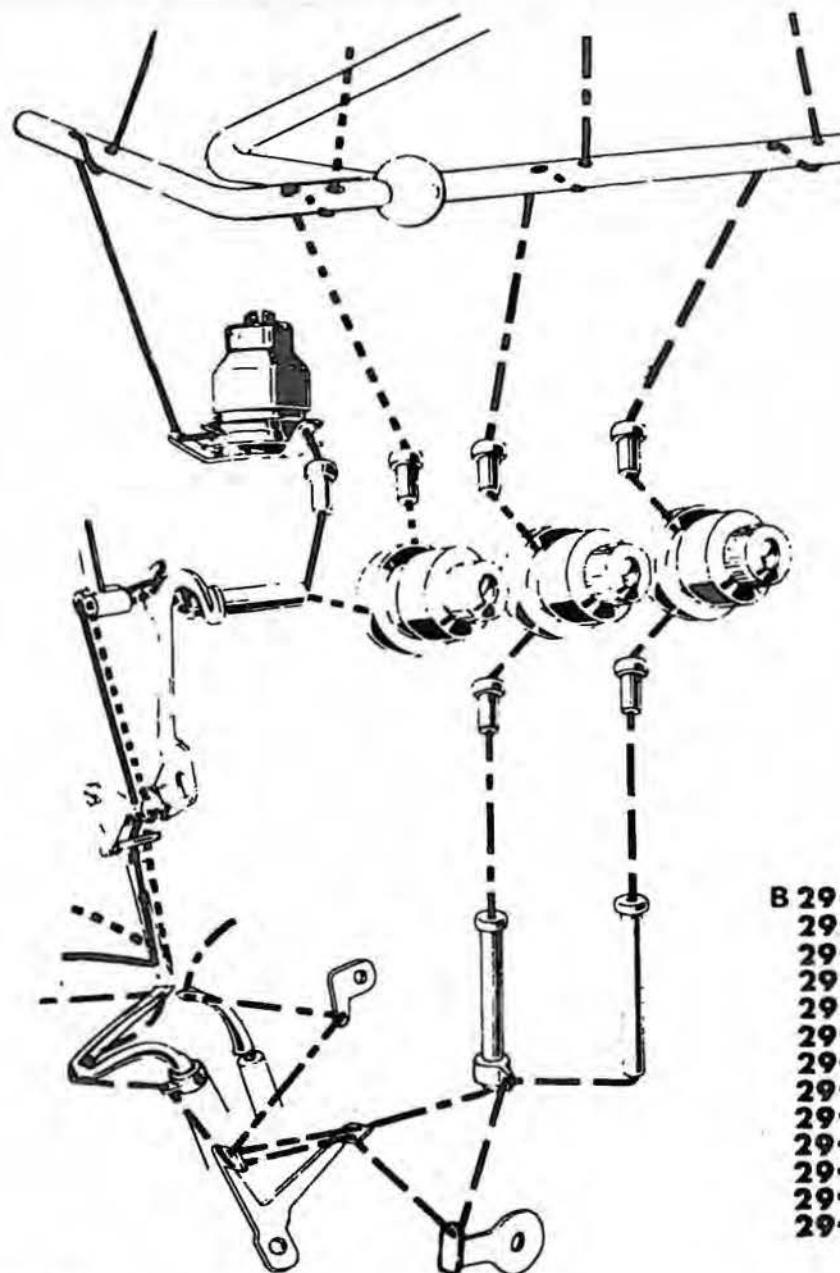


fig. 21

b) Changing the needle (fig. 22)

- 1 - Turn off motor.
- 2 - Rotate handwheel clockwise until needle is at its highest position.
- 3 - Press down on lever 'B' (fig. 22) and swing out presserfoot holder 'D' (fig. 18).
- 4 - Loosen the needle-set screw by half turn and remove needle.
- 5 - Insert new needle with scarf of needle facing towards rear of the machine. Care must be taken that the needle is positioned in its upmost position within the needle-holder.
- 6 - Retighten needle-set screw.

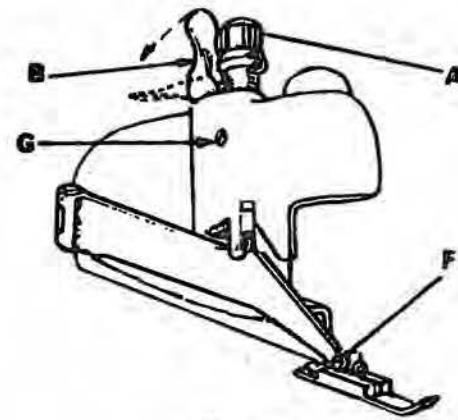


fig. 22

d) Setting of tensioning discs

- 1 - Tighten the tension discs (fig. 21) sufficiently as to permit a regular stitch formation.
- 2 - Do not tighten too much.

c) Setting the presserfoot (fig. 22)

- 1 - With presserfoot arm 'D' (fig. 18) locked in position, turn handwheel clockwise till needle point enters presserfoot.
- 2 - Loosen screw 'F' (fig. 22) and center presserfoot in relation to the needle.
- 3 - Retighten screw 'F'.
- 4 - To increase or decrease the pressure of the presserfoot, loosen screw 'G' (fig. 22) with wrench No. 633-742, and turn knob 'A' (fig. 22).
- 5 - Retighten screw 'G'.

e) Stitch length adjustment (fig. 16)

- 1 - Unscrew cap 'T' of plexiglass plate
- 2 - Loosen screw 'L' of eccentric.
- 3 - Set screw 'O' of stitch length adjustment. Rotating to the right (clockwise) stitch length is shortened.
- 4 - Tighten screw 'L'
- 5 - Replace cap 'T'

f) Adjustment of seam width

The width of the seam may be adjusted to a very limited extent beyond which it is necessary to change the needle plate. To vary the width of seam within these very fine limits:

- 1 - Loosen screw 'N' of lower knife holder (fig. 13).
- 2 - Loosen screw 'F' (fig. 17).
- 3 - Push upper knife-holder block 'A' (fig. 17) to right or left in order to obtain the required width of seam.
- 4 - Tighten screw 'F' (fig. 17).
- 5 - Turn handwheel clockwise till knife-holder block 'A' is in its upper-most position. Loosen screw 'N' (fig. 13). Activate lower knife holder so that knife holder pressure-spring will apply the correct pressure to the cutting edges of the trimmer knives. At no time should pressure be applied against screw 'A' (fig. 13) when setting the trimmer knives.
- 6 - Retighten screw 'N' (fig. 13).

g) Irregularities due to improper handling of the machine

No.	Irregularity	Probable cause
1	Irregular stitch	<ul style="list-style-type: none"> - Tensions badly adjusted - Thread take-ups badly adjusted - Incorrect threading - Yarns not gauged
2	Feed and Fabric slipping sideways	<ul style="list-style-type: none"> - Insufficient presserfoot pressure - Feed dogs badly adjusted in height and slant - Knives need sharpening - Differential badly adjusted
3	Skip-stitching	<ul style="list-style-type: none"> - Primary or Secondary Looper badly adjusted in respect to the needle, consequently blunting the looper. - Loopers too far apart at crossing - Loopers too near at crossing with consequent blunting - Front needle guard too far from needle - Needle badly positioned
4	Thread breakage	<ul style="list-style-type: none"> - Tensions too taut - Yarn irregularly wound on reel -
5	Needle breakage	<ul style="list-style-type: none"> - Needle bent - Needle badly mounted
6	Puncturing of fabric	<ul style="list-style-type: none"> - Blunt needle - Needle gauge not suitable for plate - Needle with unsuitable point
7	Loss of oil	<ul style="list-style-type: none"> - Screws joining base and pump not tightened underneath - Pump plug not tightened underneath - Pump gasket badly arranged
8	Lack of lubrication	<ul style="list-style-type: none"> - Oil level too low - V-belt incorrectly mounted - Upper tube clogged - Lubrication pump filter clogged

a) Every Day

Clean the feed and stitch formation elements briefly.

b) Every Week

1. Clean thoroughly dismounting feed dogs, rear and front needle guards, and primary looper.
2. Open front cover plate and carefully clean the front opening.
3. Clean the inside of the cover plate containing the needle movement assembly.

c) Every Three Months

1. Wash the oil basin with kerosene or other commercial cleanser.
2. Wash the pump filters with kerosene.
3. Blow pump and filter with compressed air.
4. Fill with fresh oil.

d) Sharpening the Knives

Sharpen the knives using the 'Rimoldi' Knife Sharpener and using the appropriate block that guarantees the exact angle of sharpening. This block is supplied on request.

e) Instructions for removing the cam shaft

- Tools necessary supplied on request only.
- Pincers type S 0560/00
- Pincers type S 0459/00
- Extractor S 0416/00

IMPORTANT

It is absolutely necessary that the main elements of the shaft-connecting rod, are re-assembled keeping their initial position. Therefore proceed as follows:

- Reassemble flanges 'G' and 'T' in the lubrication hole, towards the bottom.
- Leave all locking screws of the connecting rod cap in their own holes.
- Connecting rods 'J' and 'L' are distinguished from one another by the number 2 engraved on the surface of the head of connecting rod 'L' and, three lines on the surface of connecting rod 'J'.
- The positioning of the connecting rod cap is determined by a cut made both on the cap and on the body of the connecting rod. The two cuts are on the same side of the part.
- The assembly position of connecting rod 'N' is given by the drawing number that must be on the part of the handwheel.
- Carefully observe the order of assembly of the cup springs.

SEQUENCE OF OPERATIONS (fig. 23)

1. Separate oil basin from machine base
2. Remove screw 'Z'
3. Remove holding plate of thread take up cam 'H'
4. Remove screw 'M' and thread take up cam 'H'
5. Remove flange 'G'
6. Loosen the two eccentric screws
7. Remove ball bearing 'A' washer 'B'
8. Push to the right eccentric 'C' and red 'B'
9. Push rod 'F' to the right
10. Loosen both screws and remove eccenter 'E' from rod 'F'
11. Remove flange from eccenter 'C'
12. Remove caps of connecting rods 'N', 'O', 'J' and 'L'
13. Remove cover 'Y' from handwheel
14. Loosen hexagonal screw 'X'
15. Take out washer 'W'
16. Extract handwheel 'V'
17. Remove flange 'T'
18. Pull out spacer 'U'
19. Remove cup springs 'S'
20. Extract snap-on ring 'P' using pliers S 0459/00 moving the shaft slightly to the right
21. Disassemble section 'K' and 'Q'
22. Remove shaft.

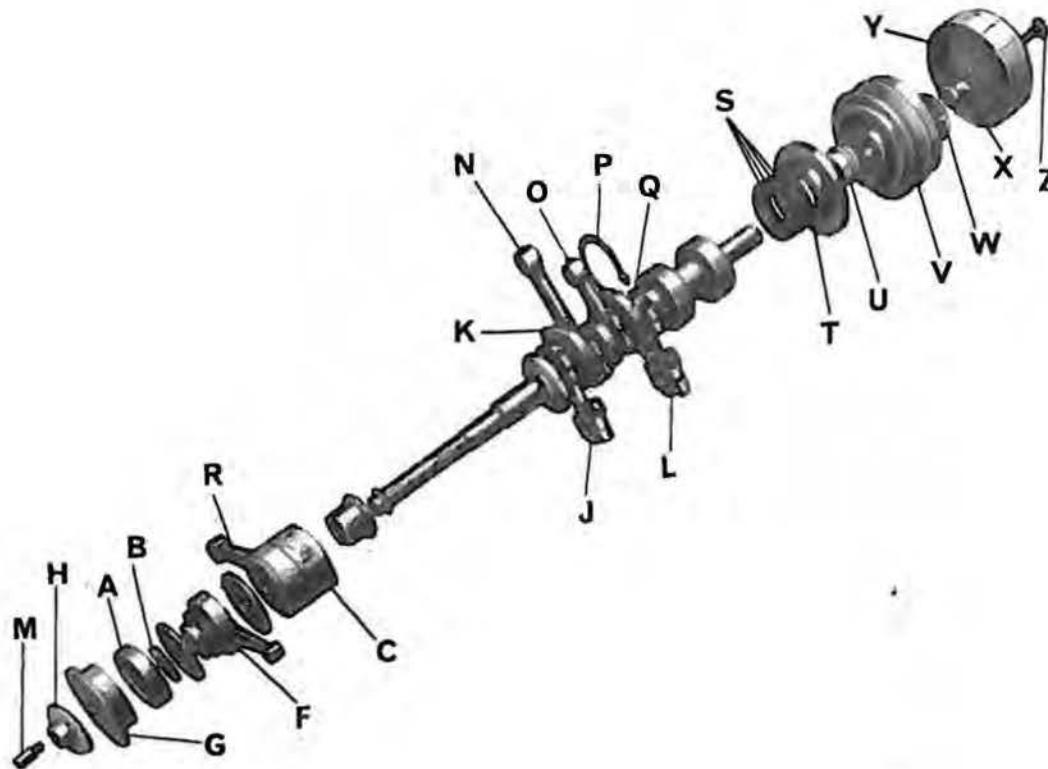


fig. 23

SPARE PARTS CATALOG

a) Introduction

- 1 - The spare parts catalog is made up of a series of tables illustrating the various parts and groups which make up the basic machine and its subclasses, the latter are all derived from Basic Class 29.
- 2 - In order to make the use of this catalog easier, the index of tables shows the position of each group inside the machine.
- 3 - The conversion groups of the basic machine and its subclasses, are illustrated in single tables.
- 4 - The various group of components illustrated on each table, are cross-referenced by a number. The groups, whose parts cannot be supplied separately, are cross-referenced by capital letters. The parts cross-referenced by a number with an asterisk (*) are not normally supplied with the machine, but can be supplied upon request for special seaming operations.
- 5 - The catalogue is completed with a general numerical index giving the cross-reference numbers of all component parts of the machine and listing the page or pages in which these parts are illustrated.

b) Instructions

- 1 - If the number of the part is known, its drawing may be found at once by consulting the numerical index.
- 2 - If the number of a part is not known, but its approximate position within the machine is known, the illustrated index of tables will give the relative page for easy reference.

HOW TO ORDER SPARE PARTS

a) All parts

- 1 - To insure immediate shipment of the required spare parts, the following instructions have to be strictly observed:
- 2 - Give the serial number of the machine,
- 3 - Give the reference number of the required part,
- 4 - List the full and complete name of the part itself.
- 5 - Indicate quantity desired.

I M P O R T A N T


The Rimoldi Company wishes to be able to analyse any case of breakage, wear or irregularity found on parts produced by them. For this reason please remit these parts along with the order for spare parts.

b) Needles only

- 1 - Only straight RIM 27 needles may be used on the machines illustrated within this catalog.
- 2 - The needle system and gauge are marked on the shank of the needle.
- 3 - The gauge indicates the average diameter expressed in hundredths of a millimetre calculated on the blade of the needle.
- 4 - The system and the gauge are also stamped on the envelopes of Rimoldi needle.
- 5 - It is advisable, when placing orders, to always state clearly the system and gauge of the needle required (ex.: 100 needles, gauge 90, system RIM 27).

Housing, bushing and
guide assembly


Tab. 1

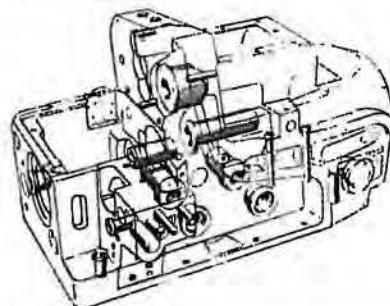

• 3

Main shaft with
connections

Tab. 2

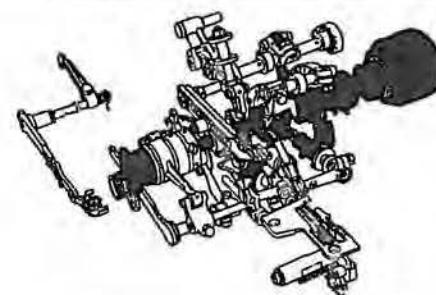


5

7

9

Differential
mechanism

Tab. 3

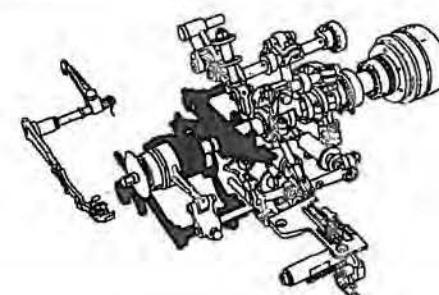


11

13

Looper drive shaft
and connections

Tab. 4

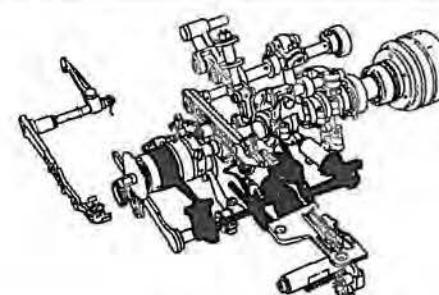


15

17

19

Needle drive
mechanism

Tab. 5

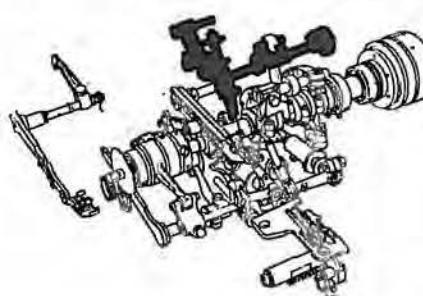


21

23

Upper and lower trimming
knife mechanism

Tab. 6

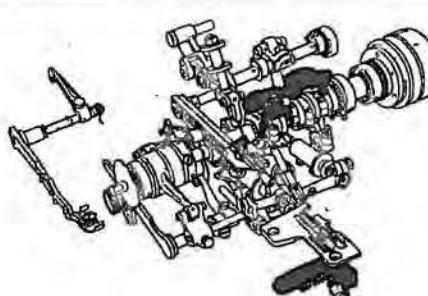


25

17


**Presserfoot linkage
and needle plate**

Tab. 7

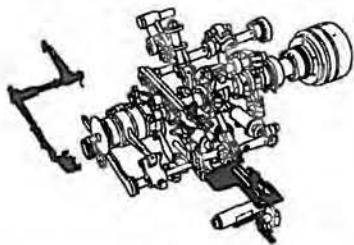

**Machine cover and
work plate**

Tab. 8

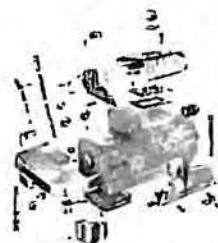


**Thread take-up
and tensions**

Tab. 9




**Oil-pump and
oil basin**

Tab. 10

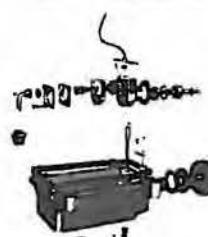

**Machine mounting bracket
and knee control**

Tab. 11

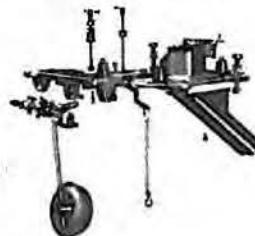


**Thread stands and
foot pedal**

Tab. 12




Accessories


Tab. 13

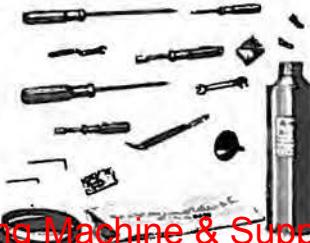


CLASS B 29.0	Tab. 14	3
CLASS B 29.1	Tab. 15	5
CLASS B 29.1 B	Tab. 16	7
CLASS B 29.1 PDB	Tab. 17	9
CLASS B 29.1 PDO	Tab. 18	11
CLASS B 29.17	Tab. 19	13
CLASS B 29.17 PDB	Tab. 20	15
CLASS B 29.17 PDO	Tab. 21	17
CLASS B 29.174	Tab. 22	19
CLASS B 29.7 W	Tab. 23	21
CLASS B 29.7 PDB	Tab. 24	23
CLASS B 29.7 PDO	Tab. 25	25
CLASS B 29.7 R	Tab. 26	
CLASS B 29.78	Tab. 27	
CHAIN CUTTING ATTACHMENT	Tab. 28	27

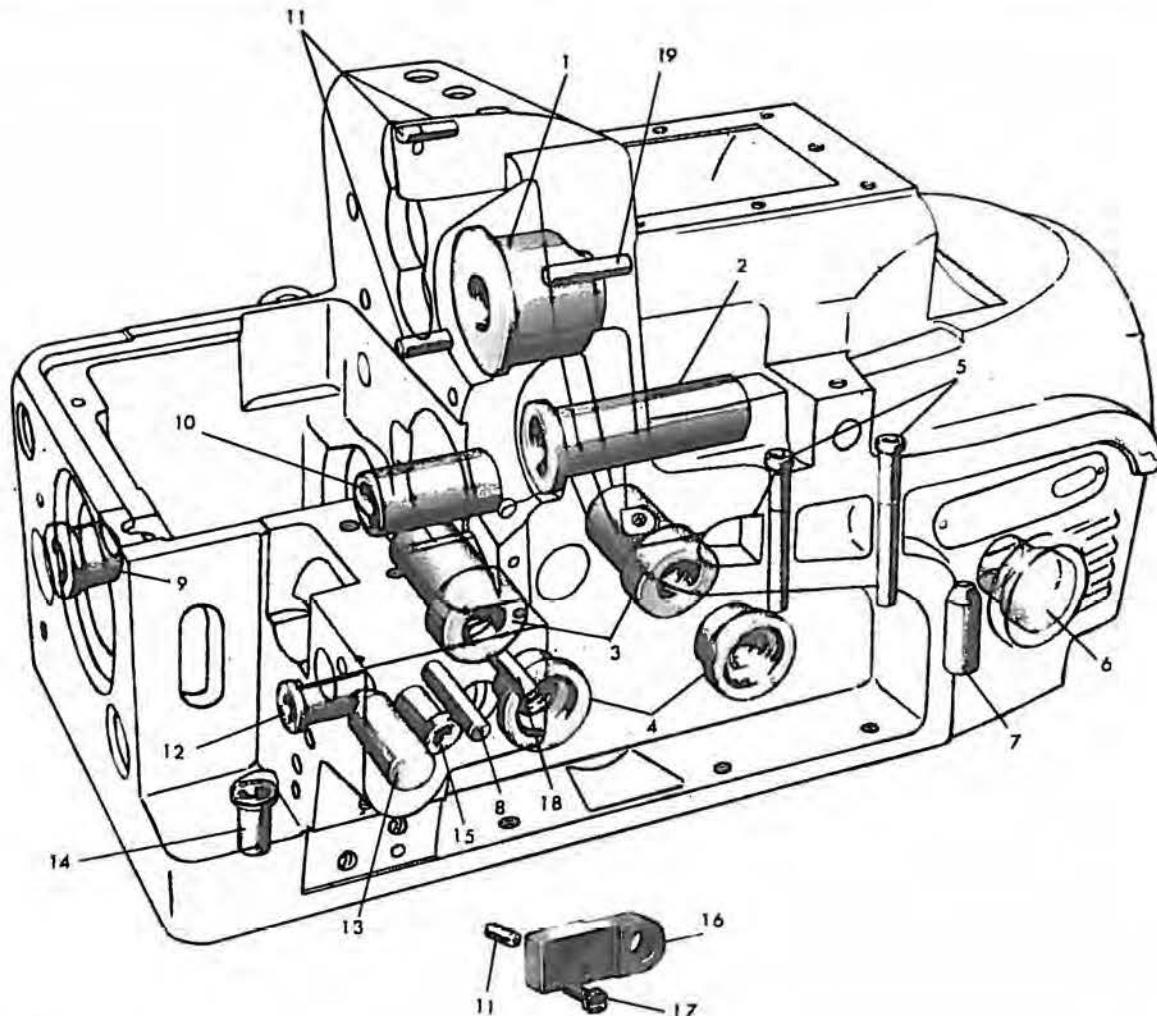

N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	270-016	BUSHING NEEDLE BAR SHAFT	1	11	270-642	PIN STABILIZING COVER PLATE	2
2	270-097/1	BUSHING UPPER KNIFE SHAFT	1	12	290-351	BUSHING	1
3	270-058/1	BUSHING REAR LOOPER SHAFT	2	13	290-916	PLUG PUSH BUTTON LEVER HOLE	1
4	270-057/1	BUSHING FRONT LOOPER SHAFT	2	14	290-357	BUSHING THREADED	1
5	270-288	THREAD GUIDE TUBES	2	15	290-354	BUSHING CHAINSTITCH LOOPER (REAR)	1
6	270-643	OIL GAUGE WICK	1	16	PM-290-315	BRACKET FRONT BUSHING	1
7	270-644	BUSHING OIL LEVEL STICK	1	17	001-E-18	SCREW FRONT BUSHING BRACKET ATTACH	1
8	270-912	PIN WORK PLATE LATCH	1	18	290-396	TUBE OIL WICK	1
9	270-044/2	BUSHING (LEFT) DIFFERENTIAL SHAFT	1	19	270-264	THREAD GUIDE NEEDLE	1
10	270-042/3	BUSHING (RIGHT) DIFFERENTIAL SHAFT	1				

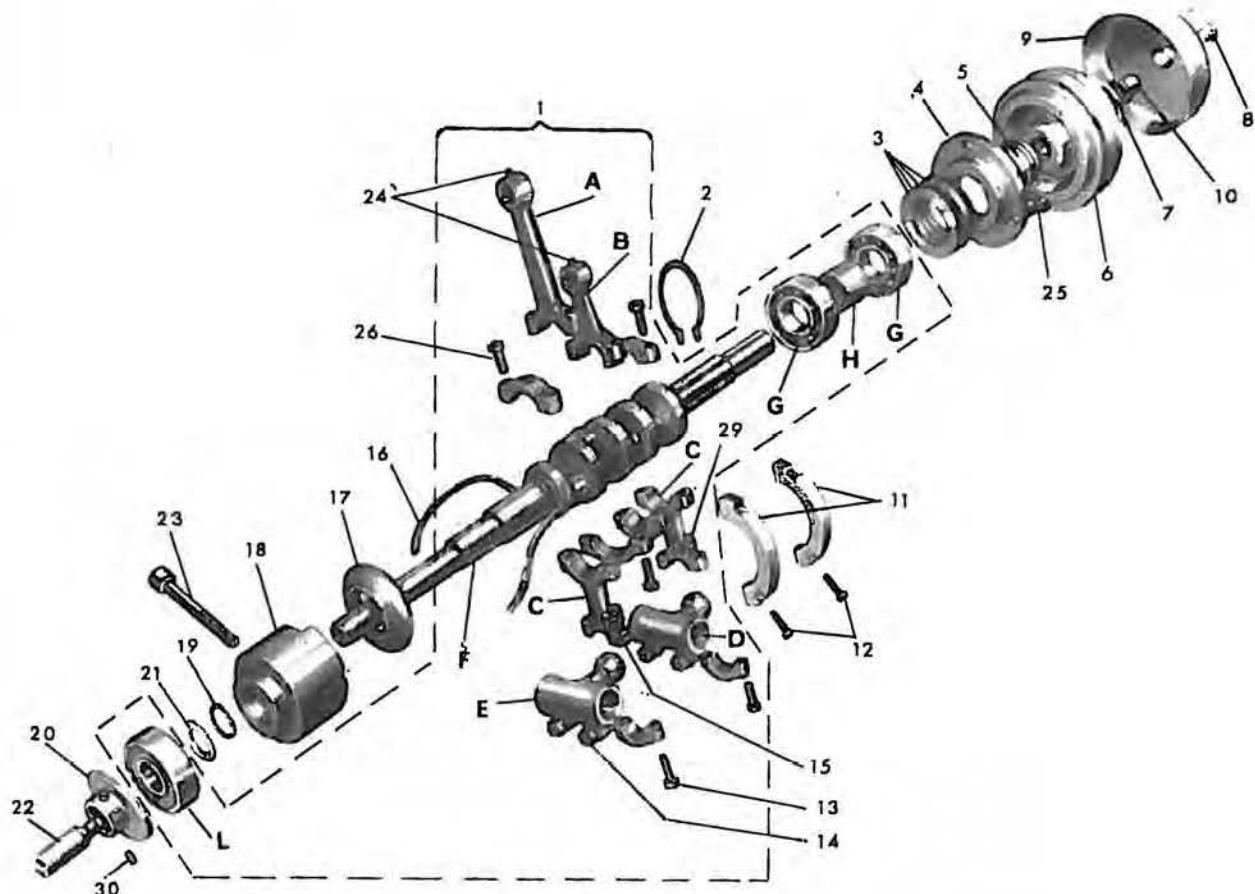

N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	PM 270-008/2	SHAFT, MAIN COMPLETE	1	13	010H-13.7	SCREW, CONNECTING ROD CAP	4
(a)	270-013/2	CONNECTING ROD, NEEDLE BAR	1	14	270-975	SCREW, CRANK	4
(b)	270-116/2	CONNECTING ROD, UPPER KNIFE SHAFT	1	15	004-E7	SCREW, ATTACHING CONNECTION GUIDE	1
(c)	270-061/2	CONNECTING ROD, UPPER & LOWER LOOPER	2	16	032a-15	OIL WICK	1
(d)	270-050/1	CRANK, UPPER LOOPER	1	17	270-615	RING OIL SHIELD	1
(e)	270-059/1	CRANK, LOWER LOOPER	1	18	270-010/1	BUSHING, MAIN SHAFT (LEFT)	1
(f)	270-707	BALL BEARING., RIGHT	2	19	074-A-12	WASHER	1
(g)	270-704	SHAF RING	1	20	290-3081	CAM, THREAD TAKEUP	1
(h)	270-705	SPRING WASHER	4	21	073M-10	WASHER	1
(i)	270-620	FLANGE, RIGHT	1	22	290-307	SCREW, ATTACHING 290-3081	2
(j)	270-614	SPACER, HANWHEEL	1	23	270-938	SCREW, MAIN SHAFT BUSHING	1
(k)	270-008/1	PULLEY, DRIVING	1	24	017c-4.5	SCREW, CONNECTING ROD PIN	2
(l)	270-612	WASHER, POSITIONING FULLY TO MAIN SHAFT	1	25	001E-10	SCREW, MAIN SHAFT FLANGE	3
(m)	270-981	SCREW, ATTACHING FULLY OVER	1	26	010b-11.5	SCREW, CONNECTING ROD CAP	8
(n)	270-606	COVER, FULLY	1	K	270-613	WASHER, BALL BEARING SPACING	1
(o)	270-610	STUD	1	L	270-709	BALL BEARING, LEFT.	1
(p)	270-617/1	BALANCERS, MAIN SHAFT	2	M	270-062	CONNECTION GUIDE	1
(q)	270-938	SCREW, ATTACHING BALANCERS	4	N	017-c-3	SCREW, THREAD TAKE UP CAM HOLDING	2
NOTE:							
WHEN ORDERING BALL BEARING REF. NO. G IT IS NECESSARY TO INDICATE ON THE ORDER THE ROMAN NUMERAL STAMPED ON THE OUTER RACE OF THE BEARINGS REMOVED.							

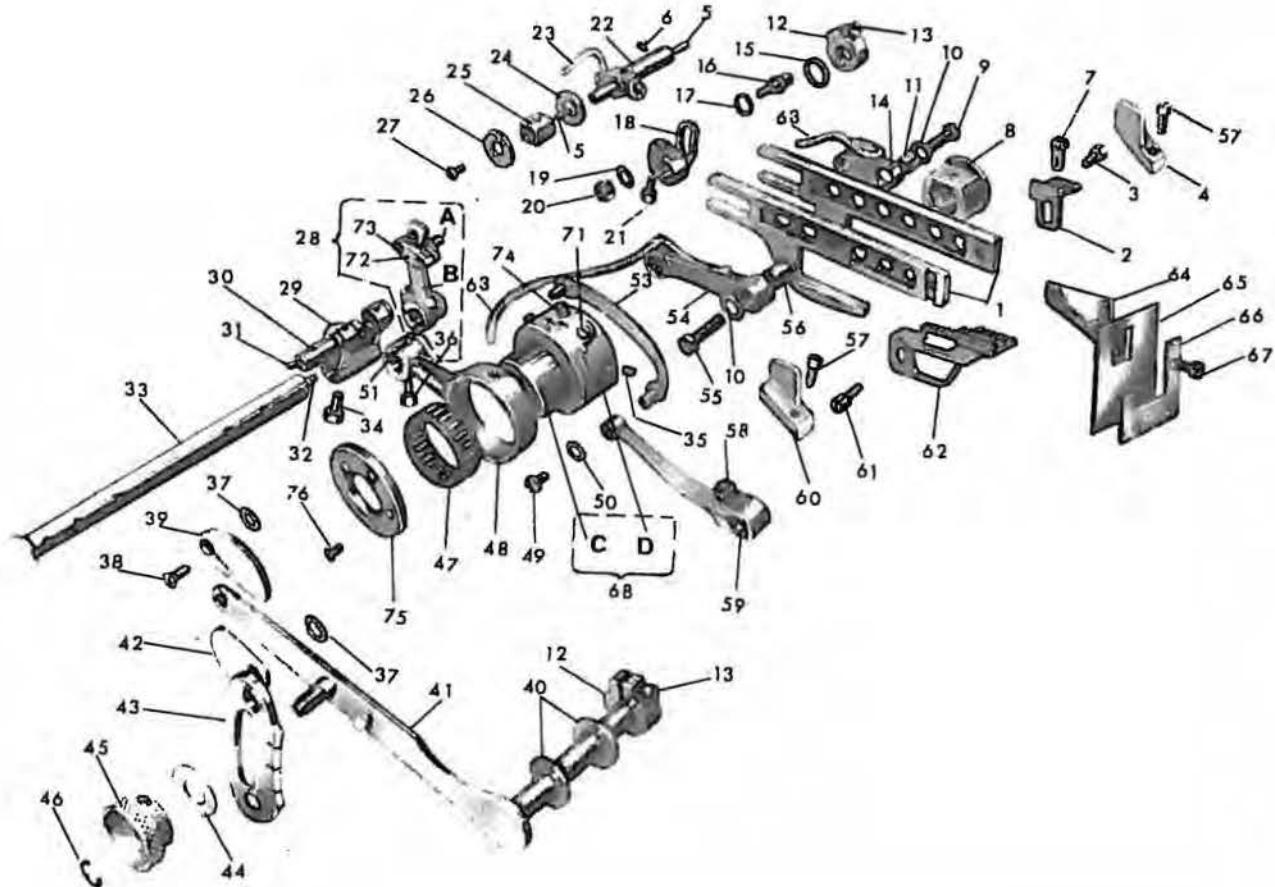

3

5

7

9

11

13

15

17

19


21

23


25

27

N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	FM 270-042	FEED LEVERS	1	37	064-f-5	WASHER	2
2	287-051	FEED DOG, REAR	1	38	270-992	SCREW, DIFFERENTIAL STOP	1
3	297-0511	FEED DOG, REAR	1	39	270-287/1	STOP, UPPER DIFFERENTIAL ADJUSTMENT	1
4	270-977	SCREW, ATTACH REAR FEED DOG	1	40	073-a-8	WASHER	2
5	270-640/1	GUIDE BLOCK, RIGHT DIFFERENTIAL FEED LEVER	1	41	FM 270-552/1	LEVER, DIFFERENTIAL ADJUSTMENT, COMPLETE	1
6	052-b-1	OIL WICK	4	42	270-288/1	STOP, LEVER DIFFERENTIAL ADJUSTMENT	1
7	270-937	SCREW, SETFEED LEVER ECCENTRIC PIN	1	43	270-567	PLATE, INDEX DIFFERENTIAL ADJUSTMENT	1
8	272-b-052	FEED DOG, CHAINING	1	44	065-b-6	WASHER	1
9	270-611/1	ECCENTRIC, FEED DOG LIFTER	1	45	270-568	NUT, DIFFERENTIAL ADJUSTMENT	1
10	270-979	SCREW, ATTACHING REAR FEED LEVER LINK	2	46	270-702	SNAP RING	1
11	070-H-4,5	WASHER, REAR FEED LEVER LINK	1	47	290-703	NEEDLE BEARING, STITCH REGULATING CONNECTOR	1
12	270-035	BUSHING, REAR FEED LEVER	2	48	290-037	CONNECTING ROD, STITCH REGULATOR	1
13	4030-06	COLLAR	2	49	270-984	SCREW, ATTACH DIFFERENTIAL LEVER	1
14	007-c-11	SCREW, FOR COLLAR	1	50	070-B-3	WASHER	1
15	270-048	LINK, REAR FEED LEVER	1	51	017-c-4,5	SCREW, SET FEED ROCKER PIN	1
16	073-c-8	WASHER	1				
17	071-H-5,5	STUD, DIFFERENTIAL SEGMENT	1				
18	270-047/1	WASHER	1				
19	GUIDE, INCREASE DIFFERENTIAL SEGMENT	1					
20	070-r-4	WASHER	1				
21	057-d-4	HUT, ATTACHING PIN 270-0541	1				
22	270-975	SCREW, CLAMP 270-047/1	1				
23	270-039	SCREW, FEED LEVER ECCENTRIC	1				
24	052-b-0-4	OIL WICK	1				
25	071-H-5	WASHER	1				
26	270-036/1	BLOCK, FEED LEVER SLIDING	1				
27	052-b-7	WASHER	1				
28	270-935	SCREW, ATTACH WASHER 270-935	1				
29	026-c-7	ADJUSTABLE DIFFERENTIAL ASSEMBLY,	1				
30	FM 270-038/1	COMPLETE	1				
31	270-046/1	SLIDE, DIFFERENTIAL ADJUSTING SEGMENT	1				
32	270-038	SEGMENT, DIFFERENTIAL ADJUSTMENT	1				
33	270-040	ROCKER, FEED LEVERS	1				
34	270-031	SHAFT, FEED LEVER ROCKER	1				
35	052-b-6	OIL WICK	1				
36	092-b-12	OIL WICK	1				
37	270-041	SHAFT, DIFFERENTIAL AND FEED ROCKER	1				
38	250-471	SCREW, LOCK 270-041	1				
39	004-f-6	SCREW, STITCH REGULATOR ECCENTRIC	2				
40	017-e-8	SPLITTING	1				
41	039-H-9	SCREW, DIFFERENTIAL SEGMENT	1				
				52	290-732	EXCENTRIC, STITCH REGULATOR, COMPLETE	1
				53	C 290-733	HOUSING, STITCH REGULATOR ECCENTRIC	1
				54	290-732	BRACKET, FEED LEVER	1
				55	270-250/1	GASKET, FEED LEVER	1
				56	270-251/1	SCREWS, ATTACH FEED LEVER GASKET &	1
				57	004-L-7	BRACKET	1
				58			
				59	270-566/1		
				60	270-E41/1		
				61	095-978		
				62	297-050/1		
				63	002-b-16		
				64	270-249		
				65	270-250/1		
				66	270-251/1		
				67	004-L-7		
				68			
				69			
				70			
				71	290-734		
				72	270-032/1		
				73	004-f-6		
				74	003-A-4,5		
				75	290-715		
				76	028-A-5		

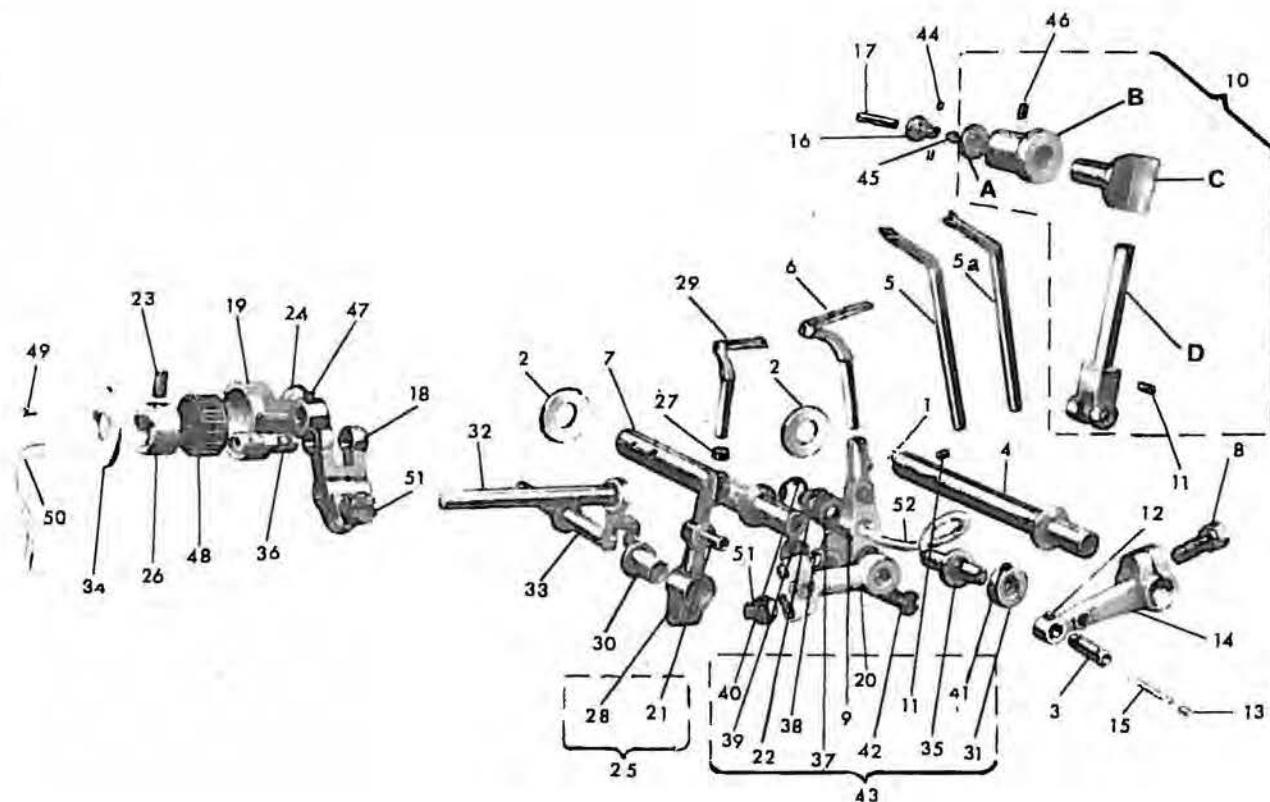

N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE
1	092-d-16	OIL WICKS	2	24	790-954	WASHER
2	073-N-10	WASHERS	25	25	PN 290-055	SAFETYSTITCH LOOPER HOLDER, COMPLETE
3	270-070	PIN, UPPER LOOPER LEVER	26	26	297-055	ECCENTRIC
4	270-064	SHAFT, UPPER LOOPER	27	27	297-281	BUSHING, SPACER, FOR SAFETYSTITCH LOOPER
5	27-277-074	LOOPER, UPPER (SMALL EYE)	28	28	290-071	SAFETYSTITCH LOOPER HOLDER
5A	27-277-074	LOOPER, UPPER (BLIND)	29	29	290-075/1	LOOPER, SAFETYSTITCH
6	270-0751-	LOOPER, LOWER	30	30	290-075/2	LOOPER, SAFETYSTITCH
7	270-069	SHAFT, LOWER LOOPER	31	31	290-358	BUSHING, SLITTED
8	250-471	SCREWS, CLAMP LOOPER HOLDERS	32	32	290-360	COLLAR, ECCENTRIC PIN SETTING
9	290-068	HOLDER, LOWER LOOPER	33	33	290-361	PIN, SAFETYSTITCH LOOPER
10	0-270-065	GUIDE, UPPER LOOPER OSCILLATING, COMPLETE	34	34	290-110	WASHER
A	071-a-5	WASHER	35	35	297-362	PIECE, ECCENTRIC
B	270-056/1	BUSHING, UPPER LOOPER DRIVE (REGULATABLE)	36	36	290-023	PIECE, SAFETYSTITCH LOOPER DRIVE LEVER
C	270-065	GUIDE, UPPER LOOPER OSCILLATING	37	37	072-h-6	WASHER
D	270-063/1	HOLDER, UPPER LOOPER	38	38	072-c-6	WASHER
11	270-974/1	SCREWS, LOOPER SETTING	39	39	059-u-6	NUT, CLAMP LOWER LOOPER HOLDER
12	016-a-4	SCREW, SET UPPER LOOPER ROCKER PIN	40	40	290-700	SNAP RING
13	016-a-2.5	SCREW, OIL WICK RETAINER	41	41	290-944	SCREW, ECCENTRIC PIN COLLAR SETTING
14	270-067	LEVER, UPPER LOOPER	42	42	290-124	SCREW, CLAMP LOWER LOOPER HOLDER
15	092-a-1	OIL WICK	43	43	6-297-058	LOWER LOOPER HOLDER ASSEMBLY
16	250-314	SCREW, ATTACH UPPER LOOPER GUIDE	44	44	092-c-2	OIL WICK
17	092-d-5	OIL WICK	45	45	092-b-2	OIL WICK
18	290-288	LEVER, SAFETYSTITCH LOOPER DRIVE	46	46	017-F-11	SCREW, UPPER LOOPER DRIVE BUSHING SET
19	290-312	CONNECTING ROD, SAFETYSTITCH LOOPER DRIVE	47	47	017-c-4.5	SCREW, SAFETYSTITCH LOOPER DRIVE
20	PN-290-313	CONNECTING ROD	48	48	290-703	LEVER PIN SET
21	290-363	PIN, SAFETYSTITCH LOOPER	49	49	028-A-5	NEEDLE BEARING
22	290-412	CUP SPRING	50	50	092-d-16	SCREW, SETTING 290-716
23	290-923	SCREW, ECCENTRIC SETTING	51	51	270-975/1	OIL WICK
			52	52	092-d-11	SCREW, SAFETYSTITCH LOOPER DRIVE LEVER
						OIL WICK

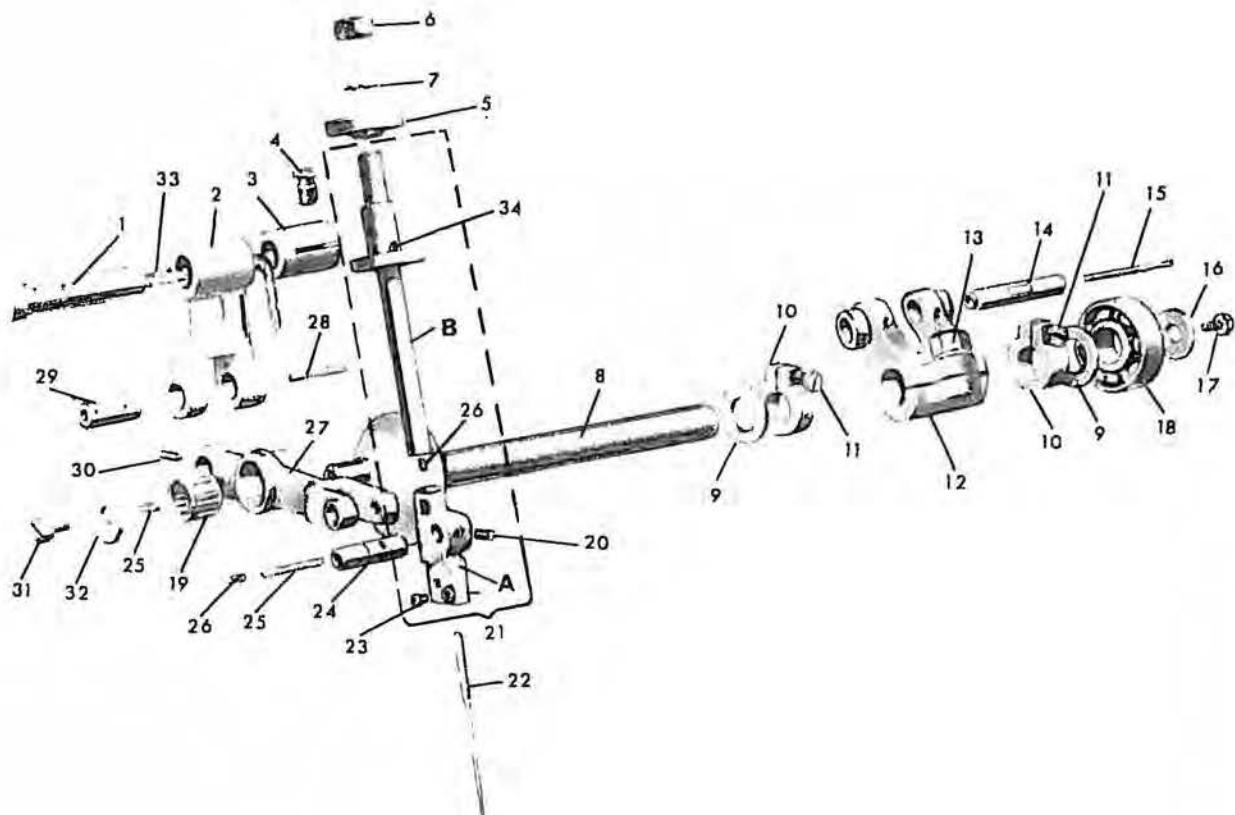

5

7

9

11

13

15

17

19

21



23

25


27

N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	PM. 270-138/1	PIN, NEEDLE LEVER ROCKER	1	20	016 B-2.5	NEEDLE BEARING, NEEDLE DRIVE LEVER (ON REQUEST)	1
2	PM. 270-137/1	LEVER, NEEDLE FORK	1	21	6.29-025	SCREW, SECURE NEEDLE CHUCK SHAFT	1
3	270-132	BUSHING, NEEDLE LEVER ROCKER PIN	1	A	290-020	NEEDLE GUIDE BAR ASSEMBLY, COMPLETE	1
4	270-728	SCREW, SET NEEDLE LEVER ROCKER PIN	1	B	290-025/1	NEEDLE HOLDER	1
5	250-027	WASHER, POSITION NEEDLE GUIDE BAR	1	22	RIM 27	NEEDLE GUIDE BAR	1
6	270-933	HOT, POSITION AND LOCK NEEDLE GUIDE BAR	1	23	270-944	NEEDLE RIM 27	1
7	270-713	WASHER, LOCK	1	24	270-120	SCREW, NEEDLE SET	1
8	270-008/1	SHAFT, NEEDLE BAR CRANK	1	25	082 E-1	PIN, NEEDLE HOLDER	1
9	073 E-8	WASHER	1	26	016 A-2.5	OIL WICK	2
10	270-718	COLLAR, SECURE NEEDLE BAR CRANK SHAFT	1	27	270-135	SCREW, OIL WICK RETAINER	1
11	007 C-11	SCREW, CLAMP COLLAR 270-718	1	28	082 D-5	LEVER, NEEDLE HOLDER DRIVING	1
12	270-007/1	LEVER, NEEDLE BAR DRIVE	1	29	270-133	OIL WICK	1
13	270-975/1	SCREW, CLAMP 270-007/1	1	30	017 C-3.5	PIN, NEEDLE HOLDER DRIVING LEVER	1
14	270-134	PIN, NEEDLE BAR DRIVE	1	31	001 E-7	SCREW, NEEDLE HOLDER DRIVING SHAFT SET	1
15	092 D-6	OIL WICK	1	32	270-151	SCREW, RETAIN NEEDLE BEARING	1
16	071 E-5	WASHER	1	33	082 D-11	WASHER, RETAIN NEEDLE BEARING	1
17	001 G-10	SCREW, SECURE WASHER 071 E-5	1	34	082 A-10	OIL WICK	1
18	270-708	BALL BEARING, NEEDLE BAR CRANK SHAFT	1				
19	250-708	NEEDLE BEARING, NEEDLE DRIVE LEVER	1				

6

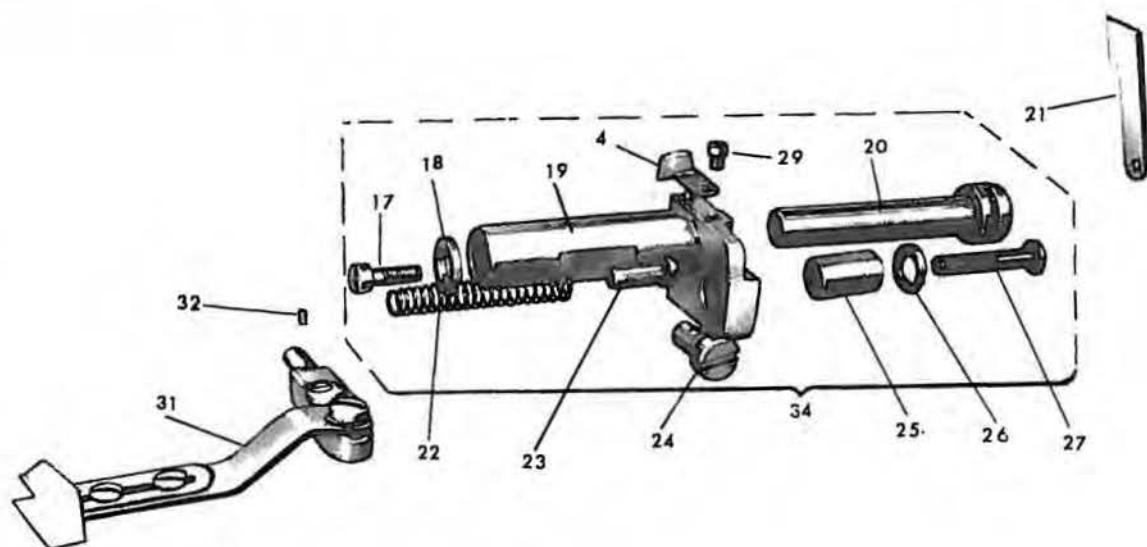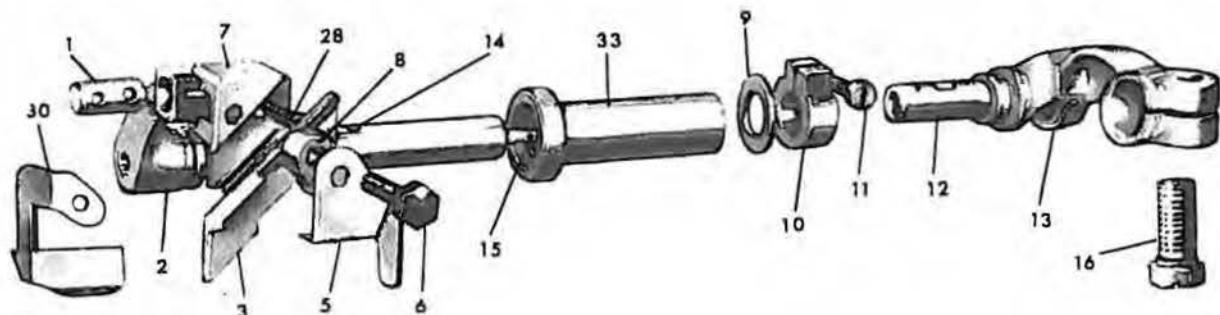


N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	270-103	PIN, UPPER KNIFE HOLDER BLOCK	1	18	071 D-5	WASHER	1
2	270-096	SHAFT, UPPER KNIFE DRIVING	1	19	PM, 290-104	BLOCK, LOWER KNIFE HOLDER	1
3	27-77-1121	KNIFE, UPPER NOT SERRATED	1	20	290-105	PIN, LOWER KNIFE LOCKING	1
4	290-110	NEEDLE GUARD, FRONT	1	21	290-113	KNIFE, LOWER	1
5	290-111	GUARD, UPPER KNIFE TRIMMING	1	22	270-100	SPRING, LOWER KNIFE PRESSURE	1
6	290-087	SCREW, ATTACH UPPER KNIFE AND HOLDER	1	23	270-106	PIN, LOWER KNIFE PRESSURE	1
7	290-099	BLOCK, UPPER KNIFE HOLDER	1	24	003 L-12	SCREW, LOWER KNIFE HOLDER BLOCK SET	1
8	270-103	BLOCK, LOCKING & FIXING UPPER KNIFE	1	25	270-101	BUSHING, LOWER KNIFE POSITIONING	1
9	073 F-9	WASHER	1	26	070 F-4	WASHER	1
10	270-719	COLLAR, UPPER KNIFE DRIVING SHAFT	1	27	270-988	SCREW, LOWER KNIFE POSITIONING SET	1
		POSITION	1	28	028 E-13	SCREW, UPPER KNIFE HOLDER BLOCK SET	1
11	007 C-11	SCREW, CLAMP COLLAR 270-719	1	29	004 F-4	SCREW, ATTACH FRONT NEEDLE GUARD BRACE	1
12	270-098	PIN, UPPER KNIFE DRIVING LEVER	1	30	290-115	GUARD, UPPER KNIFE TRIMMING	1
13	270-098	LEVER, UPPER KNIFE DRIVING	1	31	A5, 297-403	GUIDE, SWING-OUT LIMIT TRIMMING	1
14	092 E-2	OIL WICK	2	32	016 F-7	SCREW	1
15	092 D-9	OIL WICK	1	33	270-097/1	BUSHING, UPPER KNIFE SHAFT	1
16	250-471	SCREW, UPPER KNIFE DRIVING LEVER	1	34	G, 297-104	LOWER KNIFE HOLDING ASSEMBLY	1
17	007 F-10	SCREW, LOWER KNIFE LOCKING	1				

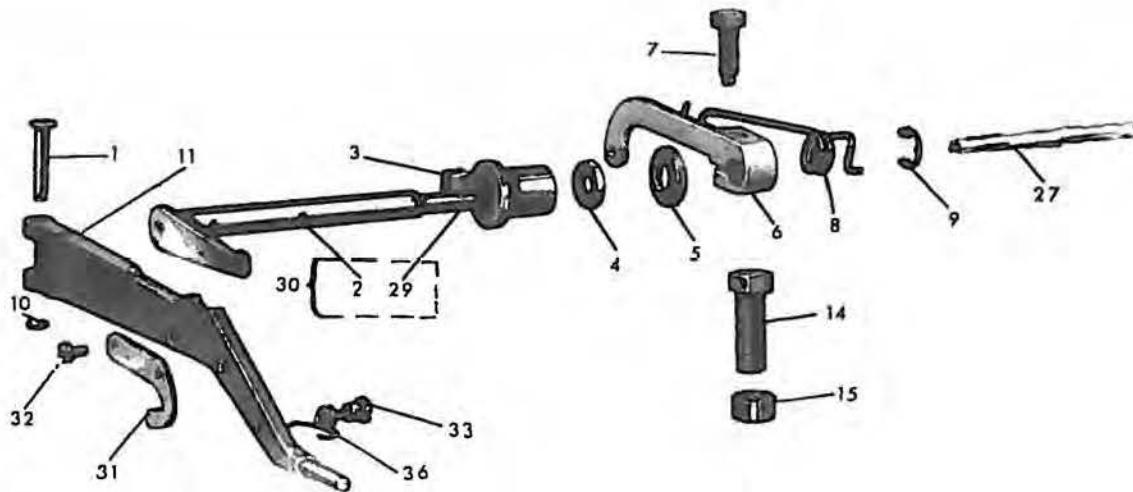

7

9

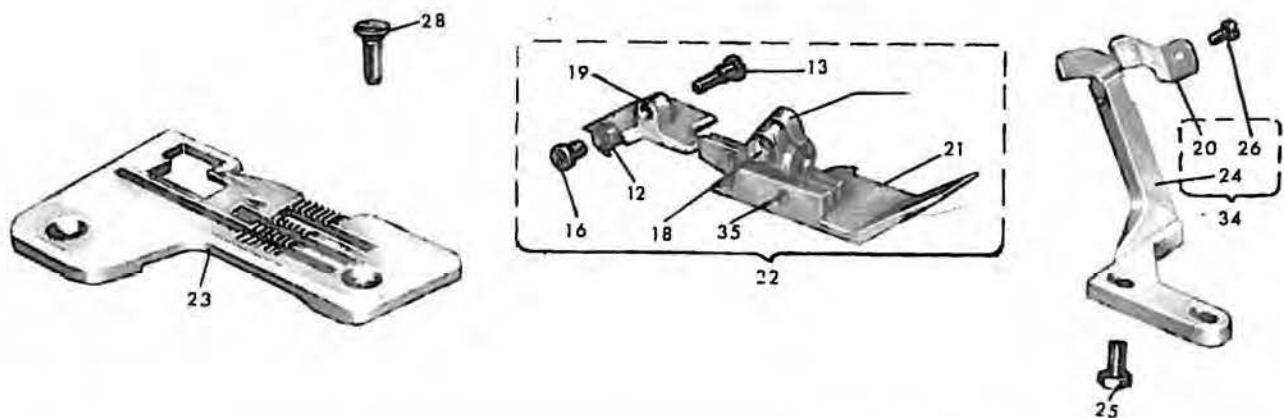

11

13

15

17

19


21

23


25

27

N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	270-077	PIN, PRESSERFOOT BAR LEVER	1	18	297-1021	PLATE, PRESSERFOOT CHAINING GUIDE	1
2	270-081/1	SHAFT, PRESSERFOOT BAR LEVER	1	20	297-109/1	NEEDLE GUARD, REAR	1
3	270-083	BUSHING, PRESSERFOOT BAR LEVER SHAFT	1	21	297-104/1	SHOE, PRESSERFOOT	1
4	073-L-7	WASHER	1	22	6-297-10811/1	PRESSERFOOT, COMPLETE	1
5	072-P-7	WASHER	1	23	297-114/1	NEEDLE PLATE (WIDTH OF EIGHT 9/32")	1
6	270-087/1	LEVER, PRESSERFOOT LIFTER	1	24	297-114/1/1	NEEDLE PLATE (WIDTH OF EIGHT 15/64")	1
7	270-985	SCREW, PRESSERFOOT LIFTER CLAMP	1	25	039-A-6	NEEDLE GUARD, FRONT	1
8	270-089/1	SPRING, PRESSERFOOT LIFTER LEVER	1	26	270-589	SCREW, FRONT NEEDLE GUARD HOLDING	2
9	270-714	SHAF RING	1	27	092-D-11	SCREW, REAR NEEDLE GUARD HOLDING	1
10	270-701	SHAF RING	1	28	032-L-10.5	OIL WICK	1
11	297-194	SPRING, PRESSERFOOT CHAINING PLATE	1	29	270-073	SCREW, NEEDLE PLATE HOLDING	2
12	297-076	LEVER, PRESSERFOOT BAR	1	30	PM-270-081/1	SHAFT, PRESSERFOOT BAR LEVER, COMPLETE	1
13	297-187	SCREW	1	31	270-188	PLATE, CHAIN CUTTING	1
14	270-085/1	SCREW, PRESSERFOOT LIFTER LEVER HEIGHT ADJ.	1	32	001-A-4.3	SCREW, CHAIN CUTTING PLATE HOLDING	1
15	270-091	COLLAR, PRESSERFOOT LIFTER L + HEIGHT ADJ. SCREW	1	33	297-189	SHOULDER-SCREW	1
16	297-195	BUSHING, THREADED	1	34	6-297-107/1	NEEDLE GUARD, FRONT & REAR ASSEMBLY	1
17	297-182	HINGE, PRESSERFOOT ATTACHING	1	35	297-179	PIN, PRESSERFOOT SHOE	1
18	297-906	SCREW	1	36	297-190	SPRING	1

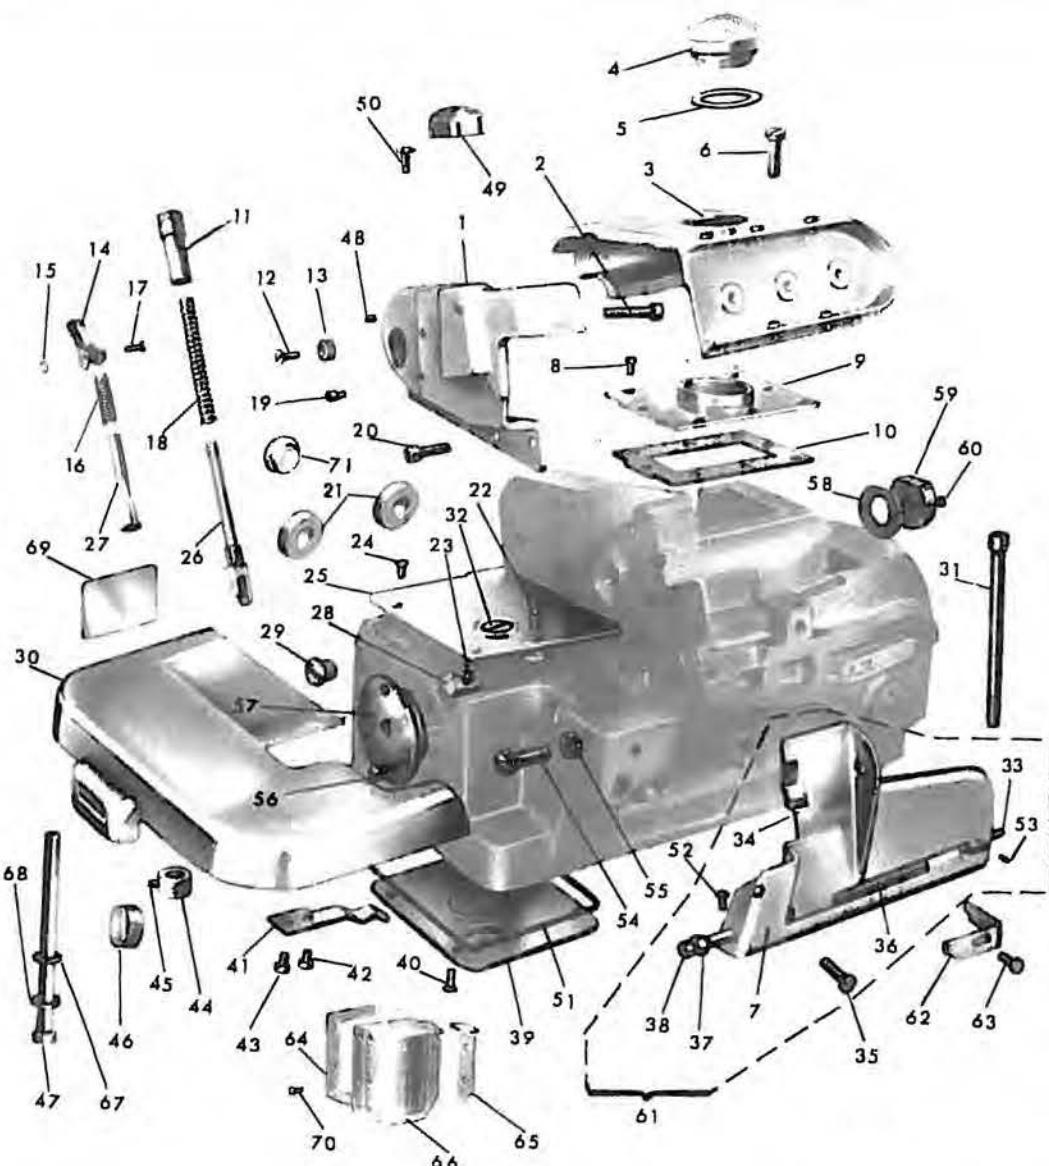


N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	PM290-218/2	COVER, NEEDLE MOVEMENT ASSEMBLY	1	30	270-228	SCREW, ADJUSTING COVER, FEED MECHANISM COVER AND FILTER	1
2	037-H-5	SCREW, NEEDLE MOVEMENT ASSEMBLY, COVER ATTACHING	1	39	PM-270-242/2	SCREW, FEED MECHANISM COVER AND FILTER ATTACHING	1
3	PM290-205/2	OIL SP. HOLE AND CAP	1	40	028-E-10	SPRING, WORK PLATE LATCH	1
4	270-241/2	GASKET, OIL SP. HOLE AND CAP	1	41	270-212	SCREW, WORK PLATE LATCH SPRING ATTACHING	1
5	270-965/2	SCREW, COVER RETAINER	1	42	001-D-6	SCREW, WORK PLATE LATCH SPRING ATTACHING	1
6	270-983	SCREW, LOOPER AND TAKE UP COVER	1	43	001-D-4.5	SCREW, WORK PLATE LATCH SPRING ATTACHING	1
7	PM270-218/1	SCREW	1	44	270-718	COLLAR, WORK PLATE HOLDING	1
8	007-R-7.5	COVER	1	45	017-E-4.5	SCREW, COLLAR SET	2
9	PM270-245/2	GASKET	1	46	270-030/1	PLUG, DIFFERENTIAL SHAFT SEAL	1
10	270-246	SCREW, PRESSERFOOT PRESSURE REGULATING	1	47	290-973	SCREW, ATTACH MAIN CASTING TO OIL RE-SERVOIR	1
11	270-993	SCREW, STOP CAM SET	1	48	270-715	SCREW SET	1
12	007-R-12.5	Lever, PRESSERFOOT RELEASE	1	49	270-129	CAP, NEEDLE GUIDE BAR	1
13	805-112	SNAP RING	1	50	270-731/1	SCREW, ATTACHMENT SECURING	2
14	270-094	SPRING, PRESSERFOOT RELEASE LEVER	1	51	270-231	GASKET, FEED MECHANISM COVER AND FILTER	1
15	270-701	SPRING, PRESSERFOOT RELEASE LEVER	1	52	01205/1	SCREW, LOOPER AND TAKE UP COVER	1
16	270-086	SPRING, PRESSERFOOT RELEASE LEVER	1	53	270-213	PLUG, WORK PLATE STOP	1
17	270-078	SPRING, PRESSERFOOT RELEASE LEVER	1	54	270-214	HUT, WORK PLATE STOP SCREW	1
18	270-F-092	SPRING, PRESSERFOOT RELEASE LEVER	1	55	057-E-4	SCREW, MAIN SHAFT COVER ATTACHING	3
19	270-993	SCREW, PRESSERFOOT RELEASE LEVER	1	56	005M-10	COVER, MAIN SHAFT COVER	1
20	270-995	SCREW, NEEDLE MOVEMENT COVER	2	57	250-619	GASKET, UPPER KNIFE SHAFT COVER	1
21	028-E-66/1	PLUGS, LOOPER SHAFT SEAL	2	58	270-624	SCREW, UPPER KNIFE SHAFT COVER	1
22	028-E-12	SCREW, FEED MECHANISM COVER ATTACHING	1	59	270-633/1	SCREW, UPPER KNIFE SHAFT COVER	1
23	028-E-10	SCREW, FEED MECHANISM SEAL PLUG	1	60	005-E-13	SCREW, UPPER KNIFE SHAFT COVER	2
24	028-E-7	SCREW, FEED MECHANISM COVER ATTACHING	1	61	270-216	COVER ASSEMBLY, LOOPER & TAKE-UP	1
25	280-247	COVER, FEED MECHANISM	1	62	257-220	ANGLE, FEED DOG PROTECTION	1
26	PM270-095	SHAFT, PRESSERFOOT PRESSURE	1	63	001-D-7	SCREW, ANGLE ATTACHING	1
27	270-090	SHAFT, PRESSERFOOT LIFTER	1	64	290-203	GASKET, REAR FOR 290-203	1
28	270-248	PLUG, FEED MECHANISM SEAL PLUG	1	65	290-204	GASKET, FRONT FOR 290-203	1
29	270-940	SCREW, PLUG	1	66	290-209	COVER, CHAIN STITCH LOOPER ASSEMBLY	1
30	PM290-210	WORK PLATE	1	67	290-947	GASKET, FOR LONG SCREW [ATTACH MAIN CASTING]	1
31	270-972	SCREW, ATTACH MAIN CASTING TO OIL RE-SERVOIR	1	68	290-950	WASHER	1
32	270-279	SCREW, PLASTIC OIL COVER	1	69	270-172/1	PATENT LABEL OF MACHINE	5
33	270-220	SHAFT, LOOPER & TAKE UP COVER HINGE	1	70	004-L-8	SCREW, GASKET ATTACHING	1
34	PM290-217	COVER, LOOPER & TAKE UP	1	71	270-030	SCREW, DIFFERENTIAL SHAFT, SEAL	1
35	270-870	SCREW, LOOPER & TAKE UP COVER BASE	1				
36	270-221	ATTACHING	1				
37	054D-4	SPRING, LOOPER AND TAKE UP COVER NUT, STOP	1				

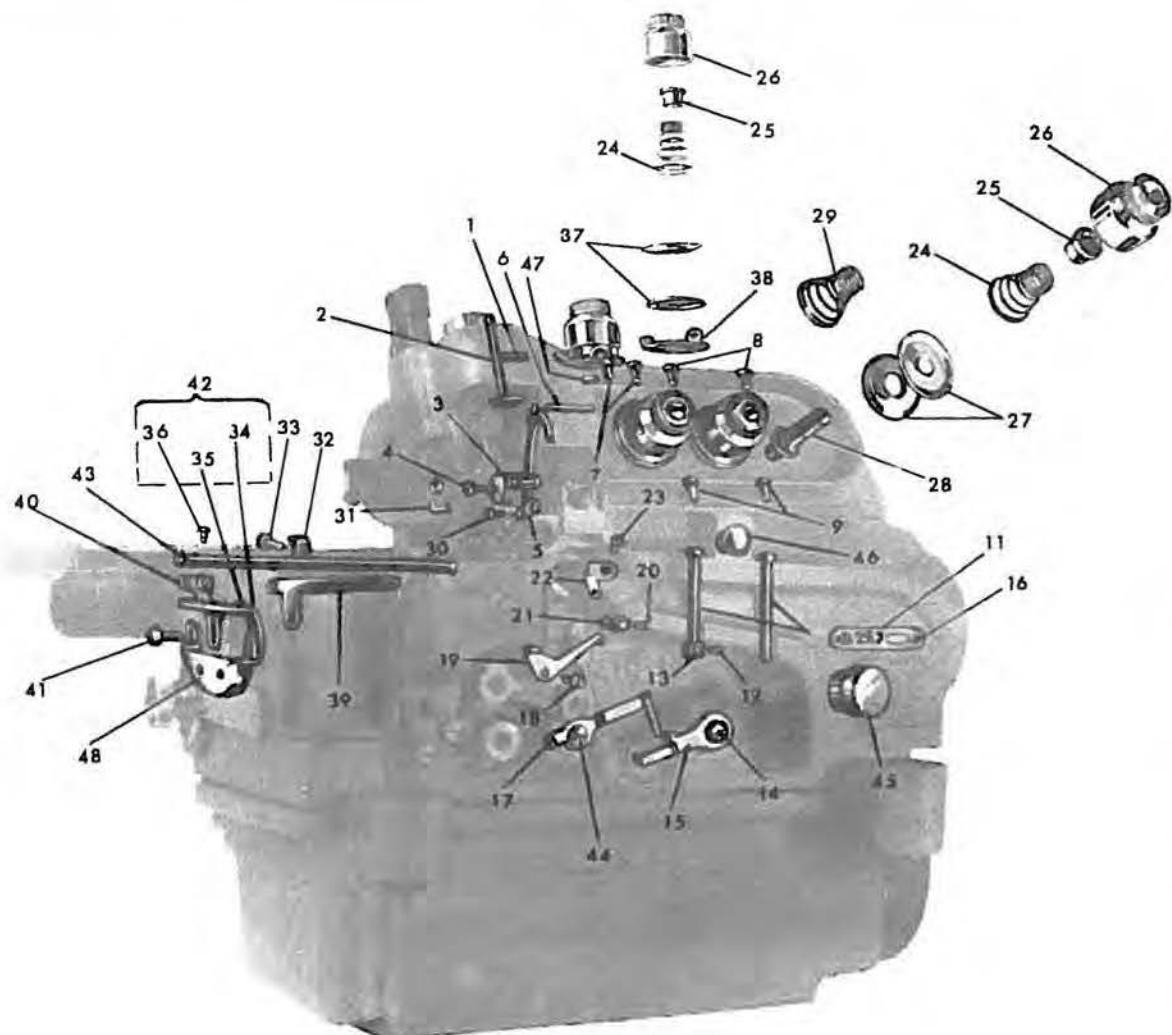


N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	270-941	SCREW, NEEDLE THREAD TUBE SET	1	25	270-233	BUSHING, UPPER TENSION	3
2	FM.27-27-263	TUBE, NEEDLE THREAD	1	26	270-233	NUT, TENSION	3
3	6.290-262/1	NEEDLE THREAD TENSION, COMPLETE	1	27	603-031	DISCS, TENSION	6
4	004-C-5.5	SCREW, NEEDLE THREAD TENSION ATTACHING	1	28	270-230	POSTS, TENSION	9
5	270-274/2	TAKE UP, NEEDLE THREAD	1	29	270-232/2	SPRING, NEEDLE	1
6	270-264	TUBE, NEEDLE THREAD	1	30	004-N-5.5	SCREW, NEEDLE THREAD TAKE UP ATTACHING	1
7	270-265	GUIDE, THREAD	1	31	290-280	CONNECTION GUIDE [THREAD GUIDING]	1
8	270-265/1	GUIDE, THREAD	1	32	290-308	BRACE, NEEDLE THREAD TUBE	1
9	270-266	GUIDE, THREAD	1	33	004-G-7	SCREW, NEEDLE THREAD TUBE BRACE HOLDING	1
10	270-268	GUIDE, THREAD	2	34	FM290-308/1	PLATE, CAM	1
11	B-297-171	LABEL, IDENTIFICATION	1	35	290-310	SPRING, THREAD PRESSING	1
12	016-B-2.5	SCREW, NEEDLE THREAD TAKE UP ATTACHING	1	36	004-A-2.5	SCREW, THREAD PRESSING SPRING ATTACHING	2
13	270-271	THREAD GUIDE, LOWER LOOPER	1	37	250-031	DISC, TENSION	2
14	036-C-7	SCREW, LOWER LOOPER THREAD TAKE UP	2	38	FM.27-27-253	THREAD GUIDE	1
15	270-272	TAKE UP, LOWER LOOPER THREAD	1	39	290-255	THREAD GUIDE, SAFETYSTITCH LOOPER	1
16	270-170	SCREW, IDENTIFICATION LABEL ATTACHING	1	40	290-256	THREAD GUIDE, SAFETYSTITCH LOOPER	1
17	F.M.290-253/2	TAKE UP, LOWER LOOPER THREAD	1	41	001-F-6	SCREW, CAM PLATE ATTACHING	1
18	001-C-5.5	SCREW, UPPER LOOPER THREAD TAKE UP	1	42	6-290-308/1	CAM PLATE AND THREAD GUIDE COMPLETE	1
		ATTACHING	1	43	290-177	THREAD GUIDE TUBE	1
19	280-270	UPPER LOOPER THREAD TAKE UP	1	44	032-F-6.5	SCREW	1
20	270-942	SCREW, THREAD GUIDE ATTACHING	1	45	270-643	OIL INDICATOR SPY HOLE	1
21	290-273	GUIDE, LOOPER SET	1	46	270-730	PLUG, PLASTIC, COVER HOLE	1
22	270-275/1	UPPER LOOPER THREAD GUIDE	1	47	065-A-6	WASHER	1
23	032-A-6	SCREW, THREAD GUIDE HOLDING	1	48	297-214	COVER, THREAD TAKEUP CAM PROTECTING	1
24	270-232/1	SPRING, LOWER LOOPER	2				



10

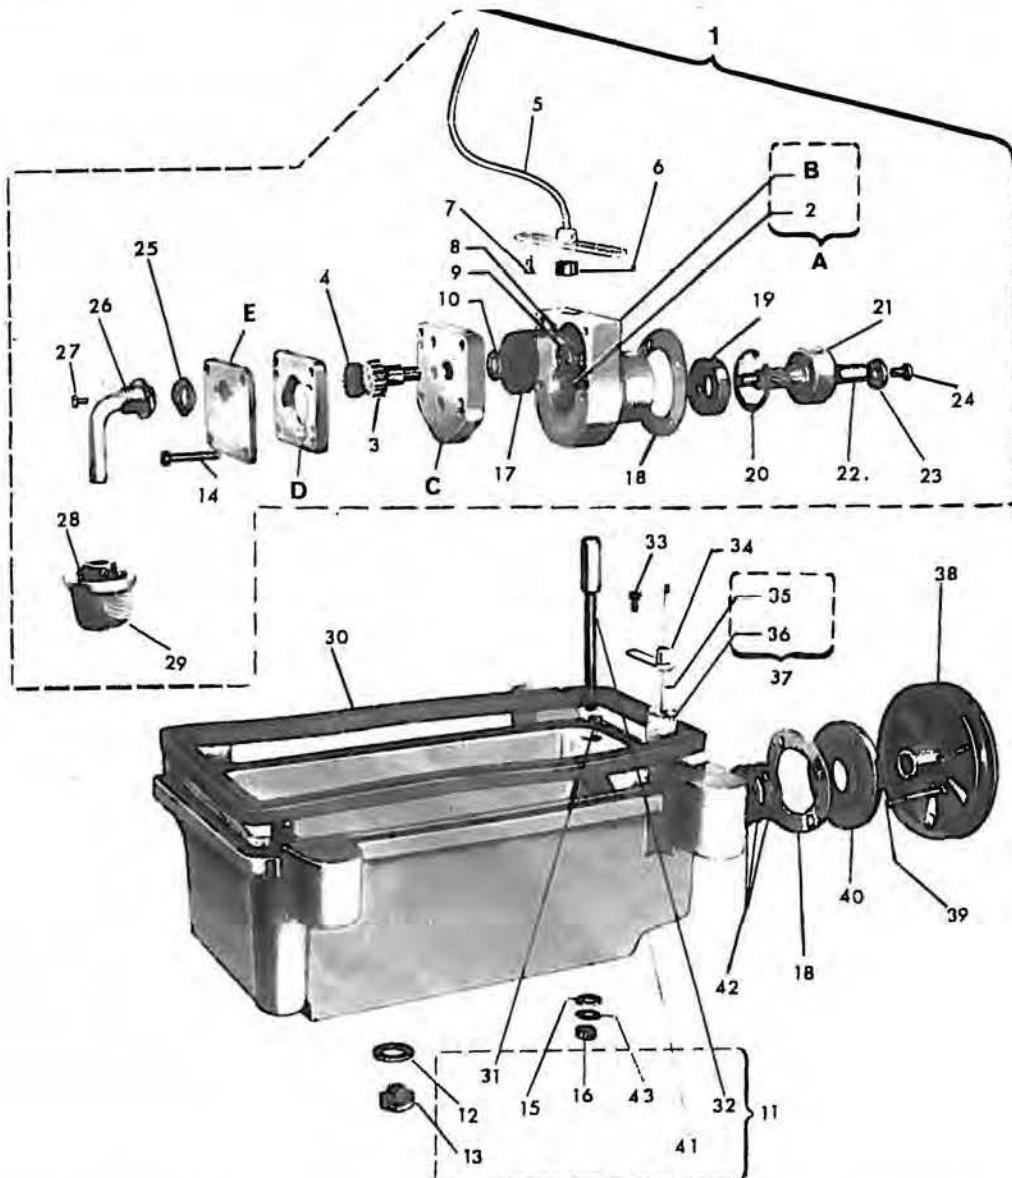


N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	G270-816	OIL PUMP ASSEMBLY COMPLETE	1	21	270-710	BALL BEARING, OIL PUMP DRIVE SHAFT	1
2	270-811	PIN, POSITIONING	1	22	270-823	SHAFT, OIL PUMP DRIVE	1
A	PN270-816	HOUSING, OIL PUMP WITH POSITIONING PIN	1	23	270-812	WASHER, POSITIONING	1
B	270-816	HOUSING, OIL PUMP	1	24	0390-10	SCREW, POSITIONING	1
C	270-819	PLATE, OIL PUMP HOUSING	1	25	270-829	WASHER ATTACHING	1
D	270-816	PLATE, OIL PUMP HOUSING	1	26	PM270-830	GASKET, OIL FILTER TUBE	1
E	270-817	PLATE, OIL PUMP HOUSING COVER	1	27	004L-6	TUBE, OIL FILTER	1
3	270-620	GEAR, OIL PUMP	1	28	017C-4,5	SCREW, OIL FILTER TUBE ATTACHING	2
4	PM270-821	GEAR, OIL PUMP	1	29	PM270-826	SCREW, OIL FILTER ATTACHING	2
5	PM270-646	TUBE, OIL TRANSPORT	1	30	270-808	FILTER, OIL	1
6	270-825	GASKET, OIL TRANSPORT TUBE	1	31	270-946	GASKET, MACHINE BASE AND OIL RESERVOIR	2
7	0281-10	SCREW, OIL TRANSPORT TUBE ATTACHING	2	32	270-811	PIN, MACHINE BASE TO OIL RESERVOIR	2
8	001E-8	SCREW, GEAR ATTACHING	1	33	001F-7	POSITIONING	2
9	270-813	WASHER, GEAR	1	34	PM270-806/1	SCREW, OIL LEVEL STICK GUIDE BRACKET	1
10	072M-7	WASHER, GEAR	1	35	270-804	ATTACHING	1
11	G270-001	OIL RESERVOIR COMPLETE LESS OIL PUMP	1	36	270-805	BRACKET, OIL LEVEL STICK GUIDE	1
12	270-966	WASHER, OIL DRAIN PLUG	1	37	PM270-805	STICK, OIL LEVEL	1
13	PM270-996/1	PLUG, OIL DRAIN PLUG	1	38	270-810	FLOAT, OIL LEVEL STICK	1
14	270-970	SCREW, OIL PUMP ASSEMBLY	4	39	270-969	OIL LEVEL STICK AND FLOAT COMPLETE	1
15	270-947	WASHER, POSITIONING PIN	2	40	270-814	FULLETT, OIL PUMP	4
16	059G-6	HUB, POSITIONING PIN	2	41	270-001	SCREW, OIL PUMP ATTACHING	1
17	270-824	GEAR, OIL PUMP	1	42	270-706	FLANGE, OIL PUMP	1
18	270-815	GASKET, OIL PUMP	1	43	065 L-8	OIL RESERVOIR	4
19	270-711	WASHER, OIL PUMP SEAL	1			CUP SPRINGS	4
20	270-712	SNAP RING	1			WASHER, POSITIONING PIN	2

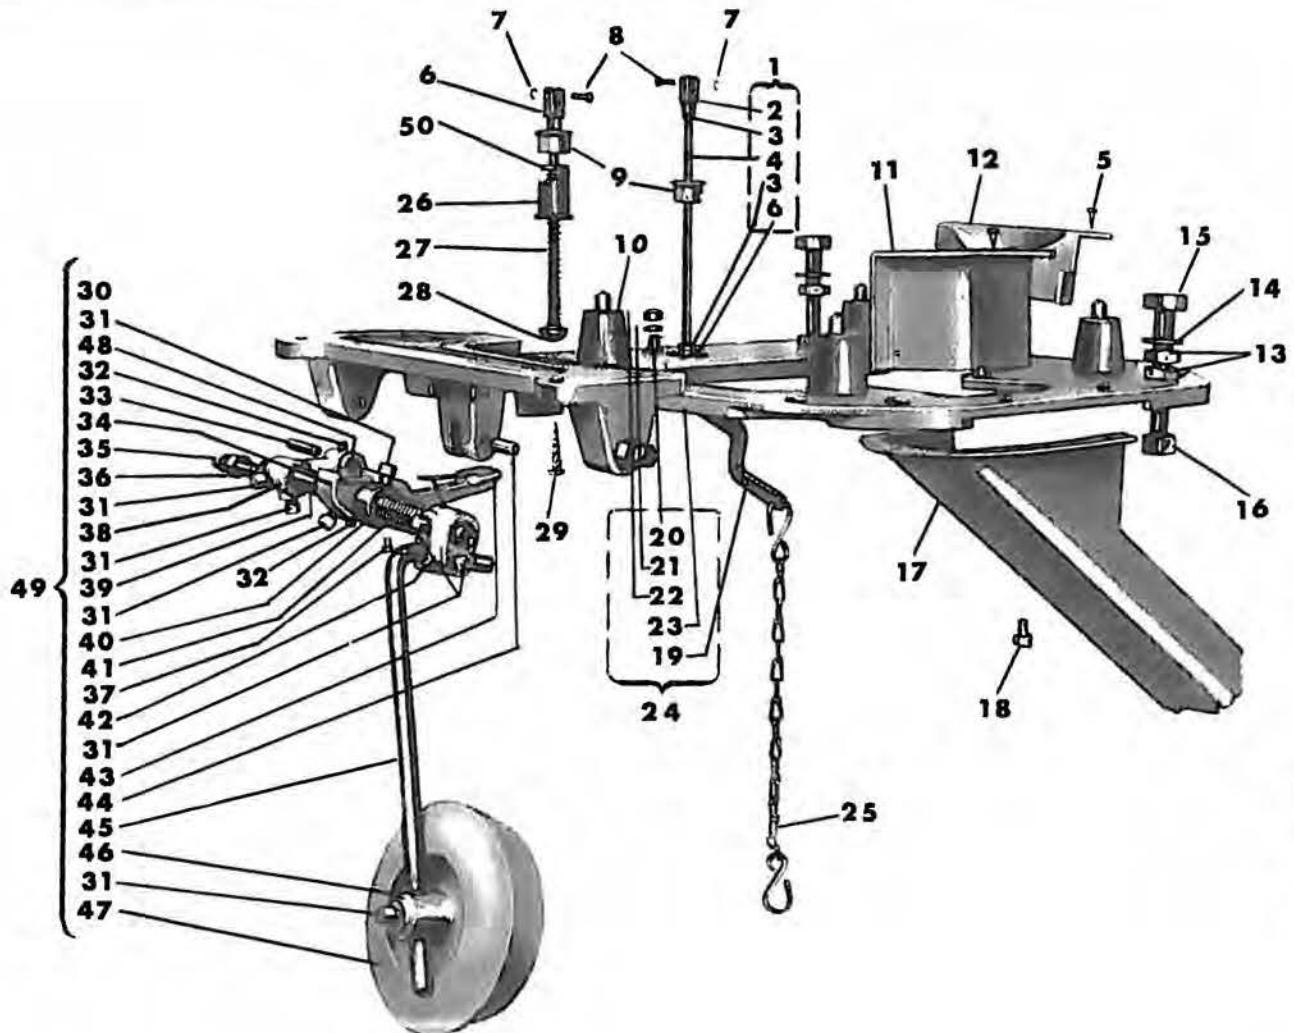

N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	6270-583	ROD, FOOT LIFTING ASSEMBLY	1	27	270-554	SPRING, DIFFERENTIAL ACTIVATING	1
2	270-585	CONNECTOR, FOOT LIFTER ROD	1	28	270-556/1	ROD, DIFFERENTIAL ACTIVATING	1
3	059A-5	HUT, FOOT LIFTING ROD LOCK	1	29	*T5-22x35	SCREW, KNEE CONTROL ASSEMBLY ATTACHING	4
4	270-583	ROD, FOOT LIFTER	1	30	*270-570	BASE, KNEE CONTROL	1
5	270-459	SCREW, OPERATOR HAND PROTECTOR SHIELD	1	31	*038M-0	SCREW, SET	9
6	270-557	CONNECTOR, DIFFERENTIAL ACTIVATING	1	32	*005G-6	SCREW, SET	2
7	270-701	SNAP RINGS	1	33	*270-580	PIN, KNEE CONTROL LINKAGE	1
8	270-558	PIN	1	34	*270-579	STOP, KNEE CONTROL	1
9	270-552	BUSHING, PLASTIC PROTECTIVE	1	35	*270-998	SCREW, KNEE CONTROL ASSEMBLY	2
10	270-004	MOUNTS, RUBBER MACHINE	4	36	*058P-8	NUT, LOCK	2
11	270-589/1	CHUTE, WASTE (SHORT)	1	37	*005L-11	SCREW, SET	1
12	270-588	SHIELD, OPERATOR HAND PROTECTOR	1	38	*270-578	LEVER, KNEE CONTROL PUSH	1
13	058M-10	NUT, MACHINE HANGER MOUNTING BOLT	8	39	*270-571	SHAFT, KNEE CONTROL MAIN	1
14	067K-10	WASHER, MACHINE HANGER MOUNTING BOLT	4	40	*270-720	COLLAR, SPRING PRESSURE ADJUSTMENT	1
15	270-971	BOLT, MACHINE HANGER MOUNTING BOLT	4	41	*270-575	SPRING, KNEE CONTROL PRESSURE	1
16	051L-10	NUT, MACHINE HANGER MOUNTING BOLT	4	42	*270-572	BLOCK, KNEE CONTROL LIFTER ROD ATTACHING	1
17	*270-590/1	CHUTE, WASTE (LONG)	1	43	*270-576	LEVER, KNEE CONTROL PUSH	1
18	*270-590/2	CHUTE, WASTE (LEFT)	1	44	*270-581	PIN, KNEE CONTROL LINKAGE	1
19	001g-10	SCREW, WASTE CHUTE ATTACHING	3	45	*270-573	ROD, KNEE CONTROL	1
20	270-586/1	LEVER, FOOT LIFTER	1	46	*270-574	PLATE, KNEE PRESS	1
21	270-584	SUPPORT, FOOT LIFTER LEVER	1	47	*270-582	PAD, KNEE PRESS RUBBER	1
22	065L-6	WASHER, FOOT LIFTER LEVER	3	48	*270-577	LEVER, KNEE CONTROL PUSH	1
23	059H-6	HUT, FOOT LIFTER LEVER SUPPORT	1	49	*6-270-570	KNEE CONTROL ASSEMBLY	1
24	PM270-005/1	MOUNTING TRAY, MACHINE	1	50	*061-C5	WASHER, DIFFERENTIAL ACTIVATING ROD	1
25	G270-005/2	MOUNTING TRAY, MACHINE TRAY ASSEMBLY	1		*270-557	CONNECTOR, DIFFERENTIAL ACTIVATING	1
26	1159	CHAIN, FOOT LIFTER	1		*270-701	SNAP RINGS	1
27	270-553	BUSHING, DIFFERENTIAL ACTIVATING	1		*270-558	PIN	1
		ROD GUIDE	1		*270-552	BUSHING, PLASTIC PROTECTIVE	1

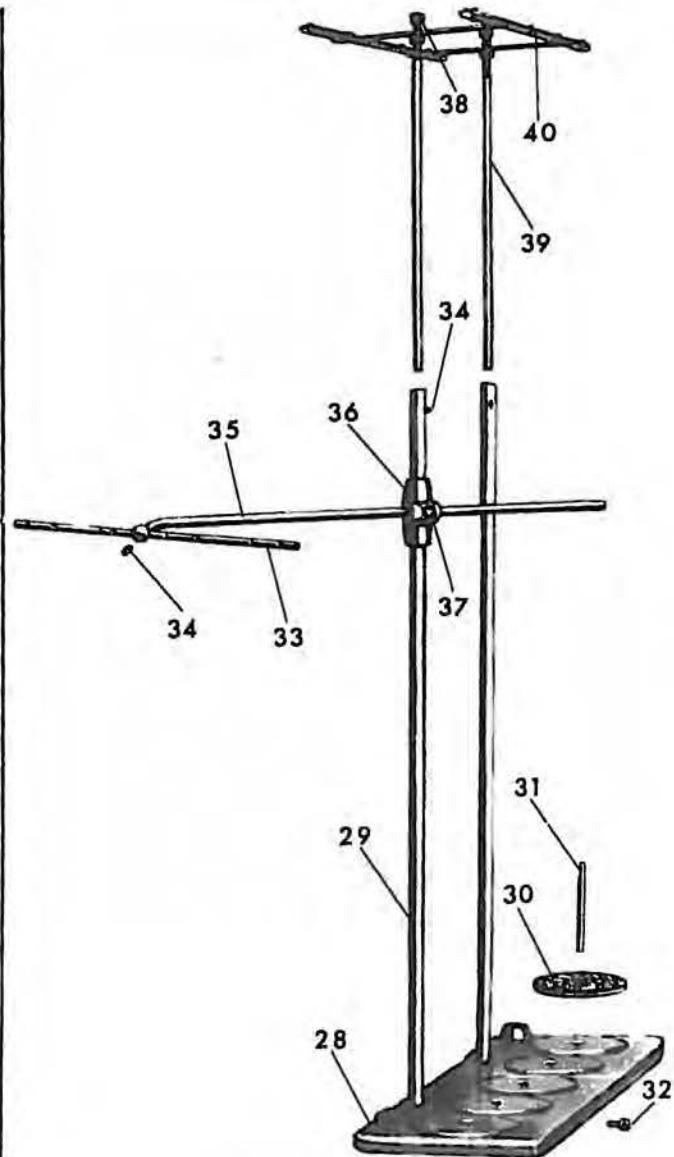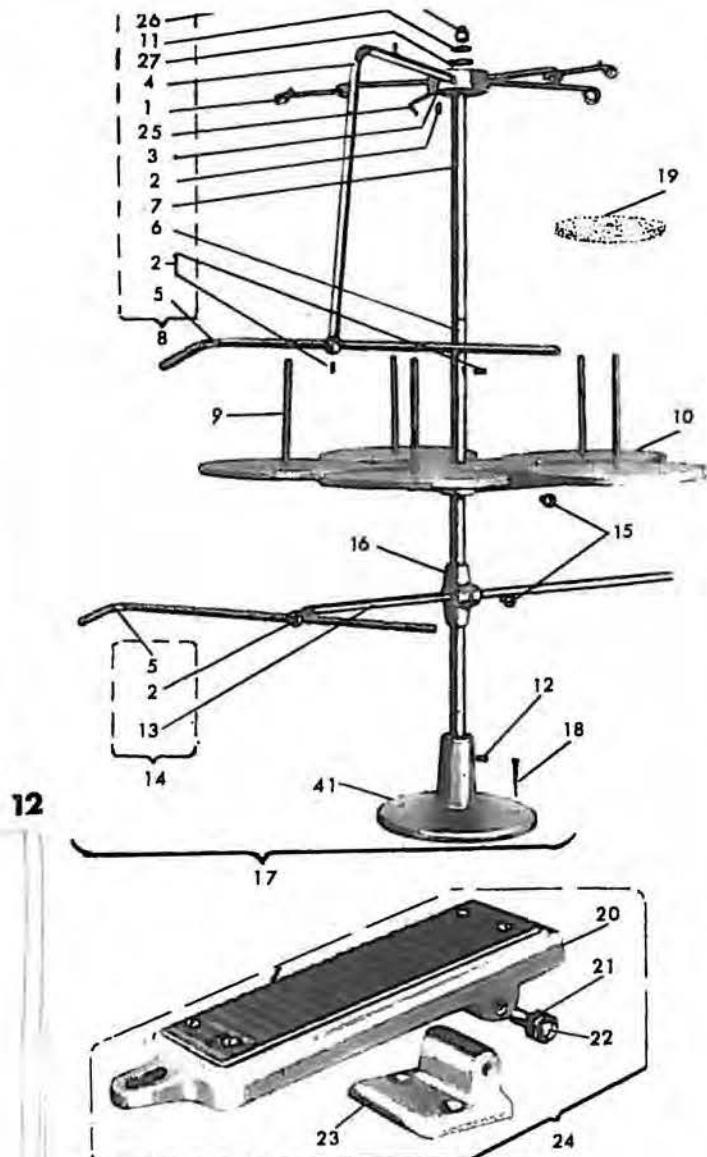

N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	290-134	ROD, THREAD GUIDE	2	23	910-934/1	BASE, PRESSERFOOT LIFTER PEDAL	1
2	016-F-5	SCREWS, THREAD GUIDE ROD HOLDING	8	24	0-910-914/1	PRESSERFOOT LIFTER PEDAL ASSEMBLY	1
3	290-140	BRACKET, THREAD GUIDE ROD ASSEMBLY				COMPLETE	
4	PM 290-148/1	ROD, THREAD GUIDE ROD SUPPORTING (UPPER)	1	25	290-135	THREAD GUIDE	2
5	290-137	ROD, THREAD GUIDE	2	26	290-706	NUT	1
6	250-143	ROD, MAIN LOWER	1	27	290-705	CUP SPRING	1
7	290-130	ROD, MAIN UPPER	1	28	490/2	HOLDER, THREAD ROLLS	1
8	0-290-137	THREAD GUIDE ASSEMBLY	1	29	910-143	ROD, MAIN SUPPORT	2
9	1146	PIN, THREAD SPOOL	5	30	589	PADES, THREAD SPOOL	5
10	290-142	BASE, THREAD SPOOL SUPPORT	1	31	1148	PIN, THREAD SPOOL	5
11	065-H-6	WASHER	1	32	001-G-10	SCREW, THREAD SPOOL BASE SUPPORT	5
12	001-G-12	SCREW, MAIN LOWER ROD HOLDING				ATTACHING	
13	270-158/1	ROD, THREAD GUIDE ROD SUPPORTING (LOWER)	1	33	270-151	THREAD GUIDE ROD	5
14	0-290-157	BASE, THREAD STAND	1	34	016-F-5	SCREW, (HEADLESS)	1
15	605-980	SCREWS	3	35	270-158/1	ROD, THREAD GUIDE ROD SUPPORTING	1
16	605-937	BRACKET, LOWER THREAD GUIDE ROD ATTACHING	1	36	605-937	BRACKET, THREAD GUIDE ROD SUPPORT	1
17	AS. 290-140	THREAD STAND ASSEMBLY, COMPLETE				ATTACHING	
18	T-5 20X30	SCREWS, WOOD	2	37	605-980	SCREW, THREAD GUIDE SUPPORT ROD BRACKET	2
19	589	PAD THREAD SPOOL	5	38	1145	NUT	4
20	PM 910-914	PEDAL, PRESSERFOOT LIFTER	1	39	910-144	ROD, -UPPER THREAD STAND	2
21	053-H-8	NUTS, PRESSERFOOT LIFTER LEVER ATTACHING	2	40	0-497	THREAD GUIDE ASSEMBLY	1
22	910-984	SCREWS, PRESSERFOOT LIFTER LEVER AT-		41	01141	BASE, NEEDLE THREAD STAND	1
		TACHING	2				

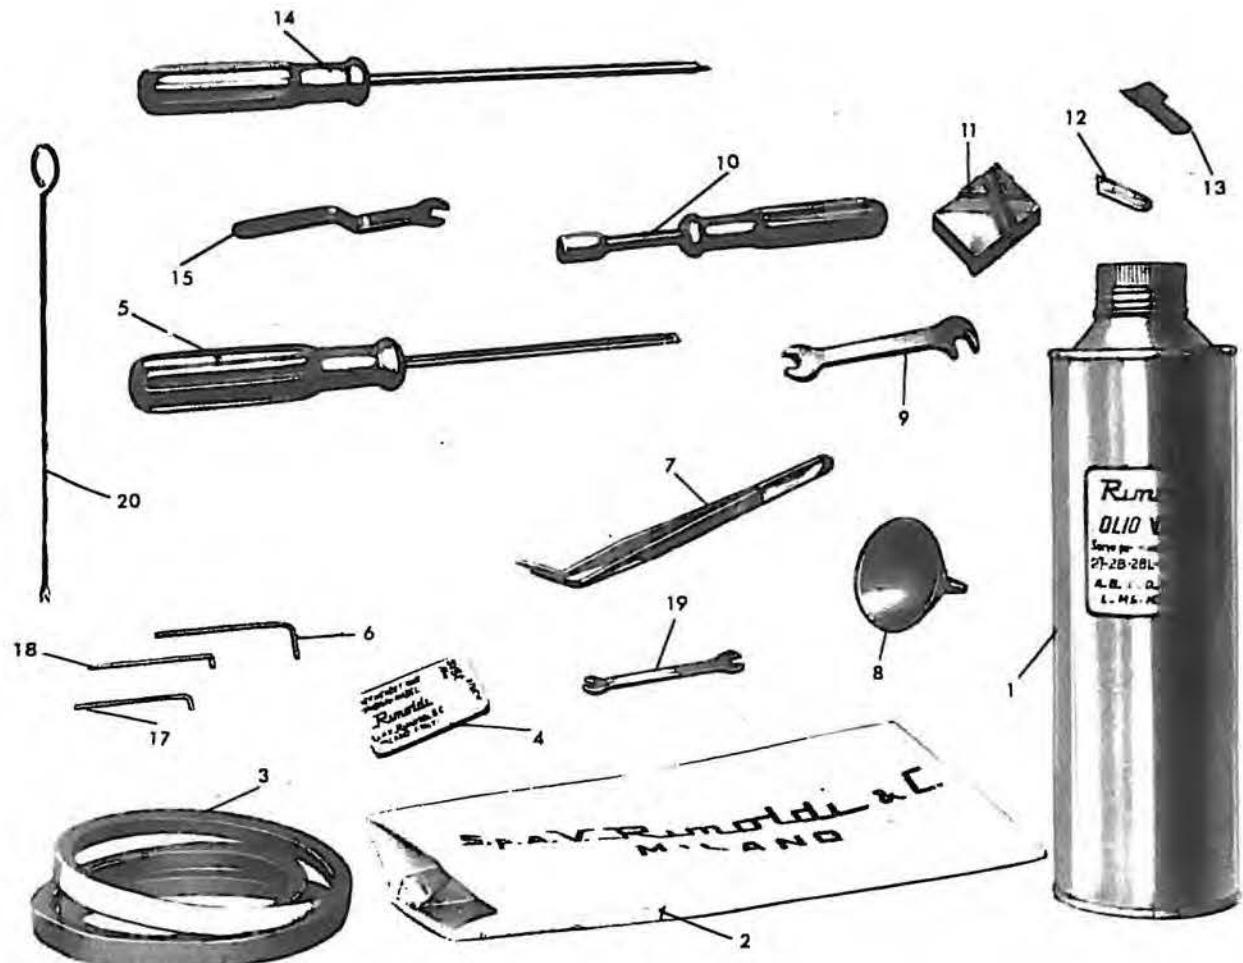

13

15

17

19




21

23

25

27





N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1 2 3 4 5 6 7 8 9 10	V.R. 604 1175 270-155 R.M. 27 D.1.161/2 603-742 1158 270-557 1156/1 270-741	OIL CAN, 1 QUART TERESSO 43 OIL MACHINE COVER V-BELT NEEDLES RIM 27 SCREW DRIVER WRENCH, ALLEN (LOOPER SCREWS) TWEEZER OIL FUNNEL KEY, OPEN END KEY, SOCKET	1 1 1 1 1 1 1 1 1 1	11 12 13 14 15 16 17 18 19 20	290-675 290-113 27.77-1121 01180/2 270-745 270-743 297-746 608-739 603-154	KNIFE SHARPENING BLOCK (RIM MACHINE RAZA) LOWER KNIFE UPPER KNIFE SCREW DRIVER WRENCH (DIFFERENTIAL ADJUSTMENT) KEY, ALLEN (NEEDLE SCREWS) KEY, ALLEN KEY, OPEN END (PRESSERFOOT) THREADING WIRE GUIDE	1 1 1 1 1 1 1 1 1 1

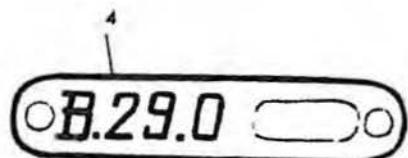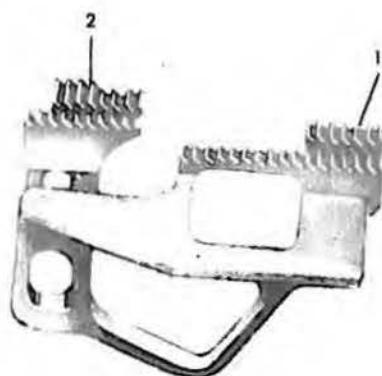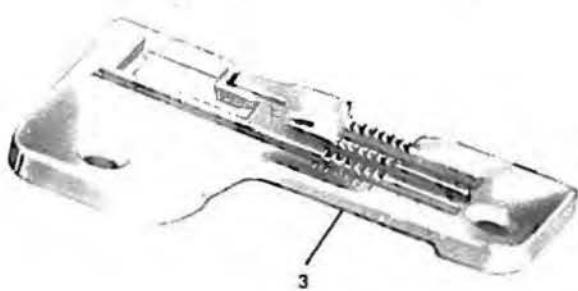

14

N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1 2	280-050 280-051	FEED DOG, FRONT FEED DOG, REAR	1 1	3 4	280-114/1 280-171	NEEDLE PLATE, WIDTH OF EIGHT 7/32 LABEL, MACHINE IDENTIFICATION	1 1

B 29.1 (B 29.7)

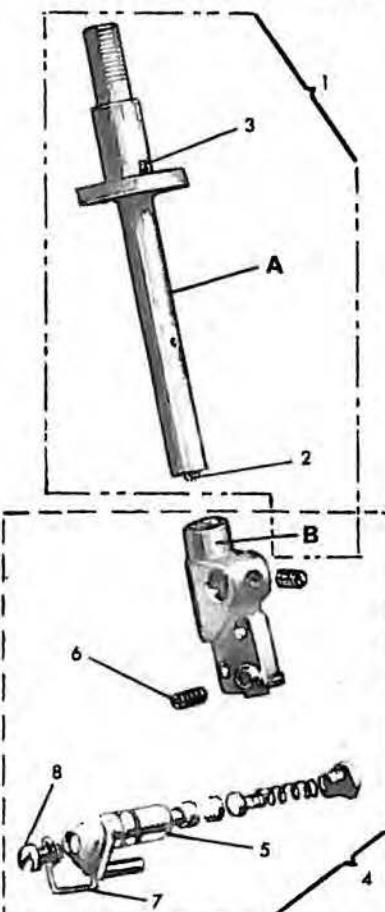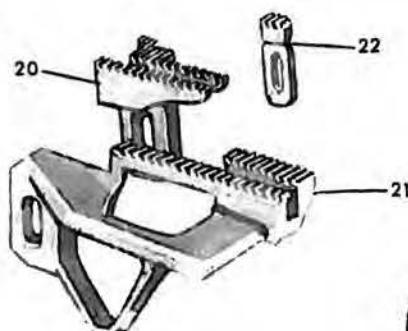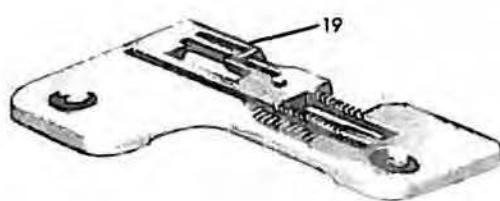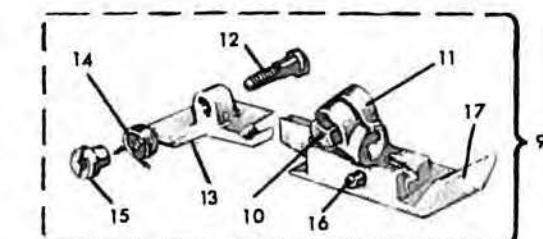

B.29.1

15

N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	6.291.025	NEEDLE GUIDE BAR WITH NEEDLE HOLDER	1	12	297.167	SCREW, PRESSERFOOT	1
2	016-A-25	SCREW	1	13	297.1621	PLATE, PRESSERFOOT CHAINING	
3	297.025/1	NEEDLE GUIDE BAR	1	14	297.184	SPRING, PRESSERFOOT CHAINING PLATE	
4	092-A-10	OIL WICK	1	15	297.195	BUSHING, NEEDLEHOLDER	
5	291.020	NEEDLE HOLDER	1	16	297.179	PIN, PRESSERFOOT	
6	6.291.020	NEEDLE HOLDER, COMPLETE	1	17	291.184	SHOE, PRESSERFOOT	
7	6.290-282/1	TENSION ASSEMBLY, NEEDLE THREAD, COMPLETE	1	18	6.391.171	LABEL, MACHINE IDENTIFICATION	
8	290-844	SCREW, NEEDLE SET	2	19	291.114	NEEDLE PLATE, WIDTH OF EIGHT 5/32 "	
9	280-280	CONNECTION GUIDE, TENSION ASSEMBLY	1	20	291.051	FEED DOG, REAR	
10	004-C-5.5	SCREW, CONNECTION GUIDE TENSION	1	21	291.050	FEED DOG, FRONT	
11	6.291.161/1	PRESSERFOOT, COMPLETE	1	22	291.052	FEED DOG, CHAINING	
	297.905	SCREW					
	297.162	HINGE, PRESSERFOOT HOLDING					

17

19


21

23

25


27

B 29-1B (B29-7)

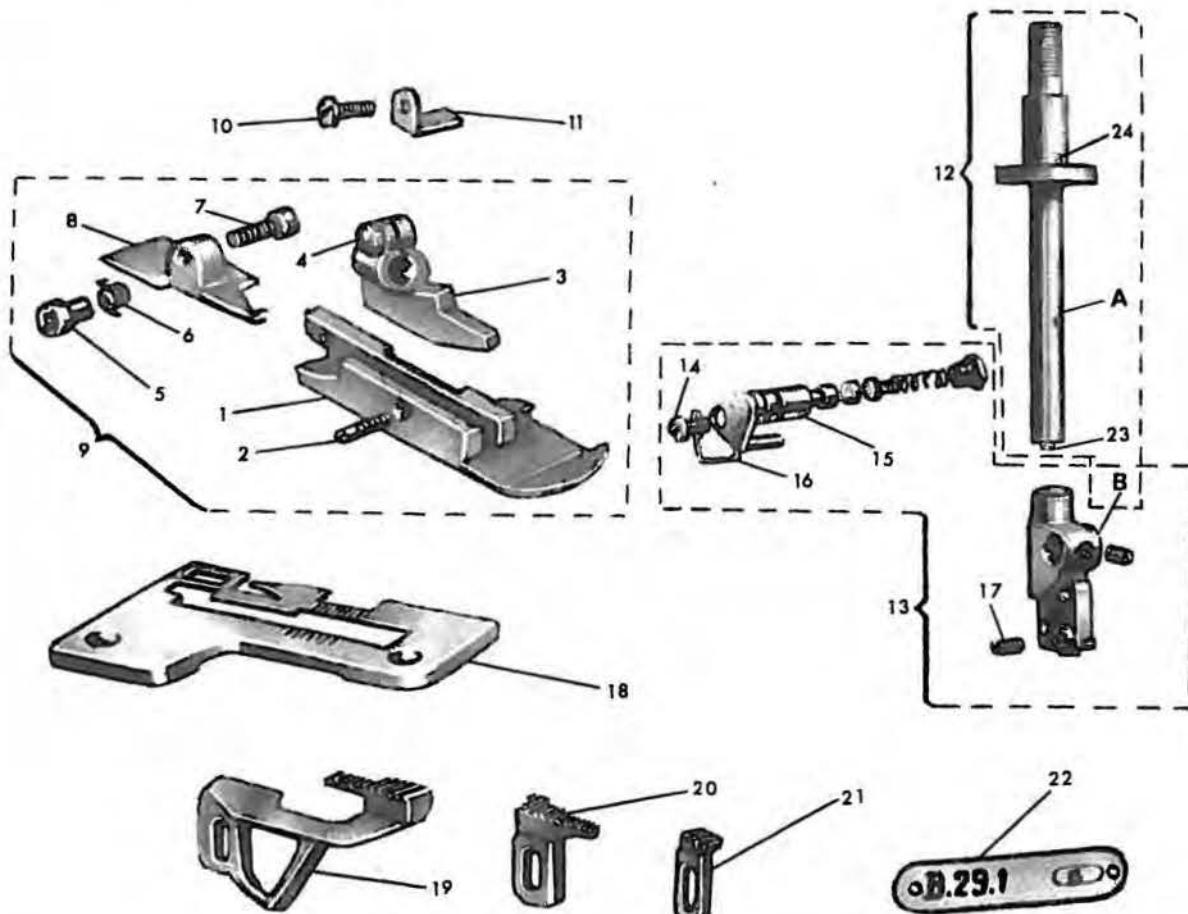

16

N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	291-a-184	SHOE, PRESSERFOOT	1	13	a 291-020	NEEDLE HOLDER WITH TENSION	1
2	291-172	PIN, PRESSERFOOT SHOE	1	14	291-020	NEEDLE HOLDER	1
3	291-a-182	HINGE, PRESSERFOOT HOLDING	1	15	004-C-5 5	SCREW	1
4	291-805	SCREW	1	16	G 290-262/1	PLATE, PRESSERFOOT CHAINING	1
5	291-185	BUSHING, THREADED	1	17	290-280	CONNECTION GUIDE	1
6	291-184	SPRING, PRESSERFOOT SHOE	1	18	290-944	SCREW, NEEDLE SETTING	2
7	291-167	SCREW	1	19	291-a-050	NEEDLE PLATE, WIDTH OF EIGHT 5/32	1
8	291-a-192	TENSION ASSEMBLY, NEEDLE THREAD	1	20	291-a-051	FEED DOG, FRONT	1
9	G 291-a-181/1	PRESSERFOOT, COMPLETE	1	21	291-052	FEED DOG, REAR	1
10	27 01-P-403/1	SCREW, PRESSERFOOT ANGLE STOP	1	22	b-291-177	FEED DOG, CHAINING	1
11	291-a-1861	ANGLE, PRESSERFOOT GUIDE STOP	1	23	016-A-2,5	LABEL, MACHINE IDENTIFICATION	1
12	a 291-025	NEEDLE GUIDE BAR WITH NEEDLE HOLDER	1	24	092-A-10	SCREW	1
A	297-025/1	NEEDLE GUIDE BAR	1			OIL WICK	1

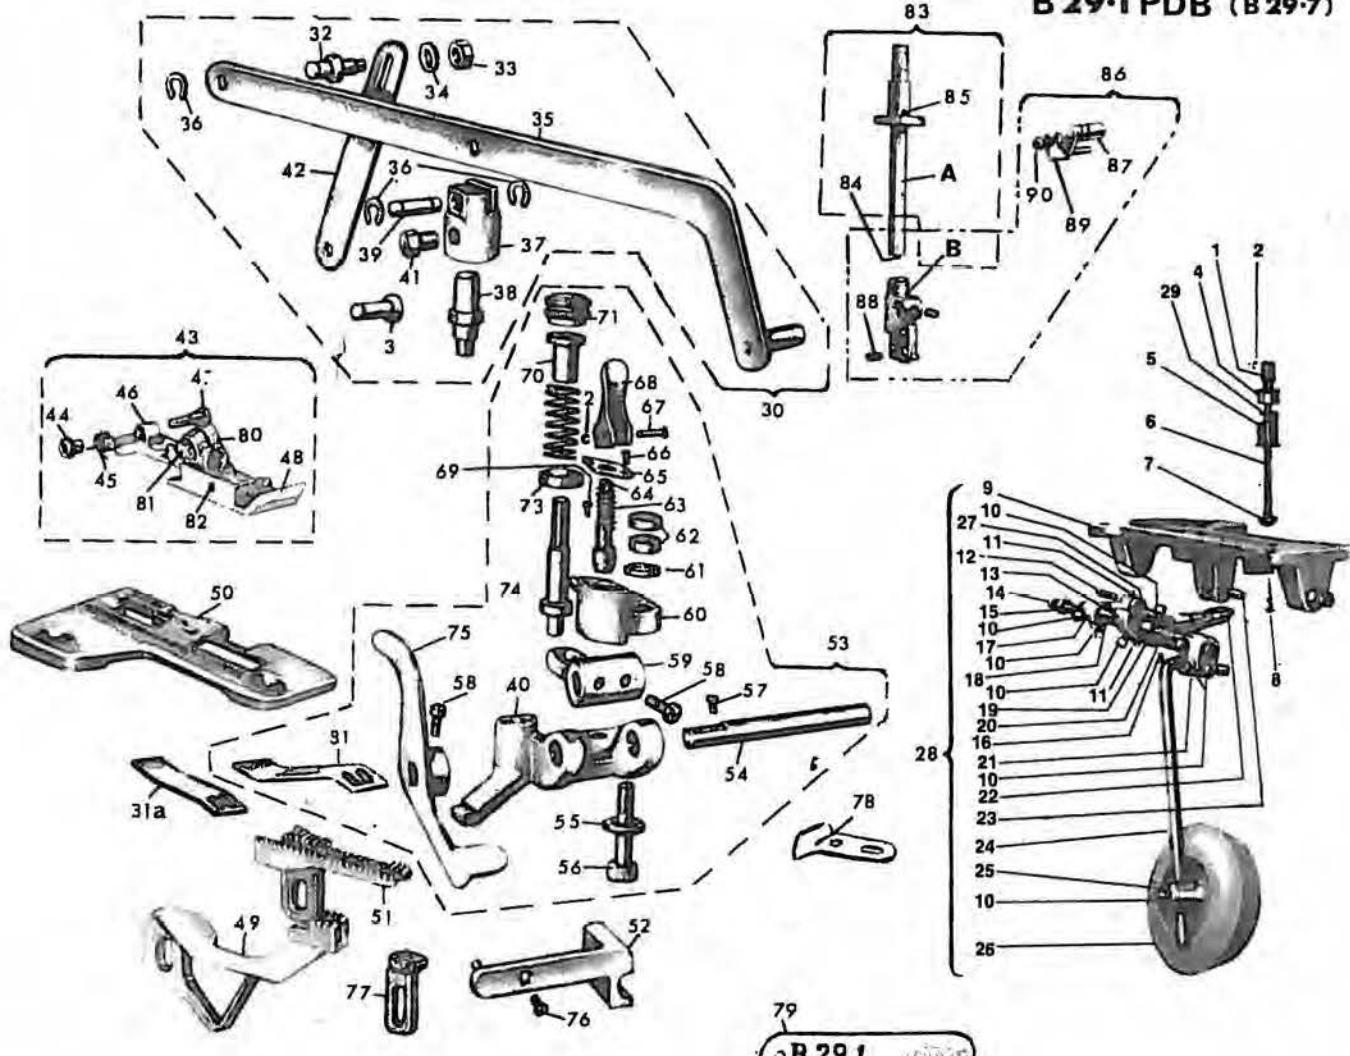

B29.1

N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	270-557	CONNECTOR, DIFFERENTIAL ACTIVATING ROD	1	48	291-PDB-184	SHOE, PRESSERFOOT	1
2	270-701	SHAP. RING	1	49	291-PDB-050	FEED DOG, FRONT	1
3	27.01PDB-558	PIN	1	50	291-PDB-054	NEEDLE PLATE, (WIDTH OF BITE 5/32")	1
4	270-555	BUSHING, PLASTIC PROTECTIVE	1	51	291-PDB-051	FELD DOG, REAR	1
5	270-553	BUSHING, DIFFERENTIAL ACTIVATING ROD	1	52	297PDB-417/1	BLOCK, SHIRRING ATTACHMENT RETAINER	1
6	270-554	GUIDE	1	53	6297PDB-401	SHIRRING ATTACHMENT ASSEMBLY COMPLETE	1
7	270-556/1	SPRING, DIFFERENTIAL ACTIVATING ROD	1	54	297PDB-401	SHAFT, SHIRRING BLADE	1
8	T.3.22295	ROD, DIFFERENTIAL ACTIVATING	1	55	297PDB-403	SHAFT, SHIRRING BLADE (FOR USE ONLY WITH SHIRRING BLADE (297PDB-402))	1
9	270-570	SCREW, WOOD	4	56	065L-6	WASHER	1
10	038H-9	BASE, KNEE CONTROL	1	57	297PDB-418	SCREW, SHIRRING ATTACHMENT ASSEMBLY	1
11	030E-6	SCREW, SET	1	58	004L-6	SCREW, SHIRRING BLADE ATTACHING	2
12	270-580	SCREW, SET	2	59	001E-6	SCREW, SHIRRING BLADE SHAFT SET	4
13	270-578	PISTOL, KNEE CONTROL LINKAGE	2	60	297PDB-407	LEVER, SHIRRING BLADE PRESSURE	1
14	270-898	STOP, KNEE CONTROL	1	61	057P-5	BLOCK, SHIRRING ATTACHMENT MOUNTING	1
15	059P-8	SCREW, KNEE CONTROL ASSEMBLY	2	62	057P-5	WASHER	1
16	005L-11	HUT, LOCK	1	63	297PDB-444	NUT, SHIRRING ATTACHMENT ASSEMBLING	2
17	270-578	SCREW, SET	1	64	297PDB-442	SPRING, LATCH	1
18	270-571	LEVER, KNEE CONTROL PUSH	1	65	297PDB-441	PIN, LATCH	1
19	270-720	SHAFT, KNEE CONTROL MAIN	1	66	028E-5	PLATE, HOLDER	1
20	270-575	COLLAR, SPRING PRESSURE ADJUSTMENT	1	67	270-078	SCREW, HOLDER PLATE ATTACHING	2
21	270-572	SPRING, KNEE CONTROL PRESSURE	1	68	270-094	PIN, LIFTING LATCH HOCKER	1
22	270-578	BLOCK, KNEE CONTROL LIFTER ROD ATTACHING	1	69	039B-8.5	LATCH, RELEASE LIFTER	1
23	270-881	LEVER, KNEE CONTROL PUSH	1	70	1032A	SCREW, SHIRRING ATTACHMENT SETTING	1
24	270-573	PIN, KNEE CONTROL LINKAGE	1	71	160-032	BUSHING, SHIRRING BLADE PRESSURE	1
25	270-574	ROD, KNEE CONTROL	1	72	297PDB-443	SPRING GUIDE	1
26	270-582	PLATE, KNEE PRESS	1	73	240-035	NUT, SHIRRING BLADE PRESSURE SPRING	1
27	270-577	LEVER, KNEE CONTROL PUSH	1	74	180-030	ADJUSTING	1
28	270-570	KNEE CONTROL ASSEMBLY	1	75	PM297PDB-406	SPRING, SHIRRING BLADE PRESSURE	1
29	064E-5	WASHER, DIFFERENTIAL ACTIVATING ROD	1	76	001B-7	WASHER	1
30	297PDB-515	SHIRRING BLADE LIFTER LEVER LINKAGE	1	77	291-052	STUD, SHIRRING BLADE PRESSURE	1
31	297PDK-402	ASSEMBLY COMPLETE	1	78	291/PDB-110	LEVER, SHIRRING BLADE LIFTER	1
32	297PDB-518	SHIRRING BLADE (OFFSET)	1	79	6-281-171	SCREW, SHIRRING ATTACHMENT RETAINER	1
33	297PDB-518	SHIRRING BLADE (STRAIGHT)	1	80	297-182	BLOCK ATTACHING	1
34	053B-4	PIN, SHIRRING BLADE LIFTER LEVER HINGE	1	81	297-900	FEED DOG, CHAINING	1
35	070E-1	NUT	1	82	297-178	HANDLE, QUADRANT	1
36	270-702	LEVER, SHIRRING BLADE LIFTER	3	83	6-281-025	LABEL, IDENTIFICATION	1
37	27.01PDB-517	SHAFT, RING	1	84	016-A-2-5	HOLDER, PRESSERFOOT	1
38	27.01PDB-519	YOKO, SHIRRING BLADE LIFTER LEVER	1	85	287-025/1	SCREW, PRESSERFOOT	1
39	27.01PDB-520	STUD, LIFTING LEVER MOUNTING	1	86	G-291-020	NEEDLE GUIDE BAR AND CHUCK	1
40	297PDB-401	PIN, LIFTING LEVER ROCKER	1	87	G-291-020	SCREW, SET	1
41	038C-7	BASE, SHIRRING ATTACHMENT	1	88	290-944	NEEDLE GUIDE BAR	1
42	27.01PDB-518	SCREW, SHIRRING BLADE LIFTER KNEE	1	89	290-000	OIL WICK	1
43	6-291-PDB-181/1	YOKO ATTACHING	1	90	004-C-5.5	NEEDLE HOLDER	1
44	297-185	LINK, SHIRRING BLADE LIFTER LEVER	1	91	G-291-020	NEEDLE HOLDER, COMPLETE	1
45	297-184	PRESSERFOOT ASSEMBLY COMPLETE	1	92	290-262/1	NEEDLE THREAD TAKE UP COMPLETE	1
46	297-184	BUSHING, THREADED	1	93	290-944	SCREWS, NEEDLE SET	1
47	297-127	SPRING, PRESSERFOOT SHIELD	1	94	290-000	CONNECTION GUIDE	1
		HINGE, PRESSERFOOT ATTACHING	1	95	004-C-5.5	SCREW, NEEDLE HOLDER	1
		SCREW, PRESSERFOOT SHIELD SPRING	1	96			

17

19


21

23

25


27

B 29.1 PDBO (B 29.7)

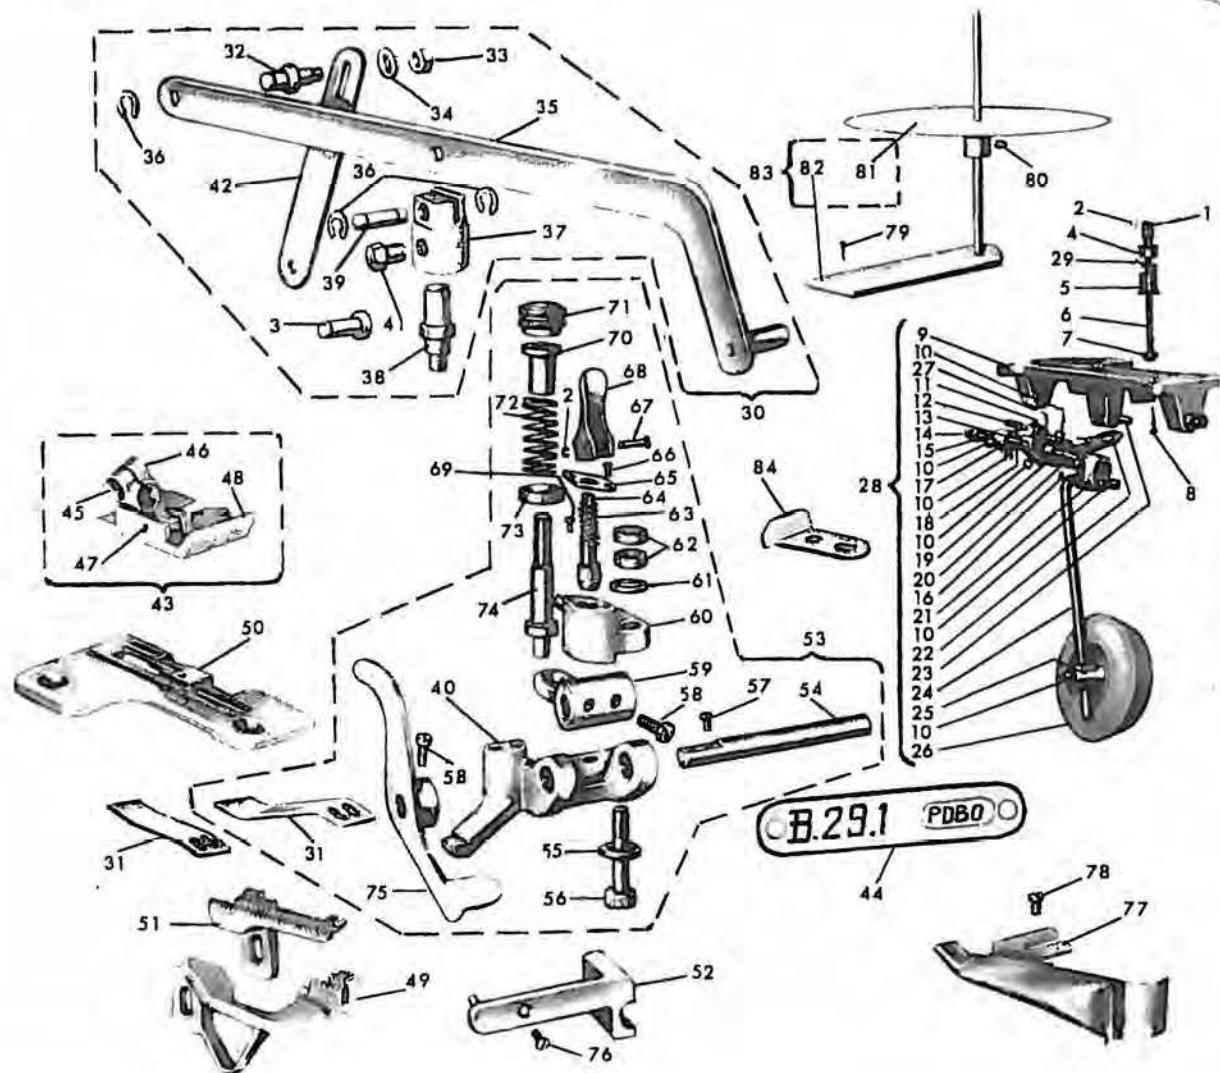


18

N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	270-557	CONNECTOR, DIFFERENTIAL ACTIVATING ROD	1	44	B.29.1-171	LABEL, MACHINE IDENTIFICATION	1
2	270-701	SNAP RING	1	45	297-906	SCREW	1
3	27.01PDB-558	PIN	1	46	297-182	HINGE, PRESSERFOOT ATTACHING	1
4	270-552	BUSHING, PLASTIC PROTECTIVE	1	47	297-179	PIN, PRESSERFOOT SHOE	1
5	270-553	BUSHING, DIFFERENTIAL ACTIVATING ROD	1	48	291-PDB-084	SHOE, PRESSERFOOT	1
6	270-554	GUIDE, SPRING, DIFFERENTIAL ACTIVATING ROD	1	49	291-PDB-050	FEED DOG, FRONT	1
7	270-556/1	GUIDE, ROD, DIFFERENTIAL ACTIVATING	1	50	297-PDB-114	FEED DOG, REAR	1
8	T.S. 22x35	SCREW, WOOD	1	51	291-PDB-051	NEEDLE PLATE, (WIDTH OF EIGHT 9/32")	1
9	270-570	BASE, KNEE CONTROL	1	52	PM2701PD-417/1	BLOCK, SHIRRING ATTACHMENT RETAINER	1
10	038M-9	SCREW, SET	1	53	297PDB-401	SHIRRING ATTACHMENT ASSEMBLY COMPLETE	1
11	005G-6	SCREW, SET	1	54	297PDB-403	SHAFT, SHIRRING BLADE	1
12	270-580	PIN, XKNEE CONTROL LINKAGE	2	55	297PDB-4031	SHAFT, SHIRRING BLADE (FOR USE ONLY WITH SHIRRING) BLADE (297PDB-402)	1
13	270-579	STOP, KNEE CONTROL	1	56	065L-6	WASHER	1
14	270-598	SCREW, KNEE CONTROL ASSEMBLY	1	57	297PDB-418	SCREW, SHIRRING ATTACHMENT ASSEMBLY	1
15	059P-8	NUT, LOCK	1	58	004L-8	SCREW, SHIRRING BLADE ATTACHING	1
16	005L-11	SCREW, SET	1	59	001E-6	SCREW, SHIRRING BLADE SHAFT SET	1
17	270-578	LEVER, KNEE CONTROL PUSH	1	60	297PDB-407	LEVER, SHIRRING BLADE PRESSURE	1
18	270-571	SHAFT, KNEE CONTROL MAIN	1	61	084G-5	BLOCK, SHIRRING ATTACHMENT MOUNTING	1
19	270-720	COLLAR, SPRING PRESSURE ADJUSTMENT	1	62	057P-5	WASHER	1
20	270-575	SPRING, KNEE CONTROL PRESSURE	1	63	297PDB-444	NUT, SHIRRING ATTACHMENT ASSEMBLING	2
21	270-572	BLOCK, KNEE CONTROL LIFTER ROD ATTACHING	1	64	297PDB-442	SPRING, LATCH	1
22	270-576	LEVER, KNEE CONTROL PUSH	1	65	297PDB-441	PIN, LATCH	1
23	270-581	PIN, KNEE CONTROL LINKAGE	1	66	028B-5	PLATE, HOLDER	1
24	270-573	ROD, KNEE CONTROL	1	67	270-078	SCREW, HOLDER PLATE ATTACHING	2
25	270-574	PLATE, KNEE PRESS	1	68	270-094	PIN, LIFTING LATCH ROTKER	1
26	270-582	PAD, KNEE PRESS	1	69	039B-8.5	LATCH, RELEASE LIFTER	1
27	270-577	LEVER, KNEE CONTROL PUSH	1	70	1032A	SCREW, SHIRRING ATTACHMENT SETTING	1
28	G270-570	KNEE CONTROL ASSEMBLY	1	71	180-032	BUSHING, SHIRRING BLADE PRESSURE	1
29	064E-5	WASHER, DIFFERENTIAL ACTIVATING ROD	1	72	297PDB-443	SPRING, SHIRRING BLADE PRESSURE	1
30	297PDB-515	SHIRRING BLADE LIFTER LEVER LINKAGE ASSEMBLY COMPLETE	1	73	240-035	WASHER	1
31	297PDB-402	SHIRRING BLADE (OFFSET)	1	74	180-030	STUD, SHIRRING BLADE PRESSURE	1
31A	297PDB-4021	SHIRRING BLADE (STRAIGHT)	1	75	PM 297PDB-408	LEVER, SHIRRING BLADE LIFTER	1
32	27.0IPDB-518	PIN SHIRRING BLADE LIFTER LEVER HINGE	1	76	001-D-7	SCREW, SHIRRING ATTACHMENT RETAINER BLOCK ATTACHING	1
33	053B-4	HUB	1	77	PM 297PDB-413	GUIDE, CORD (5/64")	1
34	P 297PDB-515	LEVER, SHIRRING BLADE LIFTER	1	78	PM 297PDB-4131	GUIDE, CORD (1/8")	1
35	270-702	SNAP RING	1	79	001-E-7	SCREW, GUIDE ATTACHING	2
37	27.0IPDB-517	YOKEL, SHIRRING BLADE LIFTER LEVER	1	80	TS 20X30	WOOD SCREW, BINDING HOLDER ASSEMBLY TO TABLE ATTACHING	2
38	27.0IPDB-519	STUD, LIFTING LEVER MOUNTING	1	81	017-E-7	SCREW, SET BINDING ROLL SUPPORT DISC	2
39	27.0IPDB-518	PIN, LIFTING LEVER ROCKER	1	82	PM 270PDS0142	BINDING ROLL SUPPORT DISC, COMPLETE	1
40	297PDB-520	BASE, SHIRRING ATTACHMENT	1	83	PM 602-141/1	BINDING ROLL HOLDER BASE	1
41	038C-7	SCREW, SHIRRING BLADE LIFTER KNEE	1	84	0.27-28PDS08375	BINDING ROLL HOLDER STAND, COMPLETE	1
42	27.0IPDB-516	YOKEL, SHIRRING BLADE LIFTER LEVER	1	85	291-PDB-110	NEEDLE GUARD, FRONT	1
43	G.291-PDB0181/1	PRESSERFOOT ASSEMBLY COMPLETE	1				

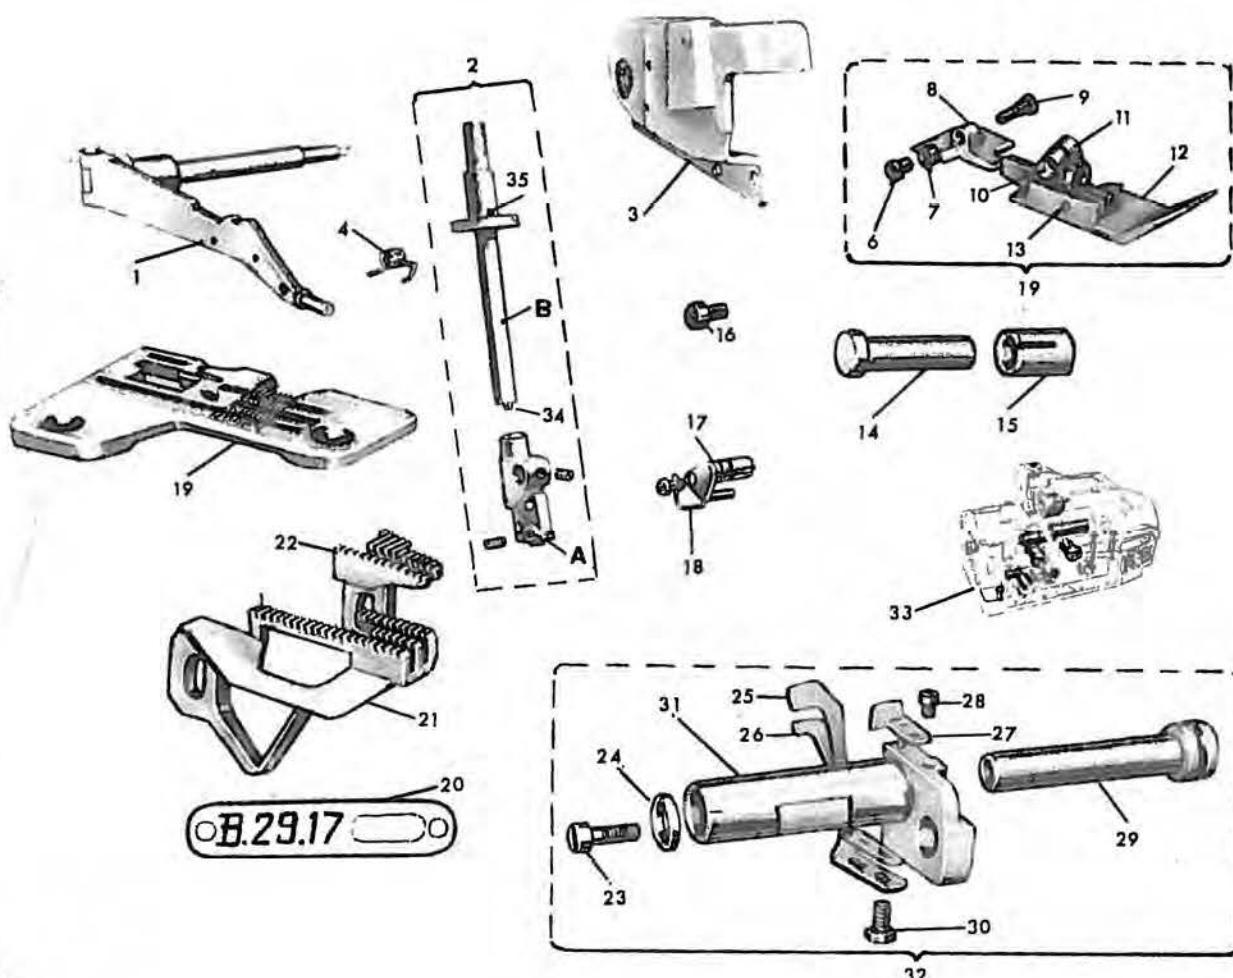


N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	G 29.17-0761	LEVER, PRESSERFOOT LIFTER	1	18	29.17-280	CONNECTING GUIDE, THREAD GUIDE	
2	G 29.17-025	NEEDLE GUIDE BAR WITH NEEDLE HOLDER	1	19	29.17-114/1	NEEDLE PLATE (WIDTH OF EIGHT 13/32")	
A	29.17-020/1	NEEDLE HOLDER	1	20	29.17-171	LABEL, MACHINE IDENTIFICATION	
B	287-025/1	NEEDLE GUIDE BAR	1	21	29.17-050	FEED, DOG, FRONT	
3	PM. 29.17-208/1	COVER, NEEDLE MOVEMENT ASSEMBLY	1	22	29.17-051	FEED DOG, FRONT	
4	29.17-190/1	SPRING, PRESSERFOOT PRESSURE	1	23	007-F-10	FEED DOG, REAR	
5	G 29.17-161/1	PRESSERFOOT COMPLETE	1	24	071-p-5	FEED DOG, REAR	
6	297-195	BUSHING, THREADED	1	25	297-107	SCREW	
7	297-194	SPRING	1	26	29.17-109	WASHER	
8	29.17-1921	PLATE, PRESSERFOOT CHAINING GUIDE	1	27	29.17-110	NEEDLE GUARD, FRONT	
9	297-187	SCREW	1	28	004-F-4	NEEDLE GUARD, REAR	
10	29.17-186	SCREW	1	29	290-105	NEEDLE GUARD, FRONT	
11	29.17-182	HINGE, PRESSERFOOT HOLDING	1	30	039-A-6	SCREW	
12	29.17-1841	SHOE, PRESSERFOOT	1	31	PM. 290-104	PIN, LOWER KNIFE LOCKING	
13	297-179	PIN, PRESSERFOOT SHOE	1	32	G 29.17-104	SCREW	
14	PM. 29.17-138	PIN, NEEDLE LEVER ROCKER	1	33	G 29.17-002	LOWER KNIFE HOLDER	
15	29.17-132	BUSHING, NEEDLE LEVER ROCKER PIN	1	34	016-A-2,5	LOWER KNIFE HOLDER, COMPLETE	
16	005-N-7	SCREW, UPPER NEEDLE MOVEMENT SHAFT	1	35	092-A-1Q	MACHINE BASE, COMPLETE	
17	G 29.17-262/1	TENSION ASSEMBLY, NEEDLE THREAD, COMPLETE	1			SCREW, SET	
						OIL WICK	

B29-17 PDB (B29-7)

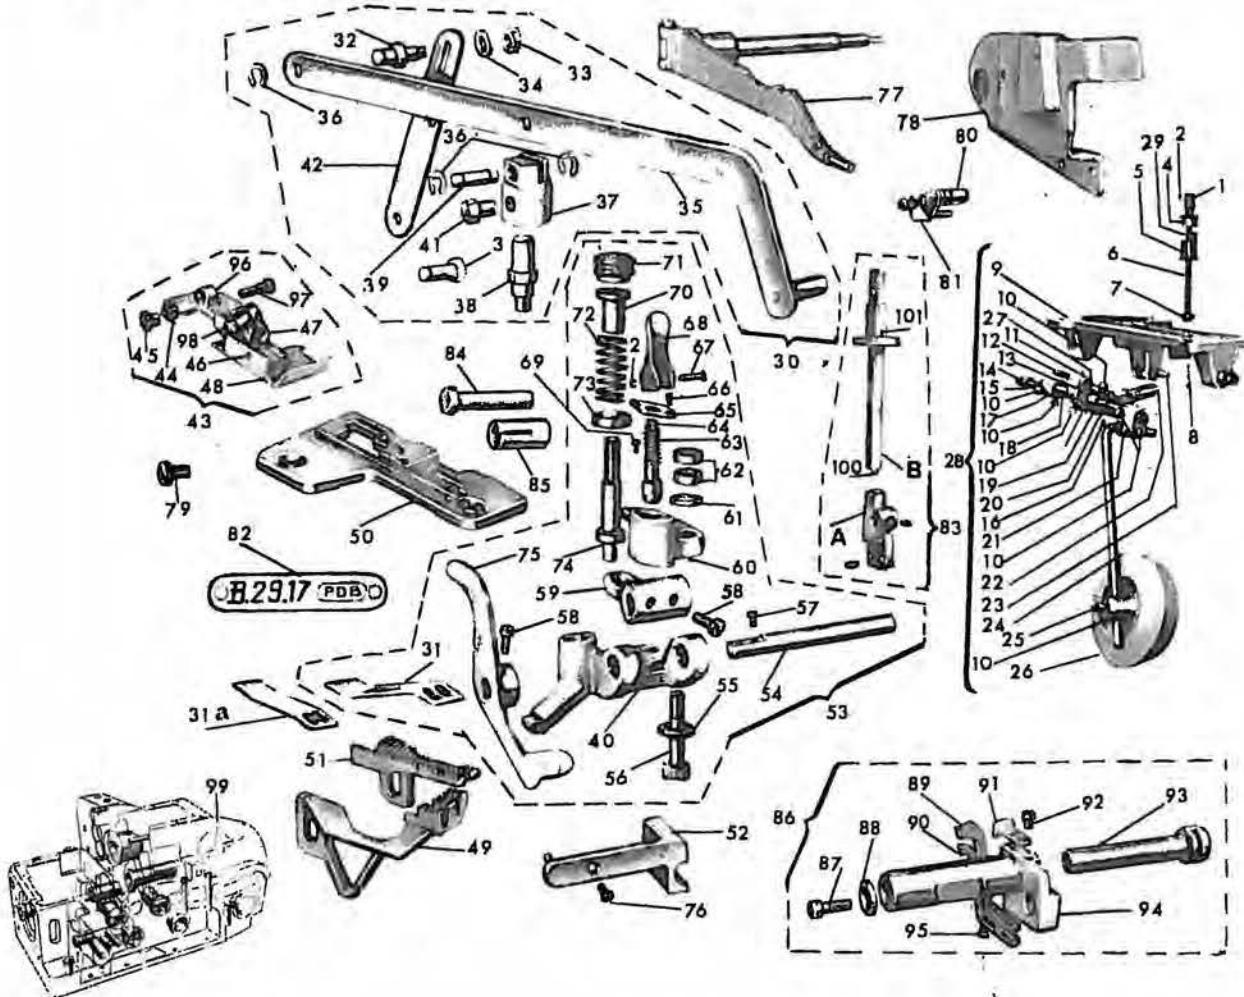




20

N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	270-557	CONNECTOR, DIFFERENTIAL ACTIVATING ROD	1	53	G297P08-401	SHIRRING ATTACHMENT ASSEMBLY COMPLETE	1
2	270-701	SNAP RING	1	54	297P08-403	SHAFT, SHIRRING BLADE	1
3	27.01P08-598	PIN	1	55	297P08-4031	SHAFT, SHIRRING BLADE (FOR USE ONLY WITH SHIRRING BLADE (297P08-402))	1
4	270-552	BUSHING, PLASTIC PROTECTIVE	1	56	085L-6	WASHER	1
5	270-553	BUSHING, DIFFERENTIAL ACTIVATING ROD	1	56	297P08-418	SCREW, SHIRRING ATTACHMENT ASSEMBLY	1
6	270-554	GUIDE, SPRING, DIFFERENTIAL ACTIVATING ROD	1	56	004L-6	SCREW, SHIRRING BLADE ATTACHING	2
7	270-556/1	GUIDE	1	58	001E-6	SCREW, SHIRRING BLADE SHAFT SET	4
8	T.2-2-335	SCREW, WOOD	1	59	297P08-407	LEVER, SHIRRING BLADE PRESSURE	1
9	270-570	BASE, KNEE CONTROL	1	60	297P08-408	BLOCK, SHIRRING ATTACHMENT MOUNTING	1
10	038M-50	SCREW, SET	1	61	0840-5	WASHER	1
11	038G-8	SCREW, SET	1	62	057P-5	NUT, SHIRRING ATTACHMENT ASSEMBLING	2
12	270-580	PIN, KNEE CONTROL LINKAGE	1	63	297P08-444	SPRING, LATCH	1
13	270-579	STOP, KNEE CONTROL	1	64	297P08-442	PIN, LATCH	1
14	270-588	STOP, KNEE CONTROL ASSEMBLY	1	65	297P08-441	PLATE, HOLDER	1
15	059P-8	HANDLE, LOCK	1	66	0288-5	SCREW, HOLDER PLATE ATTACHING	2
16	005L-11	SCREW, SET	1	67	270-078	PIN, LIFTING LATCH ROCKER	1
17	270-576	LEVER, KNEE CONTROL PUSH	1	68	270-094	LATCH, RELEASE LIFTER	1
18	270-571	SHAFT, KNEE CONTROL MAIN	1	69	039R-8-5	SCREW, SHIRRING ATTACHMENT SETTING	1
19	270-720	COLLAR, SPRING PRESSURE ADJUSTMENT	1	70	1032A	BURNING, SHIRRING BLADE PRESSURE	1
20	270-575	SPRING, KNEE CONTROL PRESSURE	1	71	160-032	SPRING GUIDE	1
21	270-572	BLOCK, KNEE CONTROL LIFTER ROD ATTACHING	1	72	297P08-443	NUT, SHIRRING BLADE PRESSURE SPRING ADJUSTING	1
22	270-578	LEVER, KNEE CONTROL PUSH	1	73	240-035	SPRING, SHIRRING BLADE PRESSURE	1
23	270-581	PIN, KNEE CONTROL LINKAGE	1	74	160-030	STUD, SHIRRING BLADE PRESSURE	1
24	270-573	ROD, KNEE CONTROL	1	75	F297P08-406	LEVER, SHIRRING BLADE LIFTER	1
25	270-574	PLATE, KNEE PRESS	1	76	001-F-7	SCREW, SHIRRING ATTACHMENT RETAINER	1
26	270-582	PAD, KNEE PRESS	1	77	G.28.17-0761	BLOCK, ATTACHING	1
27	270-577	LEVER, KNEE CONTROL PUSH	1	78	FM 2817-208/1	LEVER, PRESSERFOOT R/F	1
28	G270-570	KNEE CONTROL ASSEMBLY	1	79	005-M-7	COVER, NEEDLE MOVEMENT ASSEMBLY	1
29	054E-5	WASHER, DIFFERENTIAL ACTIVATING ROD	1	80	G.2917-282.1	SCREW, UPPER NEEDLE MOVEMENT SHAFT TENSION ASSEMBLY, NEEDLE THREAD, COMPLETE	1
30	G297P08-515	SHIRRING BLADE LIFTER LEVER LINKAGE ASSEMBLY COMPLETE	1	81	29.17-280	CONNECTING GUIDE, THREAD GUIDE	1
31	297P08-402	SHIRRING BLADE (OFFSET)	1	82	6.29.17-171	LABEL, MACHINE IDENTIFICATION	1
31A*	297P08-4021	SHIRRING BLADE (STRAIGHT)	1	83	6.29.17-025	NEEDLE GUIDE BAR WITH NEEDLE HOLDER	1
32	27.01P08-518	PIN SHIRRING BLADE LIFTER LEVER HINGE	1	84	FM 29.17-138	PIN, NEEDLE LEVER ROCKER	1
33	053D-4	HUT	1	85	29.17-132	BUSHING, NEEDLE LEVER ROCKER PIN	1
34	070F-4	WASHER	1	86	G.29.17-104	KNIFE HOLDER, LOWER, COMPLETE	1
35	F297P08-515	LEVER, SHIRRING BLADE LIFTER	1	87	007-F-10	SCREW, LOWER KNIFE HOLDER ASSEMBLY	1
36	270-702	SNAP RING	1	88	071-0-5	WASHER	1
37	27.01P08-517	YOKO, SHIRRING BLADE LIFTER LEVER	1	89	29.17-107	NEEDLE GUARD, FRONT	1
38	27.01P08-519	STUD, LIFTING LEVER MOUNTING	1	90	29.17-108	NEEDLE GUARD, REAR	1
39	27.01P08-520	PIN, LIFTING LEVER ROCKER	1	91	29.17-110	NEEDLE GUARD, FRONT	1
40	297P08-401	BASE, SHIRRING ATTACHMENT	1	92	004-F-4	SCREW, NEEDLE GUARD ATTACHING	1
41	038C-7	SCREW, SHIRRING BLADE LIFTER KNEE ATTACHING	1	93	290-105	PIN, LOWER KNIFE LOOKING	1
42	27.01P08-516	LINK, SHIRRING BLADE LIFTER LEVER	1	94	FM 290-104	LOWER KNIFE HOLDER	1
43	G.2917-P08-18/1	PRESSERFOOT ASSEMBLY COMPLETE	1	95	039-A-8	SCREW, NEEDLE GUARD ATTACHING	2
44	297-194	SPRING, PRESSERFOOT SHIELD	1	96	29.17-1921	PLATE, PRESSERFOOT, CHAINING	1
45	297-195	BUSHING, THREADED	1	97	297-187	SCREW	1
46	87.17-18	SHOE, PRESSERFOOT	1	98	297-006	SCREW	1
47	29.17-182	HINGE, PRESSERFOOT ATTACHING	1	99	G.29.17-002	MACHINE BASE, COMPLETE	1
48	297-178-184	SHOE, PRESSERFOOT	1	100	016-A-2.5	SCREW, SET (NEEDLE GUIDE BAR)	1
49	2917-P08-187	FEED DOG, FRONT	1	101	297-025/1	SCREW, SET (NEEDLE GUIDE BAR)	1
50	2917-P08-188	FEED DOG, MIDDLE	1			SCREW, SET (NEEDLE GUIDE BAR)	1
51	2917-P08-051	FEED DOG, REAR	1			SCREW, SET (NEEDLE GUIDE BAR)	1
52	F297P08-417/1	BLOCK, SHIRRING ATTACHMENT RETAINER	1			SCREW, SET (NEEDLE GUIDE BAR)	1

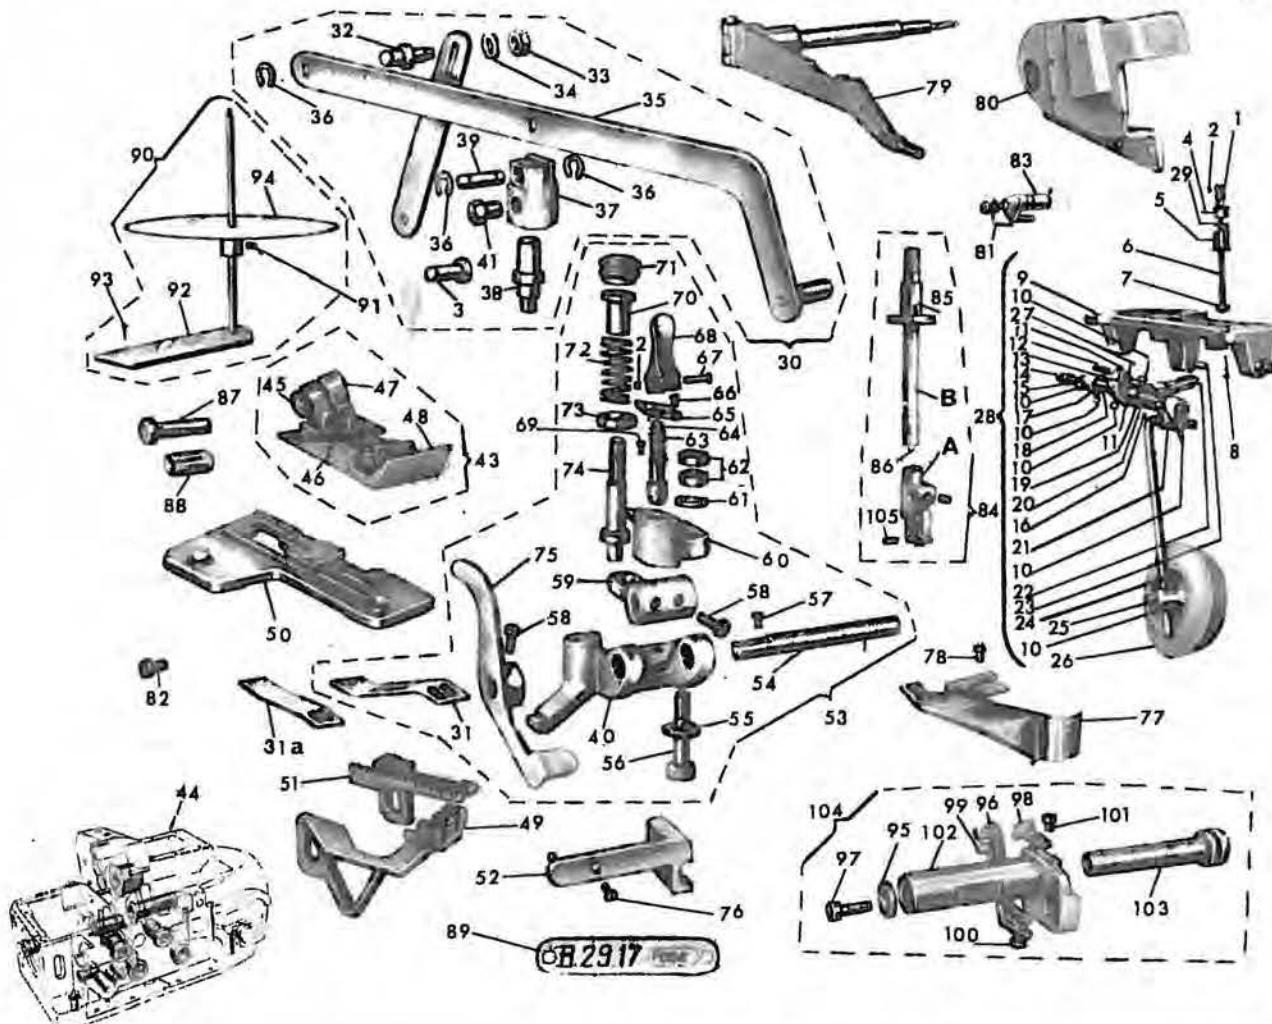


N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	270-557-	CONNECTOR, DIFFERENTIAL ACTIVATING ROD	1	1	297PDB-403	SHAFT, SHIRRING BLADE (FOR USE ONLY WITH SHIRRING BLADE "297-PDB-492")	1
2	270-701	SHAP RING	1	55	065L-6	WASHER	1
3	27.01PDB-558	PIN	1	56	297PDB-418	SCREW, SHIRRING ATTACHMENT ASSEMBLY	1
4	270-552	BUSHING, PLASTIC PROTECTIVE	1	57	004L-6	SCREW, SHIRRING BLADE ATTACHING	2
5	270-553	BUSHING, DIFFERENTIAL ACTIVATING ROD	1	58	001E-6	SCREW, SHIRRING BLADE SHAFT SET	4
6	270-554	SPRING, DIFFERENTIAL ACTIVATING ROD	1	59	297PDB-407	LEVER, SHIRRING BLADE PRESSURE	1
7	270-556/1	GUIDE	1	60	297PDB-408	BLOCK, SHIRRING ATTACHMENT MOUNTING	1
8	T-5-22X35	ROD, DIFFERENTIAL ACTIVATING	1	61	064B-5	WASHER	1
9	270-570	SCREW, WOOD	1	62	057P-5	NUT, SHIRRING ATTACHMENT ASSEMBLING	2
10	038W-9	SCREW, KNEE CONTROL	1	63	297PDB-444	SPRING, LATCH	1
11	005E-6	SCREW, SET	1	64	297PDB-442	PIN, LATCH	1
12	270-560	PIN, KNEE CONTROL LINKAGE	1	65	297PDB-441	PLATE, HOLDER	1
13	270-579	STOP, KNEE CONTROL	1	66	028B-5	SCREW, HOLDER PLATE ATTACHING	2
14	270-598	SCREW, KNEE CONTROL ASSEMBLY	1	67	270-078	PIN, LIFTING LATCH ROCKER	1
15	059R-8	NUT, LOCK	1	68	270-094	LATCH, RELEASE LIFTER	1
16	005R-8	SCREW, SET	1	69	039R-B-5	SCREW, SHIRRING ATTACHMENT SETTING	1
17	270-578	LEVER, KNEE CONTROL PUSH	1	70	1032A	BUSHING, SHIRRING BLADE PRESSURE	1
18	270-371	SHAFT, KNEE CONTROL MAIN	1	71	160-032	NUT, SHIRRING BLADE PRESSURE SPRING	1
19	270-720	COLLAR, SPRING PRESSURE ADJUSTMENT	1	72	297PDB-443	ADJUSTING SPRING, SHIRRING BLADE PRESSURE	1
20	270-575	SPRING, KNEE CONTROL PRESSURE	1	73	160-035	WASHER	1
21	270-572	BLOCK, KNEE CONTROL LIFTER ROD AT-	1	74	160-030	STUD, SHIRRING BLADE PRESSURE	1
		TACHING	1	75	PM297PDB-406	LEVER, SHIRRING BLADE LIFTER	1
22	270-576	LEVER, KNEE CONTROL PUSH	1	76	001-O-7	SCREW, SHIRRING ATTACHMENT RETAINER	1
23	270-581	PIN, KNEE CONTROL LINKAGE	1	77	PM297/PDB0-413	BLOCK, ATTACHING	1
24	270-573	ROD, KNEE CONTROL	1	78	001-E-7	GUIDE, CORD (5/64").	1
25	270-574	PLATE, KNEE PRESS	1	79	G-29.17-0761	SCREW, GUIDE ATTACHING	2
26	270-582	PAD, KNEE PRESS	1	80	PM-297-200/1	LEVER, NEEDLE MOVEMENT BAR	1
27	270-577	LEVER, KNEE CONTROL PUSH	1	81	29.17-2780	COVER, NEEDLE MOVEMENT ASSEMBLY	1
28	0270-570	KNEE CONTROL ASSEMBLY	1	82	003-A-7	CONNECTION GUIDE, THREAD GUIDE	1
29	064E-5	WASHER, DIFFERENTIAL ACTIVATING ROD	1	83	G-29.17-282/1	SCREW, UPPER NEEDLE MOVEMENT SHAFT	1
30	297PDB-515	SHIRRING BLADE LIFTER LEVER LINKAGE	1	84	G-29.17-1025	TENSION ASSEMBLY, NEEDLE THREAD	1
31	297PDB-402	ASSEMBLY COMPLETE	1	85	092-A-10	MIDDLE GUIDE BAR AND NEEDLE HOLDER	1
31A	297PDB-4021	SHIRRING BLADE (OFFSET)	1	86	016-A-2.5	OIL WICK	1
32	27.01PDB-516	SHIRRING BLADE (STRAIGHT)	1	87	PM-29.17-138	SCREW	1
33	053D-4	PIN, SHIRRINGBLADELIFTER LEVER HINGE	1	88	29.17-132	PIN, NEEDLE LEVER ROCKER	1
34	070F-4	NUT	1	89	B-29.17-171	BUSHING, NEEDLE LEVER ROCKER PIN	1
35	WASHER		1	90	29.17-25PDB037	LABEL, IDENTIFICATION OF MACHINE	1
36	27.01PDB-515	LEVER, SHIRRING BLADE LIFTER	1	91	017-E-7	BAND ROLL SUPPORT, COMPLETE	1
36	270-702	SNAP RING	1	92	PM-602-141/1	SCREW, SET, BAND ROLL SUPPORT BASE	1
37	27.01PDB-517	YOLE, SHIRRING BLADE LIFTER LEVER	1	93	12-20X30	BASE, BAND ROLL SUPPORT	1
38	27.01PDB-518	STUD, LIFTING LEVER MOUNTING	1	94	PM-27.26PDB01425	WOOD SCREWS, BAND ROLL SUPPORT ART-TO	2
39	27.01PDB-520	PIN, LIFTING LEVER ROCKER	1	95	DISC, BINDING ROLL SUPPORT, COMPLETE	1	
40	297PDB-401	BASE, SHIRRING ATTACHMENT	1	96	WASHER	1	
41	033C-7	SCREW, SHIRRING BLADE LIFTER KNEE	1	97	NEEDLE GUARD, FRONT	1	
42	27.01PDB-516	YOLE, SHIRRING BLADE LIFTER LEVER	1	98	007-F-10	SCREW, LOWER KNIFE HOLDER ASSEMBLY	1
43	G-29.17-26PDB-181/	PRESSERFOOT ASSEMBLY COMPLETE	1	99	98-17-110	NEEDLE GUARD, FRONT	1
44	G-29.17-002	MACHINE BASE, COMPLETE	1	100	29.17-109	NEEDLE GUARD, REAR	1
45	297PDB-505	SCREW, PRESSERFOOT ATTACHING	1	101	039-A-6	SCREW, NEEDLE GUARD ATTACHING	2
46	29.17-178	PIN, PRESSERFOOT SHOE ATTACHING	1	102	PM-250-104	SCREW, (LOWER KNIFE HOLDER) NEEDLE	1
46	29.17-182	COLAR, PRESSERFOOT ATTACHING	1	103	290-105	GUARD ATTACHG.	1
46	29.17-PDB-184	SHOE, PRESSERFOOT	1	104	G-29.17-104	LOWER KNIFE HOLDER	1
48	29.17-PDB-050	FEED DOG, FRONT	1	A-29.17-020/1	PIN, LOWER KNIFE LOCKING	1	
50	29.17-PDB-114	FEED DOG, REAR	1		LOWER KNIFE HOLDER, COMPLETE	1	
51	29.17-PDB-051	NEEDLE PLATE, (WIDTH OF EIGHT 13/32")	1		NEEDLE HOLDER	1	
52	PM2701PDB-417/1	BLOCK, SHIRRING ATTACHMENT RETAINER	1		NEEDLE GUARD	1	
53	6287PDB-401	SHIRRING ATTACHMENT ASSEMBLY COMPLETE	1			NEEDLE GUARD	1
54	297PDB-403	SHAFT, SHIRRING BLADE	1				1

B29-174 (B29-7)

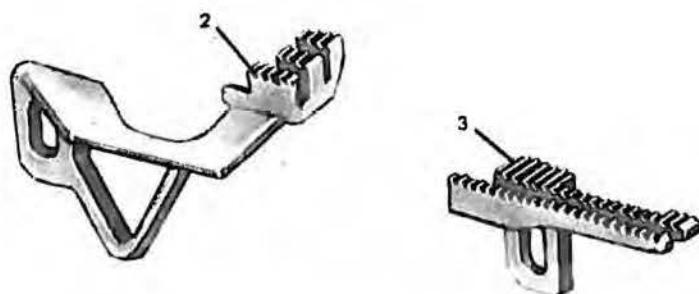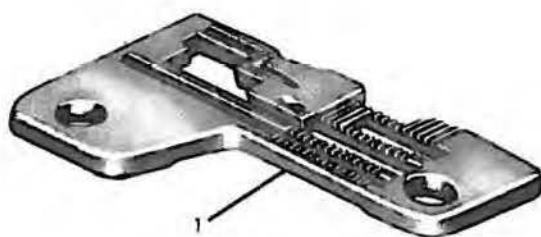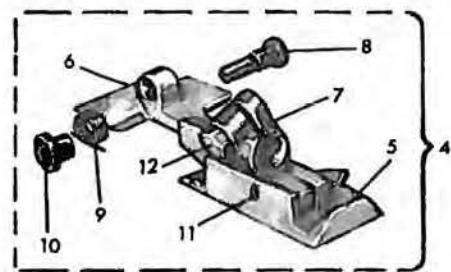

N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	29-17/PDS-174	NEEDLE PLATE, WIDTH OF EIGHT 12/32	1	7	29-174-182	HINGE, PRESSERFOOT ATTACHING	1
2	29-17/PDS-0501	FEED DOG, FRONT	1	8	297-187	SCREW	1
3	29-17/PDS-0818	FEED DOG, REAR	1	9	297-184	SPRING	1
4	29-174-181	PRESSERFOOT, COMPLETE	1	10	297-195	BUSHING, THREADED	1
5	29-174-184	SHOE, PRESSERFOOT	1	11	297-179	PIN, PRESSERFOOT SHOE	1
6	29-174-182	PLATE, PRESSERFOOT, CHAINING	1	12	297-806	SCREW	1

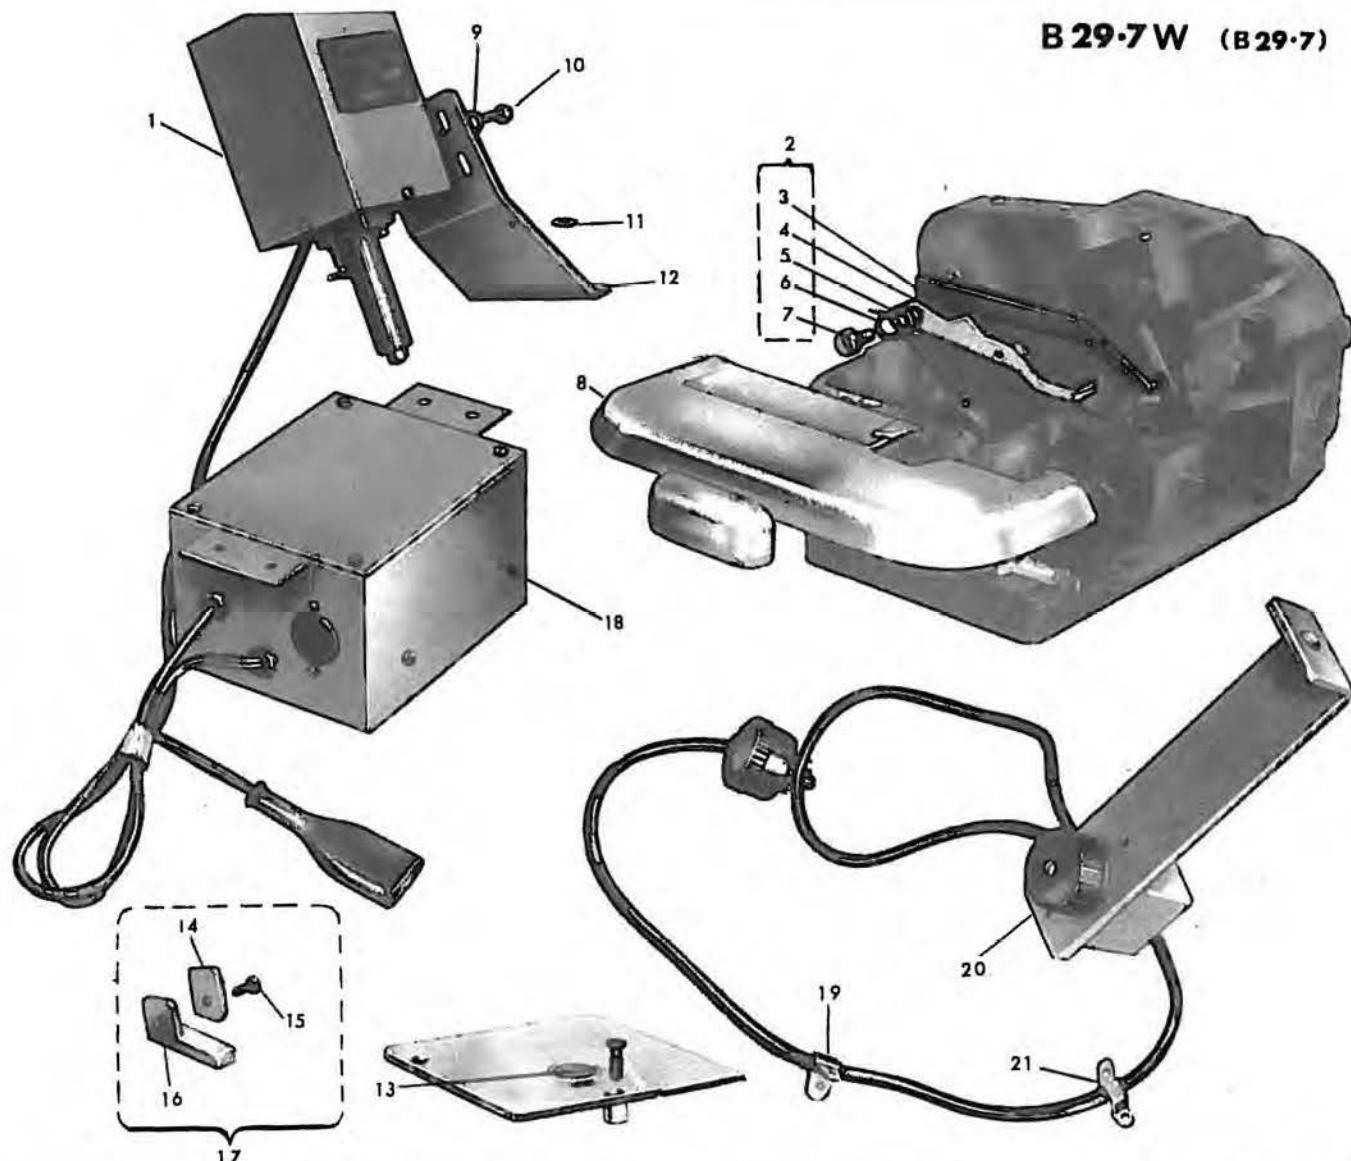


N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	G 270/W-3320	SOLENOID & PLUNGER ASSEMBLY COMPLETE	1	12	270/W-3230	BRACKET, SOLENOID MOUNTING	1
2	G-297/W-3220	PRESSERFOOT LIFTER LEVER BAR COMPLETE	1	13	297/W-2470	COVER, FEED MECHANISM (AVOID OIL SPLASH)	1
3	FM. 297/W-0760	PRESSERFOOT LIFTER LEVER BAR	1	14	270/W-6390	STOP, WORK PLATE	1
4	270/W-3220	LEVER, PRESSERFOOT HOLDING WITH KNIFE	1	15	039-D-4/8	SCREW, WORK PLATE STOP ATTACHING	1
5	270/W-3280	WASHER	1	16	270/W-8500	GUIDE BLOCK, DIFFERENTIAL FEED LEVER	3
6	270/W-3240	SPRING, KNIFE RETURN	1	17	FM270/W-6400	GUIDE BLOCK AND STOP, COMPLETE	1
7	270/W-3250	SCREW, KNIFE RETURN SPRING	1	18	0.270/W-3330	VOLTAGE TRANSFORMER ASSEMBLY COMPLETE	1
8	G 290/W-2100	WORK PLATE, COMPLETE	1	19	548	WIRE HANGER, SIMPLE	10
9	004-L-5	WASHER	3	20	0.270/W-3340	KNEE SWITCH ASSEMBLY COMPLETE	1
10	270/W-3590	SCREW, MOUNTING BRACKET ATTACHING	3	21	547	WIRE HANGER, DOUBLE	5
11	065-C-6	WASHER	2				


23

25

27

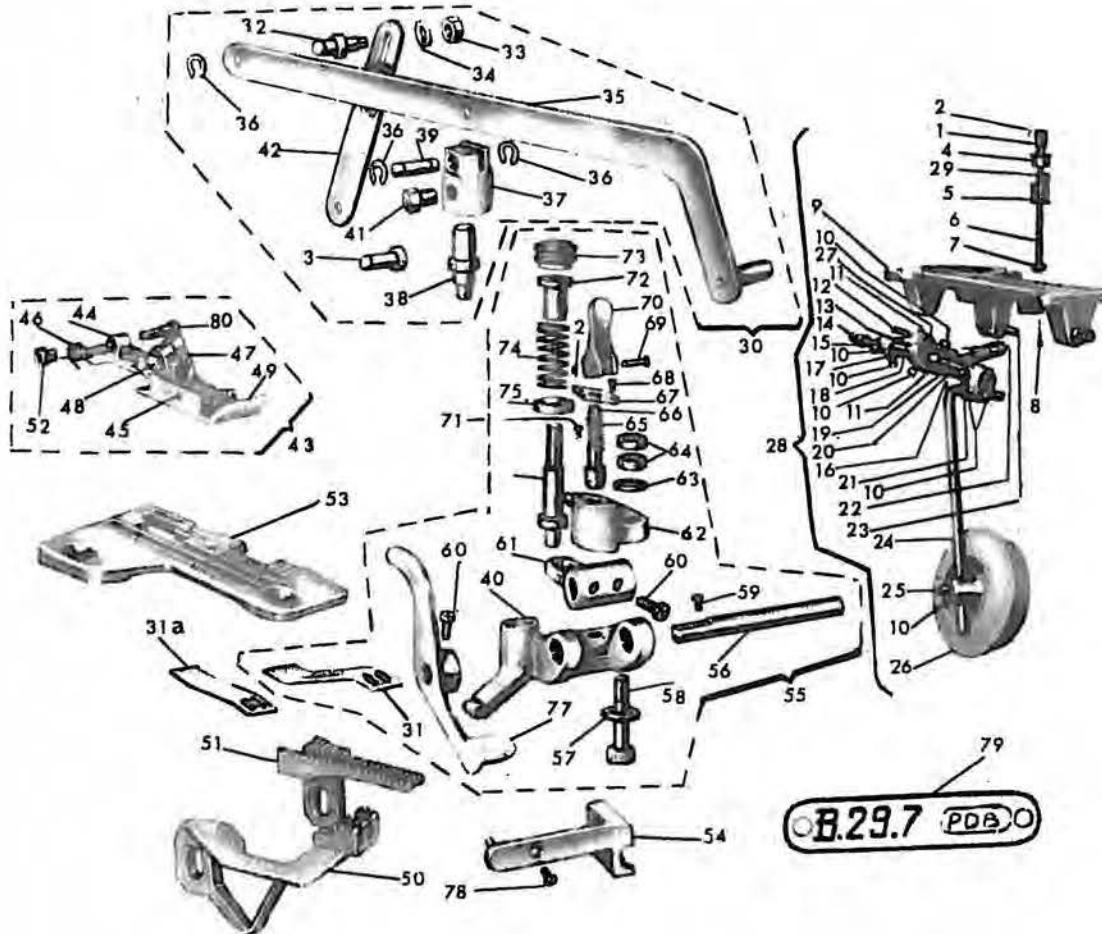


N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	270-557	CONNECTOR DIFFERENTIAL ACTIVATING ROD	1	42	27-DIFPB-516	LINK, SHIRRING BLADE LIFTER LEVER	1
2	270-701	SHAF RING	1	43	G-297/PDB-181/1	PRESSERFOOT, COMPLETE	1
3	27.01PDB-558	PIN	1	44	297-1921	PLATE, PRESSERFOOT, CHAINING	1
4	270-552	BUSHING, PLASTIC PROTECTIVE	1	45	297-1791	FIN, PRESSERFOOT SHOE	1
5	270-553	BUSHING, DIFFERENTIAL ACTIVATING ROD	1	46	297-194	SPRING, PRESSERFOOT CHAINING PLATE	1
6	270-554	GUIDE	1	47	297-182	HINGE, PRESSERFOOT ATTACHING	1
7	270-558/1	ROD, DIFFERENTIAL ACTIVATING	1	48	297-906	SCREW	1
8	T.5-22X3/5	SCREW, WOOD	1	49	297/PDB-184	SHOE, PRESSERFOOT	1
9	270-570	BASE, KNEE CONTROL	1	50	297/PDB-050	FEED DOG, FRONT	1
10	038M-9	SCREW, SET	1	51	297/PDB-051	FEED DOG, REAR	1
11	005G-6	SCREW, SET	1	52	297-195	BUSHING, THREADED	1
12	270-580	PIN, KNEE CONTROL LINKAGE	2	53	297/PDB-114	NEEDLE PLATE (WIDTH OF EIGHT 9/32")	1
13	270-579	STOP, KNEE CONTROL	2	54	PM2701/PDB417/1	NEEDLE PLATE (WIDTH OF EIGHT 15/64")	1
14	270-998	SCREW, KNEE CONTROL ASSEMBLY	2	55	G-297/PDB-401	BLOCK, SHIRRING ATTACHMENT RETAINER	1
15	059P-8	NUT, LOCK	2	56	297/PDB-403	SHIRRING ATTACHMENT ASSEMBLY, COMPLETE	1
16	005L-11	SCREW, SET	1	57	065-L-6	SHAFT, SHIRRING BLADE	1
17	270-578	LEVER, KNEE CONTROL PUSH	1	58	297/PDB-410	SHAFT, SHIRRING BLADE (USED WITH	1
18	270-571	SHAFT, KNEE CONTROL MAIN	1	59	004-L-6	297-PDB-403)	1
19	270-720	COLLAR, SPRING PRESSURE ADJUSTMENT	1	60	001-E-6	SCREW, SHIRRING ATTACHMENT ASSEMBLY	2
20	270-575	SPRING, KNEE CONTROL PRESSURE	1	61	297/PDB-407	SCREW, SHIRRING BLADE ATTACHING	4
21	270-572	BLOCK, KNEE CONTROL LIFTER ROD ATTACHING	1	62	297/PDB-408	SCREW, SHIRRING BLADE SHAFT SET	1
22	270-578	LEVER, KNEE CONTROL PUSH	1	63	064-D-5	Lever, SHIRRING BLADE PRESSURE	1
23	270-581	PIN, KNEE CONTROL LINKAGE	1	64	057-P-5	BLOCK, SHIRRING ATTACHMENT MOUNTING	1
24	270-573	ROD, KNEE CONTROL	1	65	297/PDB-444	WASHER	1
25	270-574	PLATE, KNEE PRESS	1	66	297/PDB-442	NUT, SHIRRING ATTACHMENT ASSEMBLY	2
26	270-582	PAD, KNEE PRESS	1	67	297/PDB-441	SPRING, LATCH	1
27	270-577	LEVER, KNEE CONTROL PUSH	1	68	028-S-5	PLATE, HOLDER	1
28	0270-570	KNEE CONTROL ASSEMBLY	1	69	270-078	SCREW, HOLDER PLATE ATTACHING	2
29	064E-5	WASHER, DIFFERENTIAL ACTIVATING ROD	1	70	270-094	PIN, LIFTING LATCH ROCKER	1
30	G297PDB-515	SHIRRING BLADE LIFTER LEVER LINKAGE	1	71	038-R-8.5	LATCH, RELEASE LIFTER	1
31	297PDB-402	SHIRRING BLADE (OFFSET)	1	72	102-A	SCREW, SHIRRING ATTACHMENT SETTING	1
32	297PDB-4021	SHIRRING BLADE (STRAIGHT)	1	73	160-032	BUSHING, SHIRRING BLADE PRESSURE SPRING	1
33	27.01PDB-518	PIN, SHIRRING BLADE LIFTER LEVER HINGE	1	74	297/PDB-443	ADJUSTING	1
34	053D-4	WASHER	1	75	240-035	SPRING, SHIRRING BLADE PRESSURE	1
35	070F-4	LEVER, SHIRRING BLADE LIFTER	1	76	160-030	WASHER	1
36	270-702	SNAP RING	1	77	PM297/PDB-406	STUD, SHIRRING BLADE PRESSURE	1
37	27.01PDB-517	Yoke, SHIRRING BLADE LIFTER LEVER	1	78	001-D-7	LEVER, SHIRRING BLADE LIFTER	1
38	27.01PDB-519	STUD, LIFTING LEVER MOUNTING	1	79	B-297-171	SCREW, SHIRRING ATTACHMENT RETAINER	1
39	27.01PDB-520	PIN, LIFTING LEVER ROCKER	1	80	297-187	BLOCK	1
40	297PDB-401	BASE, SHIRRING ATTACHMENT	1			PLATE, MACHINE IDENTIFICATION	1
41	038C-7	SCREW, SHIRRING BLADE LIFTER KNEE	1			SCREW, PRESSERFOOT CHAIN PLATE AT-	1
		YOKE ATTACHING				ACHING	



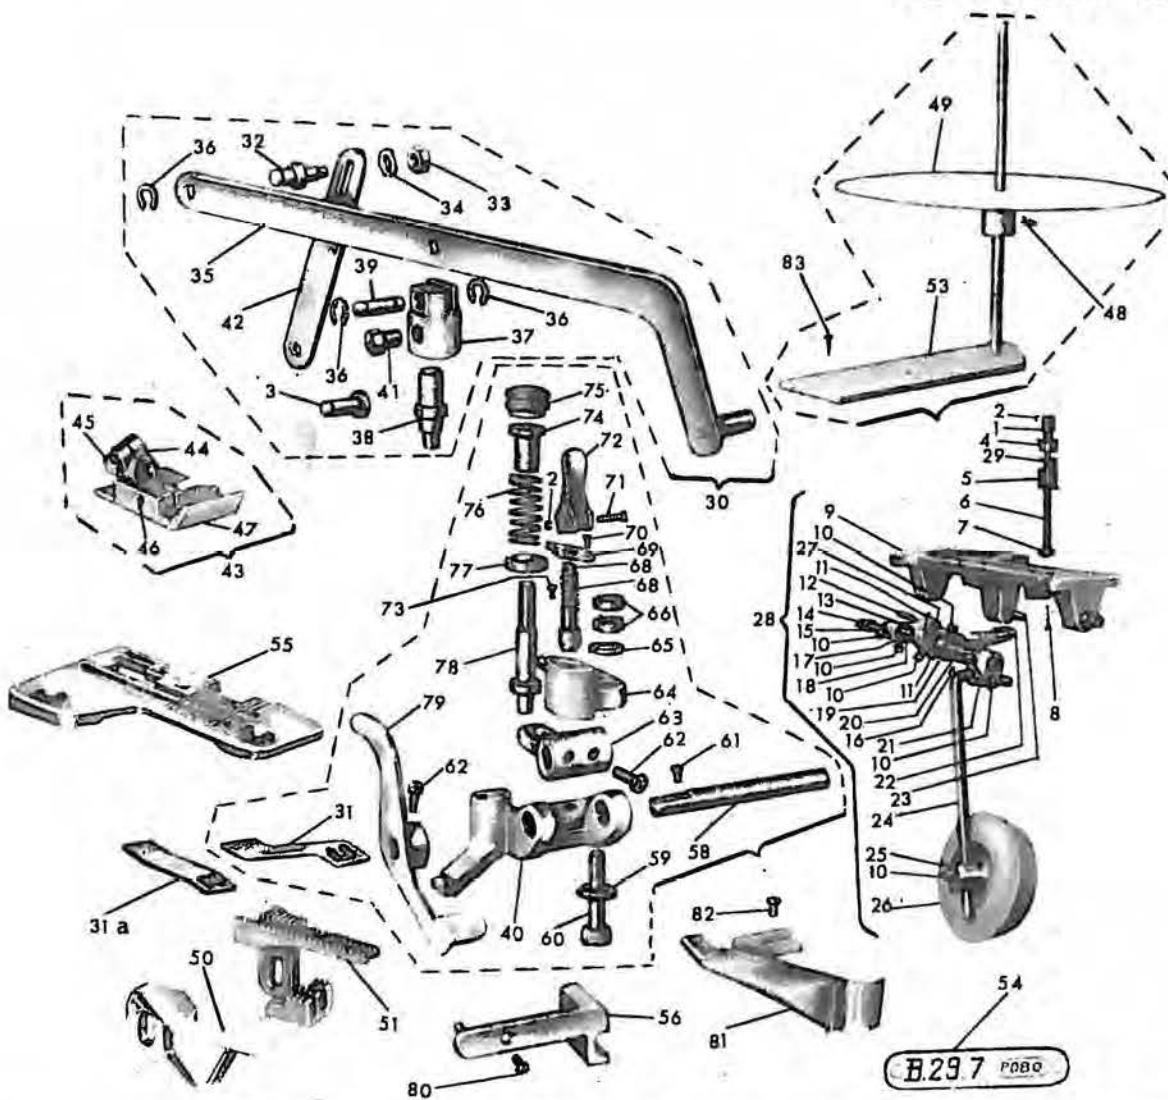


N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	270-557	CONNECTOR DIFFERENTIAL ACTIVATING ROD	1	44	297-182	HINGE, PRESSERFOOT ATTCH.	1
2	270-701	SHAP RING	1	45	297-006	SCREW	1
3	27-01PDS-558	PIN	1	46	297-178	PIN, PRESSERFOOT SHOE	1
4	270-552	BUSHING, PLASTIC PROTECTIVE	1	47	297/PDS-184	SHOE, PRESSERFOOT	1
5	270-533	BUSHING DIFFERENTIAL ACTIVATING ROD	1	48	017-E-7	SCREW, LEFT BINDING ROLL SUPPORT DISC	2
6	270-554	GUIDE	1	49	PM2726PDS01425	BINDING ROLL SUPPORT DISC, COMPLETE	1
7	270-556/1	SPRING, DIFFERENTIAL ACTIVATING ROD	1	50	297/PDS-050	FEED DOG, FRONT	1
8	T.5.22x35	GUIDE	1	51	297/PDS-051	FEED DOG, REAR	1
9	270-570	ROD, DIFFERENTIAL ACTIVATING	1	52	G.2726PDS09375	BINDING ROLL HOLDER STAND, COMPLETE	1
10	038M-9	SCREW, WOOD	1	53	PM.602-141/1	BINDING ROLL HOLDER BASE	1
11	005G-6	SCREW, KNEE CONTROL	1	54	8.297-171	LABEL, MACHINE IDENTIFICATION	1
12	270-580	SCREW, SET	1	55	297/PDS-114	HEEL PLATE (WIDTH OF EIGHT 9/32")	1
13	270-578	PIN, KNEE CONTROL LINKAGE	2	56	297/PDS-114	HEEL PLATE (WIDTH OF EIGHT 15/64")	1
14	270-579	STOP, KNEE CONTROL	1	57	G.297/PDS-401	BLOCK, SHIRRING ATTACHMENT, RETAINER	1
15	270-998	SCREW, KNEE CONTROL ASSEMBLY	2	58	297/PDS-403	SHIRRING ATTACHMENT ASSEMBLY, COMPLETE	1
16	058P-8	NUT, LOC	2	59	297/PDS-4031	SHAFT, SHIRRING BLADE	1
17	005L-11	SCREW, SET	1	60	065-L-6	SHAFT, SHIRRING BLADE (USED WITH 297PDS-4021)	1
18	270-576	LEVER, KNEE CONTROL PUSH	1	61	297/PDS-418	WASHER	1
19	270-571	SHAFT, KNEE CONTROL MAIN	1	62	004-L-6	SCREW, SHIRRING ATTACHMENT ASSEMBLY	2
20	270-720	COLLAR, SPRING PRESSURE ADJUSTMENT	1	63	001-E-6	SCREW, SHIRRING BLADE ATTACHING	2
21	270-575	SPRING, KNEE CONTROL PRESSURE	1	64	297/PDS-408	SCREW, SHIRRING BLADE SHAFT SET	4
22	270-572	BLOCK, KNEE CONTROL LIFTER ROD ATTACHING	1	65	064-B-5	LEVER, SHIRRING BLADE PRESSURE	1
23	270-576	LEVER, KNEE CONTROL PUSH	1	66	057-P-5	BLOCK, SHIRRING ATTACHMENT MOUNTING	1
24	270-581	PLATE, KNEE PRESS	1	67	297/PDS-444	WASHER	1
25	270-573	ROD, KNEE CONTROL	1	68	297/PDS-442	HUT, SHIRRING ATTACHMENT ASSEMBLY	2
26	270-574	PLATE, KNEE PRESS	1	69	297/PDS-441	SPRING, LATCH	1
27	270-582	FAD, KNEE PRESS	1	70	026-R-5	PLATE, HOLDER	1
28	270-577	LEVER, KNEE CONTROL PUSH	1	71	270-078	SCREW, HOLDER PLATE ATTACHING	2
29	G270-570	KNEE CONTROL ASSEMBLY	1	72	270-094	PIN, LIFTING LATCH ROCKER	1
30	064E-5	WADDER, DIFFERENTIAL ACTIVATING ROD	1	73	039-R-6.5	LATCH, RELEASE LIFTER	1
31	G297PDS-515	SHIRRING BLADE LIFTER LEVER LINKAGE	1	74	1032-A	SCREW, SHIRRING ATTACHMENT SETTING	1
32	297PDS-402	ASSEMBLY, COMPLETE	1	75	180-032	BUSHING, SHIRRING BLADE PRESSURE	1
33	297PDS-4021	SHIRRING BLADE (OFFSET)	1	76	297/PDS-443	SPRING, GUIDE	1
34	27-01PDS-518	SHIRRING BLADE (STRAIGHT)	1	77	240-035	NUT, SHIRRING BLADE PRESSURE SPRING	1
35	053D-4	PIN, SHIRRING BLADE LIFTER LEVER HINGE	1	78	180-030	SPRING, SHIRRING BLADE PRESSURE	1
36	070F-4	NUT	1	79	PM.297/PDS-408	WASHER	1
37	PM297PDS-515	LEVER, SHIRRING BLADE LIFTER	1	80	001-B-7	STUD, SHIRRING BLADE PRESSURE	1
38	270-702	SHAP RING	3	81	PM.297/PDS-413	LEVER, SHIRRING BLADE LIFTER	1
39	27-01PDS-517	YOKC, SHIRRING BLADE LIFTER LEVER	1	82	001-E-7	SCREW, SHIRRING ATTACHMENT RETAINER	1
40	27-01PDS-519	STUD, LIFTING LEVER MOUNTING	1	83	TS. 20X30	BLOCK	1
41	038C-7	PIN, LIFTING LEVER ROCKER	1			GUIDE, CORD (5/84")	1
42	27-01PDS-520,	BASE, SHIRRING ATTACHMENT	1			GUIDE, CORD (1/8")	1
43	297PDS-401	SCREW, SHIRRING BLADE LIFTER KNEE	1			SCREW, GUIDE ATTACHING	2
		VOKE ATTACHING	1			WOOD SCREWS, BINDING HOLDER ASSEMBLY	2
		LINK, SHIRRING BLADE LIFTER LEVER	1			TO TABLE	2

B29-7R (B29-7)

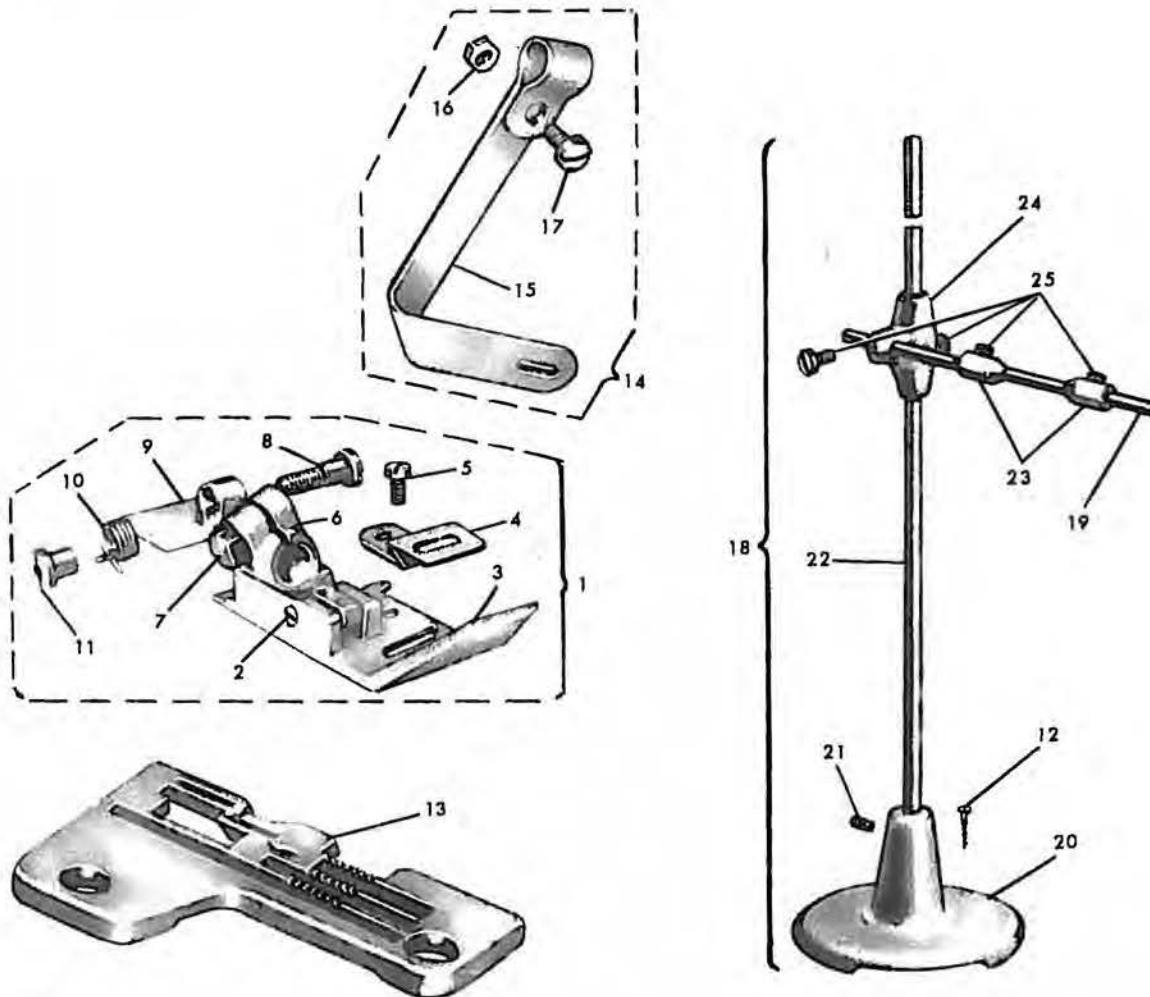


N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	5-297/R-1871	PRESSERFOOT, COMPLETE	1	14	PH. 297/R-267	GUIDE, REINFORCING TAPE, COMPLETE	1
2	257-178	PIN, PRESSERFOOT SHOE	1	15	297/R-267	GUIDE REINFORCING TAPE	1
3	297/R-1841	SHOE, PRESSERFOOT	1	16	.605- A-3	HUT	1
4	297/R-0717	GUIDE, PRESSERFOOT	1	17	.001- C-5.5	SCREW	1
5	.004-.7-.4-.5	SCREW	1	18	G. 250/R-9373	TAPE REEL STAND, COMPLETE	1
6	297-182	HINGE, PRESSERFOOT	1	19	.605- 744	ROD, TAPE REEL STAND, UPPER	1
7	297-906	SCREW	1	20	.01741	BASE, TAPE REEL STAND	1
8	297-187	SCREW	1	21	.001- g-12	SCREW	1
9	297-1929	PLATE, PRESSERFOOT CHAINING	1	22	.605- 743	ROD, TAPE REEL STAND, MAIN	1
10	297-194	SPRING, PRESSERFOOT	1	23	.605- 723	AXLE, TAPE REEL	1
11	297-195	BUSHING, THREADED	1	24	.605- 937	BRACKET, TAPE REEL SUPPORT	1
12	T5 20-30	THREAD STAND ASSEMBLY SETTING SCREW	2	25	.605- 980	SCREW, TAPE REEL AXLE SET	1
13	297-1141/t	NEEDLE PLATE, WIDTH OF EIGHT 15/64"	1				

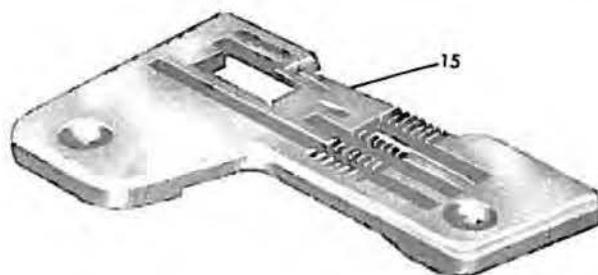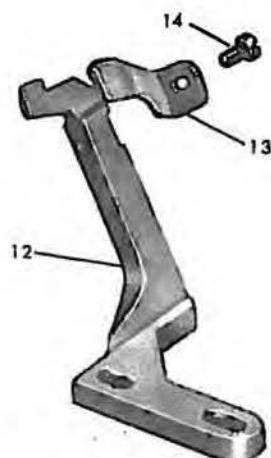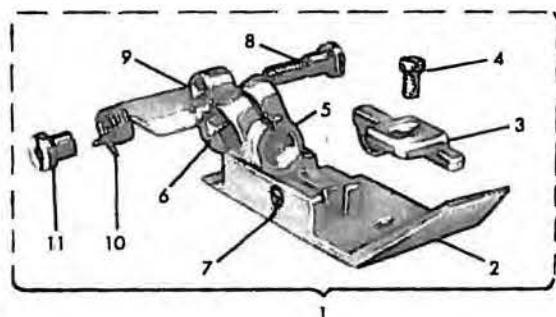

N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	6.29.78-181.	PRESSERFOOT, COMPLETE .	1	9	297-1821	PLATE, PRESSERFOOT CHAINING	1
2	29.78-184	SHOE, PRESSERFOOT	1	10	297-184	SPRING	1
3	29.78-191	CHAINING FINGER, PRESSERFOOT	1	11	297-195	BUSHING, THREADED	1
4	004-4-5	SCREW	1	12	29.78-107	NEEDLE GUARD, FRONT	1
5	297-187	HINGE, PRESSERFOOT ATTACHING	1	13	29.78-108/1	NEEDLE GUARD, REAR	1
6	297-806	SCREW	1	14	270-989	SCREW	1
7	297-173	PIN, PRESSERFOOT SHOE	1	15	29.78-114	NEEDLE PLATE, WIDTH OF EIGHT 1/4")	1
8	297-187	SCREW	1				

**CHAIN CUTTING
ATTACHMENT "W"**

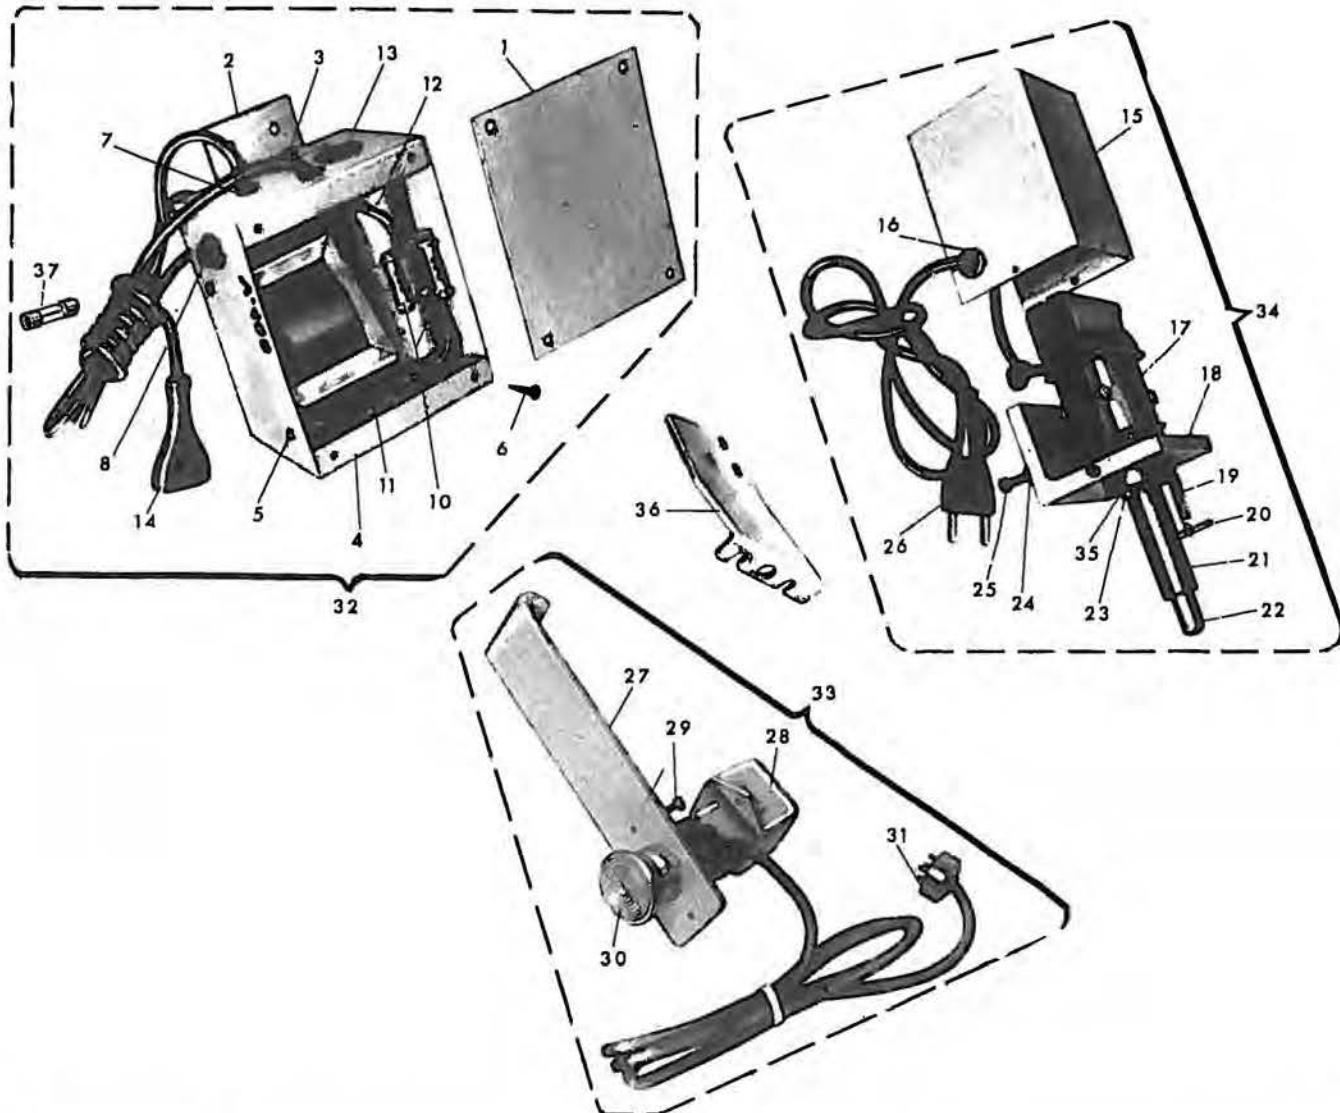

N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.	N° RIF.	N° DISEGNO	DENOMINAZIONE	QUANT.
1	270w-3330	COVER PLATE, VOLTAGE TRANSFORMER	2	20	270w-3420	PISTON, SOLENOID PLUNGER RETURN SPRING	1
2	270w-3580	BRACKET, VOLTAGE TRANSFORMER MOUNTING	2	21	270w-3450	ATTACHING	1
3	001e-6	SCREW, VOLTAGE TRANSFORMER MOUNTING	4	22	270w-3490	SLEEVE, SOLENOID PLUNGER	1
4	PW270w-3330	BRACKET ATTACHING	10	23	001e-12	PLUNGER, SOLENOID	1
5	001c-11	HOUSING, VOLTAGE TRANSFORMER	8	24	064l-5	SCREW, SOLENOID PLUNGER SLEEVE	2
6	270w-3710	SCREW, TRANSFORMER MOUNTING	2	25	270w-3550	ATTACHING	3
7	270w-3270	GROMMET	1	26	270w-3720	WASHER	1
8	270w-3620	FUSE HOLDER	1	27	270w-3300	SCREW, MOUNTING BRACKET ATTACHING	1
9	270w-3620	VOLTAGE TRANSFORMER	1	28	270w-3310	CONNECTOR, MALE	1
10	270w-3670	RESISTORS	1	29	201e-5	BRACKET, KNEE SWITCH MOUNTING	1
11	270w-3660	RECTIFIER	1	30	270w-3340	HOUSING, KNEE SWITCH	1
12	270w-3650	CONDENSER	1	31	270w-3700	SCREW, KNEE SWITCH HOUSING ATTACHING	2
13	270w-3680	FEMALE SOCKET CONNECTOR	1	32	0270w-3330	BUSH BUTTON, KNEE SWITCH	1
14	270w-3690	CONNECTOR, FEMALE	1	33	0270w-3340	CONNECTOR, MALE	1
15	PW270w-3430	COVER, SOLENOID	1	34	0270w-3320	VOLTAGE TRANSFORMER ASSEMBLY COMPLETE	1
16	270w-3270	GROMMET	1	35	063l-4	KNEE SWITCH ASSEMBLY COMPLETE	1
17	270w-3510	COIL, SOLENOID	3	36	270w-3230	SOLENOID & PLUNGER ASSEMBLY COMPLETE	1
18	001c-4	SCREW, COVER ATTACHING	1	37	270w-3620	WASHER	1
19	270w-3480	SPRING, SOLENOID PLUNGER RETURN				BRACKET, SOLENOID MOUNTING	1
						FUSE	1
PROSPECTUS OF FUSES							
VOLTAGE	FUSE AMP:	PART NUMBER:					
110-125	0.5	270w-3620/0.5					
160	0.3	270w-3620/0.3					
220-260-280	0.2	270w-3620/0.2					
380-400-450	0.125	270w-3620/0.125					

