Form 18360 September, 1929 FRINTED IN U. S. A.

LIST

OF

PARTS



MACHINES Nos. 149-2 and 149-4

THE SINGER MANUFACTURING COMPANY

18360 - 1

COPYRIGHT, U. S. A., 1921, 1925, 1926, 1928 and 1929
BY THE SINGER MANUFACTURING CO.
ALL RIGHTS RESERVED FOR ALL COUNTRIES

INDEX

P	AGE
Accessories	28
Bench Stand	32
Edge Folders	28
Folder on Shank	29
FOOT LIFTER PARTS	31
KNEE LIFTER PARTS	31
Lap Seam Fellers	30
MACHINE BASE WITH BELT GUARD	28
Machine No. 149-2	7
" " 149-4	18
Numerical List of Parts	37
Obsolete Parts	34
STRIP FOLDERS	29
Tape Holders	32
THREAD UNWINDER (FOR FOUR SPOOLS)	33
" (FOR EIGHT SPOOLS)	34

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the part NUMBER in the FIRST column.

The number stamped on a Sewing Machine part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

A—Hardened, Polished, Nickel Plated and Buffed

B-Polished, Nickel Plated and Buffed

C-Hardened Only D—Polished Only

E--Soft, Not Polished F-Hardened and Polished

H—Blued

J-Nickel Plated Only

K—Hardened and Nickel Plated

L—Brass Plated M—Oxidized P-Japanned

R-Merlized T-Copper Plated

T. A.—Hardened, Polished, Copper and Nickel Plated and Buffed.

T. B.—Copper and Nickel Plated and Polished.

T. J.—Copper and Nickel Plated Only. T. K.—Hardened, Copper and Nickel Plated.

T. M.—Copper Plated and Oxidized.
T. L.—Copper and Brass Plated.
U—Zinc Plated
V—Silver Plated
W—Polished and Nickel Plated

Z—Chromium Plated

These letters MUST BE USED when they appear in the list; and AFTER the number as in the list.

In this series:

1 to 1500 and 50001 to 51500 are Screw Numbers. 1501 to 1800 and 51501 to 51800 are Nut Numbers. 1801 to 2000 and 51801 to 52000 are Roller Numbers. 2001 to 50000 and 52001 and upward are numbers of Machine Parts.


The figures in the second column refer only to the plates, illustrating the parts, and are NOT TO BE USED in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

When ordering parts which differ as to Gauge (the distance between seams) the Gauge, as well as the Number must be given on order.

LIST OF PARTS COMPLETE

FOR

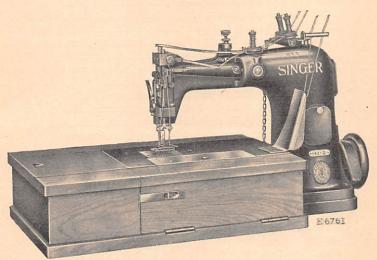

MACHINE No. 149-2

FOR STITCHING FACINGS AND BUTTON STAYS ON MEN'S SHIRTS, SLEEVE SETTING, AND FOR TWO-LINE, TWO-THREAD CHAIN STITCHING IN LIGHT AND MEDIUM WEIGHT FABRICS. TWO NEEDLES, TWO LOOPERS. GAUGES FROM \(\frac{1}{36} \) TO \(1\frac{1}{2} \) INCHES. SPEED UP TO 3500, ACCORDING TO THE MATERIAL BEING STITCHED.

NO.	PLATE			NAM	IE.		
*128632		Arm,	upper a	nd low	er (soli	d)	
128502	9451	"	Back C	over			
190	р 9465	"	"	" S	crew		
128502	9451	"	Side Co	ver			
286	D 9467	"	"	" Tl	humb S	crew.	
128503	9452	"	Rotary	Shaft.			
128613		"	"	"	128503	with	50943c
			d 128559				
128664		Arm					128663
128504	9451	"		"			g
128505	9451	. 66	"				
128627		"	"	. "	"	"	"
		12	8505 wit	h 1285	04, 128	506 a	and three
		20.	5F				

NO.	PLATE	W. Land
128506	9451	
120000	2401	Arm Rotary Shaft Ball Bearing Case
128619	9462	Cap with 128619
120019	9404	Arm Rotary Shaft Ball Bearing Case
205*	9465	Cap Pad (felt)
2001	9400	Arm Rotary Shaft Ball Bearing Case
200	0405	Cap Screw
3080	9467	Arm Rotary Shaft Ball Bearing Case
		Cap Set Screw
54007	9451	Arm Rotary Shaft Bushing (intermediate)
54089	-	u u u u
		54007 with 64508 and 64805
64508	9462	Arm Rotary Shaft Bushing (intermediate)
		Oil Pad (braided cotton) long
64805	9462	Arm Rotary Shaft Bushing (intermediate)
		Oil Pad (braided cotton) short
8880	9466	Arm Rotary Shaft Bushing (intermediate)
		Set Screw
128507	9456	Arm Rotary Shaft Bushing (front)
509990	9465	" " Set
	0.400	
128508	9454	Screw
12580		" " Sot Serow
49013	9462	Set Screw
45015	9402	Front Bearing Oil
128509	0451	Pad (braided cotton)
128510	9451	Balance Wheel, 2 in. pulley, with two 430c
	9451	Cover
	9467	Screw
430c	0200	Det Derew
128633	9452	Cloth Plate
128513	9462	" Oil Tube with 49092, for oil-
		ing 128520
49092	9462	Cloth Plate Oil Tube Packing (felt)
128514	9452	" " Slide
38416	9456	" " Spring
725 _J	9465	" " " Screw
128515		Cloth Plate Slide complete, Nos. 128514,
		two 38416 and four 725j
128634		Cloth Plate complete, Nos. 128513,
		128515, 128633 and two 1198c
1011F	9465	Cloth Plate Screw (left)
50473F		" " (right)
128635	9453	Feed Bar with two 453c.
128636	0100	" " 128635 with 128519 and two
120000	9	12000 With 120015 and two
128707		190p Feed Bar 128636 with 57225 and 128533
57225	9453	" " Hings Pin
453c		ringe Pin
499C	9400	" " Set Screw

	NAME:
NO. PLATE	NAME
42366 9462	Feed Bar Oil Pad (braided cotton)
128518 9455	Wearing Diock
128519 9454	11000
190р 9465	DCI CW
128520 9453	" Connection (forked) with 453c and
	769c
128615	Feed Connection 128520 with 1095F,
	128522, 128528, 128532 and two 128521
769c 9465	Feed Connection Clamping Screw
453c 9466	" Set Screw
128521 9455	" Slide Block Section
128522 9455	" " " Sleeve
1095F 9465	" " " Cap
10001 0100	Screw
128772 9469	Feed Dog, 19 teeth (16 teeth to the inch)
120112 0100	with 452c, for $\frac{1}{4}$ in. to $\frac{7}{16}$ in. gauges
128729 9470	Feed Dog, 19 teeth (16 teeth to the inch)
120120 9110	with 452c, for $\frac{1}{2}$ in. to $\frac{11}{16}$ in. gauges
128716 9471	Feed Dog, 19 teeth (16 teeth to the inch)
128/10 94/1	with 452c, for ¾ in. to ¾ in. gauges
100500 0450	Feed Dog, 19 teeth (16 teeth to the inch)
128726 9472	with 452c, for $\frac{15}{16}$ in. to $1\frac{1}{8}$ in. gauges.
100001 0100	Feed Dog, 19 teeth (16 teeth to the inch)
128731 9473	Feed Dog, 19 teeth (16 teeth to the men)
	with 452c, for $1\frac{3}{16}$ in. to $1\frac{5}{16}$ in. gauges
128821 9474	Feed Dog, 19 teeth (16 teeth to the inch)
	with 452c, for $1\frac{3}{8}$ in. to $1\frac{1}{2}$ in. gauges.
452c 9466	Feed Dog Adjusting Screw
157р 9465	" " Screw
128638 9454	" Lifting Eccentric with two 452c
452c 9466	" " Set Screw
50941c 9467	" Regulating Screw
128526 9455	" " Plate
391p 9465	" " Screw
128527 9455	" Regulator with two 1143c
128528	Feed Regulator complete, Nos. 391D,
	399р, 50941с, 128526, 128527, 128530
	and 128531
128529 9457	Feed Regulator Bushing
50999p 9465	" Set Screw
41036 9462	" Oil Pad (felt)
1143c 9467	" Set Screw
128530 9455	" " Slide Block
128531 9455	" " " Stop
399p 9465	u u u u u Sarow
128532 9455	" " Washer
128532 9453 128533 9453	" Rocking Frame with two each 453c
128999 9499	and 1324c
	and 10240

	ATE		NAMI		
1324c 94		Rocking	Frame	Adjustir	ng Screw
	53 "	"	"	Hinge P	in
	56 "	"	"	"	" Bushing
453c 94		"	"	"	
	Set	Screw			
453c 94	66 Feed F	Rocking F	rame H	linge Pir	Set Screw
128717 94	55 Looper	r (closed	eye)		
128640 94	55 "	Carrier	with ty	wo 5037	9F
128660 —	- "	"	12864	0 with	228p and
	1286	43			
128537 94	55 Looper	Carrier	Driver		
*128538 —	"	"	"	Connec	tion
128630 —		**	"	"	128538
	with	two 128	539 and	d four 8	96Е
128621 94					tion com-
	plete	Nos.	128630.	128631	and two
128663 —	- Looper	Carrier 1	Driver (Connecti	on 128621
	with	128537,	12854	3 to 12	8547 and
	1286	41			
*128539	 Looper 	Carrier	Driver	Conne	ction Cap
896E 946		"	"	"	· ·
	Screv	V			
*128540	- Looper	Carrier	Driver	Conne	ction End
	Bear	ing			
128631 —	 Looper 	Carrier	Driver	Connec	etion End
	Bear	ing 1285	40 with	128541	
*128541	Looper	Carrier	Driver	Conne	etion End
	Bear	ing Cap.			
142E 946	55 Looper	Carrier	Driver	Connec	etion End
100011	Bear	ing Cap	Screw.		
128641 945	55 Looper	Carrier	Drive	r Eccen	tric with
701 - 040	791c	and two	452c		
791c 946	b Looper	Carrier 1	Driver I	Eccentri	c Position
452c 946	ocrev	V	D :	· · · · · · ·	
4020 940					ntric Set
128543 945	4 Looper	Comion 7	Holden	with to	о 896е
896E 946	5 "	"	"		ng Screw
128544 945		"	Rook S		ng screw
128545 945	7		"	" Hi	nge Pin
443c 946		**	"	"	inge rin
	Set S	crew			
128546 945		Carrier I			
128547 945		"	"	" "	Clamp
, 0.40	-	175D			Clamp
			THE REAL PROPERTY.		

	PLATE	NAME
175D	9465	Looper Carrier Rock Shaft Nut Clamp
		Screw
898c	9465	Looper Carrier Screw
128728	9454	" Eccentric with two 51137c
128665		" " 128728 with 1664E,
120000		50942E, 128549, 128624 and two 55515
51137c	9466	Looper Eccentric Set Screw
128549	9454	" Sleeve
128550	9454	Connection with
		128552 and two 175E
128624		Looper Eccentric Sleeve Connection
		128550 with 679c
679c	9454	Looper Eccentric Sleeve Connection Ball
		Screw Stud
1520л	0454	Looper Eccentric Sleeve Connection Ball
10203	3101	Screw Stud Nut
100771	0454	Looper Eccentric Sleeve Connection Ball
128551	9454	
		Screw Stud Nut Lock Washer
*128552	-	Looper Eccentric Sleeve Connection Cap
175E	9465	
		Screw
50942E	9467	Looper Eccentric Sleeve Connection
000121	010.	Hinge Screw
1664E	0466	Looper Eccentric Sleeve Connection
1004E	9400	
		Hinge Screw Nut.
55515	9462	Looper Eccentric Sleeve Connection Oil
		Hole Packing (braided cotton)
50379F	9465	Looper Set Screw
128643	9455	" Thread Guide
	Note:	When ordering No. 128643, state
	TIOIE.	gauge required.
228p	9465	Looper Thread Guide Screw
57244	9456	Needle Bar (hollow)
128766		" 57244 with 128767
38456	9456	" " Bushing (lower)
1133E		" " Set Screw
128554	9456	" " (upper)
1133E		" " Set Screw.
128555	9456	Connecting Dracket with
		1057р, 50370р and 50379г
128713	-	Needle Bar Connecting Bracket 128555
		with 128556 and 128557
1057p	9465	Needle Bar Connecting Bracket Clamp-
		ing Screw
128556	9456	Needle Bar Connecting Link
128557		" " Hinge Pin
	9456	ii ii Hingo Din

NO.		NAME
50370р	9465	Needle Bar Connecting Link Hinge Pin Set Screw
128558	9452	Needle Bar Lever with 50282E, 50370D and two 1259c
128618		Needle Bar Lever 128558 with 128557 and 128713
50943c	0456	Needle Bar Lever Ball Screw Stud
1259c		" " " " " Set
12590	9400	Screw
128559	9463	Needle Bar Lever Connecting Rod with 683F, 54897, 128560, 128561, 128628
*128560		and four 896E Needle Bar Lever Connecting Rod Cap (lower)
896E	9465	Needle Bar Lever Connecting Rod Cap (lower) Screw
*128561	_	Needle Bar Lever Connecting Rod Cap
896E	9465	(upper) Needle Bar Lever Connecting Rod Cap (upper) Screw
42077	9456	Needle Bar Lever Connecting Rod Cap Guide
171E	9465	Needle Bar Lever Connecting Rod Cap Guide Screw.
54897	9456	Needle Bar Lever Connecting Rod Cap Oil Cup.
128628	9462	Needle Bar Lever Connecting Rod Cap Oil Pad (braided cotton)
683F	9465	Needle Bar Lever Connecting Rod Cap Oil Pad Stop Screw
128562	9453	Needle Bar Lever Hinge Pin.
128563	9456	" " " Bushing
120000	0100	(back)
443c	9466	Needle Bar Lever Hinge Pin Bushing
		(back) Set Screw
128564	9456	Needle Bar Lever Hinge Pin Bushing (front)
743c	9466	Needle Bar Lever Hinge Pin Bushing (front) Set Screw
54648	9462	Needle Bar Lever Hinge Pin Bushing (front) Oil Pad (braided cotton)
50282E	9465	Needle Bar Lever Set Screw
128767	9456	" Clamp with two 50379F
50379F	9465	" Set Screw
*128567		Oil Cup for 128568
128569	9463	" " Pad (felt)
*128570	-	" " Tube

```
NO.
      PLATE
                          NAME
128571
       9462
             Oil Cup Tube Wick (braided cotton) . . .
128568
       9463
             Oil Cup complete, for oiling 128550,
              Nos. 128567 and 128569 to 128571....
   792c 9465
             Oil Cup Screw for 128568.....
*128572
                    for 128573.....
              "
*128574
                    Bracket.....
              "
 44006
       9463
                    Pad (felt).....
              "
                 "
*128575
                    Tube (long).....
*128576
                       (short).....
128571
             66
                       Wick (braided cotton)....
       9462
128573
             Oil Cup complete, for oiling 128538,
       9463
              Nos. 44006, 128572, 128574 to 128576
              and two 128571.....
             Oil Cup Screw for 128573.....
  1239F 9465
*128577
                Tube for 128725.....
              "
 49092
       9462
                    Packing (felt).....
                 " Bracket and Thread Guide with
128725
       9463
              49092 and 128577.....
             Presser Bar with 25303.....
 61477
       9457
                   " Ball, size 1/4 in.....
 25303
       9457
                   " Bushing (lower).....
 61046
       9457
                         66
                                   Set Screw..
  1133E 9466
 38456
       9456
                             (upper)....
                   66
                         66
                                   Set Screw.
  1133E 9466
                   " Guide Bracket with 175c and
128580 9457
             Presser Bar Guide Bracket Adjusting
   175c 9465
              Screw......
             Presser Bar Guide Bracket Guide . . . . .
128581 9457
                       "
                            "
                                 "
   457c 9466
               Screw.......
             Presser Bar Guide Bracket Set Screw...
   454c 9466
                   " Lifter.....
128582 9457
                   "
                       "
 57258 9457
                           Hinge Stud.....
                   "
                        "
               "
                                " Set Screw
   443c 9466
                   "
                        "
                           Roller and Stud. . . .
 51871
       9457
                        66
 50603E 9467
                           Stop Screw.....
 128583
       9457
                      Lifting Bracket with 465c
               and 51871.....
128584
       9452
             Presser Bar Lifting Lever.....
                  " Connecting
 61075
       9457
               Stud.....
             Presser Bar Lifting Lever Connecting
   465c 9466
               Stud Set Screw.....
   802p 9466
             Presser Bar Lifting Lever Hinge Screw.
                   " Spring (flat).....
 54040 9464
                            Stud.....
 38468 9457
```

NO. PLATE	NAME
128733 9468	Presser Foot Extension with two 62527
128734 9468	" " Connection
1145p 9468	
	Hinge Screw
62527 9468	Presser Foot Extension Hinge Pin
18055 9468	" " Hinge Pin
128735	" " Plate
128647	" " Shank with 5631 and 17001
563л 9468	" " Adjusting Screw
1700л 9468	" " " " Nut
2656 9468	" " Spring
128736 9468	Presser Foot (hinged extension and hinged
	plate) complete, for obtaining a smooth
	finish on broadcloth shirt centres, Nos.
	18055, 128647, 128733, 128735 and two
	each 1145p, 2656 and 128734
18055 9468	Presser Foot Hinge Pin
128718	" " Plate
128647	" Shank with 5631 and 17001
563J 9468	" " Adjusting Screw
1700ј 9468	" " " Nut
128719 9468	Presser Foot (hinged) complete, for
	shirt centres, Nos. 18055, 128647 and
	128718
190р 9465	Presser Foot Screw
574w 9467	Pressure Regulating Thumb Screw
1539w 9467	" " " Lock
	Nut
128587 9461	Slack Thread Controller
46035 9461	" " " Clamp
176p 9465	" " Screw.
128720 9461	" " Regulator
128589 9461	" " Holder with
	452c
128590 9461	Slack Thread Regulator Holder Crank
	with 175D
175p 9465	Slack Thread Regulator Holder Crank
1100 0100	Clamping Screw
128591 9461	Slack Thread Regulator Holder Crank
120091 9401	Driver with 456c and 1963
1000 0101	
1963 9461	Slack Thread Regulator Holder Crank
	Driver Roller and Stud
456c 9466	Slack Thread Regulator Holder Crank
	Driver Set Screw
452c 9466	Slack Thread Regulator Set Screw

	PLATE		, 1	NAME	D 1	
128649		Tension	(under	thread)	Bracket	
997E		"	"	"		Screw
50944E	9467					
		Stud				
2102	9461	Tension	(under	thread)	Disc	
1560c	9466	"	"	"	Regu	lating
916c	9467	Tension		thread)	Screw S	tud
44209		"	"	"	66	" 916c
		with 1	1560c			
10148	9461					
17547	9461	"	"			Guide
128592	9451	"	(upper	thread)	Bracket	
376p		"	"	46	"	Screw
2102	9461	"	"	"		
51570c		"	"			lating
919100	3100	Thum				
32572	9461	Tongion	(unner	thread	Releas	sing Disc
54988	9461	1 ension	(upper	"	"	Pin.
		"	"	"	"	Shaft
54989	9461	"	"	"	"	Share
54872	9461					
100500	0.101	Crani	with t	24C	D-1	
128593	9461					ing Shaft
110 _D	9465					ing Shaft
						ge Screw
624c	9466	Tension	(upper	thread)	Releas	ing Shaft
		Cranl	s Set Se	rew		
54990	9459					ing Shaft
316c	9466					ing Shaft
		Stop	Screw			
1547 _J	9466	Tension	(upper	thread)	Releas	ing Shaft
		Stop	Screw 1	Vut		
50326c	9467					Stud
59539		Tension	(uppe	er threa	d) Ser	ew Stud
		50326	c with	51570c		
59535	9459		(upper	thread)	Spring	
59537	9459	"	"	"	"	Bushing
00001	0100	(large	2)			
59538	9459	Tension	(upper	thread	Spring	Bushing
00000	0.100	(smal	(1)	· · · · · · · · · · · · · · · · · · ·	, ~Piiile	
17547	9461	Tension	(upper	thread)	Thread	Guide
128650	9459					
1521J	9466	""	(diffeet	"	Nut	
128774	9459	"	"	Guide	(left) for	$r \frac{3}{16}$ in. to
120114	9409					16 III. 00
		16 III	. gauges			


NO. PLATE	NAME
128651 9459	Thread (under) Guide (left) for 3/8 in. to
	1½ in. gauges
Note:	When ordering Nos. 128651 or 128774,
	state gauge required.
100000 0150	•
128775 9459	Thread (under) Guide (right) for $\frac{3}{16}$ in. to
100050 0150	5 in. gauges
128652 9459	Thread (under) Guide (right) for 3/8 in. to
	1½ in. gauges
Note:	
	state gauge required.
128653 9459	Thread (under) Guide Holder
446c 9466	" " Set Screw
176p 9465	" " Screw for 128651
	and 128652
185p 9465	Thread (under) Guide Screw for 128774
	and 128775
128654 9463	Thread (under) Protector
1235F 9465	" Screw
46009 9459	" (upper) Eyelet
128721 9459	" " for 128558
190р 9465	
50945c 9467	" " " Stud for
	46009
2102 9461	Thread (upper) Nipper Disc
51570c 9466	Thread (upper) Nipper Disc
	Thumb Nut
128604 9459	Thread (upper) Nipper Regulator
190р 9465	" " Ad-
	justing Screw
32572 9461	Thread (upper) Nipper Releasing Disc
128605 9459	" " Pin " " Screw Stud
51029c 9467	1 0 0 11 10 0 12 12
128714	u u u u
	51029c with 51570c
128656 9459	Thread (upper) Nipper Spring
59537 9459	" " Bushing
	(large)
59538 9459	Thread (upper) Nipper Spring Bushing
	(small)
128606 9459	Thread (upper) Nipper Thread Guide
128722 9459	" " Take-up
50379F 9465	" Set Screw
128773 9469	Throat Plate with 128724 and two 665D,
	for 128772
128730 9470	Throat Plate with 128724 and two 665D,
	for 128729

NO.	PLATE	NAME
128723	9471	Throat Plate with 128724 and two 665D,
		for 128716
128737	9475	Throat Plate with 128724 and two 665D,
		for 128736, for 128716
128727	9472	Throat Plate with 128724 and two 665D,
		for 128726
128770	9475	Throat Plate with 128724 and two 665D,
		for obtaining a smooth finish on broad-
		cloth shirt centres, for 128726
128732	9473	Throat Plate with 128724 and two 665D,
		for 128731
128822	9474	Throat Plate with 128724 and two 665D,
		for 128821
128612	9463	Throat Plate Holder
501541		" " Serew
	9465	" " Screw
	9465	" Supporting Screw
128724	9472	" Thread Retainer for 128723,
		128727, 128730, 128732, 128737, 128770,
		128773 and 128822
	Note:	When ordering No. 128724 state
		gauge required.
6651	9465	Throat Plate Thread Retainer Screw

Genuine Singer Needles and their Containers are marked with the Company's Trade Mark "SIMANCO."

Needles in Containers marked
"For Singer Machines"
are not Singer made needles.

LIST OF PARTS COMPLETE

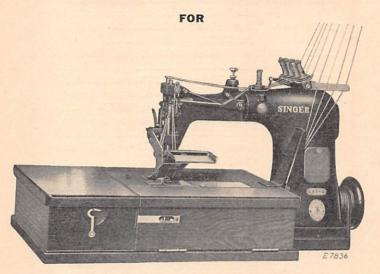

MACHINE No. 149-4

FOR STITCHING CENTRES ON MEN'S SHIRTS AND OTHER WORK IN FABRICS REQUIRING FOUR-ROW STITCHINGS. FOUR NEEDLES AND FOUR LOOPERS. THE GREATEST DISTANCE BETWEEN THE OUTSIDE NEEDLES IS $1\frac{1}{2}$ INCHES, WHICH CAN BE DIVIDED INTO SMALLER GAUGES BETWEEN EACH NEEDLE AS ORDERED, EXCEPT THAT NONE CAN BE MADE SMALLER THAN $\frac{3}{16}$ INCH. SPEED UP TO 3400, ACCORDING TO THE MATERIAL BEING STITCHED.

NO.	PLATE				AME		
*12863	2 —	Arm,	upper a	and lo	wer (s	olid)	
12850	2 9451	"	Back C	over.			
19	OD 9465	"	"	"	Screw		
12850	2 9451	"	Side Co	over			
28	6р 9467	"	"	" T	humb	Screw	
12850	3 9452	"					
128613	3 —	"	"	"	1285	03 with	50943c
		and					
12866-	4 —	Arm	Rotary	Shaft	1286	313 with	h 128663
12850	4 9451	"	"	"	Ball	Bearing	g
12850	5 9451	"	"	"	"	"	Case
12862	7 —	"	"	"	"	"	"
		128	8505 wit	h 128	504, 1	28506 a	nd three
		208	ĎF				

NO.	PLATE	NAME
128506	9451	Arm Rotary Shaft Ball Bearing Case Cap
		with 128619
128619	9462	Arm Rotary Shaft Ball Bearing Case Cap
		Pad (felt)
205F	9465	Arm Rotary Shaft Ball Bearing Case Cap
		Screw
308c	9467	Arm Rotary Shaft Ball Bearing Case Cap
		Set Screw
54007	9451	Arm Rotary Shaft Bushing (intermediate)
54089		<i>u u u u</i>
		54007 with 64508 and 64805
64508	9462	Arm Rotary Shaft Bushing (intermediate)
		Oil Pad (braided cotton) long
64805	9462	Arm Rotary Shaft Bushing (intermediate)
		Oil Pad (braided cotton) short
888c	9466	Arm Rotary Shaft Bushing (intermediate)
		Set Screw
128507	9456	Arm Rotary Shaft Bushing (front)
50999с	9465	" " " Set
		Screw
128508	9454	Arm Rotary Shaft Collar with two 1258c
1258c	9466	" " Set Screw
49013	9462	" " Front Bearing Oil
		Pad (braided cotton)
128509	9451	Balance Wheel, 2 in. pulley, with two 430c
128510	9451	" " Cover
	9467	" " Screw
	9466	" Set Screw
128633	9452	Cloth Plate
128513	9462	" Oil Tube with 49092, for oil-
		ing 128520
49092	9462	Cloth Plate Oil Tube Packing (felt)
128514	9452	Blue
38416	9456	opring
725j	9465	ocrew
128515		Cloth Plate Slide complete, Nos. 128514,
100004		two 38416 and four 725j
128634		Cloth Plate complete, Nos. 128513,
1011-	040-	128515, 128633 and two 1198c
1011F		Cloth Plate Screw (left)
50473F 128635	9465	Feed Bar with two 453c.
128636	9455	" " 128635 with 128519 and two
120000		190b
128707		Feed Bar 128636 with 57225 and 128533
	9453	" " Hinge Pin
453c		" " Set Screw
18360		

NO. I	PLATE	NAME
42366	9462	Feed Bar Oil Pad (braided cotton)
128518	9455	" " Wearing Block
128519	9454	" " Plate
190p		" " " Screw
128520	9453	" Connection (forked) with 453c and
120020	0.200	769c
128615		Feed Connection 128520 with 1095F,
128015		128522, 128528, 128532 and two 128521
700-	9465	Feed Connection Clamping Screw
	9466	" Set Screw
		" Slide Block Section
128521	9455	" " Sleeve
128522	9455	" " " Cap
1095ғ	9465	Сар
		Screw
128738	9476	Feed Dog, 19 teeth (16 teeth to the inch)
		with 452c, for $\frac{3}{16}$ in. to $\frac{1}{4}$ in., $\frac{7}{8}$ in. to
		$1\frac{1}{8}$ in. and $\frac{3}{16}$ in. to $\frac{1}{4}$ in. gauges
	9466	Feed Dog Adjusting Screw
	9465	" " Screw
128638	9454	" Lifting Eccentric with two 452c
452c	9466	" Set Screw
50941c	9467	" Regulating Screw
128526	9455	" " Plate
391p	9465	" " Screw
128527	9455	" Regulator with two 1143c
128528		Feed Regulator complete, Nos. 391D,
		399D, 50941c, 128526, 128527, 128530
		and 128531
128529	9457	Feed Regulator Bushing
50999p	9465	" Set Screw
41036	9462	" " Oil Pad (felt)
1143c	9467	" Set Screw
128530	9455	" Slide Block
128531	9455	" " " Stop
399p	9465	" " " Screw
128532	9455	" " Washer
128533	9453	" Rocking Frame with two each 453c
		and 1324c
1324c	9467	Feed Rocking Frame Adjusting Screw
128534	9453	" " Hinge Pin
57235	9456	" " " Bushing
	9466	" " " " " " "
1000	0100	Set Screw
459-	0.100	Feed Rocking Frame Hinge Pin Set Screw
	9466	Looper (self threading) with 590p, 61041
128768	9458	
		and 128702

Sp and
n
128538
n com-
nd two
128621
128021 47 and
on Cap
n End
c with
osition
ic Set
896E
Screw
·····
Pin
Pin " Set
Clamp
Clamp
C
1664E,
55515
16 55

NO. PLAT	
128550 945	1 Looper Eccentric Sleeve Connection with
	128552 and two 175E
128624	- Looper Eccentric Sleeve Connection
128024	
	128550 with 679c
679c 945	
	Screw Stud
1520л 945	
	Screw Stud Nut
128551 945	
	Screw Stud Nut Lock Washer

*128552	- Looper Eccentric Sleeve Connection Cap 5 " " " " " "
175E 946	
	Screw
50942E 946	7 Looper Eccentric Sleeve Connection
	Hinge Screw
1664E 946	
10011 310	Hinge Screw Nut
55515 946	
55515 946	
	Hole Packing (braided cotton)
50379F 946	
128702 945	
61041 945	
590p 945	8 " " Screw
	O DUICW
128740 945	8 " " Guide
128740 945	8 " " Guide
	8 " Guide E: When ordering No. 128740, state gauge
128740 945	8 " " Guide
128740 945 Nот	8 " Guide E: When ordering No. 128740, state gauge required
128740 945 Not 228p 946	8 " Guide E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw
128740 945 Not 228p 946 57244 945	8 " Guide
128740 945 Not 228p 946 57244 945 61181 —	8 " " Guide. E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw. 6 Needle Bar (hollow). - " 57244 with 61094.
128740 945 Not 228p 946 57244 945 61181 — 38456 945	8 " " Guide. E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw
128740 945 Not 228p 946 57244 945 61181 —	8 " " Guide. E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw
128740 945 Not 228p 946 57244 945 61181 — 38456 945	8 " " Guide. E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw
128740 945 NOT 228p 946 57244 945 61181 — 38456 945 1133e 946	8 " " Guide. E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw
128740 945 NOT 228D 946 57244 945 61181 — 38456 945 1133E 946 128554 945	8 " " Guide. E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw
128740 945 NOT 228D 946 57244 945 61181 — 38456 945 1133E 946 128554 945 1133E 946	8 " " Guide. E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw
128740 945 NOT 228p 946 57244 945 61181 — 38456 945 1133e 946 128554 945 1133e 946 128555 945	8 " " Guide. E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw. 6 Needle Bar (hollow). 6 " " 57244 with 61094. 6 " " Bushing (lower). 6 " " " Set Screw. 6 " " " " Set Screw.
128740 945 NOT 228D 946 57244 945 61181 — 38456 945 1133E 946 128554 945 1133E 946	8 " " Guide. E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw. 6 Needle Bar (hollow)
128740 945 NOT 228D 946 57244 945 61181 — 38456 946 1133E 946 128554 945 1133E 946 128555 945	8 " " Guide. E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw. 6 Needle Bar (hollow). 6 " " 57244 with 61094. 6 " " Bushing (lower). 6 " " " Set Screw. 6 " " " " Set Screw. 6 " " " " Set Screw. 6 " " " Needle Bar Connecting Bracket with 1057d, 5037dd and 50379f
128740 945 NOT 228p 946 57244 945 61181 — 38456 945 1133e 946 128554 945 1133e 946 128555 945	8 " " Guide. E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw. 6 Needle Bar (hollow). 6 " " 57244 with 61094. 6 " " Bushing (lower). 6 " " " Set Screw. 6 " " " " Set Screw. 6 " " " " Set Screw. 6 " " " Tonnecting Bracket with 1057p, 50370p and 50379F. Needle Bar Connecting Bracket 128555 with 128556 and 128557. Needle Bar Connecting Bracket Clamp
128740 946 NOT 228D 946 57244 948 61181 — 38456 948 1133E 946 128554 948 1133E 946 128555 948 128713 — 1057D 946	8 " " Guide. E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw. 6 Needle Bar (hollow). 6 " " 57244 with 61094. 6 " " Bushing (lower). 6 " " " Set Screw. 6 " " " " Set Screw. 6 " " " " Set Screw. 6 " " " " Set Screw. 7 Connecting Bracket with 1057D, 50370D and 50379F. Needle Bar Connecting Bracket 128555 with 128556 and 128557. Needle Bar Connecting Bracket Clamping Screw.
128740 945 NOT 228D 946 57244 945 61181 — 38456 946 1133E 946 128554 945 1133E 946 128555 945	8
128740 946 NOT 228D 946 57244 948 61181 — 38456 948 1133E 946 128554 948 1133E 946 128555 948 128713 — 1057D 946	8 " " Guide. E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw. 6 Needle Bar (hollow). 6 " " 57244 with 61094. 6 " " Bushing (lower). 6 " " " Set Screw. 6 " " " (upper). 6 " " " Set Screw. 7 " " Set Screw. 8 " " Connecting Bracket with 1057D, 50370D and 50379F. 8 Needle Bar Connecting Bracket 12855 with 128556 and 128557. 8 Needle Bar Connecting Bracket Clamping Screw. 8 Needle Bar Connecting Link.
128740 945 Not 228b 946 57244 945 61181 — 38456 946 1133E 946 128554 946 128555 946 128713 — 1057b 946 128556 946	8 " " Guide. E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw. 6 Needle Bar (hollow). 6 " " 57244 with 61094. 6 " " Bushing (lower). 6 " " " Set Screw. 6 " " " " Set Screw. 6 " " " " Set Screw. 6 " " Connecting Bracket with 1057p, 50370p and 50379F. Needle Bar Connecting Bracket 12855; with 128556 and 128557. Needle Bar Connecting Bracket Clamping Screw. Needle Bar Connecting Link. 6 " " Hinge Pin
128740 945 Not 228b 946 57244 945 61181 — 38456 946 1133E 946 128554 946 128555 946 128713 — 1057b 946 128556 946 128557 946	8 " " Guide. E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw. 6 Needle Bar (hollow). 6 " " 57244 with 61094. 6 " " Bushing (lower). 6 " " " Set Screw. 6 " " " " Set Screw. 6 " " " " Set Screw. 6 " " Connecting Bracket with 1057p, 50370p and 50379f - Needle Bar Connecting Bracket 12855; with 128556 and 128557 5 Needle Bar Connecting Bracket Clamping Screw. 6 Needle Bar Connecting Link 6 " " " Hinge Pin 15 " " " Hinge Pin 15 " " " " " " " "
128740 946 NOT 228D 946 57244 948 61181 — 38456 948 1133E 946 128554 948 1133E 946 128555 948 128713 — 1057D 946 128556 948 128557 948 50370D 946	8 " " Guide. E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw. 6 Needle Bar (hollow). 6 " " 57244 with 61094. 6 " " Bushing (lower). 6 " " " Set Screw. 6 " " " " Set Screw. 6 " " " " Set Screw. 6 " " Connecting Bracket with 1057p, 50370p and 50379F. - Needle Bar Connecting Bracket 12855; with 128556 and 128557. 5 Needle Bar Connecting Bracket Clamping Screw. 6 Needle Bar Connecting Link. 6 " " " Hinge Pin " " " " Set Screw. 6 Set Screw.
128740 945 Not 228b 946 57244 945 61181 — 38456 946 1133E 946 128554 946 128555 946 128713 — 1057b 946 128556 946 128557 946	8 " " Guide. E: When ordering No. 128740, state gauge required 5 Looper Thread Guide Screw. 6 Needle Bar (hollow)

NO. PLATE	NAME
128618	Needle Bar Lever 128558 with 128557
1-0010	and 128713
50943c 9456	Needle Bar Lever Ball Screw Stud
1259c 9466	" " " " Set
12000 0100	Screw
128559 9463	Needle Bar Lever Connecting Rod with
120000 0200	683F, 54897, 128560, 128561, 128628
	and four 896E
*128560	Needle Bar Lever Connecting Rod Cap
120000	(lower)
896E 9465	Needle Bar Lever Connecting Rod Cap
0002 0200	(lower) Screw
*128561	Needle Bar Lever Connecting Rod Cap
120001	(upper)
896E 9465	Needle Bar Lever Connecting Rod Cap
0301 0100	(upper) Screw
42077 9456	Needle Bar Lever Connecting Rod Guide
171E 9465	" " " " " "
171E 3105	Screw
54897 9456	Needle Bar Lever Connecting Rod Oil
01031 0100	Cup
128628 9462	Needle Bar Lever Connecting Rod Oil
120020 0102	Pad (braided cotton)
683F 9465	Needle Bar Lever Connecting Rod Oil
0001 0100	Pad Stop Screw
128562 9453	Needle Bar Lever Hinge Pin
128563 9456	" " " Bushing
120000 0100	(back)
443c 9466	Needle Bar Lever Hinge Pin Bushing
1100 0100	(back) Set Screw
128564 9456	Needle Bar Lever Hinge Pin Bushing
120001 3100	(front)
743c 9466	Needle Bar Lever Hinge Pin Bushing
1100 0100	(front) Set Screw
54648 9462	Needle Bar Lever Hinge Pin Bushing
01010 0102	(front) Oil Pad (braided cotton)
50282E 9465	Needle Bar Lever Set Screw
61094 9458	" Clamp with four 50014F
50014F 9466	" Set Screw
*128567	Oil Cup for 128568
128569 9463	" " Pad (felt)
*128570	" " Tube
128571 9462	" " Wick (braided cotton)
128568 9463	Oil Cup complete, for oiling 128550, Nos.
	128567 and 128569 to 128571
792c 9465	Oil Cup Screw for 128568
*128572	" " for 128573

NO. PLATE *128574 ——	
	Oil Cup Bracket
44006 9463 *128575 ——	rad (left)
	Tube (long)
*128576	" " (short)
128571 9462	Wick (braided cotton)
128573 9463	Oil Cup complete, for oiling 128538, Nos.
	44006, 128572, 128574 to 128576 and
4000 0400	two 128571
1239F 9465	Oil Cup Screw for 128573
*128577	" Tube for 128741
49092 9462	racking (left)
128741 9463	Bracket and Inread Guide with
	49092 and 128577
61477 9457	Presser Bar with 25303
25303 9457	" Ball, size ¼ in
61046 9457	busning (lower)
1133E 9466	Set Screw
38456 9456	(upper)
1133E 9466	Set Screw.
128580 9457	Guide Bracket with 1750
	and 454c
175c 9465	Presser Bar Guide Bracket Adjusting
	Screw
128581 9457	Presser Bar Guide Bracket Guide
457c 9466	Set
	Screw.
454c 9466	Presser Bar Guide Bracket Set Screw
128582 9457	Litter
57258 9457	ringe Stud
443c 9466	Set Screw
51871 9457	Roller and Stud
50603E 9467	Stop Screw
128583 9457	Litting bracket with 465c and
100504 0450	51871
128584 9452	Presser Bar Lifting Lever
61075 9457	Connecting
	Stud
465c 9466	Presser Bar Lifting Lever Connecting
202 0122	Stud Set Screw
802p 9466	Presser Bar Lifting Lever Hinge Screw.
128742 9464	Spring
54040 9464	Spring (nat)
38468 9457	Stud
18055 9468 128743 ——	root ringe rin
120110	Plate
128647 ——	" Shank with 563J and 1700J

NO. PLATE	NAME
563」 9468	Presser Foot Shank Adjusting Screw " Nut
1700ј 9468	
128744 9468	Presser Foot (hinged) complete, Nos.
	18055, 128647 and 128743
190р 9465	Presser Foot Screw
574w 9467	Pressure Regulating Thumb Screw
1539w 9467	" " Lock
	Nut
128745 9460	Slack Thread Controller
54242 9460	" " Clamp
01212	" " Screw
190p 9465	" " Regulator
128746 9460	" " Holder with 452c.
128589 9461	" " Crank with
128590 9461	
	175p
175p 9465	Slack Thread Regulator Holder Crank
	Clamping Screw
128591 9461	Slack Thread Regulator Holder Crank
	Driver with 456c and 1963
1963 9461	Slack Thread Regulator Holder Crank
1300 0101	Driver Roller and Stud
456c 9466	Slack Thread Regulator Holder Crank
4500 5400	Driver Set Screw
179~ 0466	Slack Thread Regulator Set Screw
452c 9466	Tension (under thread) Disc
2102 9461	" " Post
128747 9458	" " Lock Nut
1620p 9466	" " " " " " "
14017 9460	
	Washer
51570c 9466	Tension (under thread) Regulating
	Thumb Nut
50326c 9467	Tension (under thread) Screw Stud
59539	" " 50326c
00000	with 51570c
46386 9458	Tension (under thread) Separating Disc
10000	" " Spring
0000	" " " Bushing
59537 9459	(large)
	(large)
59538 9459	Tension (under thread) Spring Bushing
	(small)
128748 9460	Tension (under thread) Thread Guide
128749 9464	
376р 9465	DCIEW
2102 9461	" " Disc
2102 9461 51570c 9466	" " Disc

NO.	PLATE			NAME		
32572	9461	Tension	(upper	thread)	Releasing	Disc.
54988	9461	"	**	"	"	Pin
54246	9464	"	"	"	"	Shaft
54872	9461	"	"	"	"	66
		Crank	with 6	324c		
54737	9458				Releasing	
		Crank	Conne	ecting Liv	nk	Diltit
110	D 9465	Tension	(upper	thread)	Releasing	Shaft
		Crank	Conne	ecting Li	nk Hinge S	Grew
624	g 9466				Releasing	
0=1	0 100	Crank	Set Se	row	·····	Shart
3166	9466	Tension	(unnar	throad)	Releasing	C11 - C1
010.	0 100	Stop S	Gerow	tiffeau)	Releasing	Snart
1547	9466	m:	/			
1947.	9400	Tension	(upper	thread)	Releasing	Shaft.
		Stop S	crew N	ut		
503260	9467	Tension	(upper	thread) S	crewStud.	
59539		"	- 44	"	" " 5	0326c
		with 5	1570c			
59535	9459	Tension	(upper	thread)	Spring	
59537	9459	"	"	"	" Bu	shing
		(large)				
59538	9459	Tension	(upper	thread)	Spring Bu	chine
		(small)	(apper	cin cad)		ginne
57076	9458	Tongion	(umman	+11)	(D) 1	
128750	9460	Throad ((upper	El-t	Thread (Guide
1521л		"	"	" N		
128654	9463	"		-	Vut	
1235F		"	**	rrotecto	r	
128751	9460	"	"		Screw	
120101	3100	throad		Inread	Guide, for	rone
100770	0.100	mi a				
128752	9460	Thread (under)	Thread	Guide, for	· two
128753	0460	threads	5			
128793	9460	Thread (under)	Thread (Guide, for	three
100=1		threads	3			
128754	9460	Thread (under)	Thread	Guide, for	four
******		threads	3			
128755	9460	Thread (under)	Thread	Guide H	older
		with fo	ur 1498	Bc		
128756	9460	Thread (under)	Thread	Guide H	older
		Post				
446c	9466	Thread (under)	Thread	Guide He	older
		Post Se	t Screw	T		W. 2000
171 _D	9465	Thread (under)	Thread	Guide He	older
		Screw				
1498c	9466	Thread (u	inder)	Thread G	uide Set S	crew

NO. PLATE	NAME
128757	Thread (under) Thread Guide complete,
220.01	Nos. 171p and 128751 to 128756
Note:	When ordering No. 128757, state
	gauge required.
128758 9460	Thread (upper) Eyelet
128759 9460	" " for 128558
190p 9465	" " Screw
50945c 9467	" " Stud
2102 9461	" " Nipper Disc
51570c 9466	" " Regulating
515700 9400	Thumb Nut
128604 9459	Thread (upper) Nipper Regulator
190р 9465	" " Ad-
2002 0200	justing Screw
32572 9461	Thread (upper) Nipper Releasing Disc
128761 9460	" " " Pin.
51029c 9467	" " Screw Stud
128714	
	51029c with 51570c
46386 9458	Thread (upper) Nipper Separating Disc.
128656 9459	" Spring
59537 9459	" " " Bushing
	(large)
59538 9459	Thread (upper) Nipper Spring Bushing
	(small)
128762 9460	Thread (upper) Nipper Thread Guide
128763 9460	" Take-up
50379F 9465	" Set Screw
128764 9476	Throat Plate with 128765 and two 665D,
	for 128738
128612 9463	Throat Plate Holder
50154p 9465	" " Screw
1011F 9465	" Screw
1198c 9465	" Supporting Screw
128765 9476	" Thread Retainer for 128764
Note:	When ordering No. 128765, state
	gauge required.
665p 9465	Throat Plate Thread Retainer Screw
0.000	The second secon

ACCESSORIES

NO.	PLATE	NAME
120344	8941	Oiler (copper plated) with 120345
120345	8941	" Spout, 5 in. long
26026	8941	Screw Driver (large)
26485	8941	" (small)
128771	9464	Threading Wire, for self threading loopers
120341	8941	Tweezers (curved)
4822	8941	Wrench for 1547
8908	8941	" " 1520
19079	9462	" " 1324

MACHINE BASE WITH BELT GUARD

NO.	PLATE			N	AME
54356	8980	Belt C	uard w	rith 1	192c
27347	9490	"	" E	linge !	Pin
11920	9467	"	"	"	" Set Screw
11920	9467	"	" S	et Scr	rew
54357	8980	Machi	ne Bas	e with	h 1192c
510721	E 9466	"	66	Bolt	t with 51581E
515811	9466	"	66	"	Nut
6055	8979	"	"	"	" Washer
49123	8979	"	"	Oil	Pipe
60884	8979	"	44	"	" Plug
57285	8979		Cus	hion ((felt)
9481	E 9466	"			fasten machine to base
54358		Machi	ne Base	e with	Belt Guard complete,
		Nos	. 27347	, 4912	3, 54356, 54357, 60884,
		thre	e each	6055,	51072E and four each
		948	E and 5	7285.	

EDGE FOLDERS

NO.	PLATE	NAME
120549	9485	Edge Folder on Shank, for turning the
		right hand edge under, for button or
		buttonhole facings
120640	9485	Edge Folder on Shank (left) for starting
		from bottom of garment
120641	9485	Edge Folder on Shank (right) for starting
120011	0100	from neck of garment
120547	9452	Cloth Plate Slide
120041		
38416	9456	" " Spring
725	9465	" " Screw
120548		Cloth Plate Slide Complete, Nos. 120547,
223010		two 38416 and four 7251
1493	0465	Edge Folder Screw

FOLDER ON SHANK

NO.	PLATE	NAME
120593	9484	Folder on Shank, for making bluff centres
		on shirts
14233	9465	Folder Screw

STRIP FOLDERS STRIP FOLDERS ON BRACKET

	J	TOEDERS ON BRACKET
NO.	PLATE	NAME
120633		Strip Folder with left hand interlining guide for 120635
120697		Strip Folder with right hand interlining
		guide for 120698
120634	9486	Strip Folder Bracket for 120635, 120637, 120698 and 120703
1443 ј	9465	Strip Folder Bracket Screw for 120635,
		120637, 120698 and 120703
120635	9484	Strip Folder on Bracket with left hand
		interlining guide complete, for centre
		work on shirts, Nos. 120633, 120634
		and two 1443 _J
120698	9486	Strip Folder on Bracket with right hand
		interlining guide complete, for centre
		work on shirts, Nos. 120634, 120697
100000		and two 1443J
120636	0.100	Strip Folder for 120637
120637	9486	Strip Folder on Bracket complete, for
		buttonhole facings or centre work on shirts, Nos. 120634, 120636 and two
		1443J
120702		Strip Folder for 120703.
120702	9486	Strip Folder on Bracket complete, for
120100	0.200	sleeve plackets, Nos. 120634, 120702
		and two 1443J
7241	9465	Strip Folder Hinge Screw
1423ı	9465	" " Screw
120638	9464	" " Throw-out Arm
13770	9467	" " " Adjusting
		Screw (eccentric)
1547 _J	9466	Strip Holder Throw-out Arm Adjusting
0.00	0.100	Screw Nut
8530	9466	Strip Folder Throw-out Arm Adjusting Screw Set Screw
120642	9464	Strip Folder Throw-out Arm Bracket
120042	9404	with 853c

NAME
Strip Folder Throw-out Arm Bracket
120642 with 946p, 1377c, 1547j, 36006,
50152p and 120638, for 120635, 120637,
120698 and 120703
Strip Folder Throw-out Arm Bracket
Serew
Strip Folder Throw-out Arm Hinge
Screw
Strip Folder Throw-out Arm Hinge
Screw Washer

STRIP FOLDERS ON SHANK

NO. P	LATE	NAME
120550	9485	Strip Folder on Shank, for button stays.
120701	9487	" " " for under facing
		strips, for button or buttonhole facings
120699	9487	Strip Folder Strip Guide for 120700
120700	9487	Strip Folder on Shank with 120699 and
		two 1423 _J , for long or short strips, for
		sleeve or button facings
1423ј	9465	Strip Folder Strip Guide Screw for 120700
120691	9488	Strip Folder on Shank with adjustable
		guide using strip to fold over and turn-
		ing in both edges and for inserting body
		of garment in one operation
120547	9452	Cloth Plate Slide
38416	9456	" " Spring
725 _J	9465	" " " Screw
120548		Cloth Plate Slide complete, Nos. 120547,
		two 38416 and four 725j
1423ј	9465	Strip Folder Screw

LAP SEAM FELLERS

FOR NO. 149-2 MACHINE

NO. PLATI	NAME
120657 948	3 Lap Seam Feller on Shank (spring yield-
	ing) for shirt work
120704 948	
	1443J, for sleeving
120705 948	2 Feed Dog, 19 teeth (16 teeth to the inch)
	with 452c, for $\frac{3}{16}$ in. gauge
120658 948	1 Feed Dog, 19 teeth (16 teeth to the inch)
	with 452c, for $\frac{1}{4}$ in. and $\frac{5}{16}$ in. gauges.
120659	- Presser Foot Plate for 120660

	NO.	PLATE	NAME
12	0660	9481	Presser Foot (hinged) complete, Nos.
			18055, 120659 and 128647
12	0706	9482	Throat Plate with 128724 and two 665D,
			for 120705
12	20661	9481	Throat Plate with 128724 and two 665D,
			for 120658
	1443л	9465	Lap Seam Feller Screw, to fasten folder
	11100	0100	to shank, for 120704
	14931	9465	Lap Seam Feller Screw, to fasten shank
	11203	0.100	to slide
			ou shuc

FOOT LIFTER PARTS

NO.	PLATE	NAME
6439		Chain, 36 in. to 45 in., with 56864 and
		56865
	Note:	When ordering No. 6439, state length required.
4879	8941	Chain Connecting Link
56864	8941	" Hook (large)
56865	9462	" " (small)
126249	8980	Treadle
4882	8941	" Shaft
126250	8941	" Spring
126251	8980	" Stand
126252	8980	Treadle complete, Nos. 4882, 126249 to
		126251 and two wood screws 1 in. No.
		16

KNEE LIFTER PARTS

NO.	PLATE	NAME
37563		Chain, length 15 inches, with 56864 and
		56865
56864	8941	Chain Hook (large)
56865	9462	" (small)
2763	8980	Rock Shaft
12242	8980	" Hanger with two wood screws
		1 in. No. 10
6335	8980	Rock Shaft Knee Arm
6336		Rock Shaft Knee Arm complete, Nos.
		2766, 2767 and 6335
2766	8980	Rock Shaft Knee Arm Hub with 356c
	c 9467	" " " Set Screw
	8980	" " Plate with 356c

NO.	PLATE			NA	ME		
356c	9467	Rock	Shaft	Knee Pl	ate Set 8	Screw.	
6337	8980	"	"	Lifting	Bracke	t with	1 two
		356					
7125	8980	Rock	Shaft	Lifting 1	Bracket	Hook.	
356c	9467	"	"	"	"	"	Set
		Scr	ew				
356c	9467			Lifting 1			
2770	8980	"	**	Stop Do			
356c	9467	"	"		Set Se	rew	
23767	8980	Rock		complet			
				7, 7125 a			

BENCH STAND

NO.	PLATE	NAME
79757	-	Bench Stand with 27998, two each 41538, 124500, three wood screws 1½ in. No.
		14, four 60656, eight wood screws 5/8 in.
		No. 5 and sixteen wood screws 5/8 in.
		No. 7
124500	8952	Flap Hinge
27998	8952	" Hook and Eye (brass) with wood
		screw ½ in. No. 5
126247	8952	Flush Bolt
126248	8952	" " Plate
41538		Flush Bolt with Plate complete, Nos.
		126247, 126248 and four brass wood
		screws 5/8 in. No. 4
60656	8952	Hinge

TAPE HOLDERS TAPE HOLDER

NO. P	LATE				NAME	
*120671		Tape	Reel	Disc.		
120675	9489	"	"			with 120676
*120676		"	"			
120677	9463	"	"			Stud
120678	9489	"	"			
138в	9465	"	"			ew
27618	9489	"	"			138в
120679	9489	"	"			
120682	9489	"	"	66	"	Bracket with 446c
		and	1 4486			
446c	9466	Tape	Reel	Tape (Tuide	Bracket Set Screw
448c	9466	"	"	"		Set Screw

NO.	PLATE	NAME
120681	9489	Tape Holder, 9 in. disc, complete, for
		interlining centering work, Nos. 27618,
		120675, 120677 to 120679, 120682 and
		three wood screws 11/4 in. No. 12

TAPE HOLDER

FOR UNDER THE BENCH

NO.	PLATE	NAME
*120671		Tape Reel Disc
120672	9489	" " 120671 with 120673
*120673	-	" " " Hub
120674	9489	" " Rod
28012	9490	" " Screw Eye
120680	9489	Tape Holder, 9 in. disc, complete, for
		under the bench, Nos. 28012, 120672
		and 120674

THREAD UNWINDER

FOR FOUR SPOOLS, FOR NO. 149-2 MACHINE

NO. PLATE	NAME
225395 8953	Spool Rest (for two spools) with 201018c
225388 8953	" " Rod
200383c 9467	" " Set Screw
201018c 9467	" " Set Screw
202490 8953	" Stand with 200383c
225391 8953	Thread Guide
201696」 9467	" " Lock Nut
225392 8953	" Rod with 208E and 225393
208E 9465	" " Serew
225393 9467	" " Washer
225398 8953	Thread Unwinder complete, Nos. 201696J,
	202490, 225388, 225392, two 225395,
	four 225391 and three wood screws 7/8
	in. No. 12
27739 9464	Thread Cone (wood), for large cones
225390	" Holder, for inverted cones
Note:	Nos. 27739 and 225390 are used with,

From the library of: Superior Sewing Machine & Supply LLC

but not included in 225398

THREAD UNWINDER

FOR EIGHT SPOOLS, FOR NO. 149-4 MACHINE

	NO.	PLATE	NAME
	27623	7931	Spool Pin
	1550	9465	" Set Screw
	41534	7931	" Rest
	41535		" " 41534 with 1149c and four
			each 155c and 27623
	11490	9465	Spool Rest Set Screw
	202490	7931	" Stand with 200383c
	27739	7931	Thread Cone (wood)
	41633	7931	" Guard with 208E and four 41569
	41569	9458	" " Eyelet
	41638	7931	" " Rod
	60300	7931	" " Connection with two
			453c
	4530	9466	Thread Guard Rod Connection Set Screw
5	2003830	9467	" " Set Screw
	208E	9465	" " Screw
	41635	9490	" Tension Bracket with 1750
	175r	9465	" " Set Screw
	41636	-	Thread Guard Tension Bracket complete,
			Nos. 418p, 1562j, 41635, 43808 and
			two 2455
	2455	9458	Thread Guard Tension Disc
	4181	9467	" " Screw Stud
	1562ј	9466	" " " Regu-
			lating Thumb Nut
	43808	9490	Thread Guard Tension Spring
	60301	7931	Thread Unwinder complete, Nos. 60300,
			202490, two each 41535, 41633, 41638,
			three wood screws 1 in. No. 12 and eight
			each 27739 and 41636

OBSOLETE PARTS

FOR MACHINE NO. 149-2

NO.	PLATE	NAME
128637	9477	Feed Dog, 19 teeth (16 teeth to the inch)
		with 452c, for $\frac{11}{16}$ in. to 1 in. gauges
128661	9478	Feed Dog, 19 teeth (16 teeth to the inch)
		with 452c, for $1\frac{1}{16}$ in. to $1\frac{1}{4}$ in. gauges
128700	9479	Feed Dog, 19 teeth (16 teeth to the inch)
		with 452c, for $\frac{1}{2}$ in. to $\frac{5}{8}$ in. gauges
128705	9480	Feed Dog, 19 teeth (16 teeth to the inch)
		with 452c, for 1% in, to 11/2 in, gauges

NO.	PLATE	NAME
128639	9490	Looper (closed eye)
128642	9490	" Eccentric with two 889c, use
		128728
8890	9466	Looper Eccentric Set Screw
128553		Needle Bar 57244 with 128565, use
		128766
128565	9490	Needle Clamp with 128566, 128620 and
		two each 460r and 620r, use 128767
128566	9490	Needle Clamp Thread Guide (left)
620r	9466	" " " Screw
128620	9490	" " " " Screw " " " (right) " " " Screw " Set Screw
6201	9466	" " Screw
460r	9466	" Set Screw
54108	_	Oil Tube
128644		" and Thread Guide Bracket
128645	9464	Oil Tube and Thread Guide Bracket
		complete, Nos. 49092, 54108, 128644
		and 128657, use 128725
128646		Presser Foot Plate for 128648
128648	9490	Presser Foot (hinged) complete, Nos.
		18055, 128646 and 128647, use 128719
128588	9490	Slack Thread Regulator
128655	9490	Thread (upper) Eyelet for 128558
*128657		" Guide for 128645
128610	9490	" Take-up
54095	9490	" " Thread Re-
		tainer
1449	н 9467	Thread (upper) Take-up Thread Re-
		tainer Screw
54716	9458	Thread (upper) Take-up Thread Re-
		tainer Spring
128658	9477	Throat Plate with 128659 and two 665D,
		for 128637
128662	9478	Throat Plate with 128659 and two 665D,
		for 128661
128701	9479	Throat Plate with 128659 and two 665D,
	- 7	for 128700
128706	9480	Throat Plate with 128659 and two 665D,
		for 128705
128659	9479	Throat Plate Thread Retainer for 128658,
		128662, 128701 and 128706

FOR MACHINES Nos. 149-2 and 149-4

NUMERICAL LIST OF PARTS

NO. PLATE	NAME
110р 9465	Tension (upper thread) Releasing Shaft
	Crank Connecting Link Hinge Screw.
138в 9465	Tape Reel Rod Set Screw for 27618
142E 9465	Looper Carrier Driver Connection End
	Bearing Cap Screw for 128621
144R 9467	Balance Wheel Cover Screw
155c 9465	Thread Unwinder Spool Pin Set Screw
	for 41535
157D 9465	Feed Dog Screw
171p 9465	Thread (under) Thread Guide Holder
	Screw for 128757
171E 9465	Needle Bar Lever Connecting Rod Guide
	Screw
175c 9465	Presser Bar Guide Bracket Adjusting
	Screw for 128580
175p 9465	Looper Carrier Rock Shaft Nut Clamp
	Screw for 128547
175D 9465	Slack Thread Regulator Holder Crank
	Clamping Screw for 128590
175D 9465	Thread Unwinder Thread Guard Tension
	Bracket Set Screw for 41635
175E 9465	Looper Eccentric Sleeve Connection Cap
	Screw for 128550
176p 9465	Slack Thread Controller Clamp Screw
	for 149-2 Machine
176p 9465	Thread (under) Guide Screw for 128651
	and 128652
185b 9465	Thread (under) Guide Screw for 128774
	and 128775
190 _D 9465	Arm Back Cover Screw.
190р 9465	Feed Bar Wearing Plate Screw for 128636
190р 9465	Presser Foot Screw
190р 9465	Slack Thread Controller Clamp Screw
	for 149-4 Machine
190р 9465	Thread (upper) Eyelet Screw
190р 9465	Tripper Regulator Au-
00= 010=	justing Screw
205F 9465	Arm Rotary Shaft Ball Bearing Case Cap
000= 040=	Screw for 128627 Thread Unwinder Thread Guide Rod
208E 9465	Screw for 225392
208E 9465	Thread Unwinder Thread Guard Screw
ZUSE 9405	for 41633
	101 11000

NO. PLATE	NAME
228D 9465	Looper Thread Guide Screw for 128660
	and 128769
286р 9467	Arm Side Cover Thumb Screw
308c 9467	" Rotary Shaft Ball Bearing Case Cap
	Set Screw.
316c 9466	Tension (upper thread) Releasing Shaft
	Stop Screw
356c 9467	Rock Shaft Knee Arm Hub Set Screw
	for 2766
356c 9467	Rock Shaft Knee Plate Set Screw for
050 0105	2767
356c 9467	Rock Shaft Lifting Bracket Hook Set
050 0105	Screw for 6337
356c 9467	for 6337
050- 0407	Rock Shaft Stop Dog Set Screw for 2770
356c 9467 376p 9465	Tension (upper thread) Bracket Screw
391p 9465	Feed Regulating Screw Plate Screw for
991D 9409	128528
399р 9465	Feed Regulator Slide Block Stop Screw
999D 9409	for 128528
418p 9467	Thread Unwinder Thread Guard Tension
1100 0101	Screw Stud for 41636
430c 9466	Balance Wheel Set Screw for 128509
443c 9466	Looper Carrier Rock Shaft Hinge Pin Set
1100 0100	Screw
443c 9466	Needle Bar Lever Hinge Pin Bushing
	(back) Set Screw
443c 9466	Presser Bar Lifter Hinge Stud Set Screw
446c 9466	Tape Reel Tape Guide Bracket Set Screw
	for 120682
446c 9466	Thread (under) Guide Holder Set Screw
	for 149-2 Machine
446c 9466	Thread (under) Thread Guide Holder
	Post Set Screw for 149-4 Machine
448c 9466	Tape Reel Tape Guide Set Screw for
	120682
452c 9466	Feed Dog Adjusting Screw for 120658,
	120705, 128637, 128661, 128700, 128705,
	128716, 128726, 128729, 128731, 128738,
150 0100	128772 and 128821
452c 9466	Feed Lifting Eccentric Set Screw for
170- 0100	128638 Driver Franchic Set
452c 9466	Looper Carrier Driver Eccentric Set Screw for 128641
452c 9466	Slack Thread Regulator Set Screw for
4020 9400	128589
	1200000

NO. PLATE	NAME
453c 9466	Feed Bar Hinge Pin Set Screw for 128635
453c 9466	" Connection Set Screw for 128520
453c 9466	" Rocking Frame Hinge Pin Set Screw
	for 128533
453c 9466	Feed Rocking Frame Hinge Pin Bushing
2000 0-00	Set Screw
453c 9466	Thread Unwinder Thread Guard Rod
2000 0200	Connection Set Screw for 60300
454c 9466	Presser Bar Guide Bracket Set Screw for
1010 0100	128580
456c 9466	Slack Thread Regulator Holder Crank
1000 0100	Driver Set Screw for 128591
457c 9466	Presser Bar Guide Bracket Guide Set
1010 0100	Screw
460F 9466	Needle Set Screw for 128565, obsolete
465c 9466	Presser Bar Lifting Lever Connecting
4000 9400	Stud Set Screw for 128583
563J 9468	Presser Foot Shank Adjusting Screw for
9093 9400	128647
574w 9467	Pressure Regulating Thumb Screw
590p 9458	Looper Thread Guard Screw for 128768
620F 9466	Needle Clamp Thread Guide (left) Screw
020F 9400	for 128565, obsolete
620F 9466	Needle Clamp Thread Guide (right)
020F 9400	Screw for 128565, obsolete
624c 9466	Tension (upper thread) Releasing Shaft
0240 9400	Crank Set Screw for 54872
665p 9465	Throat Plate Thread Retainer Screw for
0000 0400	120661,120706,128658,128662,128701,
	128706, 128723, 128727, 128730, 128732,
	128737, 128764, 128770, 128773 and
	128822
679c 9454	Looper Eccentric Sleeve Connection Ball
0100 0101	Screw Stud for 128624
683F 9465	Needle Bar Lever Connecting Rod Oil
0001 0100	Pad Stop Screw for 128559
724p 9465	Strip Folder Hinge Screw
725j 9465	Cloth Plate Slide Spring Screw for 120548
1200 0100	and 128515
743c 9466	Needle Bar Lever Hinge Pin Bushing
. 100 0-00	(front) Set Screw
769c 9465	Feed Connection Clamping Screw for
.000 0100	128520
791c 9466	Looper Carrier Driver Eccentric Position
. 020 0100	Screw for 128641
792c 9465	Oil Cup Screw for 128568
802p 9466	Presser Bar Lifting Lever Hinge Screw.

NO. PLATE	NAME
853c 9466	Strip Folder Throw-out Arm Adjusting
	Screw Set Screw for 120642
888c 9466	Arm Rotary Shaft Bushing (intermedi-
	ate) Set Screw
889c 9466	Looper Eccentric Set Screw for 128642,
	obsolete
896E 9465	Looper Carrier Driver Connection Cap
	Screw for 128630
896E 9465	Looper Carrier Holder Clamping Screw
-	for 128543
896E 9465	Needle Bar Lever Connecting Rod Cap
Vester	(lower) Screw for 128559
896E 9465	Needle Bar Lever Connecting Rod Cap
	(upper) Screw for 128559
898c 9465	Looper Carrier Screw
916c 9467	Tension (under thread) Screw Stud for
	44209
946p 9467	Strip Folder Throw-out Arm Hinge Screw
	for 120639
948E 9466	Machine Screw to fasten machine to base,
	for 54358
997E 9465	Tension (under thread) Bracket Screw
	for 149-2 Machine
1011F 9465	Cloth Plate Screw (left)
1011F 9465	Throat Plate Screw
1057p 9465	Needle Bar Connecting Bracket Clamp-
	ing Screw for 128555
1095F 9465	Feed Connection Slide Block Sleeve Cap
	Screw for 128615
1133E 9466	Needle Bar Bushing (lower) Set Screw.
1133E 9466	" " (upper) Set Screw
1133E 9466	Presser Bar Bushing (lower Set Screw
1133E 9466	" (upper) Set Screw.
1143c 9467	Feed Regulator Set Screw for 128527
1145D 9468	Presser Foot Extension Connection Hinge
	Screw for 128736
1149c 9465	Thread Unwinder Spool Rest Set Screw
	for 41535
1192c 9467	Belt Guard Hinge Pin Set Screw for 54357
1192c 9467	" Set Screw for 54356
1198c 9465	Throat Plate Supporting Screwfor128634
1235F 9465	Thread (under) Protector Screw
1239F 9465	Oil Cup Screw for 128573
1258c 9466	Arm Rotary Shaft Collar Set Screw for
1050 0100	128508
1259c 9466	Needle Bar Lever Ball Screw Stud Set
	Screw for 128558

NO. PLATE	NAME
1324c 9467	Feed Rocking Frame Adjusting Screw
	for 128533
1377c 9467	Strip Folder Throw-out Arm Adjusting
	Screw (eccentric) for 120639
1423ј 9465	Edge Folder Screw
1423ј 9465	Folder Screw
1423л 9465	Lap Seam Feller Screw, to fasten shank
	to slide
1423л 9465	Strip Folder Screw
1423л 9465	" " Strip Guide Screw for 120700
1443л 9465	Lap Seam Feller Screw, for 120704
1443л 9465	Strip Folder Bracket Screw for 120635,
11103 3100	120637, 120698 and 120703
1440 0407	Thread (upper) Take-up Thread Re-
1449н 9467	tainer Screw for 149-2 Machine, obso-
	lete
1400 - 0400	Thread (under) Thread Guide Set Screw
1498c 9466	for 128755
1500- 0454	Looper Eccentric Sleeve Connection Ball
1520ј 9454	Screw Stud Nut
1501- 0400	Thread (under) Eyelet Nut.
1521J 9466 1539w 9467	Pressure Regulating Thumb Screw Lock
1559W 9467	
1547ј 9466	Nut
19413 9400	Stop Screw Nut
1717 0100	
1547ј 9466	Strip Folder Throw-out Arm Adjusting
***** 0.100	Screw Nut for 120639
1560c 9466	Tension (under thread) Regulating
1500 0100	Thumb Nut for 44209
1562л 9466	Thread Unwinder Thread Guard Tension
	Serew Stud Regulating Thumb Nut
	for 41636
1620p 9466	Tension (under thread) Post Lock Nut
	for 149-4 Machine
1664E 9466	Looper Eccentric Sleeve Connection
	Hinge Screw Nut for 128665
1700л 9468	Presser Foot Shank Adjusting Screw Nut
	for 128647
1963 9461	Slack Thread Regulator Holder Crank
	Driver Roller and Stud for 128591
2102 9461	Tension (under thread) Disc
2102 9461	" (upper thread) Disc
2102 9461	Thread (upper) Nipper Disc
2455 9458	" Unwinder Thread Guard Tension
	Disc for 41636
2656 9468	Presser Foot Spring for 128736

NO.	PLATE	NAME
2763	8980	Rock Shaft for 23767
2766	8980	" Knee Arm Hub with 356c
		for 6336
2767	8980	Rock Shaft Knee Plate with 356c, for
		6336
2770	8980	Rock Shaft Stop Dog with 356c, for 23767
4822	8941	Wrench for 1547 (Accessories)
4879	8941	Chain Connecting Link
4882	8941	Treadle Shaft for 126252
6055	8979	Machine Base Bolt Nut Washer for 54358
6335	8980	Rock Shaft Knee Arm for 6336
6336		Rock Shaft Knee Arm complete, for
		23767, Nos. 2766, 2767 and 6335
6337	8980	Rock Shaft Lifting Bracket with two
		356c, for 23767
6439		Chain, 36 in. to 45 in., with 56864 and
		56865
7125	8980	Rock Shaft Lifting Bracket Hook for
		23767
8908	8941	Wrench for 1520 (Accessories)
10148	9461	Tension (under thread) Spring for 149-2
		Machine
12242	8980	Rock Shaft Hanger with two wood screws
		1 in. No. 10, for 23767
14017	9460	Tension (under thread) Post Lock Nut
		Washer for 149-4 Machine
17547	9461	Tension (under thread) Thread Guide
155.15	0.101	for 149-2 Machine
17547	9461	Tension (upper thread) Thread Guide
100==	0.400	for 149-2 Machine.
18055	9468	Presser Foot Hinge Pin for 120660,
10070	0400	128648, 128719, 128736 and 128744
19079 23767	9462 8980	Wrench for 1324 (Accessories)
20101	0900	Rock Shaft complete, Nos. 2763, 2770, 6336, 6337, 7125 and two 12242
25303	9457	Presser Bar Ball, size ¼ in., for 61477
26026	8941	Screw Driver (large) Accessories
26485	8941	" (small) Accessories
27347	9490	Belt Guard Hinge Pin for 54358
27618	9489	Tape Reel Stand with 138B, for 120681.
27623	7931	Thread Unwinder Spool Pin for 41535.
27739	9464	" " Thread Cone (wood)
		for 60301 and 225398
27998	8952	Flap Hook and Eye (brass) with wood
		screw ½ in. No. 5, for 79757
28012	9490	Tape Reel Screw Eye for 120680
32572	9461	Tension (upper thread) Releasing Disc.
		TI TOTAL TOTAL DISCI.

NO.	PLATE	NAME
32572	9461	Thread (upper) Nipper Releasing Disc
36006	9490	Strip Folder Throw-out Arm Hinge
		Screw Washer for 120639
37563		Chain, length 15 in. with 56864 and 56865
38416	9456	Cloth Plate Slide Spring for 120548 and
		128515
38456	9456	Needle Bar Bushing (lower)
38456	9456	Presser Bar Bushing (upper)
38468	9457	" " Spring Stud
41036	9462	Feed Regulator Oil Pad (felt)
41534	7931	Thread Unwinder Spool Rest for 41535.
41535		" " " 41534 with
		1149c and four each 155c and 27623,
		for 60301
41538		Flush Bolt with Plate complete, for
		79757, Nos. 126247, 126248 and four
		brass wood screws 5% in. No. 4
41569	9458	Thread Unwinder Thread Guard Eyelet
		for 41633
41633	7931	Thread Unwinder Thread Guard with
		208E and four 41569, for 60301
41635	9490	Thread Unwinder Thread Guard Tension
		Bracket with 175p, for 41636
41636		Thread Unwinder Thread Guard Tension
		Bracket complete, for 60301, Nos.
		418p, 1562j, 41635, 43808 and two 2455
41638	7931	Thread Uuwinder Thread Guard Rod for
		60301
42077	9456	Needle Bar Lever Connecting Rod Guide
42366		Feed Bar Oil Pad (braided cotton)
43808	9490	Thread Unwinder Thread Guard Tension
		Spring for 41636
44006	9463	Oil Cup Pad (felt) for 128573
44209		Tension (under thread) Screw Stud 916c
		with 1560c, for 149-2 Machine
46009		Thread (upper) Eyelet for 149-2 Machine
46035	9461	Slack Thread Controller Clamp for 149-2
		Machine
46386	9458	Tension (under thread) Separating Disc
		for 149-4 Machine.
46386	9458	Thread (upper) Nipper Separating Disc
		for 149-4 Machine.
49013	9462	Arm Rotary Shaft Front Bearing Oil Pad
10000	0.100	(braided cotton)
49092	9462	Cloth Plate Oil Tube Packing (felt) for
		128513

44

ate) for 54089.....

NO.	PLATE	NAME
54040	9464	Presser Bar Spring (flat)
54089	-	Arm Rotary Shaft Bushing (intermedi-
		ate) 54007 with 64508 and 64805
54095	9490	Thread (upper) Take-up Thread Re-
		tainer for 149-2 Machine, obsolete
54108		Oil Tube for 128645, obsolete
54242	9460	Slack Thread Controller Clamp for 149-4
0	0.200	Machine
54246	9464	Tension (upper thread) Releasing Shaft
0.12.10	0101	for 149-4 Machine
54356	8980	Belt Guard with 1192c for 54358
54357	8980	Machine Base with 1192c, for 54358
54358	0300	Machine Base with Belt Guard complete,
94999		Nos. 27347, 49123, 54356, 54357, 60884,
		three each 6055, 51072E and four each
		948E and 57285
*1010	0.100	948E and 5/285
54648	9462	Needle Bar Lever Hinge Pin Bushing
		(front) Oil Pad (braided cotton)
54716	9458	Thread (upper) Take-up Thread Re-
		tainer Spring for 149-2 Machine, obsolete
54737	9458	Tension (upper thread) Releasing Shaft
		Crank Connecting Link for 149-4
		Machine
54872	9461	Tension (upper thread) Releasing Shaft
		Crank with 624c
54897	9456	Needle Bar Lever Connecting Rod Oil
		Cup for 128559
54988	9461	Tension (upper thread) Releasing Pin
54989	9461	" " " Shaft
		for 149-2 Machine
54990	9459	Tension (upper thread) Releasing Shaft
		Spring for 149-2 Machine
55515	9462	Looper Eccentric Sleeve Connection Oil
		Hole Packing (braided cotton) for
		128665
56864	8941	Chain Hook (large) for 6439 and 37563.
56865	9462	" (small) for 6439 and 37563.
57076	9458	Tension (upper thread) Thread Guide
0.0.0	0.200	for 149-4 Machine
57225	9453	Feed Bar Hinge Pin for 128707
57235	9456	" Rocking Frame Hinge Pin Bushing
57244	9456	Needle Bar (hollow) for 61181, 128553
0.211	0.100	and 128766
57258	9457	Presser Bar Lifter Hinge Stud
57285	8979	Machine Cushion (felt) for 54358
59534	9459	Tension (under thread) Spring for 149-4
59554	9409	Machine
		Machine

NO.	PLATE	NAME
59535	9459	Tension (upper thread) Spring
59537	9459	" (under thread) Spring Bushing
		(large) for 149-4 Machine
59537	9459	Tension (upper thread) Spring Bushing
		(large)
59537	9459	Thread (upper) Nipper Spring Bushing
		(large)
59538	9459	Tension (under thread) Spring Bushing
		(small) for 149-4 Machine
59538	9459	Tension (upper thread) Spring Bushing
		(small)
59538	9459	Thread (upper) Nipper Spring Bushing
40000	0200	(small)
59539		Tension (under thread) Screw Stud
00000		50326c with 51570c for 149-4 Machine
59539		Tension (upper thread) Screw Stud
00000		50326c with 51570c
60300	7931	Thread Unwinder Thread Guard Rod
00000	1301	Connection with two 453c, for 60301.
60301	7931	Thread Unwinder complete, for eight
00001	1001	spools, for 149-4 Machine, Nos. 60300,
		202490, two each 41535, 41633, 41638,
		three wood screws 1 in. No. 12 and
		eight each 27739 and 41636
60656	8952	Hinge for 79757
60884	8979	Machine Base Oil Pipe Plug for 54358
61041	9458	Looper Thread Guard Pin for 128768
61046	9457	Presser Bar Bushing (lower)
61075	9457	" " Lifting Lever Connecting
01075	9401	Stud
61094	9458	Needle Clamp with four 50014F, for 61181
61181	9400	" Bar 57224 with 61094, for 149-4
01101		Machine
61477	9457	Presser Bar with 25303.
62527	9468	" Foot Extension Hinge Pin for
02021	9400	128733
64508	9462	Arm Rotary Shaft Bushing (intermedi-
04000	3402	ate) Oil Pad (braided cotton) long, for
		54089
64805	9462	Arm Rotary Shaft Bushing (intermedi-
04000	3402	ate) Oil Pad (braided cotton) short, for
		54089
79757		Bench Stand with 27998, two each 41538,
13131		124500, three wood screws 1½ in. No.
		14, four 60656, eight wood screws $\frac{5}{8}$ in.
		No. 5 and sixteen wood screws $\frac{5}{8}$ in.
		No. 7

NO.	PLATE	NAME
120341	8941	Tweezers (curved) Accessories
120344	8941	Oiler (copper plated) with 120345 (Acces-
		sories)
120345	8941	Oiler Spout, 5 in. long, for 120344
120547	9452	Cloth Plate Slide for 120548
120548		Cloth Plate Slide complete, for 120549,
		120550, 120640, 120641 and 120703,
		Nos. 120547, two 38416 and four 725J
120549	9485	Edge Folder on Shank, for turning the
		right hand edge under, for button or
		buttonhole facings
120550	9485	Strip Folder on Shank, for button stays
120593	9484	Folder on Shank, for making bluff centres
		on shirts
120633		Strip Folder with left hand interlining
120000		guide for 120635
120634	9486	Strip Folder Bracket for 120635, 120637,
120054	3400	120698 and 120703
120635	9484	Strip Folder on Bracket, with left hand
120000	0101	interlining guide, complete, for centre
		work on shirts, Nos. 120633, 120634
		and two 1443J
120636		Strip Folder for 120637
120637	9486	Strip Folder on Bracket complete, for
12000.	0100	buttonhole facings or centre work on
		shirts, Nos. 120634, 120636 and two
		1443j
120638	9464	Strip Folder Throw-out Arm for 120639
120639	9464	Strip Folder Throw-out Arm Bracket
		120642 with 946p, 1377c, 1547j, 36006,
		50152p and 120638, for 120635, 120637,
		120698 and 120703
120640	9485	Edge Folder on Shank (left) for starting
		from bottom of garment
120641	9485	Edge Folder on Shank (right) for starting
		from neck of garment
120642	9464	Strip Folder Throw-out Arm Bracket
		with 853c, for 120639
120657	9483	Lap Seam Feller on Shank (spring yield-
		ing) for shirt work, for 149-2 Machine
120658	9481	Feed Dog, 19 teeth (16 teeth to the inch)
		with 452c, for $\frac{1}{4}$ in. and $\frac{5}{16}$ in. gauges,
		for 120657 and 120704, for 149-2
		Machine
120659		Presser Foot Plate for 120660

	.07	PLATE	NAME
12	0660	9481	Presser Foot (hinged) complete, for
			120657 and 120704, Nos. 18055, 120659
			and 128647
12	0661	9481	Throat Plate with 128724 and two 665p,
			for 120658
*12	0671	-	Tape Reel Disc for 120672 and 120675.
12	0672	9489	" " 120671 with 120673, for
			120680
*12	0673		Tape Reel Disc Hub for 120672
12	0674	9489	" Rod for 120680
12	0675	9489	" Disc 120671 with 120676, for
			120681
*12	0676		Tape Reel Disc Hub for 120675
12	0677	9463	" " Screw Stud for 120681
	0678	9489	" Rod for 120681
	0679	9489	" " Tape Guide for 120681
	0680	9489	Tape Holder, 9 in. Disc, complete, for
12	0000	0100	under the bench, Nos. 28012, 120672
			and 120674
19	0681	9489	Tape Holder, 9 in. Disc, complete, for
12	0001	3403	interlining centering work, Nos. 27618,
			120675, 120677 to 120679, 120682 and
			three wood screws 1¼ in. No. 12
10	0682	9489	Tape Reel Tape Guide Bracket with 446c
12	0082	9489	and 448c, for 120681
10	0001	0400	
12	0691	9488	Strip Folder on Shank with adjustable
			guide using strip to fold over and turn-
			ing in both edges and for inserting
10	000=		body of garment in one operation
12	0697		Strip Folder with right hand interlining
			guide for 120698
12	0698	9486	Strip Folder on Bracket with right hand
			interlining guide complete, for centre
			work on shirts, Nos. 120634, 120697
			and two 1443 _J
	0699	9487	Strip Folder Strip Guide for 120700
120	0700	9487	Strip Folder on Shank with 120699 and
			two 1423 _J , for long or short strips, for
			sleeve or button facings
120	0701	9487	Strip Folder on Shank, for under facing
			strips, for button or buttonhole facings
	0702	-	Strip Folder for 120703
120	0703	9486	Strip Folder on Bracket complete, for
			sleeve plackets, Nos. 120634, 120702
			and two 1443J
120	0704	9483	Lap Seam Feller on Shank with two
			1443 _J , for sleeving, for 149-2 Machine
			-

NO.	PLATE	NAME
12070	5 9482	Feed Dog, 19 teeth (16 teeth to the inch)
		with 452c, for $\frac{3}{16}$ in. gauge, for 120657
		and 120704, for 149-2 Machine
12070	3 9482	Throat Plate with 128724 and two 665D,
		for 120705
124500	8952	Flap Hinge for 79757
12624	7 8952	Flush Bolt for 41538
126248	8 8952	" " Plate for 41538
126249	9 8980	Treadle for 126252
126250	8941	" Spring for 126252
12625	1 8980	" Stand for 126252
126252	2 8980	Treadle complete, Nos. 4882, 126249 to
		126251 and two wood screws 1 in. No.
		16
128502	2 9451	Arm Back Cover
128502	2 9451	" Side Cover
128503	3 9452	" Rotary Shaft for 128613
128504	9451	" " BallBearingfor128627
128505	5 9451	" " " Case for
		128627
128506	9451	Arm Rotary Shaft Ball Bearing Case Cap
		with 128619 for 128627
128507		Arm Rotary Shaft Bushing (front)
128508		" " Collar with two 1258c
128509		BalanceWheel, 2 in., pulley with two 430c
128510		Balance Wheel Cover
128513	9462	Cloth Plate Oil Tube with 49092 for
		128634
128514		Cloth Plate Slide for 128515
128515	· —	Cloth Plate Slide complete, for 128634,
		Nos. 128514, two 38416 and four 725J
128518		Feed Bar Wearing Block
128519		1 1400 101. 120000
128520	9453	Connection (forked) with 4550 and
100501	0455	769c, for 128615 Feed Connection Slide Block Section for
128521	9455	128615
128522	9455	Feed Connection Slide Block Sleeve for
120022	9400	128615
128526	9455	Feed Regulating Screw Plate for 128528
128527		" Regulator with two 1143c, for
120021	9400	128528
128528		Feed Regulator complete, for 128615,
		Nos. 391p, 399p, 50941c, 128526,
		128527, 128530 and 128531
128529	9457	Feed Regulator Bushing
128530		" Slide Block, for 128528
	1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	

NO.	PLATE	NAME
128531	9455	Feed Regulator Slide Block Stop, for
		128528
128532	9455	Feed Regulator Slide Block Washer, for
		128615
128533	9453	Feed Rocking Frame with two each 453c
		and 1324c, for 128707
128534	9453	Feed Rocking Frame Hinge Pin
128537	9455	Looper Carrier Driver for 128663
*128538		" " Connection for
120000		128630
********		Looper Carrier Driver Connection Cap
*128539		
		for 128630
*128540		Looper Carrier Driver Connection End
		Bearing, for 128631
*128541		Looper Carrier Driver Connection End
		Bearing Cap for 128631
	Nos	s. 128543 то 128547 гог 128663
128543	9454	Looper Carrier Holder with two 896E
128544	9453	" " Rock Shaft
128545	9453	" " " Hingo Pin
	0.000	" " " Nut
128546	9454	" " " " Clamp
128547	9454	Clamp
		WITH 175D
128549	9454	Looper Eccentric Sleeve for 128665
128550	9454	" " Connection with
		128552 and two 175E, for 128624
128551	9454	Looper Eccentric Sleeve Connection Ball
		Screw Stud Nut Lock Washer
*128552		Looper Eccentric Sleeve Connection Cap
120002		for 128550
128553		Needle Bar 57244 with 128565, for 149-2
120000		Machine, obsolete, use 128766
128554	9456	Needle Bar Bushing (upper)
128555		Needle Bar Connecting Bracket with
120000	9490	1057p, 50370p and 50379f, for 128713.
100550	0.450	Needle Bar Connecting Link for 128713
128556		" " Hinge Pin
128557	9456	
		for 128618 and 128713
128558	9452	Needle Bar Lever with 50282E, 50370D
		and two 1259c, for 128618
128559	9463	Needle Bar Lever Connecting Rod with
		683F, 54897, 128560, 128561, 128628
		and four 896E, for 128613
*128560		Needle Bar Lever Connecting Rod Cap
		(lower) for 128559

NO.	PLATE	NAME
*128561	-	Needle Bar Lever Connecting Rod Cap
		(upper) for 128559
128562	9453	Noedle Bar Lever Hinge Pin
128563	9456	" " " Bushing
		(back)
128564	9456	Needle Bar Lever Hinge Pin Bushing
120001	0100	(front)
128565	9490	Needle Clamp with 128566, 128620 and
120000	5150	two each 460r and 620r, for 128553,
		obsolete, use 128767
100500	9490	Needle Clamp Thread Guide (left) for
128566	9490	128565, obsolete

*128567		Oil Cup for 128568
128568	9463	Oil Cup complete, Nos. 128567 and
		128569 to 128571
128569	9463	Oil Cup Pad (felt) for 128568
*128570	-	" " Tube for 128568
128571	9462	" " Wick (braided cotton) for
		128568 and 128573
*128572		Oil Cup for 128573
128573	9463	Oil Cup complete, Nos. 44006, 128572,
		128574 to 128576 and two 128571
*128574		Oil Cup Bracket for 128573
*128575		" " Tube (long) for 128573
*128576		" " (short) for 128573
*128577		" Tube for 128725 and 128741
128580	9457	Presser Bar Guide Bracket with 175c and
120000	010.	454c
128581	9457	Presser Bar Guide Bracket Guide
128582	9457	" " Lifter
128583	9457	" Lifting Bracket with 465c
128989	9457	and 51871
100504	0.150	Presser Bar Lifting Lever
128584	9452	Slack Thread Controller for 149-2
128587	9461	
100500	0.100	Machine
128588	9490	
		chine, obsolete
128589	9461	Slack Thread Regulator Holder with 452c
128590	9461	Olank
		with 175p
128591	9461	Slack Thread Regulator Holder Crank
		Driver with 456c and 1963
128592	9451	Tension (under thread) Bracket for 149-2
		Machine
128593	9461	Tension (upper thread) Releasing Shaft
		Crank Connecting Link for 149-2
		Machine
19360	_1	

NO.	PLATE	
128604	9459	Thread (upper) Nipper Regulator
128605	9459	" " Releasing Pin
		for 149-2 Machine
128606	9459	Thread (upper) Nipper Thread Guide for
		149-2 Machine
128610	9490	Thread (upper) Take-up for 149-2 Ma-
		chine, obsolete
128612	9463	Throat Plate Holder
128613		Arm Rotary Shaft 128503 with 50943c
		and 128559, for 128664
128615		Feed Connection 128520 with 1095F,
120010		128522, 128528, 128532 and two 128521
128618		Needle Bar Lever 128558 with 128557
120010		and 128713
128619	9462	Arm Rotary Shaft Ball Bearing Case Cap
120010	3102	Pad (felt) for 128506
128620	9490	Needle Clamp Thread Guide (right) for
120020	9490	198565 absolute
128621	9455	128565, obsolete
120021	9499	Looper Carrier Driver Connection com-
		plete for 128663, Nos. 128630, 128631
		and two 142E
128624		Looper Eccentric Sleeve Connection
		128550 with 679c, for 128665
128627	-	Arm Rotary Shaft Ball Bearing Case
		128505 with 128504, 128506 and three
		205F
128628	9462	Needle Bar Lever Connecting Rod Oil
		Pad (braided cotton) for 128559
128630		Looper Carrier Driver Connection 128538
		with two 128539 and four 896E, for
		128621
128631		Looper Carrier Driver Connection End
		Bearing 128540 with 128541, for 128621
*128632		Arm, upper and lower (solid)
128633	9452	Cloth Plate for 128634
128634		Cloth Plate complete, Nos. 128513,
		128515, 128633 and two 1198c
128635	9453	Feed Bar with two 453c, for 128636
128636	0.100	" " 128635 with 128519 and two
120000		190p, for 128707
199697	0.477	
128637	9477	Feed Dog, 19 teeth (16 teeth to the inch)
		with 452c, for $\frac{11}{16}$ in. to 1 in. gauges, for
190090	0171	149-2 Machine, obsolete.
128638	9454	Feed Lifting Eccentric with two 452c
128639	9490	Looper (closed eye) for 149-2 Machine,
		obsolete

	PLATE	NAME .
128640	9455	Looper Carrier with two 50379r, for
		128660
128641	9455	791c and two 452c, for 128663
128642	9490	Looper Eccentric with two 889c, obsolete,
120012	2 5450	use 128728
128643	9455	Looper Thread Guide for 128660
128644		Oil Tube and Thread Guide Bracket, for
120049		128645, obsolete
12864	5 9464	Oil Tube and Thread Guide Bracket
		complete, for 149-2 Machine, Nos.
		49092, 54108, 128644 and 128657, ob-
		solete, use 128725
128646	3	Presser Foot Plate for 128648, obsolete
128647		" "Shank with 563J and 1700J,
128047		for 120660, 128648, 128719, 128736
		and 128744
128648	3 9490	Presser Foot (hinged) complete, for 149-2
120010		Machine, Nos. 18055, 128646 and
		128647, obsolete, use 128719
128649	9461	Tension (under thread) Bracket for 149-2
12001	, 0101	Machine
128650	9459	Thread (under) Eyelet for 149-2 Machine
128651	9459	" Guide (left) for 3/8 in. to
		1½ in. gauges, for 149-2 Machine
128652	9459	Thread (under) Guide (right) for 3/8 in.
		to 1½ in. gauges, for 149-2 Machine.
128653	3 9459	Thread (under) Guide Holder for 149-2
		Machine
128654	9463	Thread (under) Protector
12865	5 9490	" (upper) Eyelet for 128558, for
		149-2 Machine, obsolete
128656	9459	Thread (upper) Nipper Spring
*128657	7 —	" Guide for 128645, obso-
		lete
128658	8 9477	Throat Plate with 128659 and two 665D,
		for 128637, obsolete
128659	9479	Throat Plate Thread Retainer for 128658
128660) —	Looper Carrier 128640 with 228p and
		128643, for 149-2 Machine
128661	9478	Feed Dog, 19 teeth (16 teeth to the inch)
		with 452c, for $1\frac{1}{16}$ in. to $1\frac{1}{4}$ in. gauges,
		for 149-2 Machine, obsolete
128662	2 9478	Throat Plate with 128659 and two 665p,
120002	0.,0	for 128661, obsolete

NO.	PLATE	NAME
128663	-	Looper Carrier Driver Connection 128621
		with 128537, 128543 to 128547 and
		128641, for 128664
128664		Arm Rotary Shaft 128613 with 128663
128665		Looper Eccentric 128728 with 1664E,
		50942E, 128549, 128624 and two 55515
128700	9479	Feed Dog, 19 teeth (16 teeth to the inch)
		with 452c, for ½ in. to 5% in. gauges,
		for 149-2 Machine, obsolete
128701	9479	Throat Plate with 128659 and two 665D,
		for 128700, obsolete
128702	9458	Looper Thread Guard for 128768
128705	9480	Feed Dog, 19 teeth (16 teeth to the inch)
		with 452c, for 13/8 in. to 11/2 in. gauges,
		for 149-2 Machine, obsolete
128706	9480	Throat Plate with 128659 and two 665p,
		for 128705, obsolete
128707		Feed Bar 128636 with 57225 and 128533
128713		Needle Bar Connecting Bracket 128555
		with 128556 and 128557, for 128618
128714		Thread (upper) Nipper Screw Stud
		51029c with 51570c
128716	9471	Feed Dog, 19 teeth (16 teeth to the inch)
		with 452c, for 3/4 in. to 7/8 in. gauges,
		for 149-2 Machine
128717	9455	Looper (closed eye) for 149-2 Machine
128718		Presser Foot Plate for 128719
128719	9468	Presser Foot (hinged) complete, for shirt
		centres, for 149-2 Machine, Nos. 18055,
		128647 and 128718
128720	9461	Slack Thread Regulator for 149-2 Ma-
		chine
128721	9459	Thread (upper) Eyelet for 128558, for
		149-2 Machine
128722	9459	Thread (upper) Take-up for 149-2 Ma-
		chine
128723	9471	Throat Plate with 128724 and two 665D,
		for 128716
128724	9472	Throat Plate Thread Retainer for 128723,
		128727, 128730, 128732, 128737,
		128770, 128773 and 128822
128725	9463	Oil Tube Bracket and Thread Guide with
		49092 and 128577, for 149-2 Machine
128726	9472	Feed Dog, 19 teeth (16 teeth to the inch)
		with 452c, for $\frac{15}{16}$ in. to $1\frac{1}{8}$ in. gauges,
		for 149-2 Machine

NO.	PLATE	NAME
128727	9472	Throat Plate with 128724 and two 665D,
120121	0112	for 128726
128728	9454	Looper Eccentric with two 51137c, for 128665
128729	9470	Feed Dog, 19 teeth (16 teeth to the inch)
120.20		with 452c, for $\frac{1}{2}$ in. to $\frac{11}{16}$ in. gauges, for 149-2 Machine
128730	9470	Throat Plate with 128724 and two 665D, for 128729
128731	9473	Feed Dog, 19 teeth (16 teeth to the inch) with 452c, for $1\frac{3}{16}$ in. to $1\frac{5}{16}$ in. gauges, for 149-2 Machine
128732	9473	Throat Plate with 128724 and two 665D, for 128731
128733	9468	Presser Foot Extension with two 62527, for 128736
128734	9468	Presser Foot Extension Connection for 128736
128735		Presser Foot Plate for 128736
128736	9468	Presser Foot (hinged extension and hinged plate) complete, for obtaining a smooth finish on broadcloth shirt
		centres, for 149-2 Machine, Nos. 18055, 128647, 128733, 128735 and two each 1145p, 2656 and 128734
128737	9475	Throat Plate with 128724 and two 665D, for 128736, for 128716
No	os. 128	738 to 128759 for 149-4 Machine
128738	9476	Feed Dog, 19 teeth (16 teeth to the inch)
		with 452c, for $\frac{3}{16}$ in. to $\frac{1}{4}$ in., $\frac{7}{8}$ in. to
	8 9 5 5	11/8 in. and 3/4 in. gauges
128739	9458	Looper Carrier with four 50379F, for 128769
128740	9458	Looper Thread Guide for 128769
128741	9463	Oil Tube Bracket and Thread Guide with 49092 and 128577
128742	9464	Presser Bar Lifting Lever Spring
128743	0.400	" Foot Plate for 128744
128744	9468	Presser Foot (hinged) complete, Nos. 18055, 128647 and 128743
128745	9460	Slack Thread Controller
128746	9460	" " Regulator
128747	9458	Tension (under thread) Post
128748	9460	Inteld Calde.
128749	9464	" (upper thread) Bracket


NO. 128750	PLATE 9460	NAME Thread (under) Eyelet
120700		
	Nos.	128751 TO 128756 FOR 128757
128751	9460	Thread (under) Thread Guide, for one thread
128752	9460	Thread (under) Thread Guide, for two threads
128753	9460	Thread (under) Thread Guide, for three threads
128754	9460	Thread (under) Thread Guide, for four threads
128755	9460	Thread (under) Thread Guide Holder with four 1498c
128756	9460	Thread (under) Thread Guide Holder Post
128757		Thread (under) Thread Guide complete, Nos. 171p and 128751 to 128756
	Note:	When ordering No. 128757, state gauge required.
128758	9460	Thread (upper) Eyelet
128759	9460	" " for 128558
No	os. 128	761 to 128765 for 149-4 Machine
128761	9460	Thread (upper) Nipper Releasing Pin
128762	9460	" " Thread Guide
128763	9460	" Take-up
128764	9476	Throat Plate with 128765 and two 665p,
120,01	0110	for 128738
128765	9476	Throat Plate Thread Retainer for 128764
128766		Needle Bar 57244 with 128767, for 149-2 Machine
128767	9456	Needle Clamp with two 50379F, for 128766
128768	9458	Looper (self threading) with 590p, 61041 and 128702, for 149-4 Machine
128769	_	Looper Carrier 128739 with 228p and 128740, for 149-4 Machine
128770	9475	Throat Plate with 128724 and two 665D, for obtaining a smooth finish on broad-cloth shirt centres, for 128726
128771	9464	Threading Wire for self-threading loopers (Accessories)
128772	9469	Feed Dog, 19 teeth (16 teeth to the inch) with 452c, for $\frac{1}{4}$ in. to $\frac{7}{16}$ in. gauges, for 149-2 Machine

NO.	PLATE	NAME
128773	9469	Throat Plate with 128724 and two 665D,
		for 128772
128774	9459	Thread (under) Guide (left) for $\frac{3}{16}$ in. to
		5 in. gauges, for 149-2 Machine
128775	9459	Thread (under) Guide (right) for $\frac{3}{16}$ in.
		to 5/16 in. gauges, for 149-2 Machine
128821	9474	Feed Dog, 19 teeth (16 teeth to the inch)
		with 452c, for 13/8 in. to 11/2 in. gauges,
		for 149-2 Machine
128822	9474	Throat Plate with 128724 and two 665D,
		for 128821
200383c	9467	Thread Unwinder Spool Rest Rod Set
		Screw for 202490
201018c	9467	Thread Unwinder Spool Rest Set Screw
		for 225395
201696 _J	9467	Thread Unwinder Thread Guide Lock
		Nut for 225398
202490	8953	Thread Unwinder Spool Stand with
		200383c for 60301 and 225398
225388	8953	Thread Unwinder Spool Rest Rod for
		225398
225390		Thread Unwinder Thread Cone Holder
		for inverted cones
225391	8953	Thread Unwinder Thread Guide for
		225398
225392	8953	Thread Unwinder Thread Guide Rod
		with 208E and 225393, for 225398
225393	9467	Thread Unwinder Thread Guide Rod
		Washer for 225392
225395	8953	Thread Unwinder Spool Rest (for two
		spools) with 201018c, for 225398
225398	8953	Thread Unwinder complete (for four
		spools) for 149-2 Machine, Nos.201696J,
		202490, 225388, 225392, two 225395,
		four 225391 and three wood Screws $\frac{7}{8}$
		in. No. 12

Genuine Singer Needles and their Containers are marked with the Company's Trade Mark "SIMANCO."

> Needles in Containers marked "For Singer Machines" are not Singer made needles.

FOR MACHINES Nos. 149-2 and 149-4

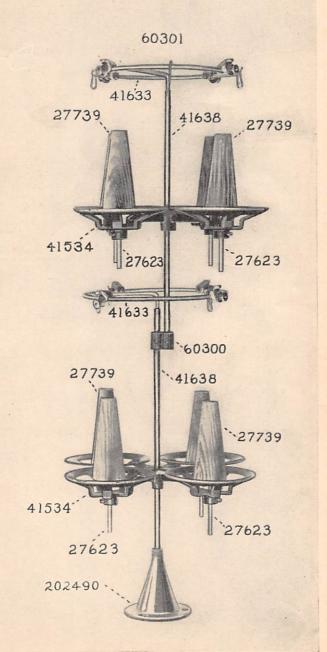


From the library of: Superior Sewing Machine & Supply LLC


PLATE 8941-ONE-HALF SIZE 8908 120344 26485 38487


From the library of: Superior Sewing Machine & Supply LLC

PLATE 8952-FULL SIZE

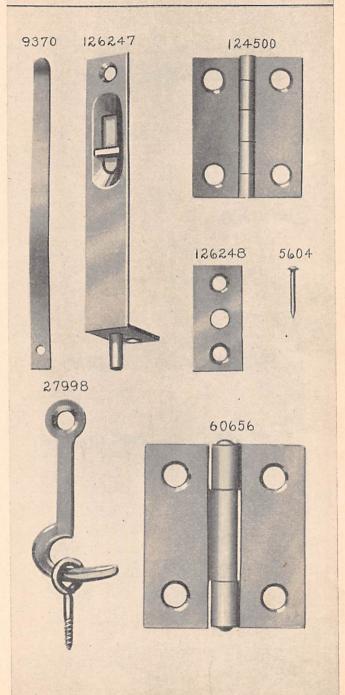

From the library of: Superior Sewing Machine & Supply LLC

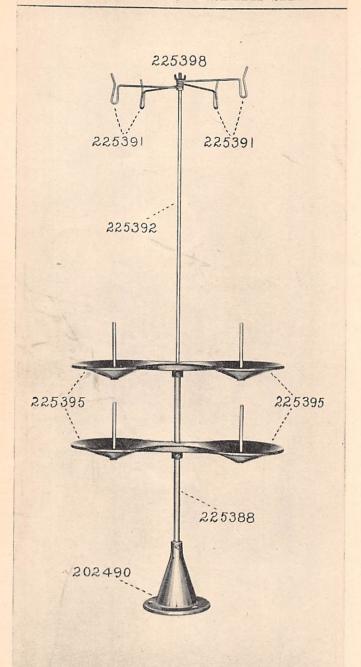

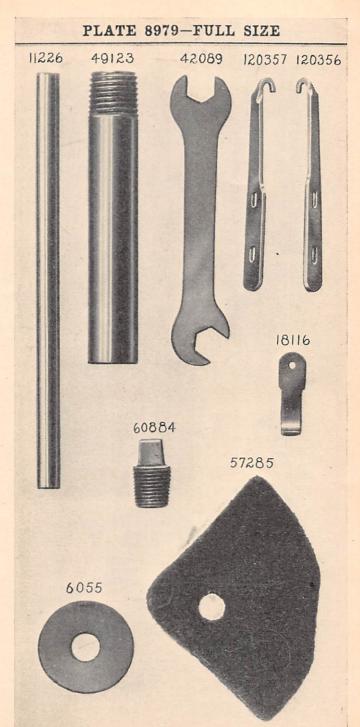


From the library of: Superior Sewing Machine & Supply LLC

PLATE 8980-ONE-FOURTH SIZE -2766 2767-


From the library of: Superior Sewing Machine & Supply LLC

PLATE 9451-ONE-HALF SIZE

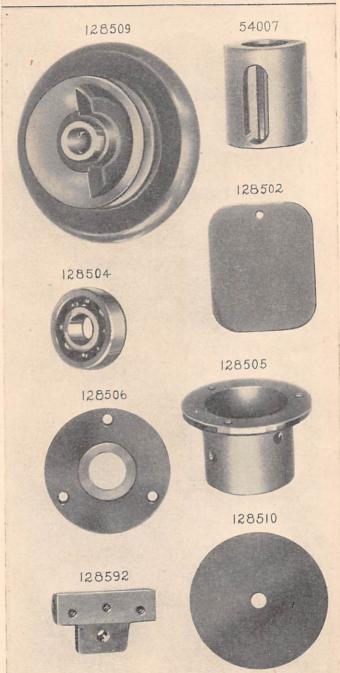

From the library of: Superior Sewing Machine & Supply LLC

PLATE 9452-ONE-FOURTH SIZE

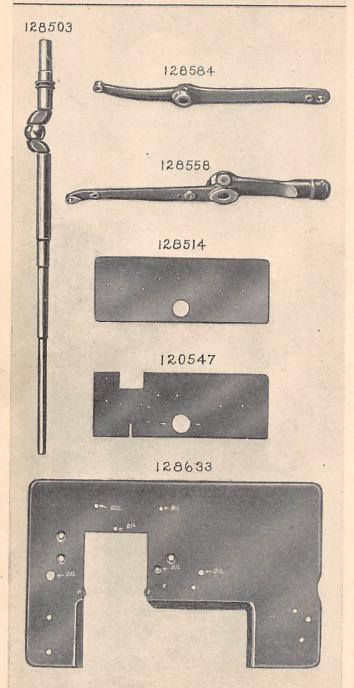


From the library of: Superior Sewing Machine & Supply LLC

PLATE 9453-ONE-HALF SIZE 128534 128545


From the library of: Superior Sewing Machine & Supply LLC

PLATE 9454-FULL SIZE

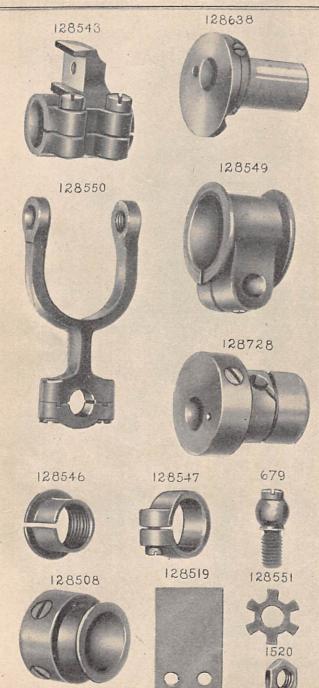


From the library of: Superior Sewing Machine & Supply LLC

PLATE 9455-FULL SIZE

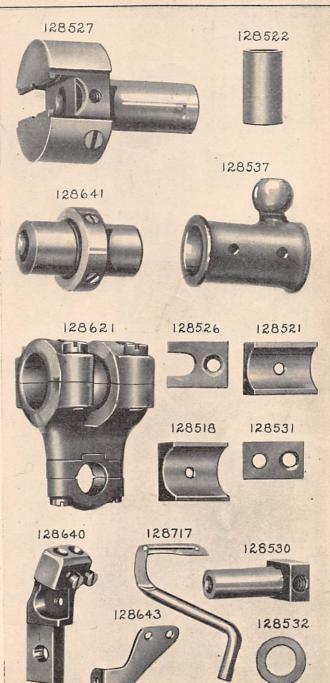


From the library of: Superior Sewing Machine & Supply LLC

PLATE 9456-FULL SIZE

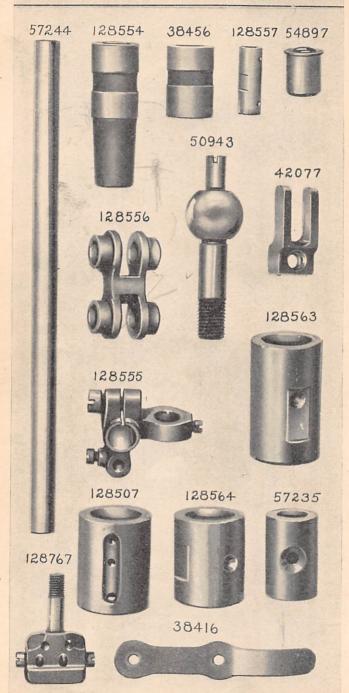

From the library of: Superior Sewing Machine & Supply LLC

PLATE 9457-FULL SIZE

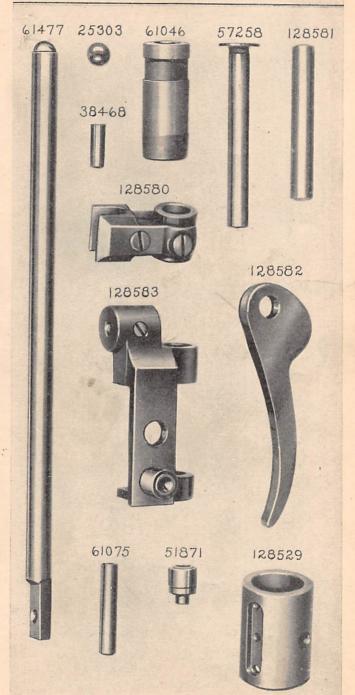


From the library of: Superior Sewing Machine & Supply LLC

PLATE 9458-FULL SIZE (0 54737 128747 128702 61041


From the library of: Superior Sewing Machine & Supply LLC

PLATE 9459-FULL SIZE

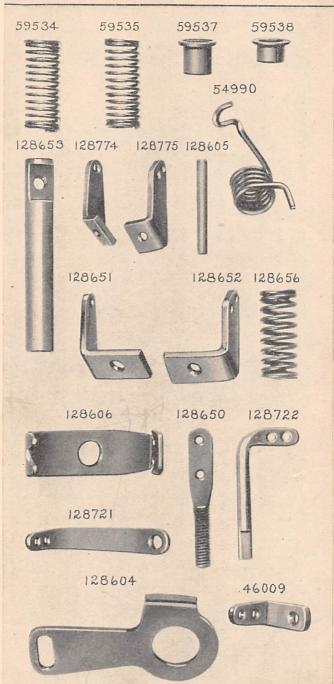


From the library of: Superior Sewing Machine & Supply LLC

PLATE 9460-FULL SIZE

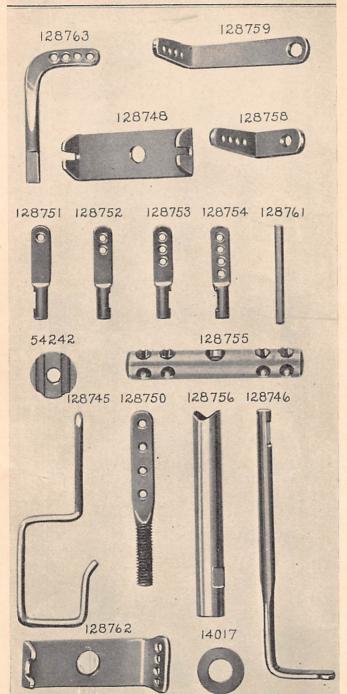

From the library of: Superior Sewing Machine & Supply LLC

PLATE 9461-FULL SIZE

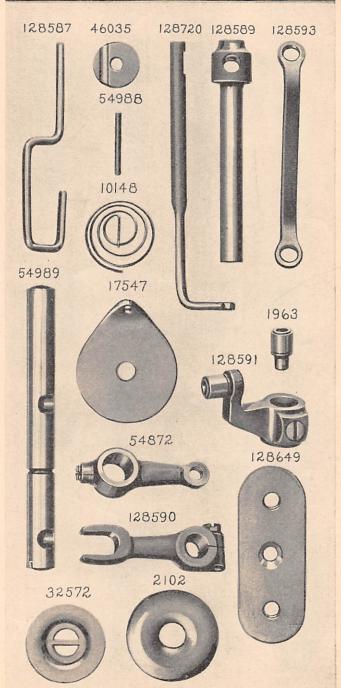


From the library of: Superior Sewing Machine & Supply LLC

PLATE 9462-FULL SIZE 64508 128628 49013 64805 49092 41036

From the library of: Superior Sewing Machine & Supply LLC

PLATE 9463-ONE-HALF SIZE

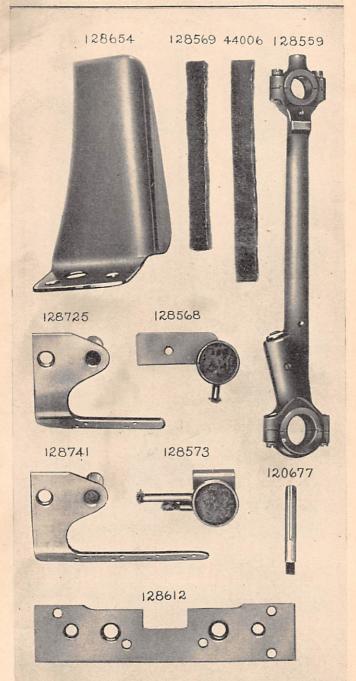

From the library of: Superior Sewing Machine & Supply LLC

PLATE 9464-ONE-HALF SIZE 27739 54246 128771 54040 128645 120639 120642-128742 .120638 128749

From the library of: Superior Sewing Machine & Supply LLC

PLATE 9465-FULL SIZE



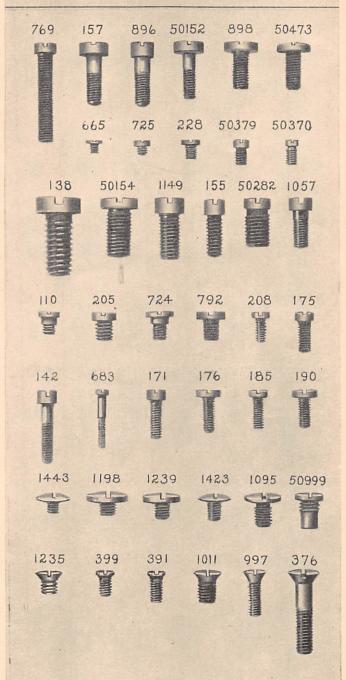


PLATE 9466-FULL SIZE 791 452 籍 50014 853 醫 盐 1560 51570 1562 51581

From the library of: Superior Sewing Machine & Supply LLC

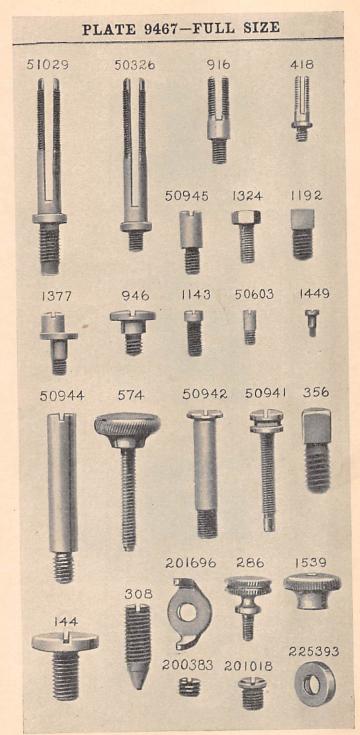

From the library of: Superior Sewing Machine & Supply LLC

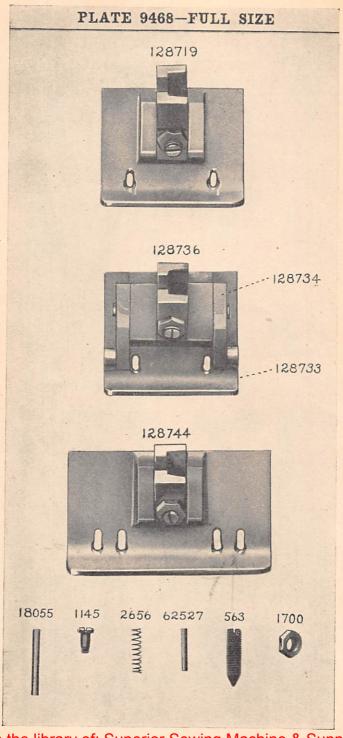


From the library of: Superior Sewing Machine & Supply LLC

PLATE 9469-FULL SIZE



128773

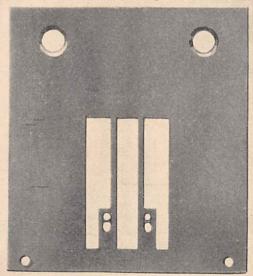


From the library of: Superior Sewing Machine & Supply LLC


PLATE 9470-FULL SIZE

128729



128730

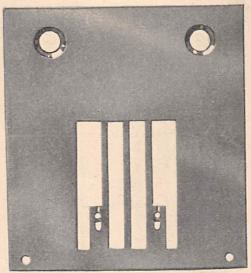

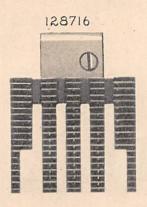

128723


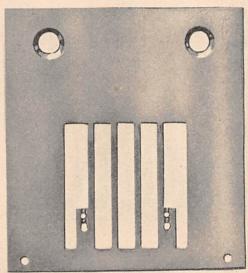



PLATE 9472-FULL SIZE




128727

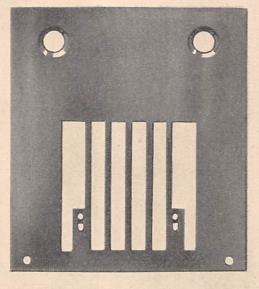

128724

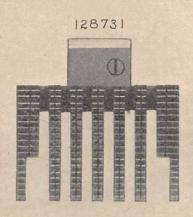


128732

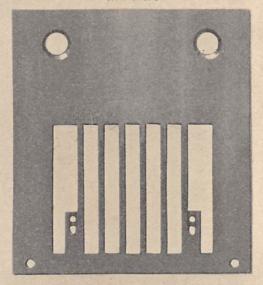


From the library of: Superior Sewing Machine & Supply LLC

PLATE 9474-FULL SIZE

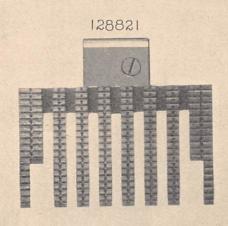


128822

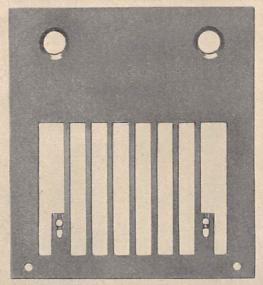


From the library of: Superior Sewing Machine & Supply LLC

128737

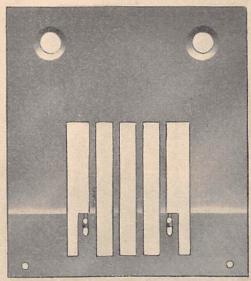


128770

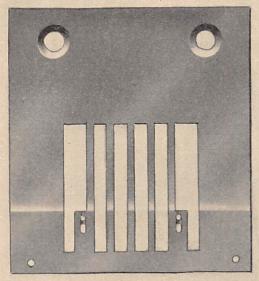


From the library of: Superior Sewing Machine & Supply LLC


PLATE 9476-FULL SIZE

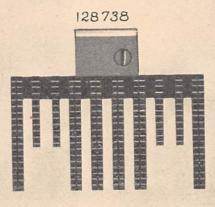

128764

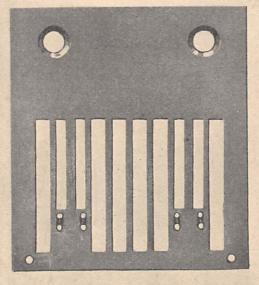


128765

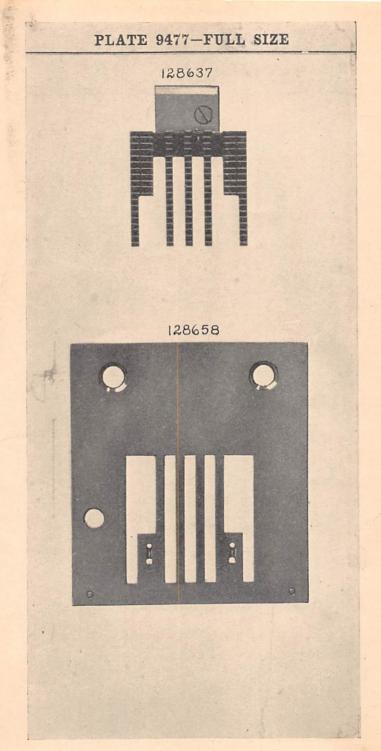


From the library of: Superior Sewing Machine & Supply LLC


PLATE 9478-FULL SIZE

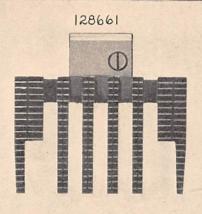

128662

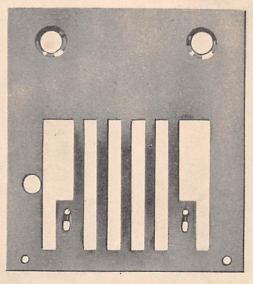


From the library of: Superior Sewing Machine & Supply LLC

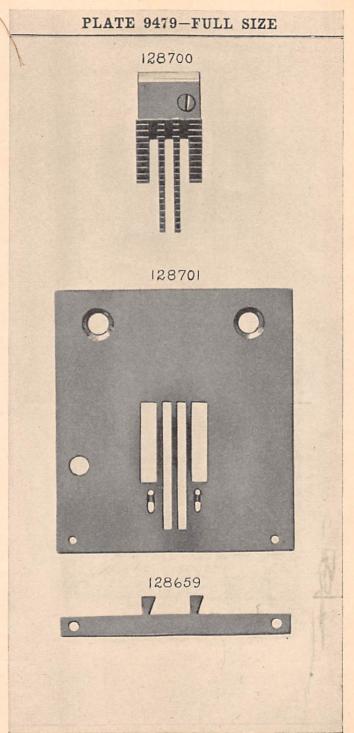

From the library of: Superior Sewing Machine & Supply LLC

PLATE 9480-FULL SIZE

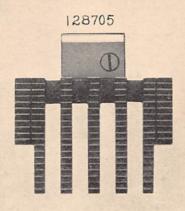

128706

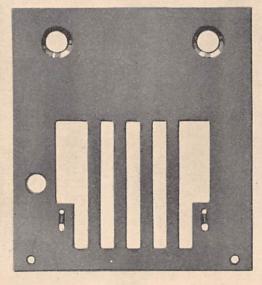


PLATE 9481-FULL SIZE





120658



120661


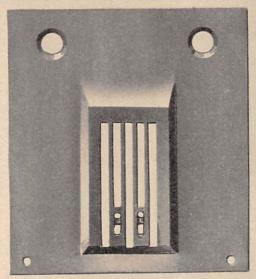


PLATE 9482-FULL SIZE

120705




120706

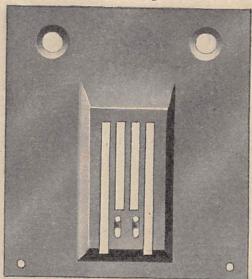


From the library of: Superior Sewing Machine & Supply LLC

PLATE 9483-FULL SIZE

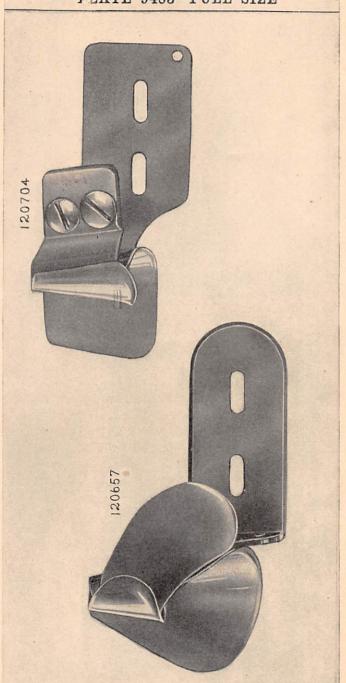


From the library of: Superior Sewing Machine & Supply LLC

PLATE 9484-ONE-HALF SIZE

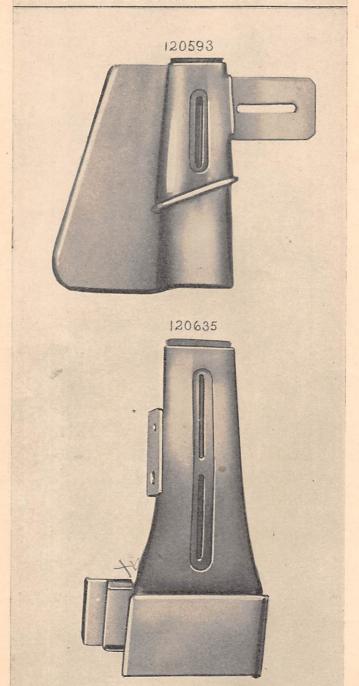


From the library of: Superior Sewing Machine & Supply LLC

PLATE 9485-ONE-HALF SIZE

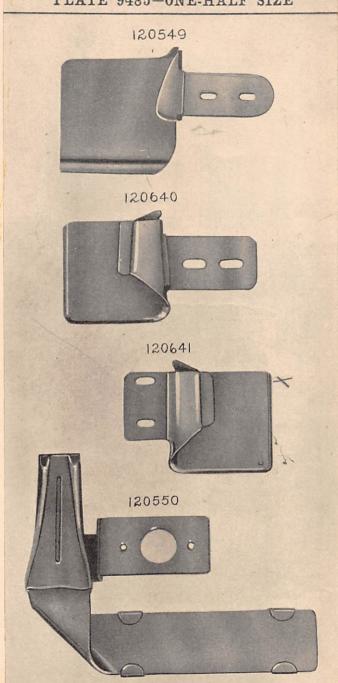


From the library of: Superior Sewing Machine & Supply LLC

PLATE 9486-ONE-HALF SIZE

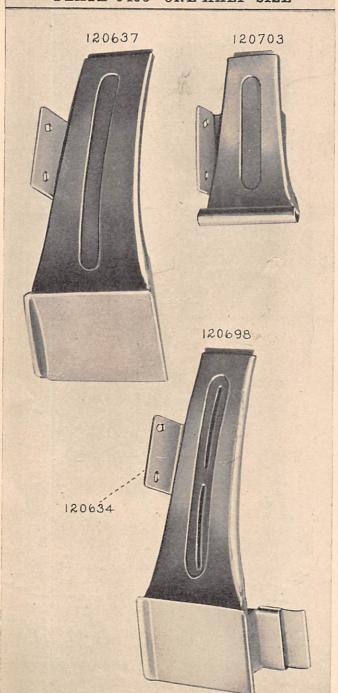


From the library of: Superior Sewing Machine & Supply LLC

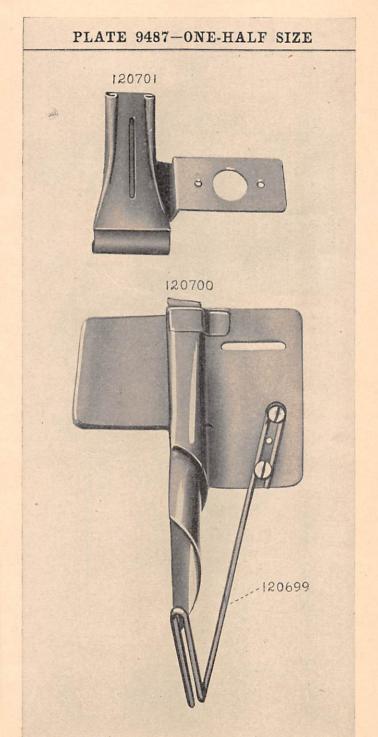

From the library of: Superior Sewing Machine & Supply LLC


PLATE 9488-ONE-HALF SIZE

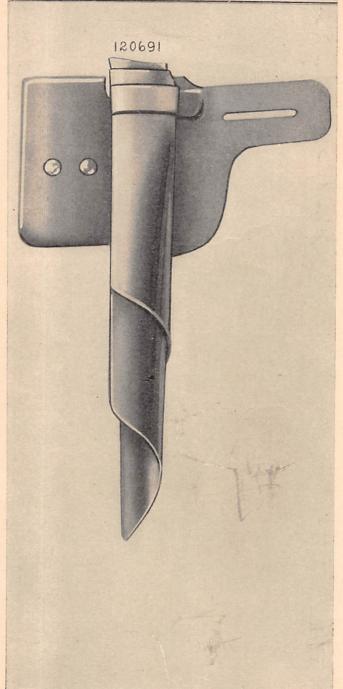

From the library of: Superior Sewing Machine & Supply LLC

PLATE 9489-ONE-SIXTH SIZE

From the library of: Superior Sewing Machine & Supply LLC

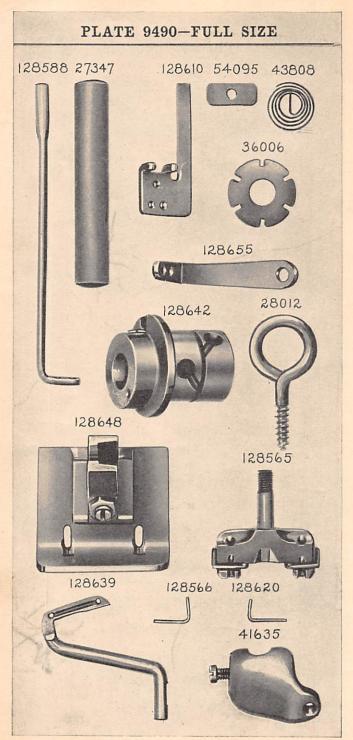

From the library of: Superior Sewing Machine & Supply LLC

