NUMBERING DEPARTMENT JUNE 16, 1911

LIST OF PARTS COMPLETE



Machine No. 62-42

THE SINGER MANUFACTURING COMPANY

LIST OF PARTS COMPLETE

FOR

MACHINE NO. 62-42

For ladies' skirts, petticoats, wrappers, etc. Has positive ruffling mechanism (adjustable) with folders and guides. For simultaneously ruffling and joining the flounce to the body and securing the same under a folded strip, also for stitching ruffles upon the flounce or skirt as desired. Two Needles, Two Loopers, gauges 542 in., 346 in. or 44 in.

(FORMERLY 62 S. V. 26 MACHINE)

*46464	Arm, upper and lower (solid) with 1149p, 52515,
	52516 and two each 129D and 134D
46216	Arm Rock Shaft
46217	" " Crank (back) with two 1497c
1497c	" " " Set Screw
38412	" " " (front) with 443c
23724	" " " " Pin
443c	" " " Set Screw
46465	" Rotary Shaft
46466	" " " Flanged Bushing
159F	" " " Screw
4784	" " " Oil Pad (felt)
144D	" . " " Screw
17509	" Side Cover (lower)
286D	" " " Thumb Screw
46467	" " " (upper)
176D	" " " Screw
23873	Balance Wheel with two 430c
430c	" Set Screw
46468	Cloth Plate
691F	" Screw (left)
1094F	" " (right)
46469	" " Slide (large)
38416	" " " Spring
725н	" " " Screw
46470	Cloth Plate Slide (large) complete, Nos. 46469, two
	38416 and four 725н. Old Serial No. 19031.

38418	Cloth Plate Slide (small)
38419	" " " Spring
725н	" " " Screw
38420	Cloth Plate Slide (small) complete, Nos. 38418,
	38419 and two 725H
46471	Cloth Plate complete, Nos. 38420, 46468 and 46470.
46221	Crank Connecting Rod with 46222, 46223 and two
	each 896E and 1057E
50069c	Crank Connecting Rod Ball Screw Stud.
1619E	" " " " Nut
*46222	" " Cap (lower)
896E	" " " Screw
*46223	DCIEW
1057E	(upper)
46225	Berew
	washer (hore)
46472	Face Plate
211F	" " Screw
38425	Feed Bar with 231c and 460c.
23716	" " Bushing
23726	" " Hinge Pin
231c	" " Set Screw
38426	" " Slide Block
38427	" Connecting Rod with 23865 and three 1057E
*23865	" " Cap
1057E	" " " Screw
23866	" " Hinge Pin (eccentric)
1057E	" " " Clamping Screw
46473	" Dog
898p	" " Screw
460c	" " Stop Screw
*38127	" Eccentric
*23729	" " Body
443c	" " Set Screw
21331	" Pressure Spring
21332	Tressure Spring
934p	Cap
00.22	Bcrew
196F	Bet Berew
38128	Feed Eccentric (adjustable) complete, Nos. 196F,
	934D, 1103c, 21331, 21332, 23729, 38127 and
00100	two 443c
38429	Feed Lifting Eccentric with two 465c
46113	" " Cover
335D	" " " Screw
465c	" " Set Screw
1103c	" Regulating Screw
38431	" Rocking Frame
38432	" " Bracket with two 465c
123E	" " Screw
140E	Screw

38433	Feed Rocking	Frame I	Hinge Pin	
465c	" "	"	" Set Screw	
46474	Looper (back) with 590	OD and 46115. Old Serial N	
1120c			ew	
46115	u u		Guard (double)	
590p	u u	"	" Screw	
46475	" (front	014.5	Serial No. 19481	
1147c	" "		ew	
46226	" Bell ('ronle wit	th 1037c	
38436	" "	" Hi	nge Stud	
443c	и и		" Set Screw	
46227			itman complete, Nos. 1706	
40221				
			33 to 46235	
			man Ball Screw Stud (uppe	er)
1636E	u u		<i>u u u u u</i>	
46228			man Ball Stud (lower)	
1037c	и и		-	Set
	Screw			
*46229	Looper Bell C	rank Pita	man Cap (lower)	C+ #7
171E	u u		" " Screw	
*46230	u u	11-	" " (upper)	
171E	u u	ш	" " Screw	
*46231	u u	"	" End Bearing (lower).	
*46232	. " "	"	" " (upper).	
46233	и и	"	" Head (lower) No	
10200	46228.	46229. 4	6231 and two 171E	
46234			man Head (upper) Nos. 4628	
40204			and two 171E	
46235			man Rod	
	Looper Bell C			
1706E			1140 (10 WEL)	
1713E			(upper)	
38496	" Carrie		120c and three 1147c	
38440	" "	Hinge I	Pin	
1147c			Det Determination	
46367			complete, Nos. 1708E, 1709	
			nd 46242	
			Ball Screw Stud (right)	
1636E	ш	и	" " " " N	
46237		и	" Stud (left)	
1147c	u u	"	" " Set Screw	
*46238	u u	"	Cap (left)	
171E		"	" " Screw	٠.
*46238	11 11	ш	" (right)	
171E	u	"	" " Screw	
*46239	u u	u	End Bearing (left)	
*46240	u u	"	" " (right)	

	46241						Nos. 46237 to
	46242						(ht) Nos. 46238,
	40170						
	46176	roober (arrie.	r Filmai	i Roa		
	1708E	"	"	"	u	Nut (I	eft)
	1709E			"		" (r	ight)
	46244	"	"		Was	her (fib	ore)
	46042	u	"	Rock S			70 175р
	175D	u-	ш	ш			ng Screw
	38450	"	"	cc .	"	Crank	(forked) with
		_	59E	1			
	159E						Clamping Screw.
	38451	"	ш	ш	u	" S	Slide Block
	46043	"	ee	"	u		Pin
	1508E	"	u	u	u	"	" Nut
	129E	u	ш	и	"	u	" Set Screw
	38452	"]	Eccen	tric with	two	465c	
	465c	"	"	Set	Screw		
	38453	" 5	Shaft.				
	38454	u	u	Bracket.			
	123E	ш	"	"	Screv	v	
	129E	"	"	Screw.			
	23793	Needle F	Bar (h	ollow)			
4	6476						nd 46477
3.0	38456	"					
	1133E	u	и				
	38458	и	" Co	nnecting	Link	c	
	38459	u	"	"	u	Hinge	Stud
	1520E	"	u	u	и	"	" Nut
	38460	u	u	. "	Stuc	with t	wo 391E
	391E	· ·	"	"	"		ing Screw.
4	6477	" (lamp	with 46	478 aı		1498F
7	2273	"	"				
1	6478	ш	"	Thread	Guide		
-	6479	" C	hard				
-4	176F	"	"				
1	6480	"	"	(front)			
4	206F	"	"		crew.		
	1498F	" 0	ot Sa	ew	ociew.		
	17540	Presser I				7.02 7007 7007	
	6481	"					
4	200000000000000000000000000000000000000			ushing (
	1133E	u	u		"		rew
	38456	"	"		upper)	
	1133E	u	"	ш	"	Set Sc	rew
	17541	"	" L	ifter			
	17542	"	ш	" Hin	ge Pi	n	
4	6482	u	"L				53c and 892c

892c	Presser Bar Lifting Bracket Adjusting Screw
453c	" " Set Screw
38467	" " Spring (flat)
38468	" " " Stud
26276	" Foot Hinge Pin
36352	". " Plate
36353	" " Shank
36354	Presser Foot (strip folding) hinged, complete, for
	general work, Nos. 26276, 36352 and 36353.
	Old Serial No. 20736
26276	Presser Foot Hinge Pin
36355	" " Plate
36353	" " Shank
36356	Presser Foot (strip folding) hinged, complete, for
	lawn, Nos. 26276, 36353 and 36355. Old
	Serial No. 20841
26276	Presser Foot Hinge Pin
36357	" " Plate
36353	" " Shank
36358	Presser Foot (strip folding) hinged, complete,
	grooved for 1/16 in. to 3/16 in. cord, for cord
	covered headings, Nos. 26276, 36353 and
	36357
37	WI 1 1 N 000V0
NOT	E. When ordering No. 36358 state gauge of
	TE. When ordering No. 36358 state gauge of
mad	thine and send sample of cord to be used.
mac 1900	chine and send sample of cord to be used. Presser Foot Screw
mad 190D 574D	Presser Foot Screw Pressure Regulating Thumb Screw
190b 574b 1539b	Presser Foot Screw. Pressure Regulating Thumb Screw. " " Lock Nut.
mad 190D 574D 1539D 46483	Presser Foot Screw Pressure Regulating Thumb Screw " " Lock Nut Ruffling Blade. Old Serial No. 21099
190D 574D 1539D 46483 46484	Presser Foot Screw Pressure Regulating Thumb Screw. " " Lock Nut. Ruffling Blade. Old Serial No. 21099. " " Holder. Old Serial No. 21098.
190D 574D 1539D 46483 46484 1247c	Presser Foot Screw Pressure Regulating Thumb Screw. " " Lock Nut. Ruffling Blade. Old Serial No. 21099. " " Holder. Old Serial No. 21098. " " Hinge Screw.
190D 574D 1539D 46483 46484 1247c 46485	Presser Foot Screw Pressure Regulating Thumb Screw. " " Lock Nut. Ruffling Blade. Old Serial No. 21099. " " Holder. Old Serial No. 21098. " " Hinge Screw. " " Spring
190D 574D 1539D 46483 46484 1247c 46485 46486	Presser Foot Screw Pressure Regulating Thumb Screw. " " Lock Nut. Ruffling Blade. Old Serial No. 21099. " " Holder. Old Serial No. 21098. " " Hinge Screw. " " Spring " " Bracket.
190D 574D 1539D 46483 46484 1247c 46485 46486 50118D	Presser Foot Screw Pressure Regulating Thumb Screw " " " Lock Nut Ruffling Blade. Old Serial No. 21099 " " Holder. Old Serial No. 21098 " " " Hinge Screw " " " Spring " " " Bracket " " Regulating Screw.
190D 574D 1539D 46483 46484 1247c 46485 46486 50118D 46487	Presser Foot Screw Pressure Regulating Thumb Screw. " " Lock Nut. Ruffling Blade. Old Serial No. 21099. " " Holder. Old Serial No. 21098. " " Hinge Screw. " " Spring " " " Bracket. " " " Regulating Screw. " " Stop.
190D 574D 1539D 46483 46484 1247c 46485 46486 50118D 46487 460c	Presser Foot Screw Pressure Regulating Thumb Screw. " " Lock Nut. Ruffling Blade. Old Serial No. 21099. " " Holder. Old Serial No. 21098. " " " Hinge Screw. " " Spring " " " Bracket. " " Regulating Screw. " " Stop. " " Set Screw
190D 574D 1539D 46483 46484 1247c 46485 46486 50118D 46487 460c 578D	Presser Foot Screw Pressure Regulating Thumb Screw. " " Lock Nut. Ruffling Blade. Old Serial No. 21099. " " Holder. Old Serial No. 21098. " " " Spring " " " Spring " " " Regulating Screw. " " " Stop " " Screw. " " Screw. " " Screw. " " Screw. " " Set Screw " " Screw.
190D 574D 1539D 46483 46484 1247c 46485 46486 50118D 46487 460c 578D 46488	chine and send sample of cord to be used. Presser Foot Screw Pressure Regulating Thumb Screw. " " Lock Nut. Ruffling Blade. Old Serial No. 21099. " " Holder. Old Serial No. 21098. " " " Spring " " " Spring " " " " Bracket. " " " " Regulating Screw. " " " Stop " " Screw. " " Screw. " " Screw. " " Connecting Link.
190b 574b 1539b 46483 46484 1247c 46485 46486 50118b 46487 460c 578b 46488 378c	chine and send sample of cord to be used. Presser Foot Screw Pressure Regulating Thumb Screw. " " Lock Nut. Ruffling Blade. Old Serial No. 21099. " " Holder. Old Serial No. 21098. " " " Spring " " " Spring " " " Bracket. " " " Regulating Screw. " " " Stop " " " Screw. " " Screw. " " Screw. " " Screw. " " Hinge Screw.
190b 574b 1539b 46483 46484 1247c 46485 46486 50118b 46487 460c 578b 46488 378c 1520E	chine and send sample of cord to be used. Presser Foot Screw Pressure Regulating Thumb Screw. " " Lock Nut. Ruffling Blade. Old Serial No. 21099. " " Holder. Old Serial No. 21098. " " " Hinge Screw. " " Spring " " " Spring " " " Regulating Screw. " " " Stop " " Screw. " " Screw. " Connecting Link. " " " Hinge Screw. " " Nut.
190b 574b 1539b 46483 46484 1247c 46485 46486 50118b 46487 460c 578b 46488 378c	chine and send sample of cord to be used. Presser Foot Screw Pressure Regulating Thumb Screw. " " Lock Nut. Ruffling Blade. Old Serial No. 21099. " " Holder. Old Serial No. 21098. " " " Spring " " " Bracket. " " " Bracket. " " " Regulating Screw. " " Stop. " " " Screw. " " Screw. " " Screw. " " Connecting Link. " " " " Hinge Screw. " " " " Nut. " " Rod with 794E, 4784, 46490.
190b 574b 1539b 46483 46484 1247c 46485 46486 50118b 46487 460c 578b 46488 378c 1520E 46489	chine and send sample of cord to be used. Presser Foot Screw Pressure Regulating Thumb Screw " " Lock Nut. Ruffling Blade. Old Serial No. 21099. " " Holder. Old Serial No. 21098 " " " Spring " " " Bracket " " " " Regulating Screw " " " Stop " " " Stop " " " Screw " " Screw " " Screw " " " Wit " " " Nut " " Rod with 794E, 4784, 46490, 46491 and two 127E
190D 574D 1539D 46483 46484 1247C 46485 46486 50118D 46487 460C 578D 46488 378C 1520E 46489	chine and send sample of cord to be used. Presser Foot Screw Pressure Regulating Thumb Screw " " Lock Nut Ruffling Blade. Old Serial No. 21099 " " Holder. Old Serial No. 21098 " " " Spring " " " Spring " " " " Regulating Screw " " " Stop " " " Screw " " Screw " " Screw " " Screw " " " Nut " " Rod with 794E, 4784, 46490, 46491 and two 127E Ruffling Connecting Rod Adjusting Gib (brass)
190D 574D 1539D 46483 46484 1247C 46485 46486 50118D 46487 460C 578D 46488 378C 1520E 46489	chine and send sample of cord to be used. Presser Foot Screw Pressure Regulating Thumb Screw. " " Lock Nut. Ruffling Blade. Old Serial No. 21099. " " Holder. Old Serial No. 21098. " " " Spring " " " Spring " " " Bracket. " " " Regulating Screw. " " " Stop " " " Screw. " " Screw. " Connecting Link. " " " " " Nut. " " Rod with 794E, 4784, 46490, 46491 and two 127E. Ruffling Connecting Rod Adjusting Gib (brass). " " " " Screw.
190D 574D 1539D 46483 46484 1247C 46485 46486 50118D 46487 460C 578D 46488 378C 1520E 46489 46490 794E	chine and send sample of cord to be used. Presser Foot Screw Pressure Regulating Thumb Screw. " " Lock Nut. Ruffling Blade. Old Serial No. 21099. " " Holder. Old Serial No. 21098. " " " Hinge Screw. " " " Spring " " " " Regulating Screw. " " " Stop " " " Screw. " " Screw. " " Screw. " " " " Nut. " " Rod with 794E, 4784, 46490, 46491 and two 127E. Ruffling Connecting Rod Adjusting Gib (brass). " " " Screw. " " " Screw. " " " Screw. " " " " " Screw. " " " " Screw. " " " " " Screw. " " " " " Screw.
190D 574D 1539D 46483 46484 1247C 46485 46486 50118D 46487 460C 578D 46488 378C 1520E 46489	chine and send sample of cord to be used. Presser Foot Screw Pressure Regulating Thumb Screw. " " Lock Nut. Ruffling Blade. Old Serial No. 21099. " " Holder. Old Serial No. 21098. " " " Spring " " " Spring " " " Bracket. " " " Regulating Screw. " " " Stop " " " Screw. " " Screw. " Connecting Link. " " " " " Nut. " " Rod with 794E, 4784, 46490, 46491 and two 127E. Ruffling Connecting Rod Adjusting Gib (brass). " " " " Screw.

		ecting Rod Hinge Screw Nut
4784	"	" Oil Pad (felt)
46492		entric with two 448c
448c	u	" Set Screw
46493		cator
46494		er
46495	u u	Arm with 454c
46496	u u	" Hinge Stud
46497	u u	" Lifting Bracket with two 171D.
1499F	" "	" " Cap Screw
171D	" "	" " Clamping Screw
454c	" "	" Set Screw
22c	" "	Hinge Screw
46498	и и	Slide Block
50120c		ulating Stud
1719c	u	" Nut
46499	"	" " Handle with 220D
220D	u	" " Clamping Screw
46500	"	" " Sleeve
52501	"	" Stop
337D	"	" " " Screw
52502	0	ulator
52503	"	" Bushing
453c	"	" Set Screw
52504	u	" Crank with 453c
9792	u	" Pin
453c	ш	" Set Screw
52505	0 2000	arating Blade. Old Serial No. 21439
52506	"	" Bar
52507	"	Diacket (lower)
		460c and two 453c
453c		arating Blade Bar Bracket (lower) Set
52508		arating Blade Bar Bracket (upper)
		453c
453c	Ruffling Sepa	arating Blade Bar Bracket (upper) Set
	Screw	·
52509	Ruffling Sepa	arating Blade Bar Handle with 145D
145D	"	" " Clamping Screw
52510	· a	" " " Plate
178F	"	" " " " Screw
52511	ш	" " " Stop
46035	, u	" " " Clamp
1423D	u	u u u u u
	Screw	
52512	Ruffling Sepa	arating Blade Bar Spring
52513	u	" " Holder. Old Serial No.
	21441	

	Ruffling	g Sepa	rating I		lder Screw
662D	"	CIL-C		DCI	ew
52514		Shaft "			
*52515	"	"	Brack)
134D			"	"	Screw
*52516	"	"	"	(front)
129D	. "	"	"	"	Screw (long)
1149D	"	"	"	ш	" (short)
20251	ш	"	Collar		Sc
456c	"	u	"	Set Scre	ew
52517	u	"			vith two 797c
797c	ш	"	"	" S	et Screw
52518	u	"	u	(front)	with 453c
9792	ш	"	"	" I	Pin
453c	и	ш	"		Set Screw
46034	Slack T	hread	Control	ler	
46035	и	u	"	Clam	p
190p	ш	· ·	u	ш	Screw
2102	Tension	(unde	er threa	d) Disc.	
1560c	"	"	"		ating Thumb Nut
916F	u	u	"		Stud
10148	и	"	"		g
17547	"	"	"	Threa	d Guide
2102	"	(unne	r threa		
1560c	u	(appe	"		ating Thumb Nut
916F	"	u	"		Stud
13710	"	. "	и		
17547	"	"	"	Three	d Guide
38225	Thusad	(undo	n) Errole		
	inread "	(unde	r) Eyele	(back)	·····
190D	"	"	u		Screw
38284	"		1997		
46049	"	"	Nippe		vith 465c
465c	"	"		-	Set Screw
38210		- "	"	Spring	; (lower)
38211	"	"	"	u	(upper)
46247	"		"	"	" Stop
176F	"	"		"	Screw
38475	"				465c
465c	"	"	"		Screw
46047	"	ш	"		le
46040	- "	"	"	ш	Bracket with 910c.
690D	и	и	"	. "	" Screw
46041	u.	ш	и	ш	Spring
. 190p	и	u	"	"	" Screw
910c	u	"	- 44	"	Stop Screw
38482	и	"	"	Strip	per
207F	и	"	"	Strip "	
	"	"	"		Screw
38476				Inre	ad Guard (left)

20'	7D	Thread	(under) Take-up	Thread	Guard	(left	Screw.
3847	7	"	"	и	"	"	(righ	t)
20	7D	"	ш	и	и	"	"	Screw.
3848	3	"	(upper	r) Controll	er			
20	6F	44	"	"	Screw	7		
4600	9	"	"	Eyelet				
19	0D	ш	u					
4601	0	и	ш	Take-up	with 45	57c		
45	7c		"	и	Set Scr	ew		
52519	9	Throat	Plate:	for 46473.	Old Se	erial No	. 216	15
69	1F	u	44 5	Screw				

ACCESSORIES

2015	Machine Cushion (rubber)
	134 in. Wood Screw No. 16, to secure machine to
	table
4718	Machine Rest (felt)
35859	Oiler with Cap and 35861
35860	" 35859 filled with oil
35861	" Spout, 3½ in. long
26026	Screw Driver
35964	Stiletto.
38487	Threading Wire
35095	Tweezers, 6 in
8908	Wrench for 1520, 1706, 1708 and 1709
23766	" " 1508, 1517 and 1636
19221	" " 1619

EDGE FOLDERS

36.	359	Edge	Folder (adjustable) on Shank, for bottom of
			skirts, etc., for 46470. Old Serial No. 21120.
36	360	Edge	Folder on Shank, for joined or endless ruffles,
			for right hand needle only, for 52513, to be
			used with either 36354, 36356 or 36358. Old
			Serial No. 21075
36	361	Edge	Folder on Shank, for folded headings, used
			without covering strip, for two row stitching,
			for 52513. Old Serial No. 21666
36.	362	Edge	Folder on Shank, for folded headings (3% in.
		0	wide) used without covering strip, for two
			row stitching, for 52513. Old Serial No.
			21440
4	230н	Edge	Folder Screw for 36360 and 36361
1			" " 36362

EDGE GUIDES

36363	-Be carried (and an experience) our billioning for bootcom of
	skirts, etc., for 46470
36364	Edge Guide on Shank, for joined or endless ruffles,
	for right hand needle only, for 52513, to be
	used with either 36354, 36356 or 36358
230н	Edge Guide Screw for 36364

FOOT LIFTER PARTS

6439	Chain, 36 in. to 45 in
	Note. When ordering 6439 give length required.
4879	Chain Connecting Link for 4885
52520	Lifting Lever.
802D	" " Hinge Screw
52521	" " Spring
4881	Treadle
4882	" Shaft
4883	" Spring
4884	" Stand
4885	Treadle complete, Nos. 4879, 4881 to 4884 and two
	wood screws 1 in. No. 16
52522	Foot Lifter complete, Nos. 802D, 4885, 6439, 52520
	and 52521

KNEE LIFTER PARTS

52520	Liftin	g Lev	ver
23760	"	"	
38384	"	"	
802D	"	"	
52521	"	"	
2763	Rock	Shaft	t
12242	"	"	Hanger with two wood screws 1 in.
		No.	10
6335	Rock		t Knee Arm
6336			t Knee Arm complete, Nos. 2766, 2767 and
			5
2766	Rock	Shaft	t Knee Arm Hub with 356c
356c	и	и	" " Set Screw
2767	"	ш	" Plate with 356c
356c	"	"	" Set Screw
6337	44	"	Lifting Bracket with two 356c
7125	и	"	" " Hook
356c	"	ш	" " Set Screw
356c	"	"	" " Set Screw

	Rock Shaft Stop Dog with 356c.
	Rock Shaft complete, Nos. 2763, 2770, 6336, 6337,
	7125 and two 12242
52523	Knee Lifter complete (power table) Nos. 802D, 23760, 23767, 52520 and 52521
52524	Knee Lifter complete (bench stand) Nos. 802D,
	23767 38384 52520 and 52521

TAPE HOLDER (6 in. Disc)

35821	Bracket Wire
35822	Bracket Wire complete, Nos. 26918, 35821 and 35823
35823	Disc
35824	" Hub
26070	" " Rivet
35825	Disc complete, Nos. 35823. 35824 and three 26070
26918	Tape Guide
35826	Tension Adjusting Collar with 286D
286D	" " Thumb Screw
13211	" " Spring
35827	Tape Holder (straight) complete, Nos. 13211, 35822,
	35825 and 35826
191F	Tape Holder Set Screw

THREAD UNWINDER

FOR FOUR LARGE SPOOLS OR FOUR LARGE CONES OF THREAD

27623	Spool	Pin
155c	ш	" Set Screw
41534	ш	Rest
41535	"	" 41534 with 1149c and four each 155c and
		27623
1149c	Spool	Rest Set Screw.
27940	"	Stand with 453c
41514	ee	Weight, 4 in. diam., with 41515
41515	и	" Centre Pin
27739	Threa	d Cone (wood)
41536	и	Guard
41437	u	" Rod, 30 in. long, with 735c
453c	ш	" Set Screw
735c	u	" Set Screw
41537	Threa	d Unwinder complete, Nos. 27940, 41437,
		41535, 41536, three wood screws 1 in. No. 12
		and four each 27739 and 41514

