



Version 1.0

USER'S MANUAL PARTS BOOK

FORTUNA

series 5

ISO 9001 Certification of Quality System




SunStar CO., LTD.

MEE-130204

- 1) FOR AT MOST USE WITH EASINESS,
PLEASE CERTAINLY READ THIS MANUAL
BEFORE STARTING USE.
- 2) KEEP THIS MANUAL IN SAFE PLACE
FOR REFERENCE WHEN THE MACHINE
BREAKS DOWN.



1. Thank you for purchasing our product. Based on the rich expertise and experience accumulated in industrial sewing machine production, SUNSTAR will manufacture industrial sewing machines, which deliver more diverse functions, high performance, powerful operation, enhanced durability, and more sophisticated design to meet a number of user's needs.
2. Please read this user's manual thoroughly before using the machine. Make sure to properly use the machine to enjoy its full performance.
3. The specifications of the machine are subject to change, aimed to enhance product performance, without prior notice.
4. This product is designed, manufactured, and sold as an industrial sewing machine. It should not be used for other than industrial purpose.

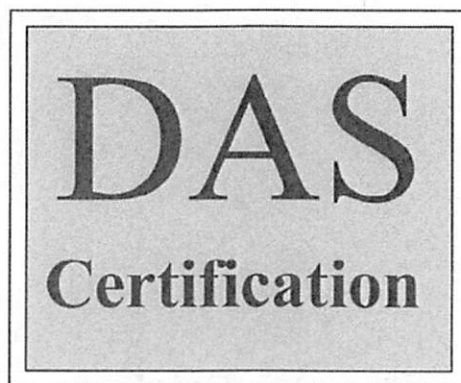

Scope of Quality Approval

The following Company

SUNSTAR ELECTRIC CO., LTD.

The Company has been approved for the following scope of operation:

**Manufacture, Sale and Servicing of Motors and Controllers
for Sewing Machines and Embroidery Machines**

Scope of approval: **NACE 19, Electrical and optical equipment**

Date of Certificate Issue: 26th November 2003

Certificate Valid until: 26th November 2006

Certificate Number: K01-1714

Authorized


D.A. Smith

Date

03rd December 2003

DAS CERTIFICATION Ltd.

Company Number: 3384526
6 Amber Court, Crich Lane,
Belper,
Derbyshire DE56 1 HG
Telephone & Fax: +44 (0) 1773 828586

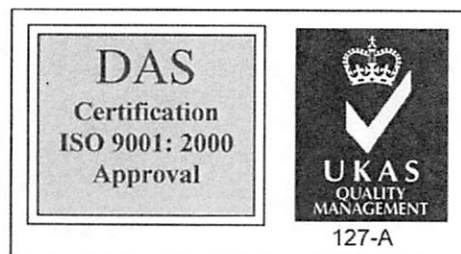



USER'S MANUAL

CONTENTS

1. Safety instruction	6
2. Precautions before use	8
3. Locating and using parts of the controller box	10
4. Installation	11
1) Mounting your Servo Motor on the table	11
2) Assembling the belt cover and adjusting the belt tension	12
3) Mounting and adjusting the foot-lift solenoid	13
4) Mounting the position sensor (Synchronizer) and setting the film	14
5) How to equip and adjust a built-in location detector(synchronizer)	16
6) Mounting the Program Unit(P/U)	18
7) An example of installing the SunStar sewing machine	19
5. Wiring and grounding	20
1) Specification of the power plug	20
2) Specification of electric current in wiring of power plug	20
3) Name and description on the outside connector of control box	21
4) How to change the electric voltage supplied for solenoid(The factory installed setting is:J2)	21
6. Connection the earth wire of the sewing machine and motor	23
7. Things to be checked after installation	23
8. Program unit part names and method of use	24
1) Program unit part names	24
2) Program Unit Method of Use	24
3) Start and End Backtack Stitch Correction Method	35
4) Method of Use: Inertia Tuning Function	38
5) How to Use Edge Sensor	39
6) Motor Controller Setting	42
7) Advanced Pattern Sewing Functions	46
8) Automatic Change Function of Twin Needles (applicable to the models supporting twin needles)	48
9. Simple operation unit part names and method of use	50
1) Names of Each Part in the Simple Operation Unit	50
2) Simple Program Unit Method of Use	50
10. Fortuna series 5 full function software method of use	55
1) Basic Functions of the Fortuna Series 5 Full Function Software	55
2) Fortuna Series 5 Full Function Software Specific Parameters	56
3) Method of Use and Explanations for Specific Items of the Parameter	71
4) Thread Trimming Sequence Function Method of Use (Items no. 54, 55, 56 of Group B)	75
11. Breakdown and troubleshooting	84
12. How to place for controller	85
13. Block diagram	86
※ Parts Book	87

SAFETY INSTRUCTION

Be sure to read and keep in mind the following instructions before you install and use the FORTUNA SERVO MOTOR.

1) Use and Purpose

This product is designed, manufactured, and sold as an industrial sewing machine. It should not be used for other than industrial purpose.

2) Working Environment

① Power Source

- It is desirable that voltage of the power source be kept within the range of $\pm 10\%$ of the rated voltage.
- It is desirable that frequency of the power source be kept within the range of $\pm 10\%$ of the rated frequency. (50/60Hz)
- The SERVO MOTOR can be expected to work normally only in case the foregoing things are kept.

② Electromagnetic Noise

- It is desirable that those equipments causing strong electromagnetic field or high frequency not use the same electrical outlet as this on and stay away from it.

③ Temperature and Humidity

- Keep the ambient temperature above 5 degrees and below 40 degrees Centigrade.
- Never use it outdoors and avoid direct ray of light.
- Keep it away from an hot object like a stove.
- Keep the ambient humidity above 30% and below 95%.

④ Never use it near gases and explosives.

⑤ Do not use it at a spot located 1,000m or higher above sea-level.

⑥ Keep the storage temperature higher than 25 degrees below zero and lower than 55 degrees Centigrade when not in use.

3) Installation

Follow the instruction carefully when installing it.

- ① Be sure to start installing it after pulling the power plug off the outlet.
- ② Fix the cable so that it may not move, and do not allow the moving parts like belts to be interfered with. (keep distance of at least 25mm from them.)
- ③ Be sure to have the Controller, the Motor and the sewing Machine grounded.
- ④ Be sure that the voltage of power source fits the specification of the Controller before the power is on
- ⑤ Be sure to use Safety Extra Low Voltage when an extra item or an accessory is fitted into the Controller.

4) Disassembly

- ① Indisassembling it, be sure to wait at least 360 seconds before taking any action after pulling the plug off the power source after turning it off.
- ② When pulling off the plug from the power source, be sure to hold the plug itself instead of the wire connected to the plug.

5) Service and Maintenance

- ① Make sure that service and maintenance are carried out by a skilled technician.
- ② Never try to operate with the Motor and the Controller open.
- ③ When inserting a thread into or touching the machine, be sure to turn the power off and step down from the platform.
- ④ Be sure to use standard products specified for replacement of parts.

6) Other Safety Instructions


- ① Take care not to let your fingers touch any moving parts including belts.
- ② In case of remodelling or fitting of additional device, be sure to follow safety standards and do not ever try to go ahead based on your own judgments.
- ③ Do not try to operate with the safety device removed.
- ④ Take care not to let water or coffee or something like those admitted into the Controller or the Motor.
- ⑤ Never drop the Controller or the Motor to the ground.

※The instructions presented above are for the safer and more proper operation of the Fortuna Servo Motor. Ignoring such instructions could cause damage to the machine or physical injury of the user. Please follow all the instructions when operating the machine.


2

PRECAUTIONS BEFORE USE


1. Do not turn on the power while stepping on the pedal.

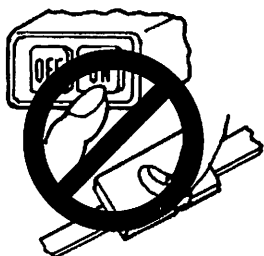


2. Turn off the power when leaving the servomotor overnight.

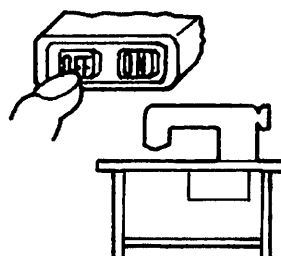

3. Turn off the power when servicing the servomotor or changing the needle.

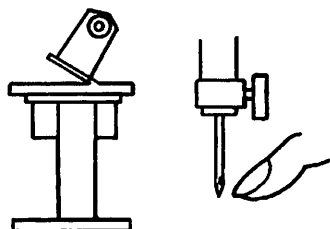


4. Be sure to keep the servomotor securely grounded.

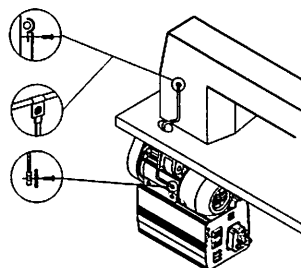


5. Do not connect multiple servomotor power plugs to the same power strip.



6. Install the servomotor away from noise sources, such as high-frequency equipments and welding machines.

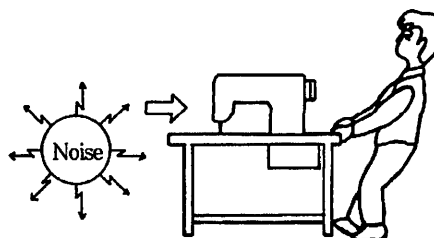


7. Avoid electrical shock when servicing the controller box. (Wait for 6 minutes before opening the cover after turning off the power.)

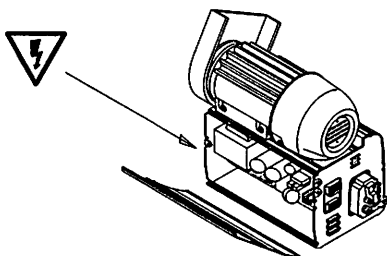


8. When an error message "Er" appears on the digital display, take a note of the "Er" code, and then turn on and off before resuming operation (Contact the local dealer if "Er" message persists on the display)




9. Adjust the belt tension to the optimum level.

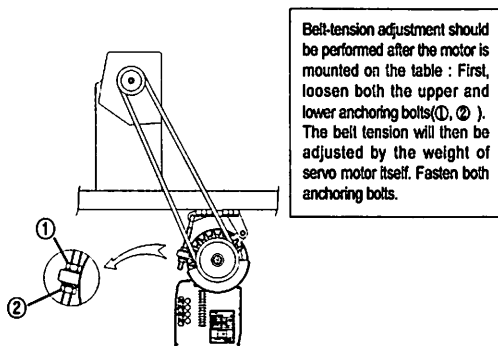

10. Clean it every two or three weeks so that no dirt or a dirty substance may be piled up.

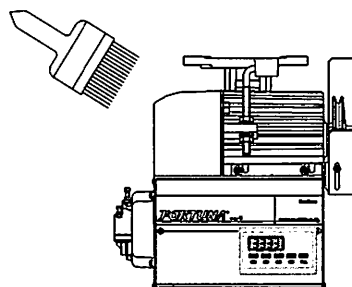


11. When replacing the fuse, use a standard item, opening the cover as shown in the diagram.

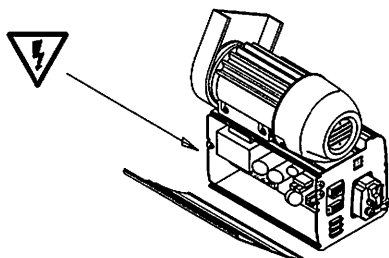


F1	250V/15A
F2	250V/15A
F3	250V/6.3A
F4	250V/1A

12. Make the length of the cable connected with an outside parts like stand-up pedal as short as possible.

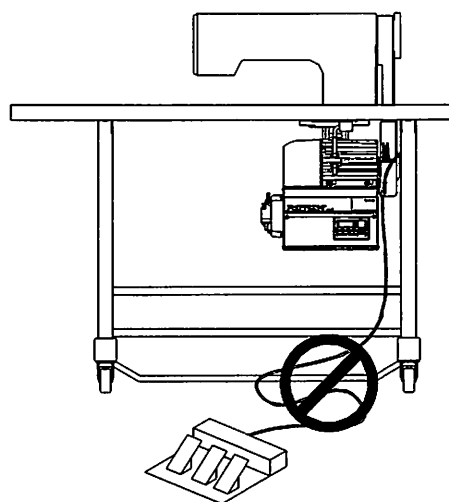


LOCATING AND USING PARTS OF THE CONTROLLER BOX

1) Left and right side of control box

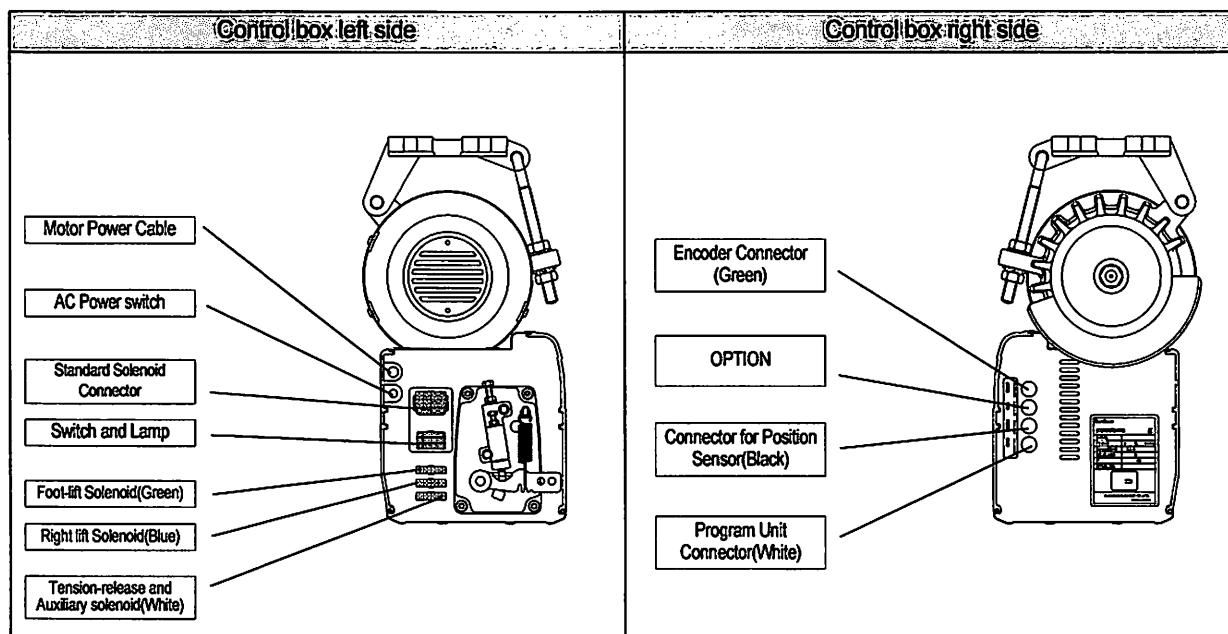

2) Rear panel

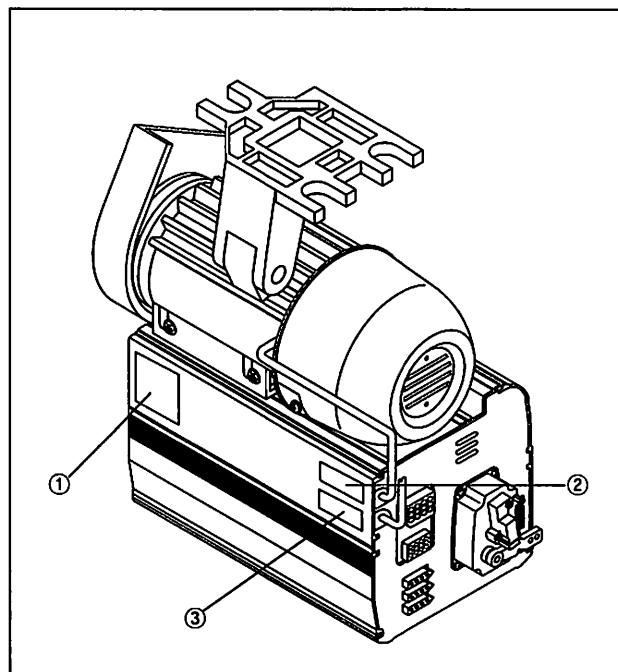

① Caution



WARNING

경 고



Hazardous voltage will cause injury.
Be sure to wait at least 360 seconds before opening this cover after turn off main switch and unplug power cord.

고압 전류에 의해 감전될 수 있으므로 커버를 열 때는 전원을 내리고 전원 플러그를 뽑고 나서 360초간 기다린 후 여십시오.


- ② Motor
- ③ AC INPUT

4


INSTALLATION

1) Mounting your Servo Motor on the table

- ① Make sure that the holes are bored on the table as shown in the figure.

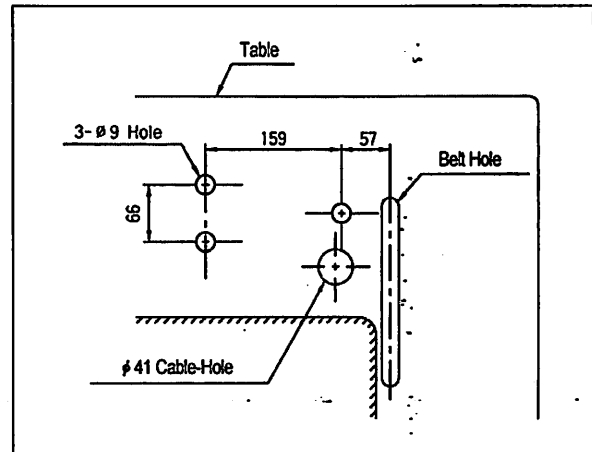

- ② Insert three motor-fixing bolts through the three holes on the table. Attach the motor base padded with vibration-proof rubber, and slide flat and spring washers over the bolt stems, and then fasten the bolts with nuts.


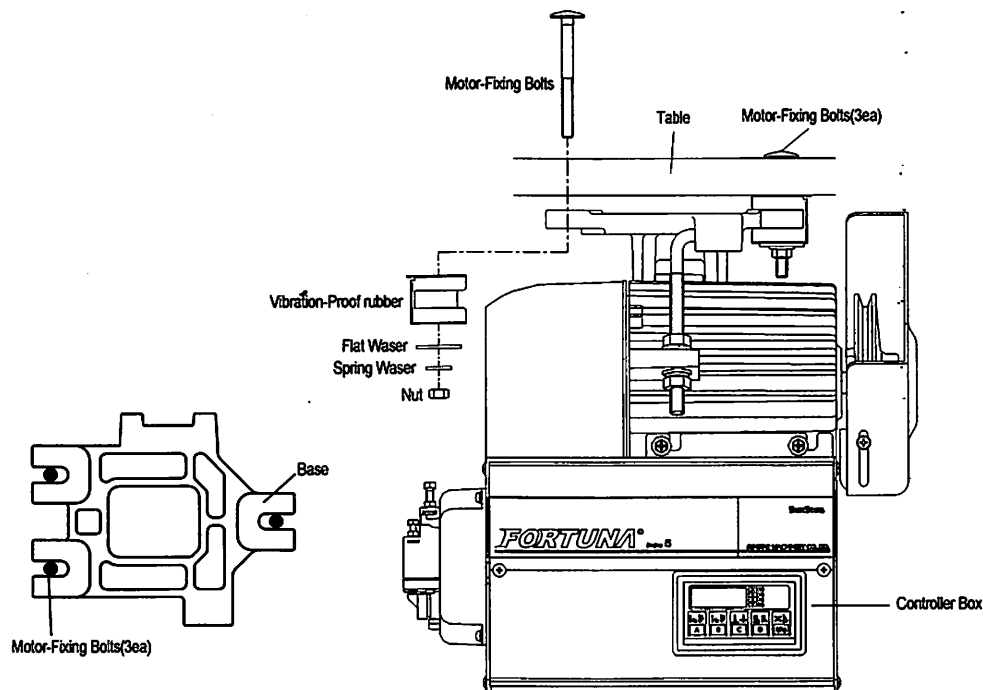


- ③ Make sure that the center of motor pulley is matched to that of the sewing machine before tightening the motor-fixing bolts and nuts.



2) Assembling the belt cover and adjusting the belt tension

(1) Belt cover assembling procedure

 - ① Upon the completion of the motor mounting, bring the two pulleys of motor and sewing machine closer to each other, by pulling back the sewing machine. You can then mount the belt easily as shown in the figure.

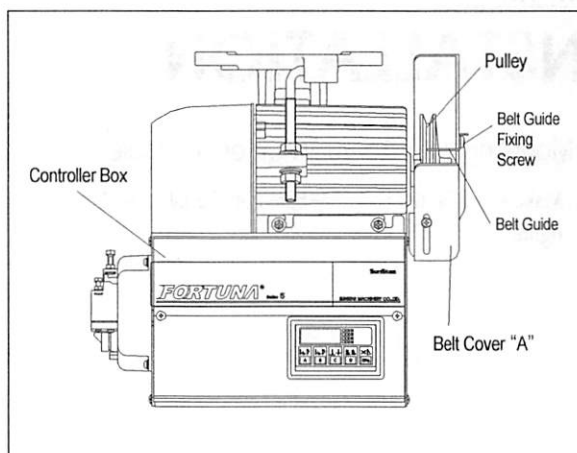


- ② Place the belt cover 'B', making sure that the belt cover does not contact the belt, and then fasten the cover with the fixing screw.

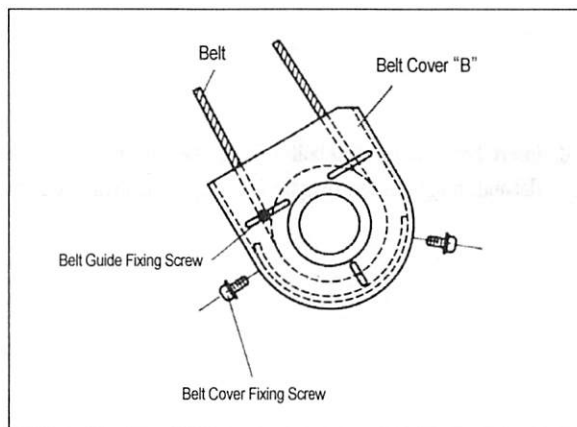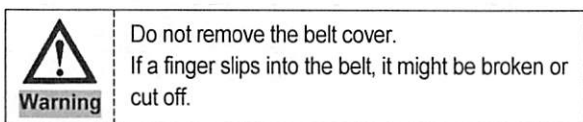

(2) Adjusting the belt tension

- ① Optimum Tension Level : The optimum tension level is achieved when the belt is pushed by 5-10mm when the top surface portion of the belt at about 30-50mm above the tabletop is pressed by a finger with a force of ~1kgm/sec² or 1 Newton.
- ② Adjusting the Tension Level : If the tension level is out of the optimum range, adjust the tension as follows. First, loosen both the upper and lower nuts for the anchor bolt, letting the belt be stretched by the motor weight itself. Second, tighten the upper nut only to the extent that the motor does not move. Third, fasten the bottom nut tightly so that the motor is securely fixed.

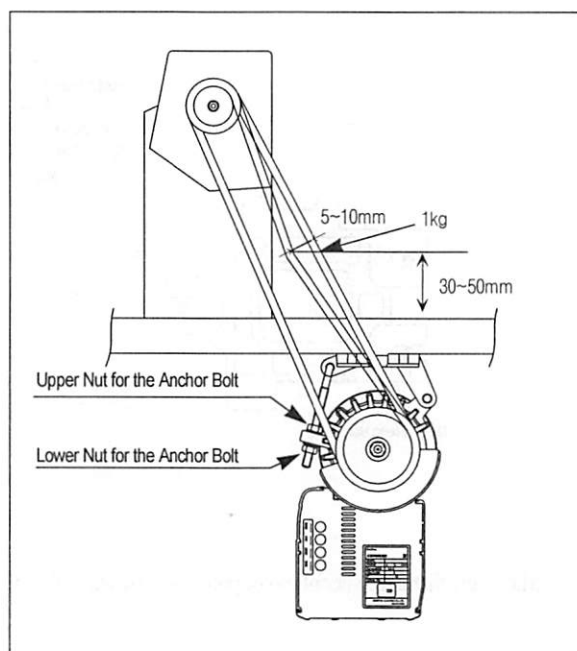


3) Mounting and adjusting the foot-lift solenoid

(1) SunStar KM-235 Model


- ① Attach the main power switch first since the power switch is located normally in between the solenoid brackets.
- ② By referring to the figure on the right and the mounting instructions enclosed in the packaging box, locate the insertion surface of the oil pan, and then attach the foot-lift solenoid.

No.	Solenoid No.	Applicable Models
1	SPF-2	KM-235A, B

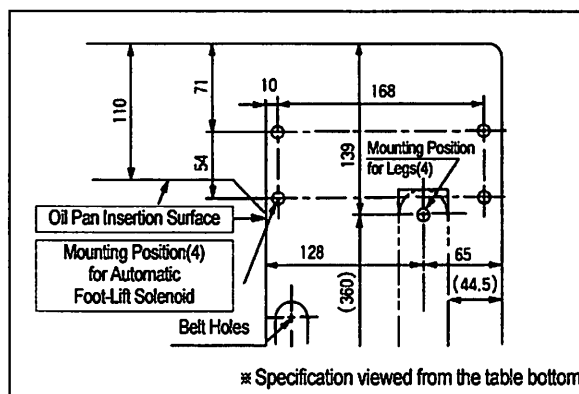

(2) SunStar KM-250 Model


- ① First, assemble a panel for the attachment of presser foot solenoid on the back of KM-250.
- ② Attach the presser foot solenoid to a bracket "A".
- ③ Attach the bracket "A" with the presser foot solenoid to the panel above.
- ④ Attach a crank to a solenoid shaft and then connect it to a sewing machine.
- ⑤ Place a cover on the solenoid.

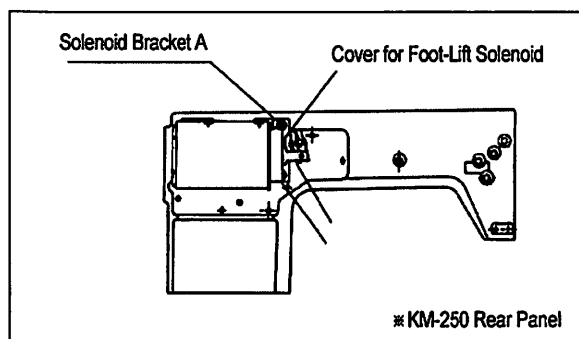

(3) SunStar Special-specification models

The same mounting procedure for KM-235 model is applicable for other models listed below.

No.	Solenoid No.	Applicable Models
1	SPF-3	KM-750-7, KM-750BL-7
2		KM-790-7, KM-790BL-7
3		KM-857-7, KM-867-7
4	SPF-4	KM-560-7
5	SPF-6	KM-957-7, KM-967-7
6	SPF-8	KM-757-7
7	SPF-9	KM-640BL-7

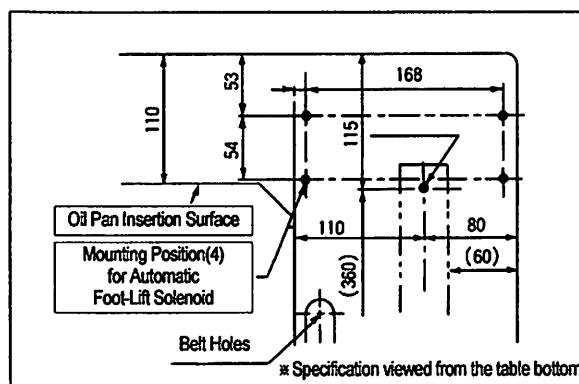


(4) Adjusting the stroke(Gap) of the automatic foot-lift solenoid

① Check point

Check to make sure that the stroke-adjusting screw is located at the center of the solenoid axis, i.e., the solenoid should be assembled in parallel with the bottom surface of the table. If the solenoid is not in parallel, make an adjustment so that the screw is in parallel with the center of the solenoid axis using the connection link-fixing screw.

② Adjusting Procedure

The vertical travel distance of the presser foot can be adjusted by the stroke-adjusting screw. First, Loosen the two fixing screws, and adjust the vertical stroke using the stroke-adjusting screw. loosening and tightening the stroke-adjusting screw will decrease and increase the vertical stroke of the presser foot respectively. After the adjustment, fasten the fixing screw tightly.

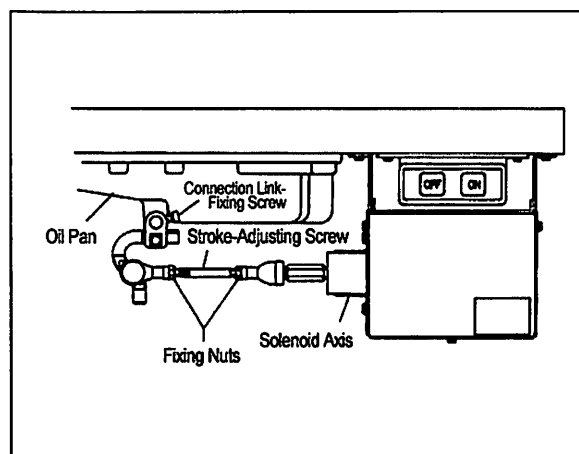


4) Mounting the position sensor (Synchronizer) and setting the film

(1) Mounting the position sensor(Synchronizer)


① SunStar thread-cutting sewing machine.

All SunStar thread-cutting sewing machines are equipped with a position sensor. Users, therefore, are required to the adjust the film position, if necessary, as shown in the figure.

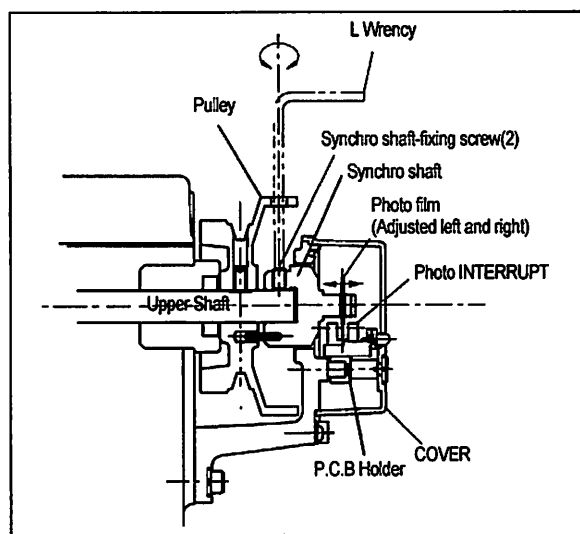


② All other sewing machines(including other manufacturers' brands)

First, attach the position sensor-mounting adapter to the upper shaft of the sewing machine. Second, attach the position sensor-fixing plate to the body of the sewing machine as shown below in the figure. Third, secure the position sensor to the adapter with the fixing screws.

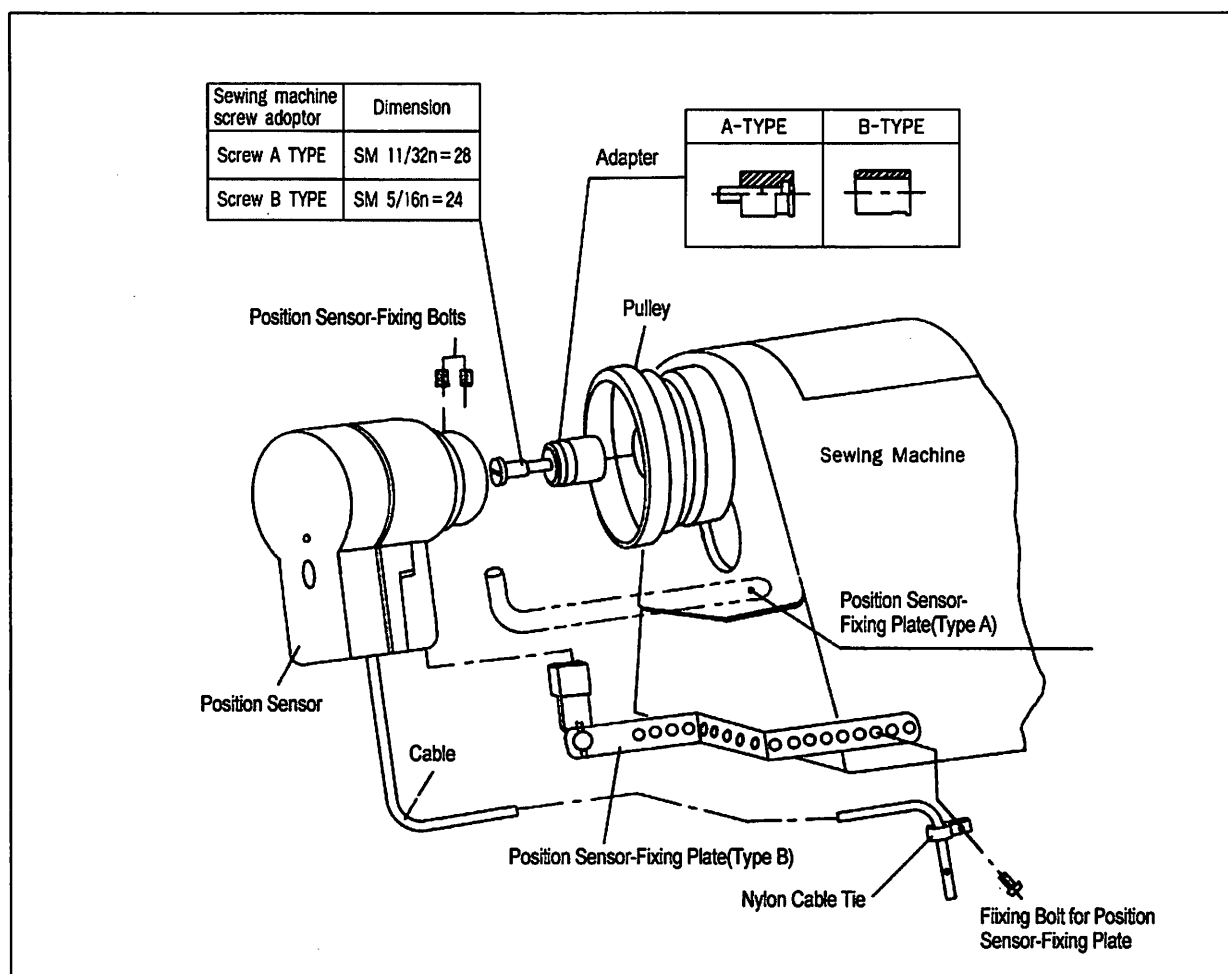


(2) Adjusting the film of the position sensor

- ① Assemble the films and position sensor in the order as shown in the figure.

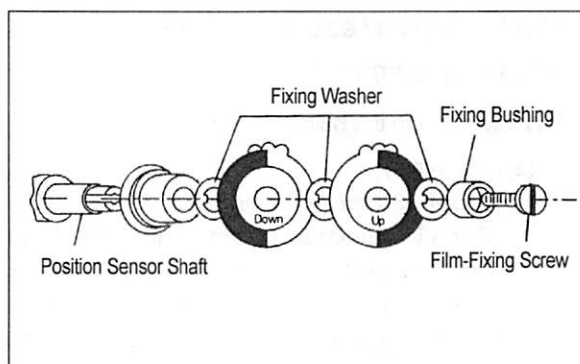


- ② Upon the completion of the assembling, position the needle shaft tight at the rising point from the lowest needle position by manually rotating the pulley. Loosen the film-fixing screw, and adjust the DOWN film so that the film-adjusting line and the sensor housing calibration line are matched. Tighten the film-fixing screw just to the extent that the film can not be rotated. Likewise, position the thread take-up at the highest position. Loosen the film-fixing screw, and adjust the UP film as shown in the figure, while using caution not to move the DOWN film which is already adjusted earlier. Tighten the adjusted film with the fixing screw.

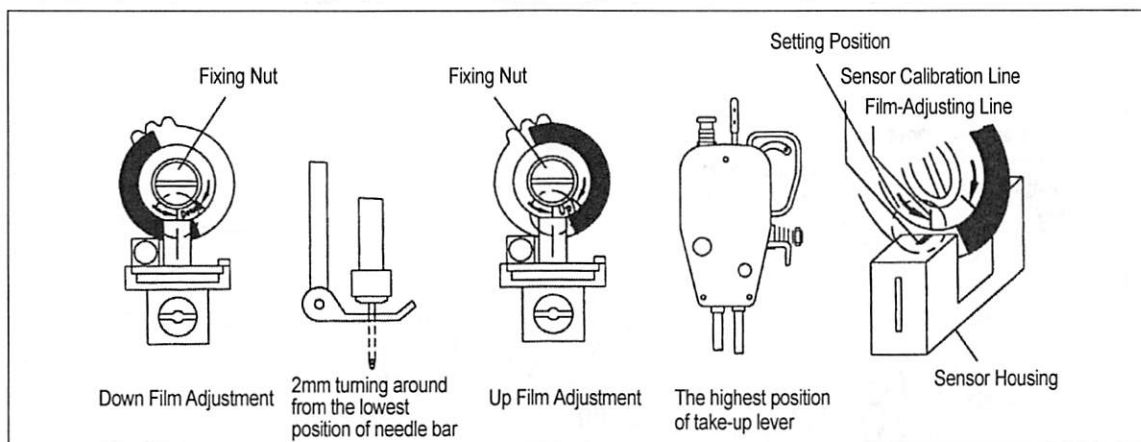

(3) Adjustment the films of reverse rotation sewing machines

※For reverse-rotation sewing machines, the film-adjusting lines located at right edge of the "UP" and "DOWN" film should be matched to the center line of the sensor.

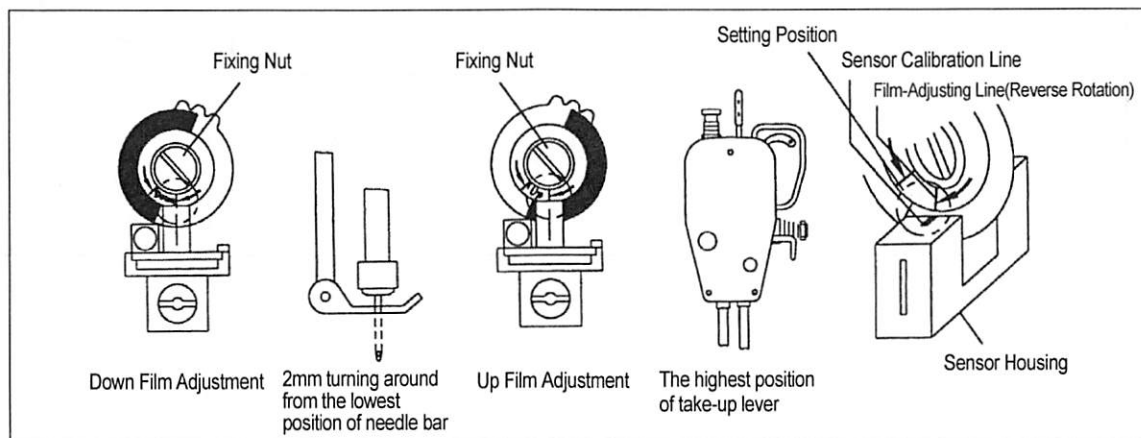



After adjustment the film of the position detector, be sure to rotate the motor for 3~5 seconds by pedalling so that the Controller may remember location of the film.

5) How to equip and adjust a built-in location detector(synchronizer)

(1) How to equip the built-in location detector (synchronizer)


► In case of a SunStar thread trimmer

When a built-in location detector(synchronizer) for the sewing machine with the SunStar thread trimmer is equipped, all that the users need to do is to simply adjust the location of magnetic for detection according to their needs.

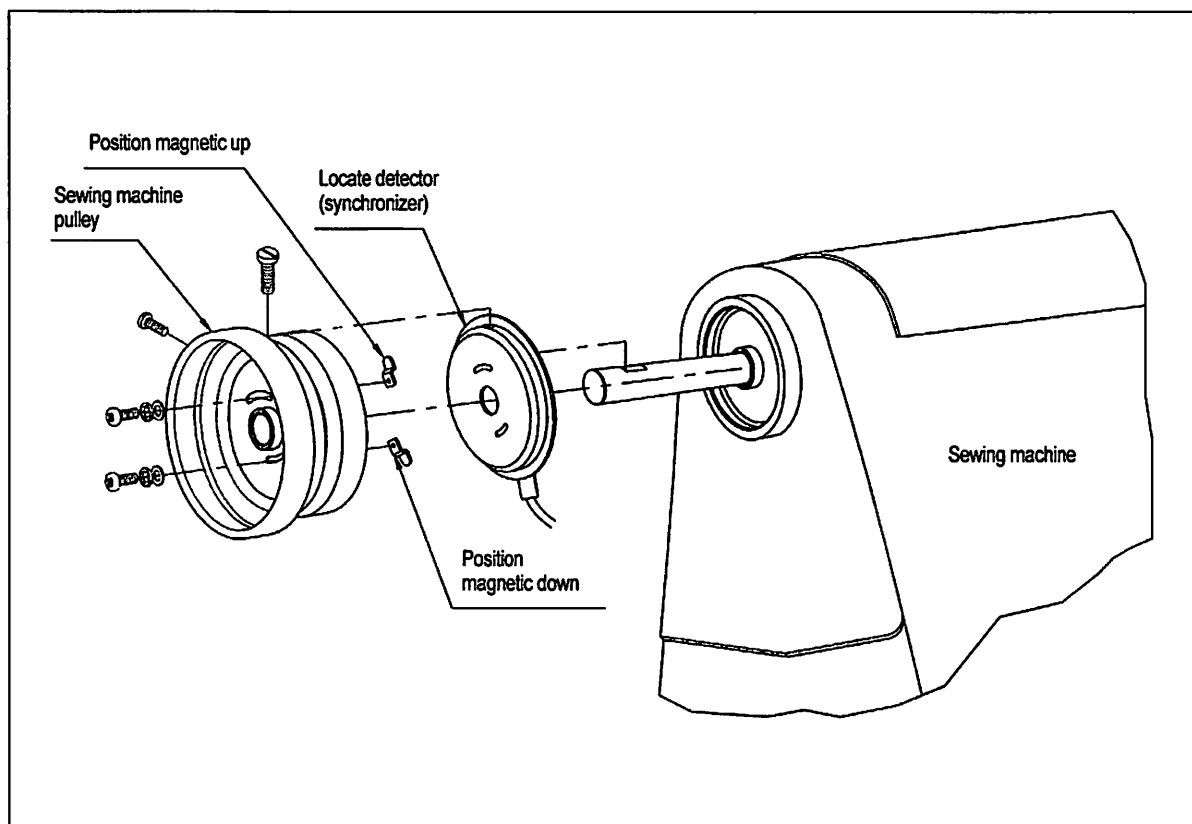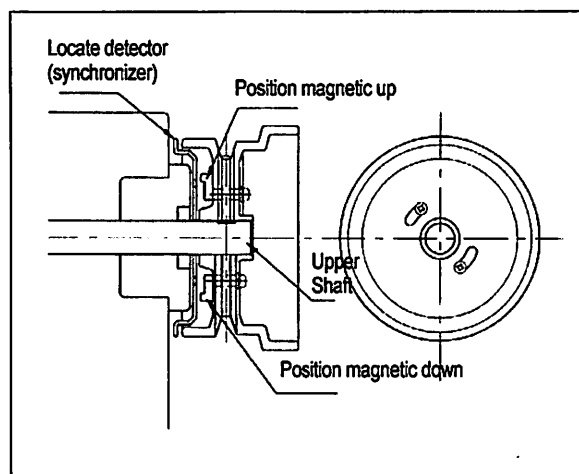


(2) How to adjust the magnet of the location detector

① Assemble the detector in order following the pictures.

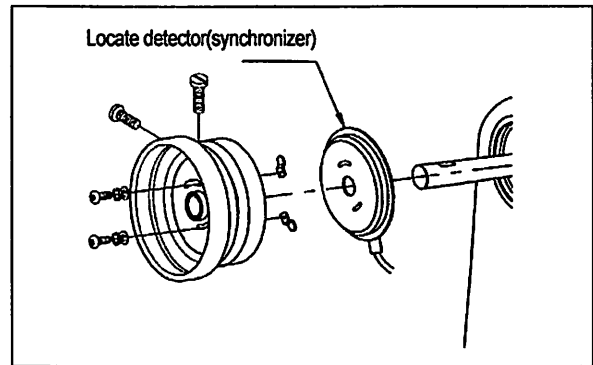


② Once assembling is completed, power the controller on and step on the pedal. At this time, make sure that the needle moves up and down. Stop the needle at a desired location by moving the magnet back and forth along the location where the needle stops.

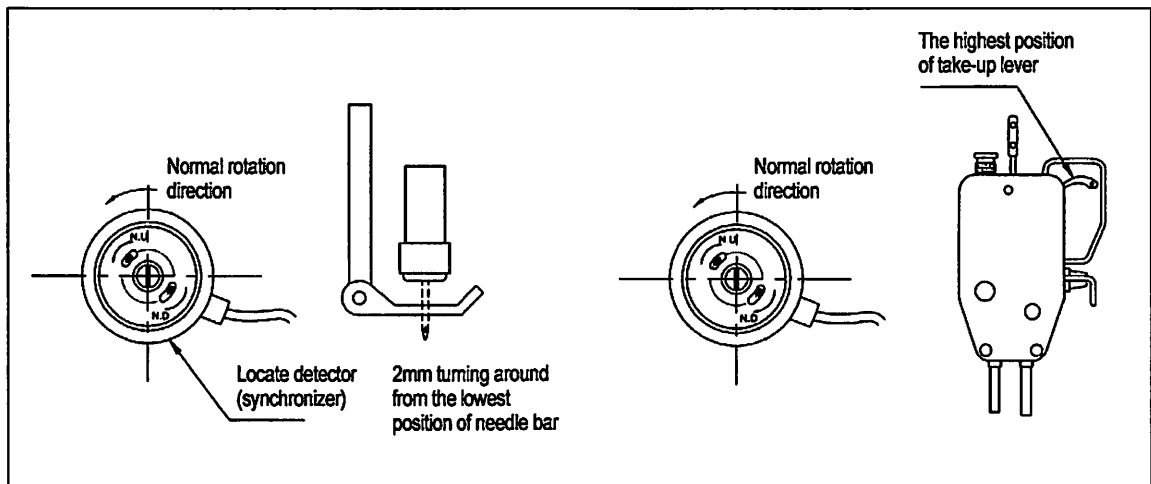

(3) How to adjust a location detector in case of a reverse rotation sewing machine

※ It is the same as that used for the normal rotation direction

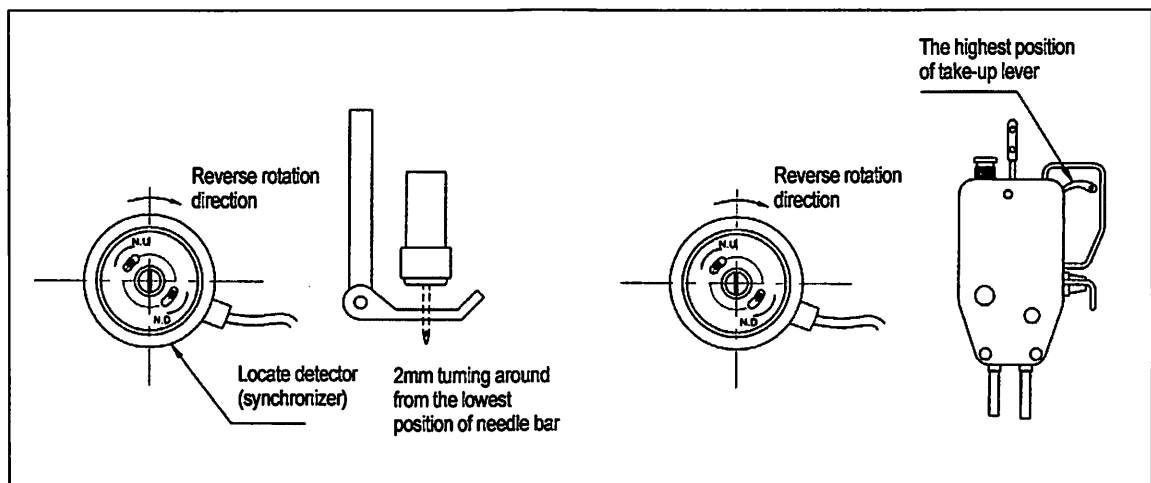


After adjusting a location detector, rotate the motor by stepping on the pedal for 3~5 seconds so that a controller can remember the location.

6) Mounting the Program Unit(P/U)


(1) SunStar KM-235 Sewing Machine

First, attach the P/U bracket to the P/U using three fixing screws and a supporting bolt with nut attached on it as shown in the figure. Second, securely attach the P/U to the head of the sewing machine using two fixing screws and washers, keeping a 3~4mm distance between the bottom surface of the nut and the base of the supporting bolt.

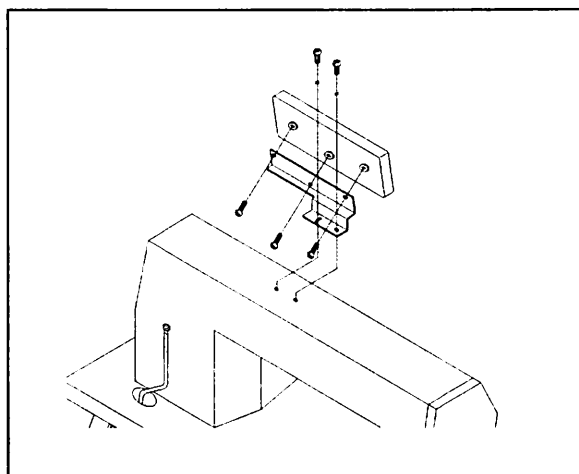


(2) Other SunStar thread-machine

First, attach the P/U bracket to the P/U using the four fixing screws. Second, attach the P/U to the main body of the sewing machine using the three bracket-fixing screws as shown in the figure.

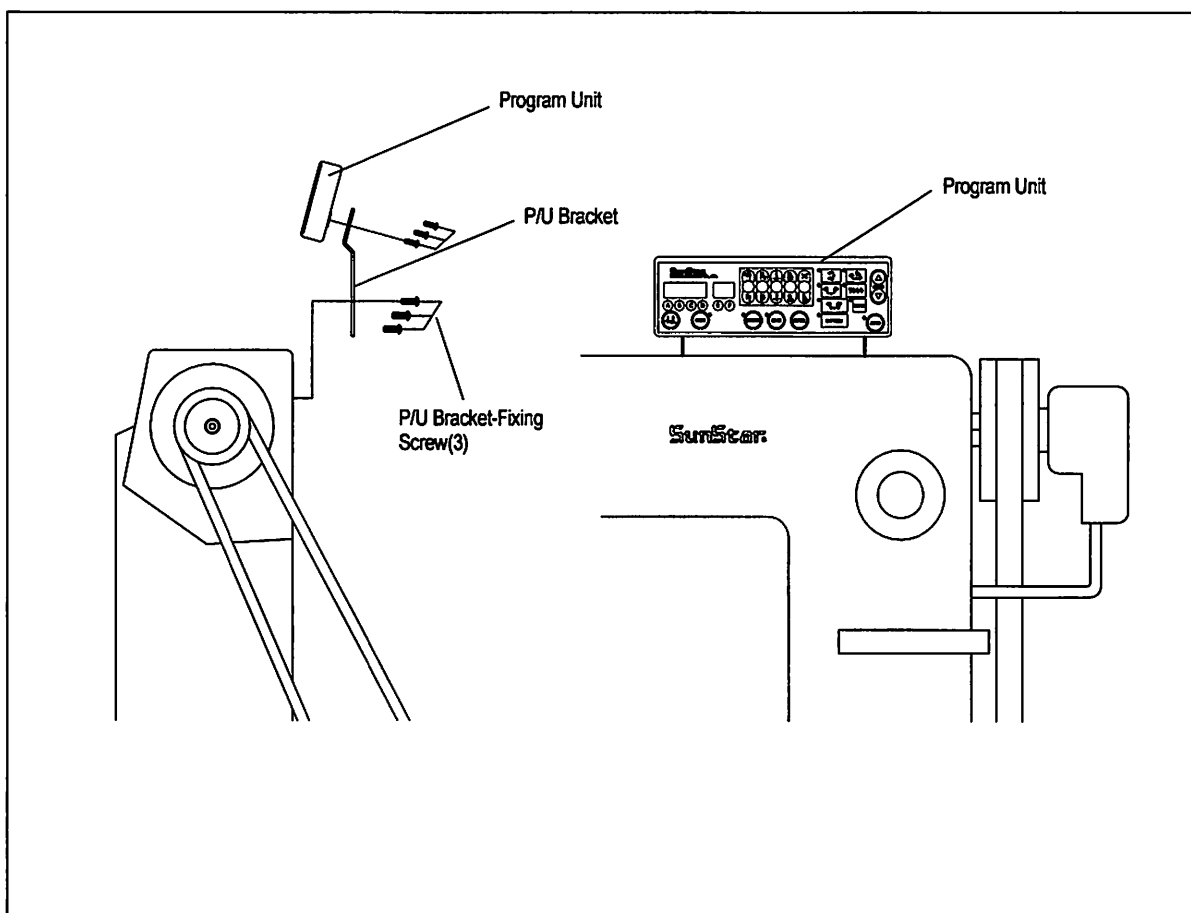

Fix the cable using the cable tie so that cable is not in the way of the belt.

7) An example of installing the SunStar sewing machine

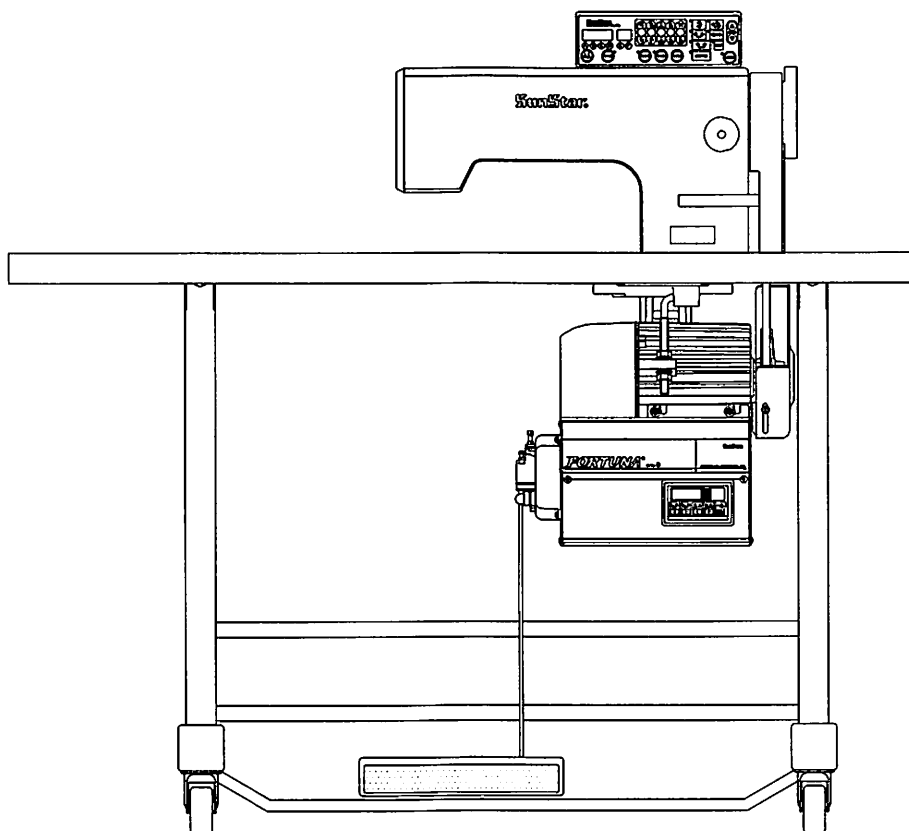


5


WIRING AND GROUNDING

1) Specification of the power plug


(1) Single phase 100V~120V

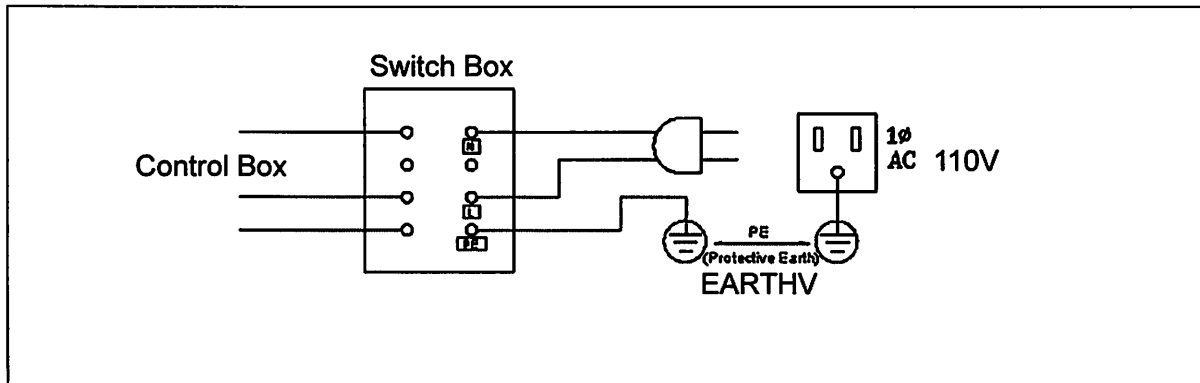

(2) Single phase 200V~240V

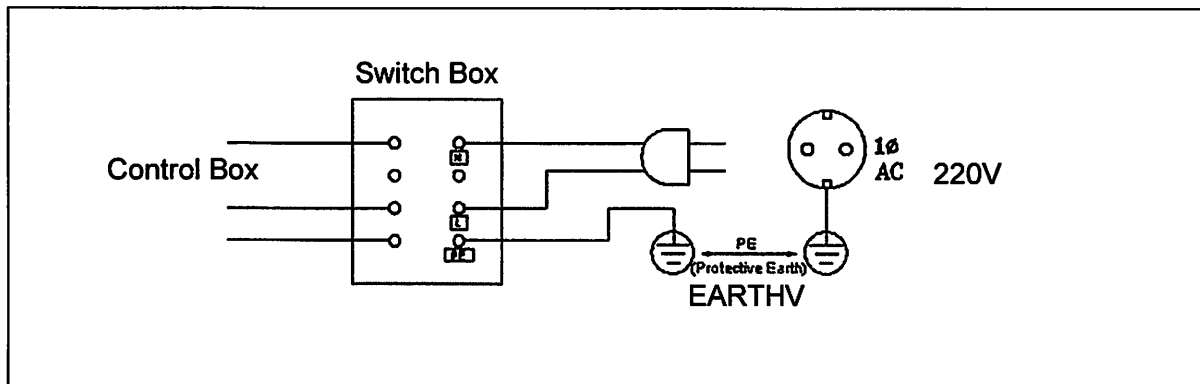

(3) Three phase 200V~240V

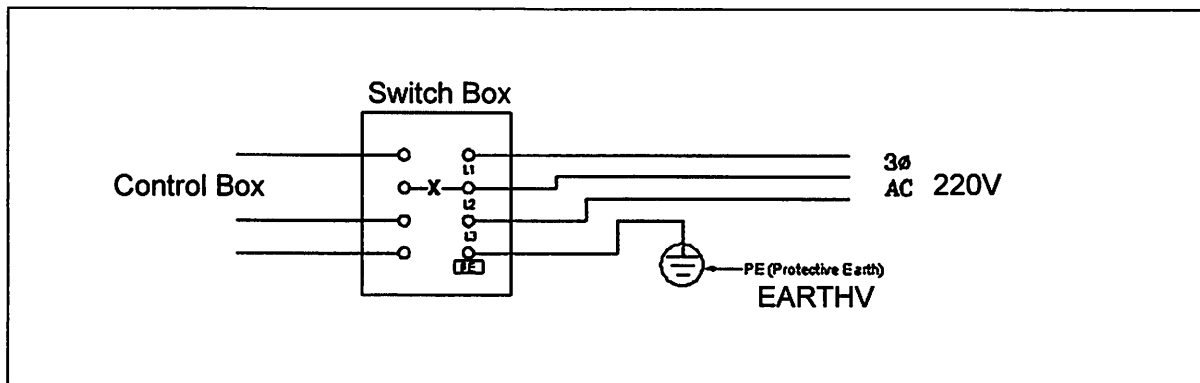


※ Be sure to connect Protective Earth

2) Specification of electric current in wiring of power plug


Be sure to use wiring materials which can stand electric current of higher than 15A.

3) Name and description on the outside connector of control box


① Standard solenoid connector

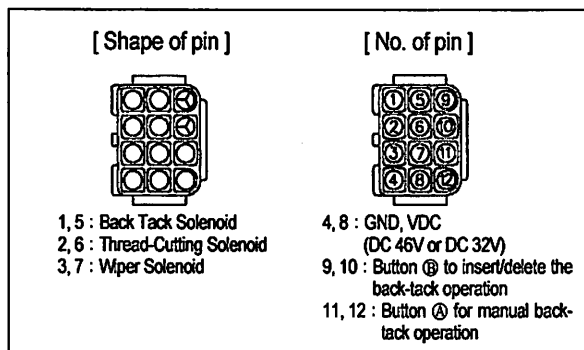


④ Tension-release and auxiliary solenoid

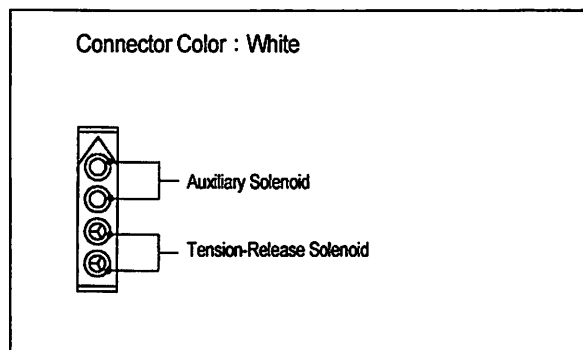


② Foot-lift solenoid

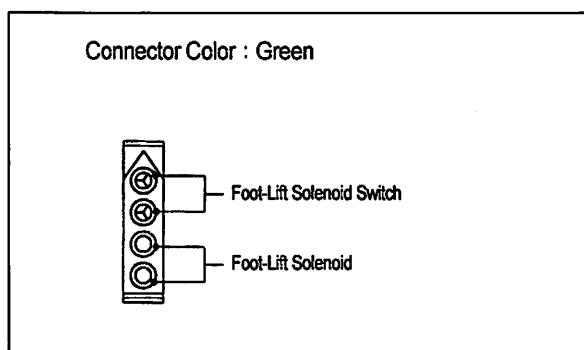

⑤ Switch and lamp (Used in twin-needle sewing machine)

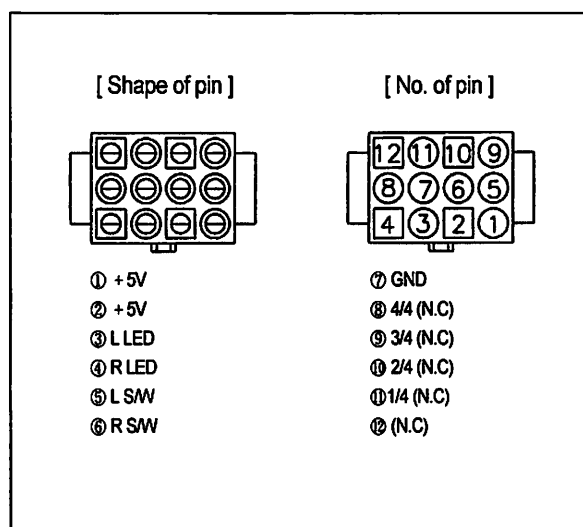

③ Right/Left solenoid (Used in twin-needle sewing machine)

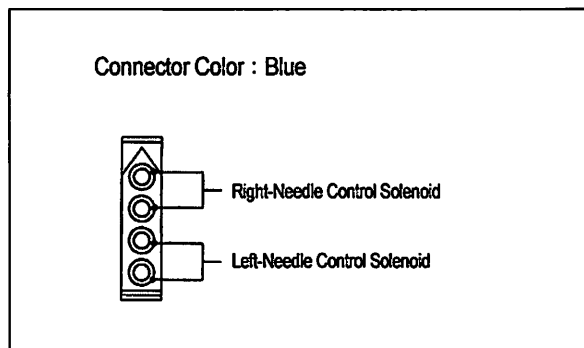

4) How to change the electric voltage supplied for solenoid (The factory installed setting is : J6)

※ This is to make the movement of solenoid smooth in times of fluctuation in the incoming electric voltage.

① Set Value for electric voltage supplied (for 220V series) for Solenoid against the incoming voltage.

For 30V-regular Solenoid

Incoming Voltage	Set Value
Below 210V	J5
210V~230V	J6
Above 230V	J7

For 24V-regular Solenoid

Incoming Voltage	Set Value
Below 180V	J5
180V~190V	J6
Above 190V	J7

② Set Value for electric voltage supplied (for 110V series) for Solenoid against the incoming voltage.


For 30V-regular Solenoid

Incoming Voltage	Set Value
Below 100V	J5
100V~120V	J6
Above 120V	J7

For 24V-regular Solenoid

Incoming Voltage	Set Value
Below 90V	J5
90V~100V	J6
Above 100V	J7

③ Setting of pin

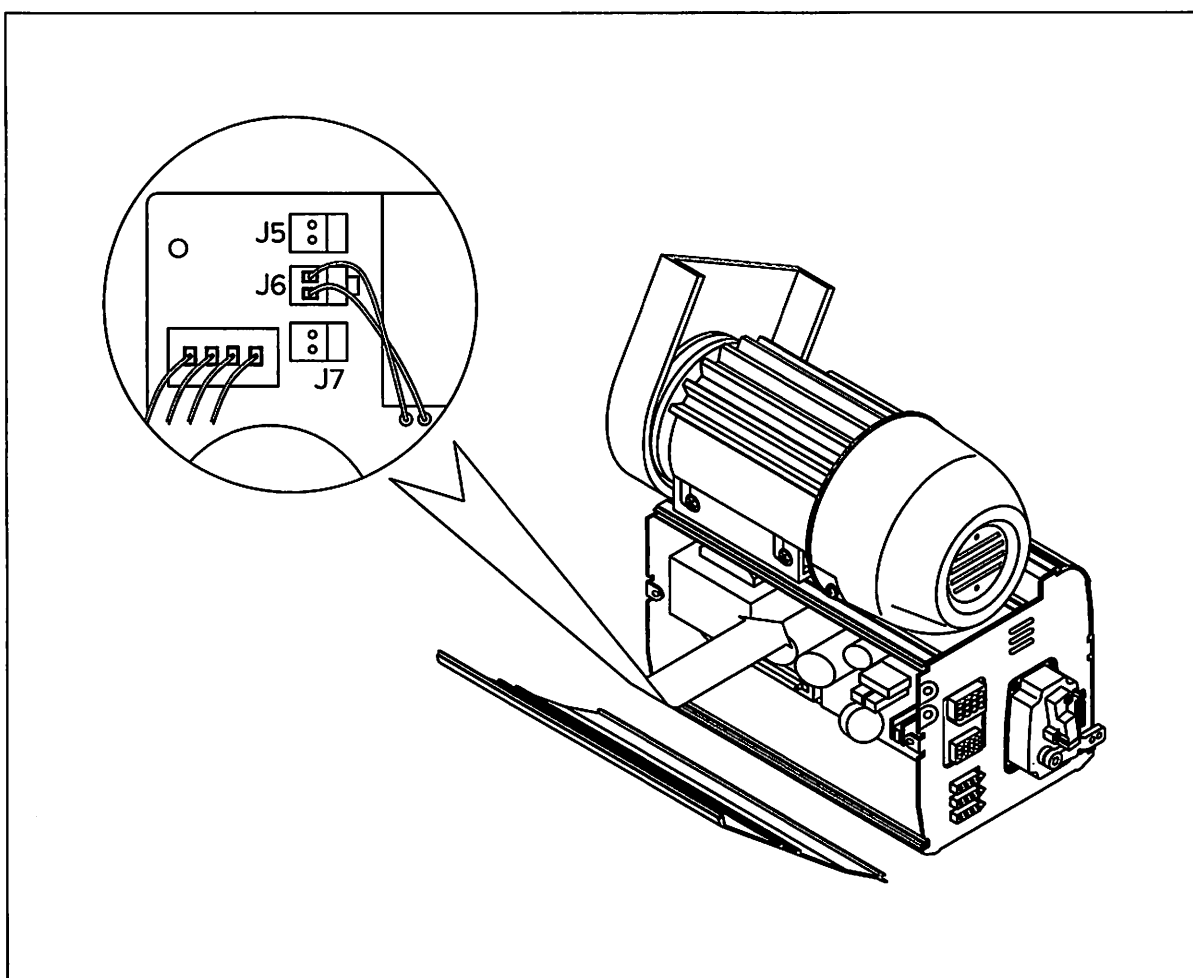

6


CONNECTION THE EARTH WIRE OF THE SEWING MACHINE AND MOTOR

► Method

Connect the motor and sewing machine using the ground wire (green, green/yellow) as shown in the figure. Make sure that the factory-connected ground wire between the controller box and motor is securely in place.



Failure to ground the motor can cause abnormal operations, such as overspeed rotation or unwanted stitching.

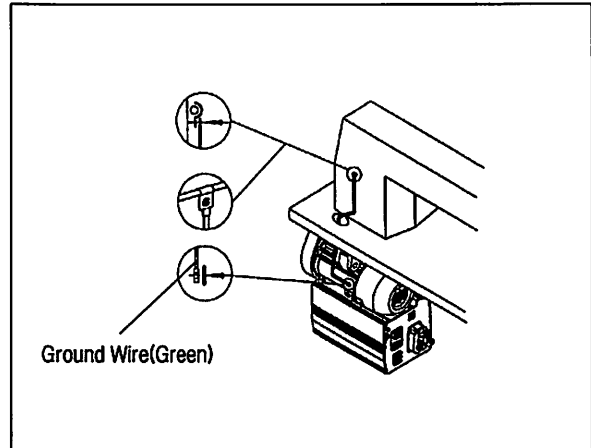

7

THINGS TO BE CHECKED AFTER INSTALLATION

1) Before the power is on...


- ① Make sure that the incoming voltage is in accordance with that shown in the name plate of the Control box.
- ② Check whether the following connectors are connected.
 - Connector for incoming AC power source
 - Connector for motor power
 - Connector for motor encoder
 - Connector for position detector
 - Connector for others (option, knee-lift, program unit etc.)
- ③ Check to see whether the belts are in touch with the wiring.
- ④ Check the tensile strength of the belts.
- ⑤ Check to see the fixing nuts for pulley are tightly fastened.
- ⑥ Check whether the sewing machines are right kinds (Chain Stitch S/M, Lock Stitch S/M)
- ⑦ Check the rated voltage for Solenoid (Refer to "How to change the electric voltage supplied for Solenoid"))

2) After the power is on...

- ① Check whether the lamp for the position detector is on. (Except in the case of built-in position detector)
- ② Check whether the program unit is working.
- ③ Check the direction of rotation of the Sewing Machine.
 - In case the direction of rotation is not right, action shall be taken to change set it right, referring to "the methods of changing the program and the list of changing functions" (N. 65 in Group "A")
- ④ Check to see whether there are abnormal heat, smell or noise nearby.
 - In case there are, turn the power off and call our regional office.

PROGRAM UNIT PART NAMES AND METHOD OF USE

1) Program unit part names

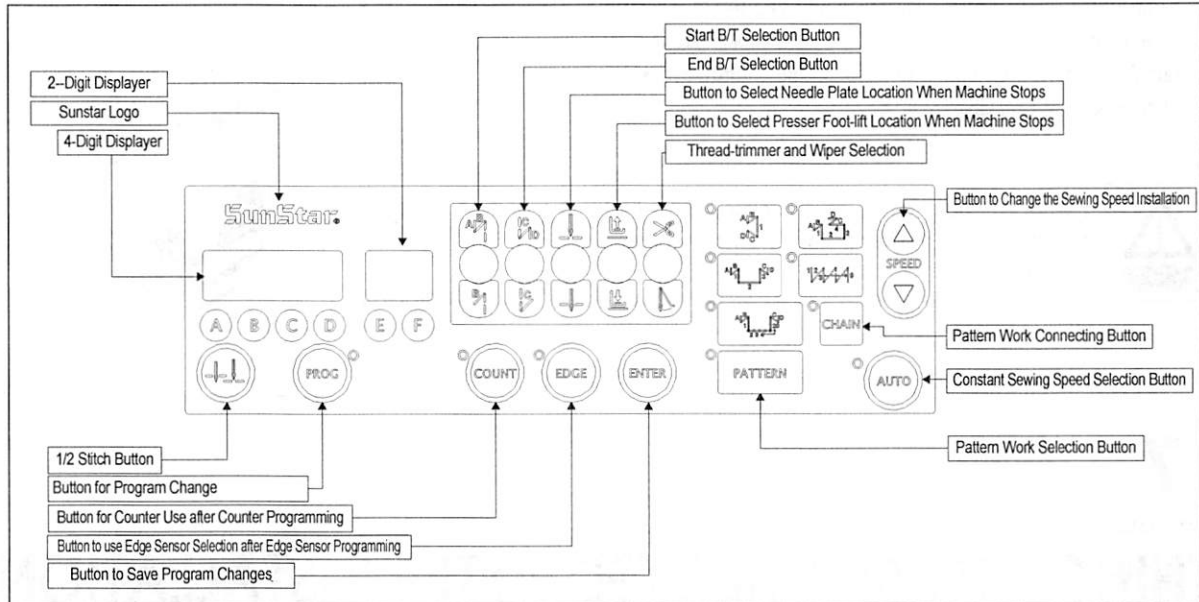

2) Program Unit Method of Use

(1) 4-Digit Displayer and 2-Digit Displayer Functions and Method of Use

A. 4-Digit Displayer and 2-Digit Displayer Functions

- ① When you turn the power on, you will see a screen as shown in the figure. The 4-digit displayer shows the start and end B/T sewing and the 2-digit displayer shows the current abbreviation for the letters or numbers shown in the 4-digit displayer (bt: the abbreviation for back tack).

<Initializing screen>



- ② The 4-digit displayer shows the error number for each type of error discovered and also shows the programmed value after it has been programmed. The 2-digit displayer shows the number of the parameter specific item's content or name which is shown in the 4-digit displayer.

<Example of error detection>



<Example of selection of number 2 item in Group A>



The 4-digit displayer and 2-digit displayer show the current condition. Therefore the user should always check it before using the machine.

From the library of Superior Sewing Machine & Supply LLC - www.supsew.com


B. Method of Use: 4-Digit Displayer and 2-Digit Displayer

a. Method to change the start and end B/T stitch numbers

In order to change the start B/T stitch numbers which is programmed when you first purchase this machine, you must use the **A**, **B** buttons. If you want to change the end B/T stitch numbers, you must use the **C**, **D** buttons.

- The program range is from 0 to 9.


(Ex: How the screen looks when changing both start and end B/T stitch numbers to 4).

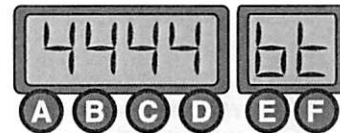

b. Method to check or change the specifics of the parameter


① Press the **PROG** button and as you press it, also press the **A** button. Then you can either check or change the programming items for the parameter of group A. (A group : **A**, B group : **B**, C group : **C**, D group : **D**)

※ Users should turn the machine off to select B, C, or D group. While pressing the **PROG** button, turn the power switch on. The screen will be changed to the initial screen after showing the "PrEn" message. Then, the users can select B, C, or D group by pressing B, C, or D button while holding program **PROG** button.

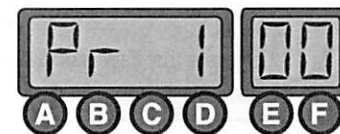

② You can move to the parameter item you want with the **E** and **F** buttons. The parameter item number will appear in the 2-digit displayer and the wanted value will appear in the 4-digit displayer.

(Ex) Screen showing the maximum speed limit preset in the item 2 of A group)

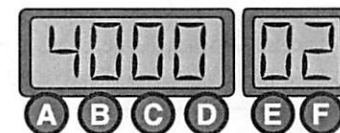

③ After using the **C** (increase) button and **D** (decrease) button to choose the value you want, press the **ENTER** button and save the value you chose. (Ex: Reducing the maximum sewing speed limit from 4000RPM to 3000RPM).



④ After saving, press the **PROG** button and go back to the initial screen.



Caution

- Be aware that if you don't press **ENTER** after changing the programmed value for the parameter item, the value will not be saved.
- When the B, C, or D group selection is completed, users should turn off the machine first and restart to secure the selected group.
- If the user changes the programmed value from the parameter specifics carelessly, the user may cause break down or physical damage to the machine. The user must therefore be well-trained before changing the parameter group.

(2) Method of Use : 1/2 Stitch Button Function

① When necessary, make 1/2 stitches by pressing the 1/2 stitch (**1/2**) button.

② When the needle plate makes a down stop, shortly press the 1/2 stitch (**1/2**) button once and the needle plate will make an up stop.

And when the needle plate makes an up stop, shortly press the 1/2 stitch (**1/2**) button once and the needle plate will make a down stop.








Caution

Be aware that if you are continuously pressing the 1/2 (**1/2**) button, the machine will keep on moving at the 1/2 stitch speed.

(3) Method of Use: Start B/T Button

This button is used when the user wants to prevent threads from loosening at the end of the sewing work. If the user presses this button in sequence, the location on the lights will change. This button offers the following three functions.

 <p>When sewing starts, B/T sewing does not operate.</p>	 <p>When sewing starts, B/T sewing is operated with the  button.</p>	 <p>When sewing starts, B/T sewing is operated with the  button.</p>
---	--	--






Using the A, B buttons in the 4-digit display, the user can program the B/T number of stitches he/she wants.



Be aware that if the start B/T stitch is set to '0' in the 4-digit display, the start B/T sewing is impossible.

(4) Method of use: End B/T Button

This button is used when the user wants to prevent threads from loosening at the end of the sewing work. If the user presses this button in sequence, the location on the lights will change. This button offers the following three functions.

 <p>When sewing ends, B/T sewing does not operate.</p>	 <p>When sewing ends, B/T sewing can be operated with the  button.</p>	 <p>When sewing ends, B/T sewing can be operated with the  button.</p>
---	--	--





Using the C, D buttons in the 4-digit display, the user can program the B/T number of stitches he wants.



Be aware that if the end B/T stitch is set to '0' in the 4-digit display, the start B/T sewing is impossible.



(5) Method of Use: The Needle Plate Position Selection Button When the Sewing Machine Stops

When the user turns the power on, one of the up stop or down stop lights in the program unit panel needle plate is always left on. The user can change the stop location by pressing the button.

 <p>When machine stops while sewing, the needle plate makes an up stop.</p> 	 <p>When machine stops while sewing, the needle plate makes a down stop.</p> 
--	---

(6) Method of Use: The Presser Foot-lift Location Selection Button When the Sewing Machine Stops

When the user turns the power on, one of the up stop or down stop lights in the program unit panel presser foot-lift is always left on. The user can change the stop location by pressing the button.




 <p>When the machine stops while sewing, the presser foot-lift stops at the top.</p>	 <p>When the machine stops while sewing, the presser foot-lift stops at the bottom.</p>
---	--



If the user uses the automatic up stop function of the presser foot-lift when the sewing machine stops while sewing, it may cause damage to it because it has been left up for an unnecessarily long time. Be aware that to prevent the foot-presser solenoid from being damaged, it is programmed to automatically come down when a certain amount of time passes.


(7) Method of Use: Automatic Thread Trimmer and Wiper Selection Buttons


These buttons offer the function of automatic trimming and wiping after sewing. By pressing these buttons in sequence, the user can use one of the following three functions. The light shows the function that is currently being used.




 <p>Automatic trimmer and wiper do not operate</p>	 <p>Only automatic trimmer function is operate</p>	 <p>Both automatic trimmer and wiper operate</p>
--	--	--

(8) How to use product counter and bobbin counter

① How to set product counter and bobbin counter

A. Set/clear product counter and bobbin counter using the  button in the program unit

Repeatedly press the () button in the program unit to change the status of the lamp and functions as below.








① When product counter and bobbin counter are not used	 <When the lamp is off>
② When product counter function is set	 <When the lamp is on>
③ When bobbin counter function is set	 <When the lamp is flashing>

※ To use the counter function, set the detailed functions under parameter B-Group.

② How to use detailed functions of product counter and bobbin counter

   A. How to use the detailed functions of product counter

 To use the counter function, set the detailed functions beforehand.

<p>① To use the product counter function, first set the value of the parameter B-35 (group B, item 35) as desired.</p> <ul style="list-style-type: none"> • 0: Set the external counter switch on • 1: Set the automatic counter on after trimming <p>※ As the default value is set "0", the counter will not run if there is no external counter switch.</p>	
<p>② Set the parameter B-36 to select the type of product counter</p> <ul style="list-style-type: none"> • 1: Up counter • 0: Down Counter <p>※ The default value is set at "1".</p>	
<p>③ Press the counter F button to set the counter function. Press the button to check and set the detailed data of the counter.</p> <ul style="list-style-type: none"> • Cn: The current counter amount • rn: The remaining amount • %: The progress • tn: Total target amount (Default: 100) <p>※ Press F button repeatedly to see the above detailed data in order. The user may set up the current counter amount (Cn) and the total target amount (tn) as desired.</p>	<p><The current amount></p>  <p><The remaining amount></p> 
<p>④ After the total target amount is set, use B-37 and B-38 to set the movements.</p> <p><Set value of B-37></p> <ul style="list-style-type: none"> • 0: When work is finished, the buzzer will go off and sewing may begin • 1: When work is finished, the buzzer will go off and sewing may begin only when the  button is pressed • 2: When work is finished, the buzzer will not go off and sewing may begin <p><Set value of B-38></p> <ul style="list-style-type: none"> • 0: No returning to automatic initial value when counting is complete • 1: Returning to automatic initial value when counting is complete 	<p><The progress></p>  <p><Total target amount></p> 
<p>[Caution]</p> <p>When B-38 is set at "0", the value will keep on going up/down even when counting is complete. The user will need to re-set the value of Cn to restart.</p>	

B. How to use the detailed functions of bobbin counter

 
Bobbin counter is designed to check the remaining amount of the lower thread.

a. To use the counter, set detailed functions beforehand.

① To use the bobbin counter function, first set the value of the parameter **B-39** (Group B, item 39).


- 0: Bobbin counter function not used
- 1: Bobbin counter function used

※ The default value is set at "0". At this point, the bobbin counter will not start even when the counter button in the program unit is set at bobbin counter function.



b. Detailed functions of bobbin counter

 ① Select the bobbin counter function by pressing **PROG** button to get the lamp flashing. Press **F** button and the display will change as shown in the right. "bc" stands for bobbin counter.



② At this point, press **F** button to change the display to "UP". Press **F** button again to go back to the initial display of "3333 bt". Press **F** again to change to "bc" as explained in ①. The display will change by pressing **F** button.







• [bc]	It stands for the Bobbin Counter; the value will be increased from "0". (Initial value: 0, Set range: 0~9999, How to set: use C / D button)
• [UP]	This value will go up in proportion to the increasing ratio of "BC(Bobbin Counter)". Use this value to get the initial value of "BC(Bobbin Counter)". (Initial value: 0, Set range: 0~9999, Set manual increase/decrease function with C/D button)
• [bt]	Back-tack function that is shown in the initial display

  [Caution]

 

 


※ Pay caution when using **ENTER** button, designed to perform special functions for bobbin counter.

- **ENTER** button (Store counter value) : Press **ENTER** button when "bc" or "UP" is shown on the display. The current indicated value will be stored as value of bobbin counter.

c. Setting Bobbin Counter Functions

<p>① When you start new sewing work, you must re-set the value of bobbin counter. Refer to the following if you do not know your re-set value.</p> <ul style="list-style-type: none"> • First move to "UP" display and use C, D button to change the value to "0". • Replace old lower thread with the new one. The amount of the lower thread must be consistent. • Begin sewing. The more you sew, the higher the value of "UP" will be. • Continue sewing until you run out of the lower thread. • When there is no lower thread left during sewing, press ENTER button to store the counted value. • Before saving, subtract some 10~20 from the value in order to reflect the counted value after the lower thread ran out. 	 
<p>② When the bobbin counter setting is complete, move to "bc" display.</p>	
<p>③ The value of "BC(Bobbin Counter)" increases gradually when sewing begins after completing set-up.</p>	
<p>[Caution]</p> <p>※ Before using the bobbin counter function, move to "bc" display or initial display. If you start working from "UP" display, the value of counter will go up.</p>	

d. When bobbin counter is complete

<p>① Replace the old lower thread with the new one and start sewing, then the value of “BC(Bobbin Counter)” will go up gradually.</p> <p>② Take note that the buzzer will go off when the value goes up, and the gap between that value and setting value narrows under 20. This is to warn that there is little lower thread left.</p>	 
<p>③ The value of Bobbin Counter is reached at setting value, the stitching will be stopped and the buzzer will go off and the monitor will start blinking.</p>	
<p>④ When sewing stops after counting is complete, use the following method to return.</p> <ul style="list-style-type: none"> • Press the  button to change the value of “BC” to the “0” automatically. (AUTO CLEAR/PRESET) 	
<p>[Caution]</p> <ul style="list-style-type: none"> ※ To use the bobbin counter function, first set B-Group 39 to “1.” ※ Use  button to change the display to set/clear the value of bobbin counter during sewing. ※ Wind the lower thread with consistency to ensure the proper use of bobbin counter functions. Counter functions may work differently depending on lower thread and sewing conditions. 	

(9) Method of Use: Pattern Work Selection Button

A. Method to Set Up the Pattern Work Function

This function is used when you need to continuously work on a sewing material. If the light goes on after pressing the button, you can use the pattern sewing function.





B. Method of Use of Pattern Sewing Specific Functions



① Cautionary words when using the pattern function

- Before using the pattern function, finish the trimming work and turn on the pattern switch light.
- If the user presses the pattern switch twice when he/she is not using the pattern function, the light will go off and he/she will be able to go back to normal sewing. However, if the pattern mode has not been completely finished, the pattern light will not go off.
- The pattern function sewing speed will be the programmed speed.
- The value set in each pattern mode is not erased when the power is turned off. Therefore, if you want to use the same pattern again, press the same mode again to use it. However, if the program is initialized, all the formerly programmed information will be erased and the user must reset the information again.


② Method of use: function

- first press the  button and select the pattern sewing function.
- Select the pattern you want and the light will go on the pattern you selected.
- If you press the  button, the screen will change and you can use the stitches of each side of the pattern you chose to program the value.

< Method to program the value of each pattern side >




- Method by using the ,  buttons
 - Inputting directly the number of stitch the user wants by using the buttons C and D. This method is used when the user already knows the length of the stitches he/she is choosing.
- Method using the pedal movement
 - This is a function used when the user does not know the stitch length and sews directly to check the number of stitches for the pattern he/she wishes to program. If the user presses on the pedal after the programming screen comes on, the pedal can program the number of stitches by using the accelerating and decelerating characteristics through the pedal's sensors. The standard for choosing the number of stitches here is slower than the normal sewing speed and the programmed pattern sewing speed.
- Method using the A button and 1/2 stitch button
 - This function is used when the user needs to make small adjustments at the end of the pattern work. It allows the user to check and program the pattern length while he/she sews at a slow speed or sews half stitches.
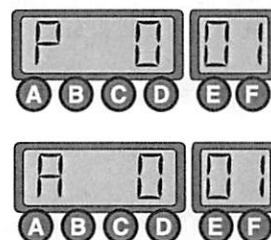
<Screen showing the programming of stitch numbers for each side>




P : When the AUTO light is off, the machine stops when the pedal is released while sewing.

 A : When the AUTO light is on, the machine will finish sewing the pattern section even if user releases pedal while sewing.

 
 
 

 
- After programming is finished, press the  button and save the set up value. Then press the  button. After the stitch numbers of each side disappear from the screen, you can start sewing with the programmed value in the pattern sewing function.
- The pattern sewing speed is constant because it sews at a programmed speed not by the acceleration or deceleration of the pedal. If you press the pedal after pressing the  button and see the light blink, sewing will continue until it is finished even if you release the pedal.










Caution



- After setting each side of the stitches, the user must press the  button to save the programmed value.
- When the pattern has more than one side, the pattern work only operates for the number of stitches programmed for each side.

③ Specific items of each pattern

	A convenient pattern for straight sewing at constant speed for a definite length. The sides can be set from 0 to 999 stitches.
	A convenient pattern for repetitive 3-sided sewing. Each side can be set from 0 to 999 stitches.
	A convenient pattern for 4-sided sewing. Each side can be set from 0 to 999 stitches. (Used often in square sewing)
	A convenient pattern when forward/backward sewing is needed continually. forward/backward sewing is possible 9 times. Also each side can be set from 0 to 999 stitches. (This pattern is used for continuous work on back tags of leather belt rings).
	A convenient pattern when the user wants to make many-sided patterns. The user can make patterns of up to 20 sides. Each side can be set from 0-999 stitches.


④ Method of Use : Chain function (pattern linking function)

- First press the  button and select the pattern sewing function
- Next, press the  button.
- If you press the , the screen will change as the figure shows on the right.
You can change the number of chains with buttons , .
- If you want to program the number of chains in the pattern you want, use buttons and, to go to the item you want and press the pattern button.
- After programming the chain numbers as explained above, press the  button and the change of value will be saved. Then press the  button to come out from the chain programming screen.
- If you operate the programmed sewing work, the pattern with the blinking light is the current work being done and the pattern with the light on continuously is the next programmed pattern.

※ If the user presses the  when using the pattern sewing function, the  light will go on and the machine will automatically sew the programmed pattern section even if the user releases the pedal.



Caution

- After programming the chain function and pressing the  button, the set up value is saved.
- If you change the pattern program while sewing, it will sew with the new programmed pattern.
- If the last chain pattern is finished, it will automatically go to the first sewing pattern.

(10) Method of Use: Constant Speed Sewing (AUTO) Selection Button

This button is used to choose the sewing speed. It offers two functions according to where the light turns on.



- When the light is blinking
- If the user presses on the pedal, the machine will sew at the programmed sewing speed.



- When the light is off
- The machine will sew according to the amount of pressure given to the pedal by the user.





Caution

This button works in a different way when using the pattern function. Please refer to section 10).

(11) Method of Use: Sewing Speed Program Changing Button

A. Method to Check Sewing Speed

If you want to check the current programmed sewing speed, you must press the  button  once, the screen shown on your right will appear briefly and then return to the initial screen.





※ The speed on the screen is the limit of the maximum sewing speed.





Caution

The maximum speed and minimum speed limits can be changed by changing the parameter's specific items.

B. Sewing Speed Changing Method



① When you want to change the sewing speed, you can see the screen that shows the current sewing speed by pressing the  button or  button.

② If you see the current speed on the screen, you can change the speed by using the  and  button before going back to the initial screen.

- When you press the buttons twice in sequence: The sewing speed increases/decreases by 40RPM.
- When you keep pressing the button: The sewing speed increases/decreases rapidly.



Caution

- Be aware that if you don't press the  or  button, the screen will automatically go back to the initial screen.
- The maximum speed and minimum speed limits can be changed by changing the parameter's specific items.







3) Start and End Backtack Stitch Correction Method

- ※ Since backtack stitches may vary according to the type of sewing machine, use the following stitch correction method.
- ※ To adjust the stitch fast and clean, users should check the stitch condition before commencing the correction.







① Classification according to backtack sewing condition

- ※ The backtack sewing condition can be classified as follows (When A: 3 stitches, B: 3 stitches, C: 3 stitches, D: 3 stitches)

A. When one more or less stitch than the set stitch number is sewn

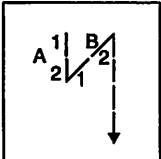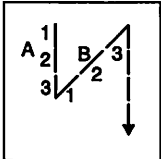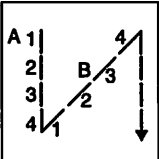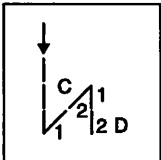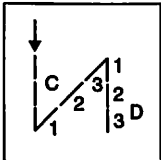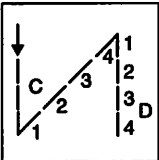Classification	Sewing condition where few backtack stitches are sewn	Correct backtack sewing condition	Sewing condition where more backtack stitches are sewn
Start backtack Sewing condition	 <p>When sides A and B each have one less stitch sewn</p>	 <p>When sides A and B each have 3 stitches correctly sewn</p>	 <p>When sides A and B each have one more stitch sewn</p>
End backtack Sewing condition	 <p>When sides C and D each have one less stitch sewn</p>	 <p>When sides C and D each have 3 stitches correctly sewn</p>	 <p>When sides C and D each have one more stitch sewn</p>

B. When one more or one less stitch is sewn than the programmed stitch number

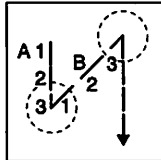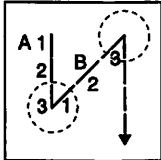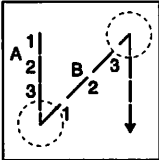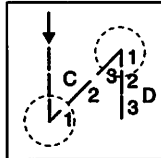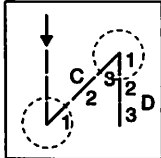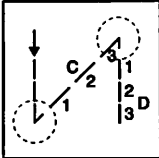Classification	B/T condition where the stitch length comes out shorter	Correct B/T sewing condition	
Start backtack Sewing condition	 <p>When the length of the last three stitches in sides A and B have been sewn short.</p>	 <p>When sides A and B have 3 stitches correctly sewn.</p>	 <p>When sides A and B each have 3 stitches and a half stitch (or less than one stitch) sewn</p>
End backtack Sewing condition	 <p>When the length of the first stitch in sides C and D have been sewn short.</p>	 <p>When the sides of C and D have 3 stitches correctly sewn</p>	 <p>When the sides of C and D each have 3 stitches and a half stitch (or less than one stitch) sewn.</p>


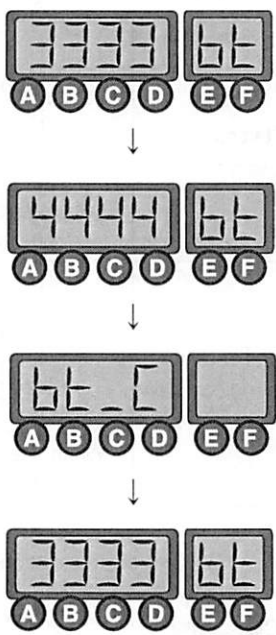





 


The figures above show each representative sewing condition. And there may be some differences according to the conditions of the sewing machine and it is normal that two types of conditions occur at the same time.

② Start/End B/T stitch number correction method


 
※ The method to correct B/T stitch numbers may differ according to the user. However it is basically done in the following order.

A. When the machine sews one less or one more stitch than the programmed number of stitches.
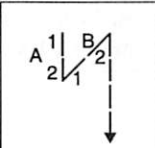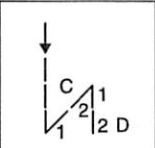
<p>① First, fully check the B/T sewing condition : Commence sewing and check the current sewing condition. Refer to the figure above.</p>	<p><Initial screen></p> 								
<p>② If you have checked the sewing condition, first correct the stitch number that differs by one or more stitches to the programmed stitch number.</p> <p>※ Correction method for stitch numbers with more than one stitch difference</p> <ul style="list-style-type: none"> • Program range: -6 stitches ~ 6 stitches • Program unit: 1 stitch • Method to apply correct stitch number (program using buttons A, B, C and D). <table border="1" data-bbox="308 787 1031 913"> <tr> <td>Side A programmed value</td> <td>3(programmed stitch number) + (3-actual stitch number sewn on side A)</td> </tr> <tr> <td>Side B programmed value</td> <td>3(programmed stitch number) + (3-actual stitch number sewn on side B)</td> </tr> <tr> <td>Side C programmed value</td> <td>3(programmed stitch number) + (3-actual stitch number sewn on side C)</td> </tr> <tr> <td>Side D programmed value</td> <td>3(programmed stitch number) + (3-actual stitch number sewn on side D)</td> </tr> </table>	Side A programmed value	3(programmed stitch number) + (3-actual stitch number sewn on side A)	Side B programmed value	3(programmed stitch number) + (3-actual stitch number sewn on side B)	Side C programmed value	3(programmed stitch number) + (3-actual stitch number sewn on side C)	Side D programmed value	3(programmed stitch number) + (3-actual stitch number sewn on side D)	
Side A programmed value	3(programmed stitch number) + (3-actual stitch number sewn on side A)								
Side B programmed value	3(programmed stitch number) + (3-actual stitch number sewn on side B)								
Side C programmed value	3(programmed stitch number) + (3-actual stitch number sewn on side C)								
Side D programmed value	3(programmed stitch number) + (3-actual stitch number sewn on side D)								
<p>• After programming, press the  and  buttons simultaneously.</p> <p>Ex) When there is one less Start or End B/T stitch sewn.</p> <div style="display: flex; justify-content: space-around;">   </div>									
<p>a In the initial screen use buttons A, B, C, D to change it from "3 3 3 3" to "4 4 4 4."</p> <p>b After programming it to "4 4 4 4" press the  button. Then press the 1/2 stitch  button. You will see the letters "bt-C" and the buzzer will ring three times and the screen will automatically return to the initial screen.</p> <p>c The changed initial screen will continue to display the wanted B/T programmed value of "3 3 3 3."</p> <p>d Recommence sewing and check the corrected stitch number</p> <p>e If the corrected sewing condition continues to show more than one stitch difference, repeat steps (a~d) and make corrections.</p> <p>※ The example above is an explanation of when one B/T stitch number comes less than one</p> <p>※ When there is more than one stitch is added or missing, you can correct the stitch number as explained above.</p>									



Caution

- ※ The stitch number correction value program range is between -6 stitches to 6 stitches. You cannot see the currently applied correction value on the initial screen. If you want to see the currently applied correction value, press the  button and then the  button and either check the programmed value of each side or check items 30(side A's correction value), 31(side B's correction value), 32(side C's correction value) and 33(side D's correction value) from Group B of the parameter.
- ※ If each side's corrected value has been corrected to the minimum or maximum value limit (between -6 stitches to 6 stitches) and the sewing condition is still not correct, reduce the B/T sewing speed.
- ※ Generally, you can correct in the manner mentioned above when there is more than one stitch difference. And you can correct when there is less than one stitch difference with the item mentioned in the next page.

B. When the machine sews less than a stitch more or less than the one programmed.

① If there are still problems with the B/T sewing condition even after correcting the stitch numbers for more than one stitch difference based on item "A," refer to figure ①-B and check the sewing condition again.

② Look at the sewing condition and make the correction as follows:

※ Program range for making stitch corrections for less than one stitch: (Prog+Auto)

- -6 stitches ~ 6 stitches
- Program unit: 0.05 stitches (Corrections are done by dividing one stitch into 20 parts).
- Initial program: A(00.30), B(00.30), C(00.40), D(00.40)
- Correct stitch number application method (use C and D buttons for programming).

※ When the stitch length comes out short (the third stitch of sides A and B/ the 1st stitch of sides C and D)

Side A program value	00.00	(Currently programmed corrected value)
		+ (01.00-the length of the 3rd stitch sewn in side A)
Side B program value	00.00	(Currently programmed corrected value)
		+ (01.00-the length of the 3rd stitch sewn in side B)
Side C program value	00.00	(Currently programmed corrected value)
		+ (01.00-the length of the 1st stitch sewn in side C)
Side D program value	00.00	(Currently programmed corrected value)
		+ (01.00-the length of the 1st stitch sewn in side D)

※ <When the stitch comes out less than one stitch longer> (the last stitch of sides A and B/ and the first stitch of sides C and D)

Side A program value	00.00	(currently programmed correction value)
		- the length of the extra part of the stitch sewn on side A
Side B program value	00.00	(currently programmed correction value)
		- the length of the extra part of the stitch sewn on side B
Side C program value	00.00	(currently programmed correction value)
		- the length of the extra part of the stitch sewn on side C
Side D program value	00.00	(currently programmed correction value)
		- the length of the extra part of the stitch sewn on side D



The shadowed part is the currently saved correct value.

- After programming, press the button and save the programmed value.


Ex) When the Start/End B/T stitch length is shorter than the programmed stitch length (by around half a stitch).

- In the initial screen, press the button and then also press the .
- The screen will then go to the stitch number correction screen. Using the , buttons you can change the length of each side (A,B,C and D) in this screen.
- If you have finished programming the new correction values to sides A, B, C and D, press the button and save the corrected value. If you press the button, you will return to the initial screen. (A:00.30, B:00.30, C:00.40, D:00.40) → (A:00.50, B:00.50, C:00.75, D:00.75)
- Commence sewing and check the B/T sewing condition.
- If the corrected sewing condition still shows differences between the programmed value, the repeat steps (a~d) and continue correction.


<Initial screen>



<When the stitch length comes out short>

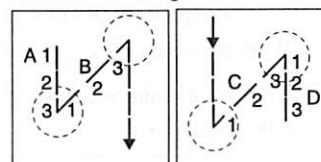



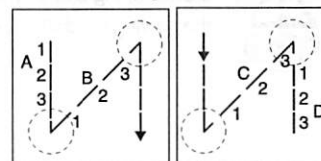


<When the stitch length is less than one stitch>



Caution

- ※ If each side's corrected value has been corrected to the minimum or maximum value limit (between -6 stitches to 6 stitches) and the sewing condition is still not correct, reduce the B/T sewing speed.
- ※ Generally, you can correct for when there is more than one stitch difference with item A. However, with item B, you can correct when there is either more or less than one stitch difference.
- ※ Make sure to press the button and save the programmed value when you finish programming sides A, B, C and D's new correction value.

4) Method of Use: Inertia Tuning Function


<p>① The inertia tuning function enables the machine to save the gain value of the motor that matches the loaded inertia. If you simultaneously press buttons  and , you will see the inertia tuning screen. Then, you will see the words "TUNE" blinking.</p> <p>② When the screen changes, you must press the pedal until the buzzer rings. If you release the pedal before the buzzer rings the inertia tuning won't be completed. Therefore, you must press on the pedal until the buzzer rings. (When doing inertia tuning, the sewing machine will operate and stop 10 times).</p> <p>③ When inertia tuning is completed, the buzzer will ring and it will automatically return to the initial screen.</p>	<p><Inertia tuning initial screen></p>  <p><Initial screen></p> 
<div data-bbox="233 693 315 791"><p>Caution</p></div> <p>Inertia tuning can only be carried out when the controller is attached to the sewing machine for the first time and when the sewing machine does not accelerate or decelerate quickly.</p>	

5) How to Use Edge Sensor


(1) Installing the Edge Sensor

① Attach the edge sensor bracket to the sewing machine head as in the figure.

② Insert the edge sensor into the attached edge sensor bracket.

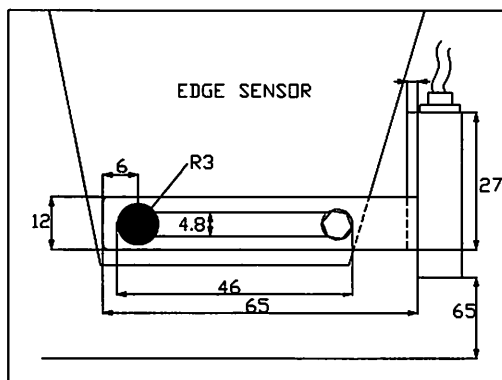

< KM-235,250 >

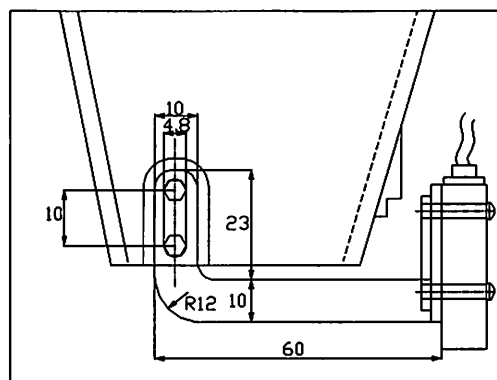


< KM-750,790 >

① Attach the edge sensor box (ass'y) connected to the edge sensor to the table.


② Link the edge sensor connector to the switch connector.

[Shape of pin]

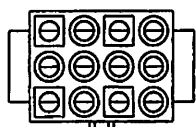




 


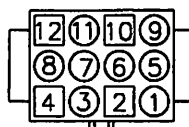
 











- ① +5V
- ② +5V
- ③ L LED
- ④ R LED
- ⑤ L SW
- ⑥ R SW

[No. of pin]



- ⑦ GND
- ⑧ 4/4 (N.C)
- ⑨ 3/4 (N.C)
- ⑩ 2/4 (N.C)
- ⑪ 1/4 (N.C)
- ⑫ (N.C)

(2) Edge Sensor Setup

 

 
 
 
① While the  button is being pressed, turn on the power.	
② While the  switch is being pressed, press  button to enter the Parameter C Group.	
③ Use the  and  buttons to set the Parameter C Group at 52. Use the  and  buttons to change the value of 2 to 12.	  
④ After going through the above processes ①~③, press  to save the new value. Press the  button to exit the parameter setup mode.	
⑤ After undergoing the above processes ①~④, press the  button. When the LED is on, the sensor is working.	  









Caution



Pressing the edge sensor button makes sewing motion stop when the sewing material edge is detected. For proper implementation of the function, have a thorough understanding of "Section (4) Use of Detailed Edge Sensor Functions" in the manual before use.

(3) Edge Sensor Sensitivity Setup


 
① Without a sewing material located under the sensor, set the operating mode on the back of the sensor at L.ON.	
② Press the  button and the lamp blinks. Place a sewing material under the sensor and check if the STB lamp (amber) in front of the sensor blinks.	
③ In the event that the STB lamp(amber) in front of the sensor is not turned on, change the operating mode on the back of the sensor to D.ON and repeat the process② again. (The reason of the lamp turned off is the edge sensor reacts depending on sewing material types.)	
④ After undergoing the above processes ①~③, adjust the SENS volume on the sensor front to make sure that the OPL lamp(Red) remains turned off when the sewing material is below the sensor and that the OPL lamp(Red) blinks when the sewing material is not below the sensor. At this time, the blinking of the STB lamp(amber) does not matter.	

(4) Use of Detailed Edge Sensor Functions


 
<p>① While the  button is being pressed, press the A button to enter the Parameter Group A. (Entry into the parameter group is allowed only after trimming.)</p>																					
<p>② Use the E and F buttons to set the parameter numbers subject to revision. Use the C and D buttons to change parameter values.</p> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th style="width: 10%;">A-Group</th> <th style="width: 30%;">Function</th> <th style="width: 15%;">Initial Value</th> <th style="width: 20%;">Scope</th> <th style="width: 25%;">Stage</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">41</td> <td>Sensor type select</td> <td style="text-align: center;">0</td> <td>0 : When the edge is sensed, 5[V] output(Active High) 1 : When the edge is sensed, 0[V] output(Active Low)</td> <td></td> </tr> <tr> <td style="text-align: center;">42</td> <td>After the edge is sensed, set the stitch count to proceed</td> <td style="text-align: center;">3[stitches]</td> <td style="text-align: center;">0~255[stitches]</td> <td style="text-align: center;">1[stitches]</td> </tr> <tr> <td style="text-align: center;">43</td> <td>After the edge is sensed, set the sewing speed for the stitches.</td> <td style="text-align: center;">1000[rpm]</td> <td style="text-align: center;">20~2000[spm]</td> <td style="text-align: center;">10[spm]</td> </tr> </tbody> </table>	A-Group	Function	Initial Value	Scope	Stage	41	Sensor type select	0	0 : When the edge is sensed, 5[V] output(Active High) 1 : When the edge is sensed, 0[V] output(Active Low)		42	After the edge is sensed, set the stitch count to proceed	3[stitches]	0~255[stitches]	1[stitches]	43	After the edge is sensed, set the sewing speed for the stitches.	1000[rpm]	20~2000[spm]	10[spm]	  
A-Group	Function	Initial Value	Scope	Stage																	
41	Sensor type select	0	0 : When the edge is sensed, 5[V] output(Active High) 1 : When the edge is sensed, 0[V] output(Active Low)																		
42	After the edge is sensed, set the stitch count to proceed	3[stitches]	0~255[stitches]	1[stitches]																	
43	After the edge is sensed, set the sewing speed for the stitches.	1000[rpm]	20~2000[spm]	10[spm]																	
<p>③ Change each parameter value and save the new value by pressing the  button.</p>																					

 Caution	<p>1. Note that a new value is not saved without pressing the  button after parameter value reset.</p> <p>2. If the system is initialized, all data is recovered back to the initial values.</p>
--	--

(5) Edge Sensor Motion

<p>① Press the  button to activate the edge sensor.</p>	
<p>② If the edge sensor is activated, when the sewing material edge is detected, the sewing is suspended (distance between the needle and the sewing material edge: some 20[mm]).</p>	
<p>③ When the sewing is suspended as in ②, move the pedal from “Neutral” to “Forward” and then the sewing is resumed at the stitch count set at Parameter A-42 at the speed set at Parameter A-43.</p>	
<p>④ After completing the process ③ and conducting trimming (pedal backward), the backtack sewing for finish (in the case where the backtack lamp is blinking) and trimming are performed in order.</p>	

(6) Deactivating Edge Sensor


<p>① Press the  button to turn off the lamp and then the edge sensor is deactivated.</p>	
---	---

6) Motor Controller Setting

(1) Controller Setting by Machine Type

Classification	Machine Type	Set Value for Parameter B-56 Model	Remarks
1	SC-7300 Series	88	Parameters are set according to the ordered specifications before machine's shipment from the factory.
2	SC-7500 Series	124	
3	SC-7310 Series	125	

※ Model Number Setting

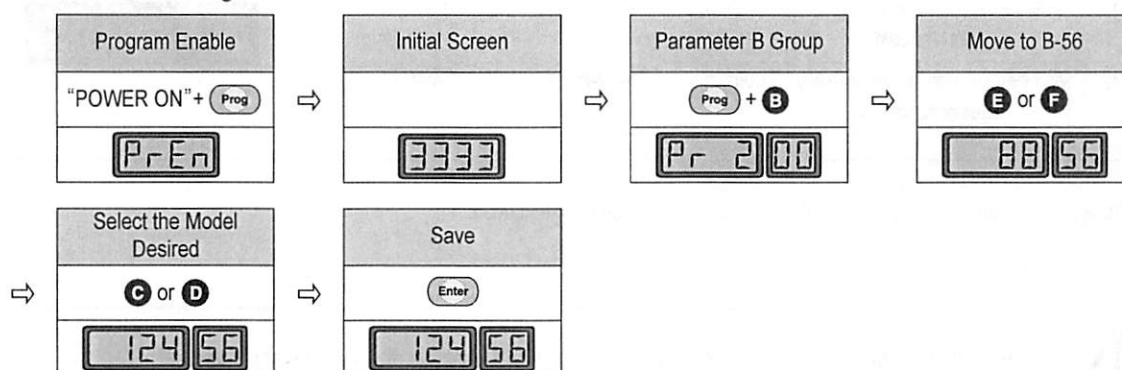

[Note]

- ① Before the product is shipped out from the factory, all settings are completed in line with the machine type ordered.
- ② In case where the controller which is different from the ordered specifications is installed to the chain-type machine:
 - ⇒ Set the value of parameter B-56 according to the concerned machine type.
 - ⇒ Depending on the program version of controller, it may not be applicable to some machines. See the following to make the proper setting according to the machine type.

※ Version display

- ❑ When the power is turned on, the CPU version is displayed as below on P/U for a moment, and then the screen moves to the initial screen ("3333").

Classification	Fortuna Series III(CPU version 11)	Fortuna Series IV(CPU version 7)
Program Unit (P/U)	SEr311	SEr407
Handy Controller	SEr3 ⇒ 11	SEr4 ⇒ 07

- ❑ This is an old version where the CPU version is not displayed.

(2) In case where the top thread trimming device is installed


Make a setting based on the check points below to ensure proper operation of the top thread trimming device when the top thread trimming device is installed.

① Make the setting as below depending on the program version of the controller.


Program version		Setting
1	S-III version "11" or above	Set the value of Parameter A-73 at "1"
	S-IV version "7" or above	
2	Lower than S-III version "11"	Modify the trimming sequence of Parameter B-55.
	Lower than S-IV version "7"	

② Modification of the sequence of Parameter B-55

☑ Using the external program unit

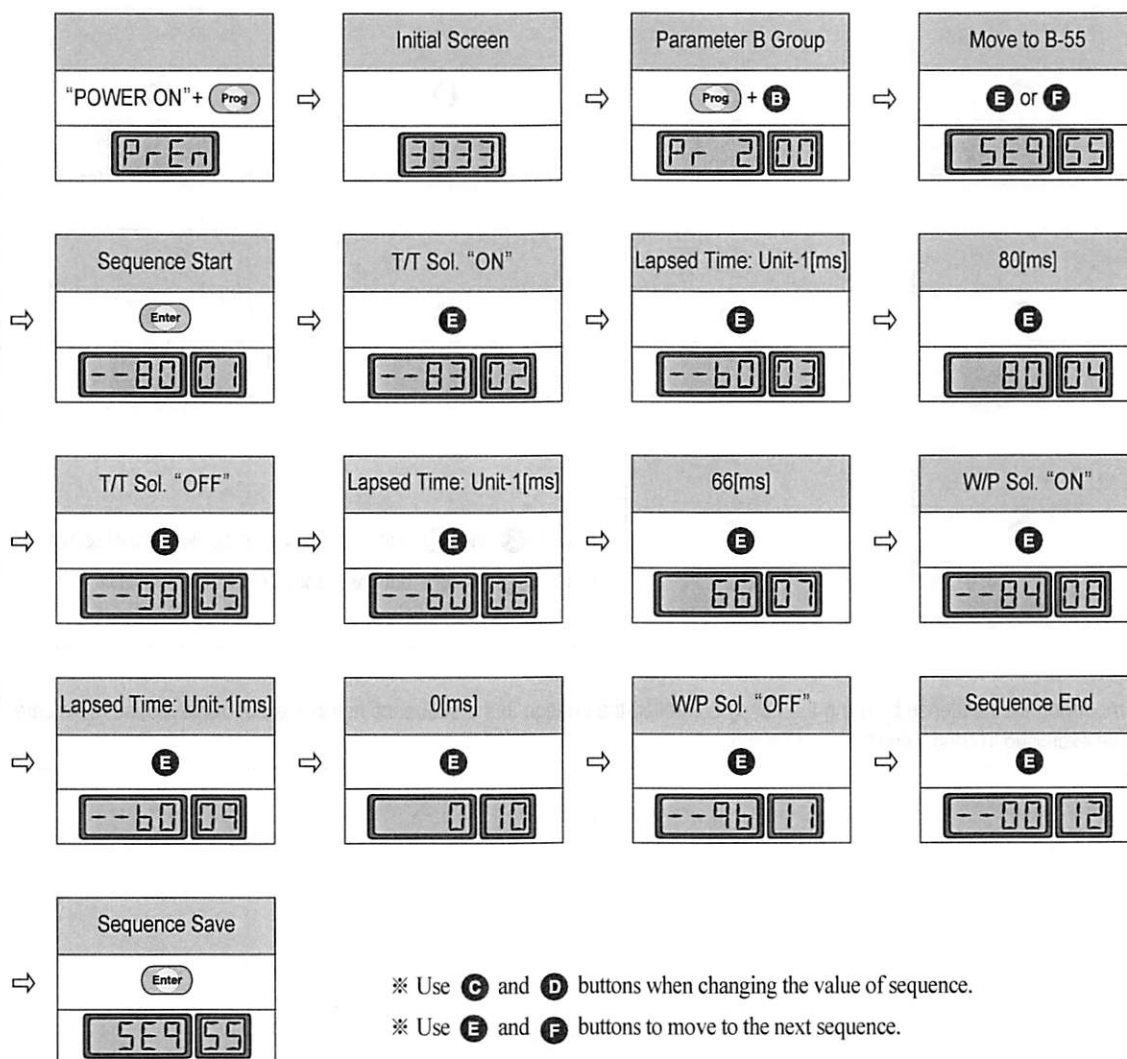

▶ How to use the imbedded handy controller

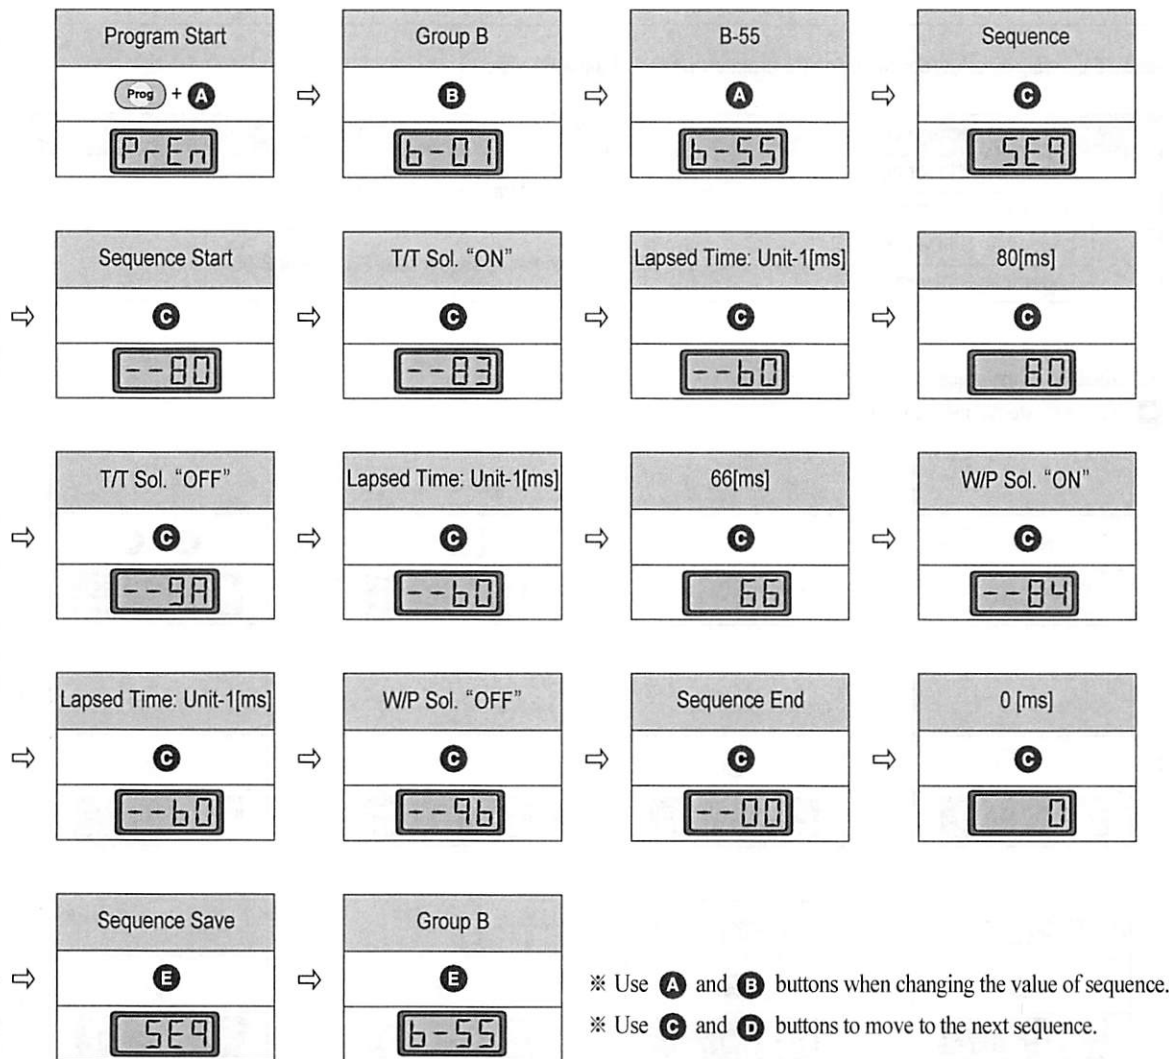

[Note]

When modifying the sequence by using the handy controller, the change in the sequence number is not displayed, so more care should be exercised in conducting the modification.

(3) Trimming Sequence of Chain-type Machine

When installing the controller which has an older program version, see the following and correct the trimming sequence.

Work Flow	Program Code																																																																																																						
<div><div>Start of Sequence</div><div>↓</div><div>T/T Solenoid "ON"</div><div>↓</div><div>Wait for 80[ms]</div><div>↓</div><div>T/T Solenoid "OFF"</div><div>↓</div><div>Wait for 66[ms]</div><div>↓</div><div>W/P Solenoid "ON"</div><div>↓</div><div>Wait for 1[s]</div><div>↓</div><div>W/P Solenoid "OFF"</div><div>↓</div><div>End of Sequence</div></div>	<table><tr><th rowspan="2">Number</th><th rowspan="2">Command</th><th colspan="3">Data Part</th><th rowspan="2">Explanation</th></tr><tr><th>1st</th><th>2nd</th><th>3rd</th></tr><tr><td>01</td><td>--80</td><td></td><td></td><td></td><td>Sequence Start</td></tr><tr><td>02</td><td>--83</td><td></td><td></td><td></td><td>T/T Solenoid "ON"</td></tr><tr><td>03</td><td>--B0</td><td></td><td></td><td></td><td rowspan="2">80[ms] of Time Lapse</td></tr><tr><td>04</td><td></td><td>80</td><td></td><td></td></tr><tr><td>05</td><td>--9A</td><td></td><td></td><td></td><td>T/T Solenoid "OFF"</td></tr><tr><td>06</td><td>--B0</td><td></td><td></td><td></td><td rowspan="2">66[ms] of Time Lapse</td></tr><tr><td>07</td><td></td><td>66</td><td></td><td></td></tr><tr><td>08</td><td>--84</td><td></td><td></td><td></td><td>W/P Solenoid "ON"</td></tr><tr><td>09</td><td>--B3</td><td></td><td></td><td></td><td rowspan="2">1[s] of Time Lapse</td></tr><tr><td>10</td><td></td><td>10</td><td></td><td></td></tr><tr><td>11</td><td>--9B</td><td></td><td></td><td></td><td>W/P Solenoid "OFF"</td></tr><tr><td>12</td><td>--00</td><td></td><td></td><td></td><td>Trimming Sequence End</td></tr><tr><td>•</td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>•</td><td>--00</td><td></td><td></td><td></td><td></td></tr><tr><td>•</td><td></td><td></td><td></td><td></td><td></td></tr><tr><td>64</td><td>--00</td><td></td><td></td><td></td><td>Sequence Close</td></tr></table>	Number	Command	Data Part			Explanation	1st	2nd	3rd	01	--80				Sequence Start	02	--83				T/T Solenoid "ON"	03	--B0				80[ms] of Time Lapse	04		80			05	--9A				T/T Solenoid "OFF"	06	--B0				66[ms] of Time Lapse	07		66			08	--84				W/P Solenoid "ON"	09	--B3				1[s] of Time Lapse	10		10			11	--9B				W/P Solenoid "OFF"	12	--00				Trimming Sequence End	•						•	--00					•						64	--00				Sequence Close
Number	Command			Data Part				Explanation																																																																																															
		1st	2nd	3rd																																																																																																			
01	--80				Sequence Start																																																																																																		
02	--83				T/T Solenoid "ON"																																																																																																		
03	--B0				80[ms] of Time Lapse																																																																																																		
04		80																																																																																																					
05	--9A				T/T Solenoid "OFF"																																																																																																		
06	--B0				66[ms] of Time Lapse																																																																																																		
07		66																																																																																																					
08	--84				W/P Solenoid "ON"																																																																																																		
09	--B3				1[s] of Time Lapse																																																																																																		
10		10																																																																																																					
11	--9B				W/P Solenoid "OFF"																																																																																																		
12	--00				Trimming Sequence End																																																																																																		
•																																																																																																							
•	--00																																																																																																						
•																																																																																																							
64	--00				Sequence Close																																																																																																		

[Note]

⇒ When installing the top thread trimming device, change the trimming sequence value in No. 09 from B3 to B0 and the value in No. 10 to "0".











































⇒ If the program version is S-III("11") and S-IV("7") or above, set the value of A-73 at "1".

7) Advanced Pattern Sewing Functions










(1) Related Parameters

Parameter No	Parameter Name	Set Value
A-76	Pattern Advanced Function	0(Disable) / 1(Enable)

(2) Features of Function

Item	Description														
① Supporting existing pattern functions	■ If Parameter A-76 is set at (0) for Disable, the existing pattern functions can be used as same.														
② Max. Pattern Value	■ Up to 15 patterns can be used.														
③ How to set	<p>■ Parameter A-76 can be set in two ways.</p> <p>A. Setting by parameter adjustment</p> <table border="1"> <tr> <td>a. Press  + A to move to Parameter Group A.</td><td></td></tr> <tr> <td>b. Use E and F to move to A-76.</td><td></td></tr> <tr> <td>c. Use C and D to change a set value.</td><td></td></tr> <tr> <td>d. Press  to save a set value and press  to revert to the initial screen.</td><td></td></tr> </table> <p>B. Setting with hotkeys</p> <table border="1"> <tr> <td>a. Press  +  to move to Parameter Group A.</td><td></td></tr> <tr> <td>b. Use C and D to change a set value.</td><td></td></tr> <tr> <td>c. Press  to save a set value and then press  to revert to the initial screen.</td><td></td></tr> </table>	a. Press  + A to move to Parameter Group A.		b. Use E and F to move to A-76.		c. Use C and D to change a set value.		d. Press  to save a set value and press  to revert to the initial screen.		a. Press  +  to move to Parameter Group A.		b. Use C and D to change a set value.		c. Press  to save a set value and then press  to revert to the initial screen.	
a. Press  + A to move to Parameter Group A.															
b. Use E and F to move to A-76.															
c. Use C and D to change a set value.															
d. Press  to save a set value and press  to revert to the initial screen.															
a. Press  +  to move to Parameter Group A.															
b. Use C and D to change a set value.															
c. Press  to save a set value and then press  to revert to the initial screen.															
④ Considerations	<p>■ When using hotkey functions, press PATTERN to turn off LED before use.</p> <p>■ When using extended pattern functions, make sure of using No. 1 pattern.</p>														

(3) Detailed Functional Setting and Use

Sequence	Description	Remarks				
① Enable the Pattern Extension Function	<ul style="list-style-type: none"> ■ Set A-76 at 1, and use hotkey functions to amend the set value from 0 to 1. 					
② Check No. 1 pattern setting	<ul style="list-style-type: none"> ■ Check if Pattern No. 1 LED is on. - In the event that LED is on for other patterns, press No. 1  button to select. 					
③ Enter the set values for pattern stitch count as many as desired among 15 patterns.	<ul style="list-style-type: none"> ■ A / B buttons: Move around patterns from 1 to 15 to select a desired pattern. ■ C / D buttons: Enter the stitch count into the pattern number currently marked. (The set value is automatically saved) ■ "Yes" is displayed on the screen. <table border="1" data-bbox="644 760 1229 900"> <tr> <td>Set 11 stitches for No. 1 pattern.</td><td></td></tr> <tr> <td>Set 10 stitches for No. 14 pattern.</td><td></td></tr> </table>	Set 11 stitches for No. 1 pattern.		Set 10 stitches for No. 14 pattern.		No.10 : A No.11 : B No.12 : C No.13 : D No.14 : E No.15 : F
Set 11 stitches for No. 1 pattern.						
Set 10 stitches for No. 14 pattern.						
④ When one among set patterns is used	<ul style="list-style-type: none"> ■ Use A and B buttons to move to a desired pattern and begin sewing. 					
⑤ In the event of conducting chain sewing in the set pattern order	<ul style="list-style-type: none"> ■ Press  button to turn on CHAIN LED, and then begin sewing. - Start sewing from No.1. ■ Possible to use A and B buttons to change the start position. 					
⑥ Notice	<ul style="list-style-type: none"> ■ During the chain sewing, if an encountered pattern's stitch count is zero (0), it is automatically converted to No. 1 pattern and sewing continues. ■ When using the pattern extension function, E and F buttons indicate the pattern number currently under work. ■ To release the function, press  button to turn off PATTERN LED and set A-76 at zero(0). 					

8) Automatic Change Function of Twin Needles (applicable to the models supporting twin needles)

(1) Related Parameters

Parameter No	Parameter Name	Set Value
A-77	Setting automatic change function for twin needles	0(disable) 1(enable)
E-0 ~ E-135	Detailed settings for automatic change of twin needles	See Parameter Group E.



From 100 to 135, they are redundantly displayed from 00 to 35.

(2) Features of Function


Item	Description
① Supporting existing pattern functions	■ If Parameter A-77 is set at (0) for Disable, the existing pattern functions can be used as same.
② No. of pattern in use	■ Pattern No. 2, 3, 5 requiring changes can be set.
③ Use of Functions	■ Set A-77 at 1 and set Parameter Group E's data.



If set values are changed without through understanding of Parameter Group E set values and "(3) Example of Changes for Each Step," mechanical breakdown or physical damage may result. Therefore users are recommended to have a thorough understanding before use.

(3) Example of Changes for Each Step


■ Example of No. 2 pattern (3 sides)

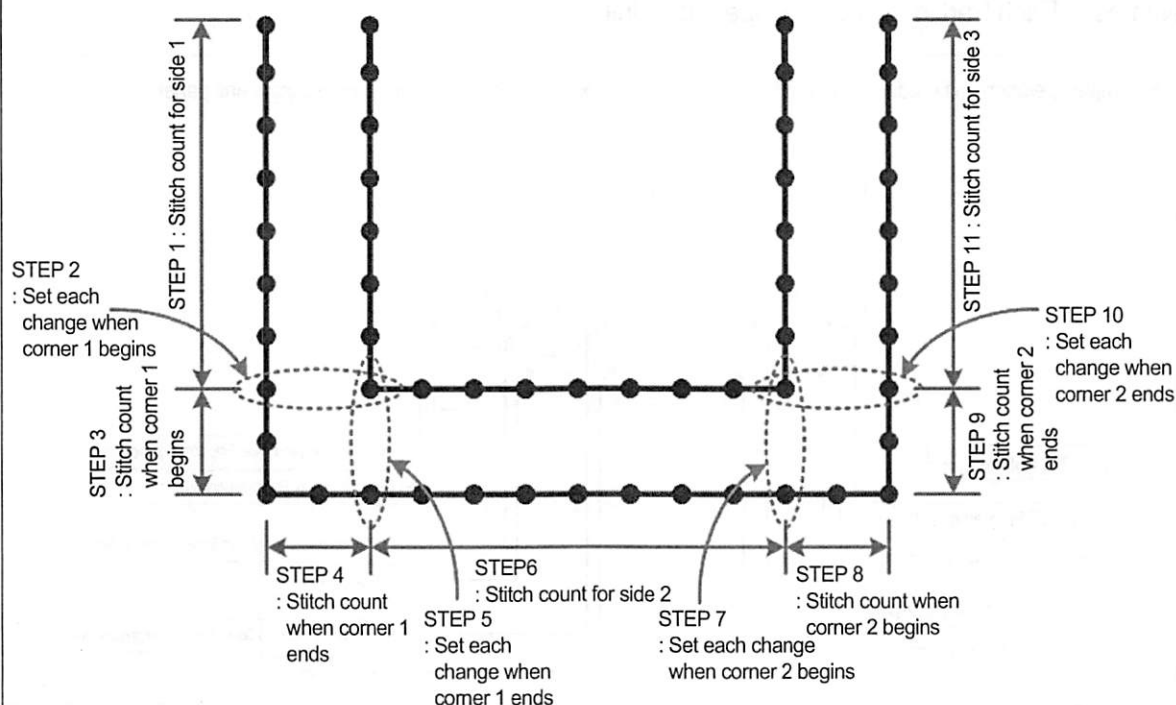

Step	Parameter #	Description	Details	Pedal Start Frequency	Remarks
STEP 1	E-01	■ Stitch count entry for side 1	Pattern speed	1 When a pedal is stepped, automatic execution of Step 1 to 3 takes place.	
STEP 2	E-02	■ Select each change at the beginning of the first corner	0: No setting 1: Left Sol. motion 2: Right Sol. motion		
STEP 3	E-03	■ Enter stitch count at the beginning of the first corner	SBT speed (A-7)		
STEP 4	E-04	■ Enter stitch count at the end of the first corner	SBT speed (A-7)	2 When a pedal is stepped, automatic execution of Step 4 to 8 takes place.	
STEP 5	E-05	■ Select each change at the end of the first corner	0: No setting 1: Left Sol. motion 2: Right Sol. motion		
STEP 6	E-06	■ Enter stitch count for side 2.	Pattern speed		
STEP 7	E-07	■ Select each change at the beginning of the second corner.	0: No setting 1: Left Sol. motion 2: Right Sol. motion		
STEP 8	E-08	■ Enter stitch count at the beginning of the second corner.	SBT speed (A-7)	3 When a pedal is stepped, automatic execution of STEP 9 to 11 takes place.	
STEP 9	E-09	■ Enter stitch count at the end of the second corner.	SBT speed (A-7)		
STEP 10	E-10	■ Select each change at the end of the second corner.	0: No setting 1: Left Sol. motion 2: Right Sol. motion		
STEP 11	E-11	■ Enter stitch count for side 3.	Pattern speed		

SIMPLE OPERATION UNIT PART NAMES AND METHOD OF USE


1) Names of Each Part in the Simple Operation Unit

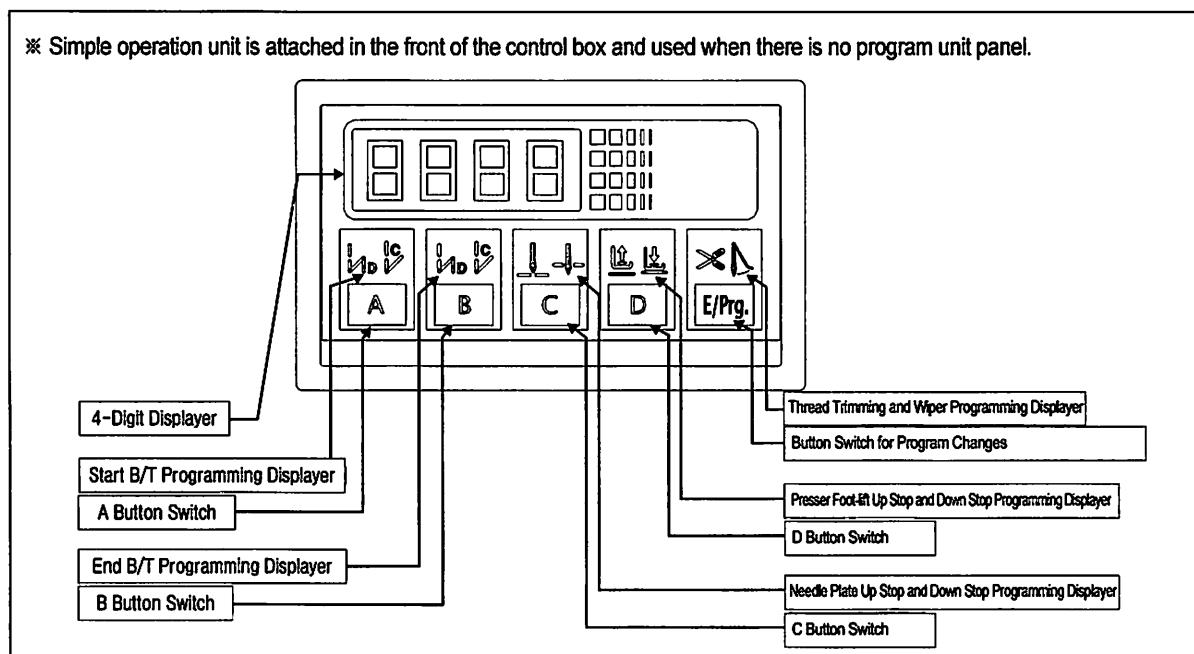

2) Simple Program Unit Method of Use

(1) Initializing

This function is used when the user randomly corrects the programmed value and forgets the initial programmed value.

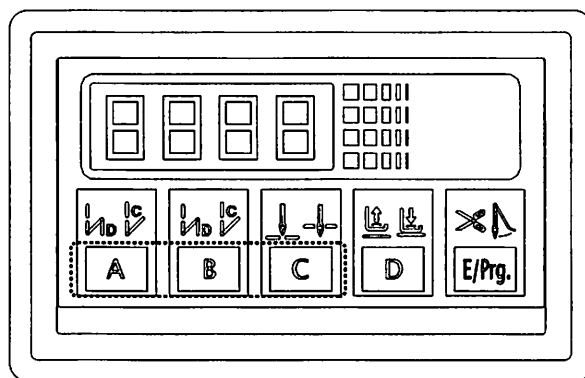






Turn the power on by simultaneously pressing the buttons, **A** and **B**, **C**.




- When you initialize, you change all the original values that the sewing machine had when it was manufactured in the factory. Initialize only when absolutely necessary.
- When initializing, you must run the motor for more than 5 seconds at the speed of 1000RPM in order to make the synchronizer to work properly.

  (2) Programming the Start B/T Sewing Conditions with Button **A**

This button is used when the user wants to prevent threads from loosening at the end of the sewing work. If the user presses this button in sequence, the location on the lights will change as shown in the figures below. This button offers the following three functions.

 <p>When sewing starts, B/T sewing does not operate.</p>	 <p>When sewing starts, B/T sewing can be done with the  button.</p>	 <p>When sewing starts, B/T sewing can be done with the  button.</p>
---	--	--




 

Use the A, B button to program the number of B/T stitches in the 4-digit displayer.




Be aware that if the end B/T stitch number is set to '0' in the 4-digit displayer, the user will be unable to operate start B/T sewing.

(3) Programming the Start B/T Sewing Conditions with Button **B**

This button is used when the user wants to prevent threads from loosening at the end of the sewing work. If the user presses this button in sequence, the location on the lights will change as shown in the figures below. This button offers the following three functions.

 <p>When sewing starts, B/T sewing does not operate.</p>	 <p>When sewing starts, B/T sewing can be operated with the  button.</p>	 <p>When sewing starts, B/T sewing can be operated with the  button.</p>
---	--	--

 
 
 
 
Use the C, D button to program the number of B/T stitches in the 4-digit displayer.



Be aware that if the end B/T stitch number is set to '0' in the 4-digit displayer, the user will be unable to carry out start B/T sewing.

 

 

(4) Programming the Needle Plate Position when Sewing Stops with Button **C**

When you turn the power on, one of needle plate's up stop and down stop lights in the simple operation unit will always be on. If you press the button you can select the stopping location.

 <p>If the machine stops while sewing, the needle plate makes an up stop.</p> 	 <p>If the machine stops while sewing, the needle plate makes a down stop.</p> 
--	--




(5) Programming the Presser Foot-lift Location when Sewing Stops with the Button **D**

When you turn the power on, one of presser foot-lift's up stop and down stop lights in the simple operation unit will always be on. If you press the button you can select the stopping location.




 <p>If the machine stops while sewing, the presser foot-lift makes an up stop.</p> 	 <p>If the machine stops while sewing, the presser foot-lift makes a down stop.</p> 
---	---

(6) Programming the Automatic Thread Trimmer and Wiper Movements with the Button **E/Pr**

This button programs the automatic trimmer and wiper after sewing. If the user presses this button in sequence, the location on the lights will change as shown in the figures below. This button offers the following three functions.

 <p>Automatic trimmer and wiper are not operating.</p>	 <p>Only the automatic trimmer is operating</p>	 <p>Both the automatic trimmer and wiper are operating</p>
---	--	---



(7) Programming the Start and End B/T Stitches

<p>① Press the appropriate button for 0.5 seconds for the place you wish to program the new B/T stitch value. The light will blink in that place.</p> <ul style="list-style-type: none"> • Programming buttons for number of start B/T stitches : buttons A , B • Programming buttons for number of end B/T stitches : buttons C , D 	<p><Initial Screen></p> 
<p>② If the number is blinking, you can change the programmed value by pressing the appropriate button. (Ex : If you press the A button for 0.5 seconds, the first number in the screen will blink).</p>	<p><When the button A has been pressed for 0.5 seconds></p> 
<p>③ If programming is completed, press the same button for 0.5 seconds once more and you will return to the initial screen. (Ex : Changing the value of A, B, C, D from 3, 3, 3, 3 to 4, 4, 4, 4)</p>	







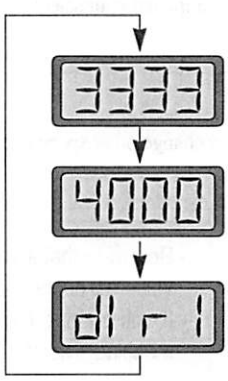




Be aware that if you don't press the button for 0.5 seconds, the screen will not return to the B/T stitch programming screen but will remain in the sewing conditions program change (items 1~4 functions) section.

(8) Sewing Speed and Rotating Direction Programming Method


<p>① If you press the E/Prg button for 0.5 seconds, you will see the screen that enables you to change the sewing speed. If you press the same button again for 0.5 seconds, you will see the screen that enables you to change the rotating direction. If you press the button one more time, you will return to the initial screen. (Initial screen → Speed programming screen → Rotating direction programming screen → Initial screen)</p> <p>② If you want to change the sewing speed, press the E/Prg button. After seeing the speed programming screen, press buttons A and B to program the speed you want.</p> <p>③ If you want to program the rotating direction, press the E/Prg button to see the rotating direction programming screen, then press buttons A and B to change the rotation to the direction you want.</p> <ul style="list-style-type: none"> • reverse direction : dir 0 • normal direction : dir 1 	
<div style="display: flex; align-items: center;">  <div style="margin-left: 10px;"> <p>Be aware that if you don't press the button for 0.5 seconds, the screen will not return to the B/T programming screen but will remain in the sewing conditions programming screen (Items 1~4 functions).</p> </div> </div>	

(9) Method to Change Parameter Specific Items




<p>① To change the parameter's detailed items, press the E/Prg and A buttons simultaneously and return to the parameter detailed item's initial screen.</p>	<p><parameter specific item initial screen></p> 
<p>② If you see the "PrEn" screen, select a parameter group using buttons A~D.</p> <ul style="list-style-type: none"> • A button : A group, B button : B group • C button : C group, D button : D group 	<div style="display: grid; grid-template-columns: 1fr 1fr; gap: 10px;"> <div><Initial screen for group A> </div> <div><Initial screen for group B> </div> <div><Initial screen for group C> </div> <div><Initial screen for group D> </div> </div>
<p>③ After selecting the group you want, use buttons A and B to select the specific item you want.</p> <ul style="list-style-type: none"> • Ex: Select No. 2 item of Group A (Limiting the maximum sewing speed) 	
<p>④ If you selected the specific item you wanted, press button C. The value you selected will then appear on the screen.</p> <ul style="list-style-type: none"> • Ex : The current maximum sewing speed 400RPM. 	
<p>⑤ Using the buttons A and B, change the current programmed value to another value.</p> <ul style="list-style-type: none"> • Ex : Change the maximum sewing speed from 4000RPM to → 3000RPM 	

⑥ If you completed your selection, press the C to save the value you chose.	
⑦ You can change other specific items of the parameter in the same manner.	
 Caution	<ul style="list-style-type: none"> • Be aware that if you changed the specific items of the parameter and didn't press the C button, the changed value will not be saved. • If you change the parameter specific items carelessly, this may cause breakdown or physical damage to the machine. Therefore, the user must be well-trained before changing items in the parameter group.

(10) Start and End B/T Stitch Number Correction Method

<p>① Corrections in the initial screen are the same as those in item (13) of the program unit manual "Correcting method for when the B/T number differs by one stitch"</p> <ol style="list-style-type: none"> Check the present sewing condition. Change the value of the part that needs correction (use A , B , C , D buttons) Save the programmed value (press the E/Prg and B buttons simultaneously). → You will go to the "bt-C" screen. The buzzer will sound three times and you will return to the initial screen 	
② When making corrections of less than one stitch use items 30~33 of parameter Group B and will correct to stage 0.05.	
※ For detailed B/T stitch number correction method, refer to the section 3) of the Program Unit manual.	

(11) Method of Use of the Inertia Tuning Function

① The inertia tuning function is to find the motor's gain value that match the weights inertia. Press buttons E/Prg and D simultaneously to return to the initial screen of the inertia tuning.	<p><Inertia tuning initial screen></p> 
② If the initial screen comes on, press the pedal until you hear the buzzer ring. (During inertia tuning the sewing machine will operate and stop 10 times).	<p><Initial screen></p> 
③ If the inertia tuning is completed, the buzzer will ring and the initial screen will come on at the same time.	
 Caution	<p>Inertia tuning is carried out only when the controller is attached to the sewing machine for the first time and when the sewing machine is unable to accelerate or decelerate quickly.</p>


From the library of Superior Sewing Machine & Supply LLC - www.supsew.com

FORTUNA SERIES 5 FULL FUNCTION SOFTWARE METHOD OF USE

1) Basic Functions of the Fortuna Series 5 Full Function Software

(1) Initializing

This function is used when the user randomly changes the parameter's programmed value, and forgets the original program contents.

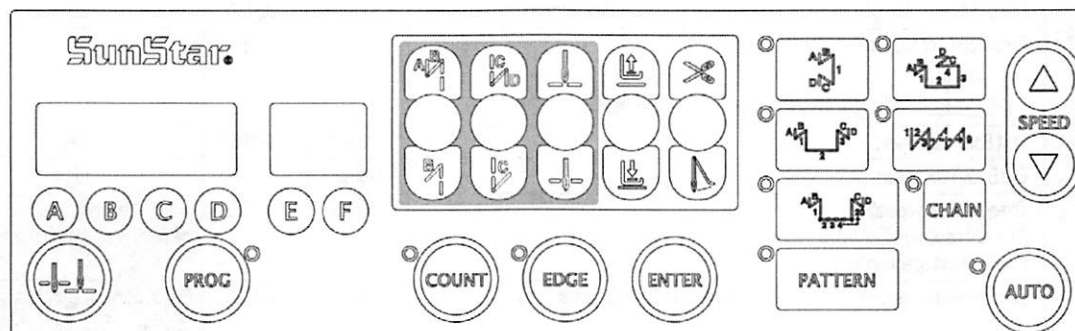

Method of initializing: Turn the power on by simultaneously pressing the buttons in the figure above which are the start B/T button + end B/T button + needle plate up/down stop button.



- If you initialize, all the changes made by the user are changed to the original values programmed when the machine was delivered from the factory, therefore only change the value if absolutely necessary.
- After initializing, rotate the machine for 1000RPM or more for approximately 5 seconds. You must make the machine remember the location of the FILM.

(2) Sewing Machine Up/Down Stop Location Automatic Recalling Function

When first purchasing the controller, if the user steps on the pedal for 5 seconds and runs the motor before beginning the sewing work, the machine will automatically remember the sewing machine's up/down stop location. However, when using a synchronizer this step is not necessary.

(3) Method of Use and Functions of the Program Unit and the General Control Box's Simple Operation Box.

When there is a program unit(P/U), use it to program or change all the functions of the machine. When there is no program unit, use the general control box operation panel to program or change all the functions of the machine.

※ For detailed information on the method of use of program units and simple operation panel refer to the explanation in the last section.






(4) Function Parameter

Parameter group	Functions
① Group A	General functions of the sewing machine
② Group B	All types of output, Full-on Time/PWM Duty, checking input/output operations, sewing machine models and thread trimming sequence programming
③ Group C	Pedal acceleration/deceleration curve, slow starting speed and input/output port change related parameters
④ Group D	All types of gain parameter related motor control
⑤ Group E	Automatic Change Function of Twin Needles Related Parameters

※ If the specific items of the parameter are changed carelessly, they could cause breakdown or damage the machine. Therefore the user must be well-trained before using it.

2) Fortuna Series 5 Full Function Software Specific Parameters

     (1) Group A Parameter: General functions of sewing machine

No.	Function	Initial value	Range	Step
1	Minimum speed of pedal (limit of sewing machine's minimum speed)	200spm	20~510	2spm
2	Maximum speed of pedal (limit of sewing machine's maximum speed)	4000spm	40~9960	40spm
3	Thread trimmer speed (Sewing machine speed from beginning to end of thread trimming when using CAM type)	300spm	20~510	2spm
4	Program Unit + 1 stitch speed ( Key's performance speed)	100spm	20~510	2spm
5	Lifting of needle plate with button A, dropping speed ( 's performance speed)	300spm	20~510	2spm
6	Pedal degree of acceleration (Pedal Curve)  ,When the maximum speed is put in 255 steps)	255	1~255	1
7	Start Back-Tack Speed	1700spm	20~2000	10spm
8	End Back-Tack Speed	1700spm	20~2000	10spm
9	Thread trimming operation time (The A24 used in PNEUMATIC = must be 1) (The Solenoid operation time)	100ms	4~1020	(When doing an aging test, the value is equal to the running time)
10	Tension release operation time (The A24 used in PNEUMATIC = must be 1)	200ms	4~1020	(When doing an aging test, the value is equal to the thread trimming time)
11	Tension release time (In CAM type, the used A24 = must be 0) (In CAM type, the tension release is the value of the moving CAM angle)	255	0~255	
12	Waiting time for the next operation after thread trimming (This is the delaying time to carry out the next operation after thread trimming is finished)	4ms	4~1020	
13	Wiper operation time (Wiper Solenoid operating time)	48ms	4~1020	4ms
14	Waiting time after wiper operation (presser foot-lift etc.)	40ms	4~1020	4ms
15	Automatic presser foot-lift delaying time	100ms	4~1020	4ms
16	Automatic presser foot-lift maintaining time (After programmed time the presser foot-lift is automatically released)	300 × 0.1sec	5~1000	0.5sec
17	Automatic presser foot-lift drop waiting time for next operation (The delaying time, or the time that the foot-presser lift is maintained, the pedal is started until the presser foot-lift drops and the sewing machine is started)	100ms	4~1020	4ms
18	Selection for automatic foot-presser lift after thread trimming	0	0/1	1=lift selection 0=step backward thread trimming
19	Selection for pedal thread trimming position	0	0/1/2	0=step backward thread trimming 1=1 step backward thread trimming 2=thread trimming at neutral position
20	The maximum sewing speed for the KM-1060BL-7 presser foot-lift with mutual crossing quantity of 4.8 ~ 7.0[mm]	2000spm	200~2000	10spm
21	Delaying time for complete release of KM-1060BL-7 B/T Solenoid	200ms	4~1020ms	4ms
22	Select to operate 2 start B/T 	0	0/1	Choose between 1 or 2
23	Select to operate 2 end B/T 	0	0/1	Choose between 1 or 2
24	Selection of thread trimming conditions (selection according to sewing machine type)	0	0/1/2	0=CAM type machine 1= thread trimming after up-stop 2=thread trimming after low-stop
25	Whether or not to use default sequence when A24 = 1 (This is a sequence determined on A9,A10 value)	0	0/1	0=B-55 exclusive sequence is used 1= default sequence is used




If the specific items of the parameter are changed carelessly, they could cause breakdown or damage the machine. Therefore, the user must be well-trained before using it.

From the library of Superior Sewing Machine & Supply LLC – www.supsew.com

No.	Function	Initial value	Range	Step
26	Selection of B/T Solenoid operation position	0	0/1	0= lower position 1= upper position
27	Setting the maximum sewing speed of the machine according to presser foot-lift height of the KM-1060BL sewing machine.	?	?	program P1xx → P2xx → P3xx in order Less than P1xx:3500[spm] Less than P2xx:3000[spm] Less than P3xx:2500[spm] More than P3xx: A20[spm]
28	Needle bar's automatic stop at the highest position	0	0/1	
29	Pedal analog filtering difference	15	1~200	1
30	When using an angle 2-needle, select the semi-automatic corner operation	0	0/1	1=selection of semi-automatic
31	Speed when selecting a semi-automatic corner (parameter used only when used after selecting number 30)	200spm	20~2000	10spm
32	After selecting the left needle the first sewing stitch (parameter used only when used after selecting number 30)	3 stitches	0~255	1 stitch
33	After selecting the left needle the second sewing stitch (parameter used only when used after selecting number 30)	3 stitches	0~255	1 stitch
34	After selecting the right needle the first sewing stitch (parameter used only when used after selecting number 30)	3 stitches	0~255	1 stitch
35	After selecting the right needle the second sewing stitch (parameter used only when used after selecting number 30)	3 stitches	0~255	1 stitch
36	Maintaining time for the left/right needle solenoid (After the programmed time the solenoid is automatically released)	450 × 0.1sec	50~1000	0.5sec
37	NOT USED			
38	NOT USED			
39	Stopping function during AUTO mode and while pedal is neutral	1	0/1	0=does not stop 1=stops
40	Selection of type of N-stitch Sensor	0	0 : active high	1 : active low
41	The number of stitches done after the N-stitch Sensor has finished sensing. (After sensing, it will sew the programmed number of stitches and stop)	3 stitches	0~255	1 stitch
42	N-stitch sewing speed	1000spm	20~2000	10spm
43	Selection of One Touch function → replaced by AUTO Key function (Used in the sewing mode that uses the auto function)	0	0/1	1=Auto Mode
44	Selection of One Touch function → replaced by AUTO sewing mode programming (If there is no thread trimming signal when selected, sewing will continue even if user releases pedal)	0	0/1	1=One-Shot Mode
45	One-Shot sewing speed → When using AUTO function, it is programmed with the speed Up/Dn Key	2000spm	40~9960	40spm
46	N-stitch sewing mode selection → a sewing mode that inputs a sensor signal in the edge sensor port and uses it as an edge sensor	0	0/1	1=N-stitch Mode
47	Selection of pre-stitch function (When selected it will perform only the programmed stitches before the actual sewing work starts)	0	0/1	1=selection
48	Pre-stitch number of stitches	3 stitches	0~255	1 stitch
49	Pre-stitch speed	2000spm	20~2000	10spm
50	Selection of start B/T operating conditions (0 : if pedal is released during back tack, it will stop) (1 : if pedal is released during back tack, the work will still be completed) (2 : it will perform the exact amount of back tack stitches)	1	0 : B/T stop function selected 1 : B/T work completion 2 : B/T exact stitch performance	
51	Selection of end back tack performance condition (It will perform the exact amount of stitches for end back tack)	0	0/1	1= exact stitch performance
52	Back tack initial first stitch speed during back tack exact performance	200spm	20~1000	10spm



 If the specific items of the parameter are changed carelessly, they could break down or damage the machine, so the user must be well-trained before using it.

No.	Function	Initial value	Range	Step
53	Change between B/T and switch with buttons A or B during sewing	0	0/1	1= Select with button B
54	Selection of button A function	2	0 : Only B/T operates 1 : Lift and drop needle plate with one movement. 2 : Lift needle plate with one movement. Drop needle plate with two movements 3 : Slow performance when stopped (1/2 stitch speed)	
55	Selection of Button B function	0	0 : B/T delete insertion 1 : Lift and drop needle plate with one movement 2 : Slow performance when stopped (1/2 stitch speed) 3 : Only B/T operates	
56	Selection of speed during manual back tack during sewing	0	0/1	0 : current sewing speed 1: initial reverse speed
57	NOT USED			
58	Thread Trimming Sequence Selection of SunStar Chain Stitch Machine	1	0/1	1
59	Thread Trimming Sequence Selection of other Company chain Stitch Machine	0	0/1	1
60	Selection of reverse rotation after trimming	0	0/1	1:selection of reverse direction
61	Reverse rotation distance when selecting reverse rotation after thread trimming	20degree	0~250	1degree
62	When machine stops fix pulley (When machine stops fix the motor by force)	0	0/1	1: fix when machine stops
63	Power to fix the A number 62 Pulley	40	10~100	1
64	Distance recovered after fixing A number 62 Pulley and rotating it by force	20degree	10~100	1degree
65	Select the motor rotating direction ()	1	0/1	1 : clockwise 0 : counterclockwise
66	Target speed : If this speed is reached or passed, a signal saying "Target speed has been reached" will appear. (As an interior Port it is allotted and used in the 'C' GROUP-Default is auxiliary)	1000spm	40~9960	40spm
67	Delay start setup	0	0/1	0=normal start 1=Delay start
68	Delay start time duration setup	3	3~250	1 × 100[ms]
69	Setup of needle bar's stop at the lowest position after trimming when the pedal is pressed	0	0/1	0=disabled 1=enabled
70	Setup of the duration of needle bar's stop at the lowest position after trimming when the pedal pressed	100	100~250	1[ms]
71~75	Not Used	-	-	-
76	Setting pattern sewing extension	0	0/1	0 : No pattern extension 1 : Pattern extension
77	Automatic changes of twin needles	0	0/1	0 : Teach stitch not used 1 : Teach stitch used
78	Start Backtack ON Duration	4[ms]	4~1020[ms]	4[ms] (Parameter run when the Backtack accuracy function is used)
79	Start Backtack OFF Duration	4[ms]	4~1020[ms]	
80	End Backtack ON Duration	4[ms]	4~1024[ms]	
81	End Backtack OFF Duration	100[ms]	4~1020[ms]	
82	Stitch width reduction during backtacking	0	0/1	0=disabled 1=enabled
83	Not Used			
84~87	Not Used	-	-	-
88	Automatic PF lift and left/right needle solenoid lift Enable/disable the solenoid OFF function after maintain	1	0 : Enable(in the event of using an electronic solenoid) 1 : Disable(in the event of using a pneumatic solenoid)	
89	Upon trimming for a chain-type model, enable/disable the needle auto lift.	0	0/1	0=disabled 1=enabled



If the specific items of the parameter are changed carelessly, they could break down or damage the machine, so the user must be well-trained before using it.

(2) Group B Parameter : All types of output, Full-on Time/PWM Duty, checking input/output operations, sewing machine models and thread trimming sequence programming.

※ These are functions not used by general users and must be regulated by an A/S technician.

No.	Function	Initial value	Range	Step
1	Back Tack Solenoid Initial Full On Time	1020ms	4~1020	4ms
2	Presser Foot-Lift Solenoid Initial Full On Time	200ms	4~1020	4ms
3	T/T Solenoid Initial Full On Time	100ms	4~1020	4ms
4	Wiper Solenoid Initial Full On Time	100ms	4~1020	4ms
5	Tension Release Solenoid Initial Full On Time	100ms	4~1020	4ms
6	Left Solenoid Initial Full On Time (For Twin Needle)	100ms	4~1020	4ms
7	Right Solenoid Initial Full On Time (For Twin Needle)	100ms	4~1020	4ms
8	Auxiliary Solenoid Initial Full On Time	100ms	4~1020	4ms
9	Left LED Initial Full On Time (For Twin Needle)	100ms	4~1020	4ms
10	Right LED Initial Full On Time (For Twin Needle)	100ms	4~1020	4ms
11	Needle plate up-stop signal Initial Full On Time	100ms	4~1020	4ms
12	Needle plate down-stop signal Initial Full On Time	100ms	4~1020	4ms
13	Signal notifying motor running Full On Time	100ms	4~1020	4ms
14	Signal notifying target speed achieved Full On Time	100ms	4~1020	4ms
15	Back Tack Solenoid Duty Ratio	50%	0~100	10%
16	Presser Foot-Lift Solenoid Duty Ratio	20%	0~100	10
17	Thread Trimming Solenoid Duty Ratio	100	0~100	10
18	Wiper Solenoid Duty Ratio	100	0~100	10
19	Tension Release Solenoid Duty Ratio	100	0~100	10
20	Left Solenoid Duty Ratio (For Twin Needle)	50	0~100	10
21	Right Solenoid Duty Ratio (For Twin Needle)	50	0~100	10
22	Aux Solenoid Duty Ratio	100	0~100	10
23	Left LED Duty Ratio (For Twin Needle)	100	0~100	10
24	Right LED Duty Ratio (For Twin Needle)	100	0~100	10
25	Signal for up stopping needle Duty Ratio	100	0~100	10
26	Signal for low stopping needle Duty Ratio	100	0~100	10
27	Signal notifying motor running Duty Ratio	100	0~100	10
28	Signal notifying target speed reached Duty Ratio	100	0~100	10
29	NOT USED			
30	Start Back Tack A number of stitches correction value	00.30	6~6	0.05 Stitch
31	Start Back Tack B number of stitches correction value	00.30	6~6	0.05 Stitch
32	End Back Tack C stitch correction value	00.40	6~6	0.05 Stitch
33	End Back Tack D stitch correction value	00.40	6~6	0.05 Stitch
34	Selection for maintaining reverse solenoid movement when thread trimming (C Only B/T)	0	0/1	1=reverse direction maintained
35	Programming count condition (program whether or not automatic counter will be operated)	0	0/1	0=counter used 1=automatic counter after thread trimming
36	When automatically counting, select Up/Down count after thread trimming (thread trimming function must be enabled)	1	0/1	1=Up COUNT 0=DOWN COUNT
37	When count in completed, the next operation is programmed	0	0/1/2	0=buzzer rings, sewing is allowed 1=buzzer rings, sewing is not allowed (if you press the Prog Key, set up is cancelled) 2=No buzzer ring, sewing is allowed
38	When count is completed, select the counter auto clear/preset	0	0/1	1=AUTO CLEAR/PRESET
39	NOT USED			


※ Items No. 30~33 : These are the items that make the number of stitches match when back tack number of stitches do not match.

※ Solenoid Duty Ratio : The power that holds and maintains the solenoid.

Solenoid initial full on time : The time it takes to pull the solenoid to the maximum in the outset.



If the specific items of the parameter are changed carelessly, they could break down or damage the machine, so the user must be well-trained before using it.

No.	Function	Initial value	Range	Step
40	Checks operation of B/T solenoid (OUTPUT00)	※After matching the number of the solenoid being tested, press the "+1stitch()" key(button A in case of simplified operation) and check the condition of the movement - Along with the output, it will say "on", or "off"		
41	Checks operation of P/F solenoid (OUTPUT01)			
42	Checks operation of T/T solenoid (OUTPUT02)			
43	Checks operation of W/P solenoid (OUTPUT03)			
44	Checks operation of T/R solenoid (OUTPUT04)			
45	Checks operation of left solenoid (OUTPUT05)			
46	Checks operation of right solenoid (OUTPUT06)			
47	Checks operation of Aux. solenoid (OUTPUT07)			
48	Checks operation of Left LED solenoid (OUTPUT10)			
49	Checks operation of Right LED solenoid (OUTPUT11)			
50	Checks operation of needle when signal notifies up stop (OUTPUT12)			
51	Checks operation of needle when signal notifies down stop (OUTPUT13)			
52	Checks operation of signal notifying motor running (OUTPUT14)			
53	Checks operation signal notifying target speed has been reached (OUTPUT15)			
54	Select [Thread trimming sequence] - The default is set to '0'. If you wish to input another sequence apart from the thread trimming sequence provided in the system input the newly composed sequence number. (Refer to the sequence composition method)	0	0~64	1
55	Thread trimming sequence data writing function			
56	Selecting sewing machine model - write the number that fits the sewing machine model provided in the full function manual.. - thread trimming sequence in the pertinent machine is copied. - if you want to correct the thread trimming sequence, change the contents of item B-55. (※ However, be aware that if you initialize the parameter, the newly programmed changes will disappear and the thread trimming sequence will change to that of [SunStar 235/250]).	0	0~127	1 0~ 74 (non-order made) 75~118 (order-made) (Refer to attached material)
57	Independent operation of trimming sequence	0	0/1	0=operation after trimming 1=independent operation
58	Presser foot-lift solenoid slowing down time #1 (Applied only when it is full-on condition)	40ms	2~510ms	2ms
59	Presser foot-lift solenoid slowing down time #2 (Applied only when it is PWM)	30ms	2~510ms	2ms

※ Items No. 40~53 : functions that check if solenoid and other output signals are working properly.

※ Select Item No. 55 and press the Enter key. Along with the buzzer sound you will see the words "Seq 55" appear on the screen. Thread trimming sequence composition permitting condition is now possible. You can program a thread trimming sequence to a maximum of 64 bytes. (For thread trimming sequence program method, refer to attached material).



Caution

If the specific items of the parameter are changed carelessly, they could break down or damage the machine, so the user must be well-trained before using it.

No.	Function	Initial value	Range	Step
60	Checks the signal input INPUT00 (Button A)	Along with the input, it will say "on" or "off"		
61	Checks the signal input INPUT01 (Button B)			
62	Checks the signal input INPUT02 (1/4 stitch Switch)			
63	Checks the signal input INPUT03 (2/4 stitch Switch)			
64	Checks the signal input INPUT04 (3/4 stitch Switch)			
65	Checks the signal input INPUT05 (4/4 stitch Switch)			
66	Checks the signal input INPUT06 (Left Switch)			
67	Checks the signal input INPUT07 (Right Switch)			
68	Checks the signal input INPUT10 (Manual presser foot-lift Switch)			
69	Checks the signal input INPUT11 (Counter Switch)			
70	Checks the signal input INPUT12 (PU 1/2 stitch Button)			
71	Checks the signal input INPUT13 (Safety Switch)			
72	Checks the signal input INPUT14 (Edge Sensor)			
73	Checks the signal input INPUT15 (Thread trimming not allowed)			
74	Checks the signal input INPUT20 (First step for pedal going forward)			
75	Checks the signal input INPUT21 (First step for pedal going backwards)			
76	Checks the signal input INPUT22 (Second step for pedal going backwards)			
77	Checks the solenoid movement voltage		0~64	
78	Checks external volume value		0~64	
79	Checks the pedal analog output		0~64	
80	Checks the synchronizer signal			Increases by each rotation of the sewing machine
81	Checks the signal from encoder A/B			1) increases when sewing machine rotates clockwise 2) decreases when sewing machine rotates in counterclockwise
82	Checks the signal from encoder R/S/T			1) When sewing machine is rotating clockwise 101→100→110→010→011→001→101 2) When sewing machine is rotating counterclockwise 101→001→011→010→110→100→101
83~	NOT USED			
89	NOT USED			

- ※ Items No. 60~76: functions that check individual normal movement.
- ※ Items No. 77~79: functions that check each analog input normal movement.
- ※ Item No. 80: function that checks whether the synchronizer signal is working properly.
- ※ Item No. 81: function that checks whether the encoder A/B is working properly.
- ※ Item No. 82: function that checks whether the encoder R/S/T is working properly.



If the specific items of the parameter are changed carelessly, they could break down or damage the machine, so the user must be well-trained before using it.

No.	Function	Initial value	Range	Step
90	Sewing machine pulley size	?	0~9999	1pulse
91	Distance between up-stop ~ low-stop (the standard is the pulley's normal direction rotation)	?	0~9999	1pulse
92	Programming the upper stop location (the standard is the pulley's normal direction rotation) - Not valid for model S-III	?	0~359	1degree
93	Programming the low-stop location (the standard is the pulley's normal direction rotation) - Not valid for model S-III	?	0~359	1degree
94	Index pulse occurring position (the standard is the pulley's normal direction rotation) - Turn the pulley manually and stop it in the position you want.	?	0~359	1degree
95	CAM type thread release solenoid operation position - Turn the pulley manually and stop it in the position you want.	?	0~359	1degree
96	CAM type thread release solenoid release position - Turn the pulley manually and stop it in the position you want.	?	0~359	1degree
97	CAM type thread trimming solenoid operation position - Turn the pulley manually and stop it in the position you want.	?	0~359	1degree
98	CAM type thread trimming solenoid release position - Turn the pulley manually and stop it in the position the user wants	?	0~359	1degree
99	Manual and automatic set up of solenoid operation / release position in CAM type thread trimming	1	0/1	0>manual set up 1=automatic set up




If the specific items of the parameter are changed carelessly, they could break down or damage the machine, so the user must be well-trained before using it.

(3) Group C Parameter: Pedal acceleration/deceleration curve, slow starting speed and input/output port change related parameter

※ These are functions not used by general users and must be regulated by an after-sales service engineer.

No.	Function	Initial value	Range	Step
1	1 step section where pedal moves forward	10	0~64	1
2	2 step section where pedal moves forward	15	0~64	1
3	3 step section where pedal moves forward	31	0~64	1
4	4 step section where pedal moves forward	40	0~64	1
5	5 step section where pedal moves forward	52	0~64	1
6	Sewing speed value in the 1 step where pedal moves forward	440spm	40~9960	40spm
7	Sewing speed value in the 2 step where pedal moves forward	920spm	40~9960	40spm
8	Sewing speed value in the 3 step where pedal moves forward	4000spm	40~9960	40spm
9	Sewing speed value in the 4 step where pedal moves forward	5480spm	40~9960	40spm
10	Sewing speed value in the 5 step where pedal moves forward	9960spm	40~9960	40spm
11	Select slow start after thread trimming (After performing thread trimming, start the next sewing work slowly)	0	0/1	1=selection
12	Select slow start after sewing machine stops (After performing sewing machine stops, start the next sewing work slowly)	0	0/1	1=selection
13	When starting slowly, select sewing speed change	0	0/1	1=Use C14~C18 value 0=Use default value
14	The speed of the first stitch when starting slow	400spm	40~9960	40spm
15	The speed of the second stitch when starting slow	400spm	40~9960	40spm
16	The speed of the third stitch when starting slow	640spm	40~9960	40spm
17	The speed of the fourth stitch when starting slow	1000spm	40~9960	40spm
18	The speed of the fifth stitch when starting slow	1680spm	40~9960	40spm
19	Limited maximum motor speed	3000rpm	20~3400	20rpm
20	Synchronizer sensor rotation sensing time	40×0.1sec	5~1275	0.5sec
21	Overload sensing time	30×0.1sec	5~1275	0.5sec
22	Solenoid electric overflow sensing time	100ms	4~1020	4ms
23	Power off sensing time	4ms	4~1020	4ms
24	NOT USED			
25	Bad signal of the Encoder A and B phase detecting number of time	4	1~255	1
26	Back signal of the Encoder R, S and T phase detecting number of time	4	1~255	1
27	Bad signal of the Encoder R, S and T phase detecting number of time	4	1~255	1
28	NOT USED			
29	• Automatic scaling to the speed curve selected by each set mode - Mode 0 : Use a curve based on the set values from C-1 to C-10 - Mode 1 : Scaling to the speed set at A-2 - Mode 2 : Scaling to the speed set using the Speed Up/Dn key	1	1~2	1

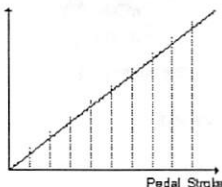

※ Items No. 1~5 : Equal division of pedal stroke in 64 steps, The speed curve of the pedal stroke changes according to how many steps are set up for the divided pedal stroke of each forward pedal step. (Used when adjusting pedal sensor)

※ No. 20 : If a synchronizer signal comes, but the next synchronizer signal does not come within the sensing time, an error message will appear.

※ No. 21 : If a speed instruction was sent to the motor but the motor does not reach the value of the speed instruction, an error message will appear.



If the specific items of the parameter are changed carelessly, they could break down or damage the machine, so the user must be well-trained before using it.

※ This item is operated by the factory only, so general users and A/S technicians should not use it.

No.	Function	Initial value	Step
30	OUTPUT00 (B/T Solenoid) : Low Active	0(Fixed)	※ Output port changing function - write the function number on the output PIN you want to change after referring to the table below
31	OUTPUT01 (P/F Solenoid) : Low Active	1(Fixed)	
32	OUTPUT02 (T/T Solenoid) : Low Active	2	
33	OUTPUT03 (W/P Solenoid) : Low Active	3	
34	OUTPUT04 (T/R Solenoid) : Low Active	4	
35	OUTPUT05 (Left Solenoid) : Low Active	5	
36	OUTPUT06 (Right Solenoid) : Low Active	6	
37	OUTPUT07 (AUX Solenoid) : Low Active	7	
38	OUTPUT10 (Left LED) : High Active	8	
39	OUTPUT11 (Right LED) : High Active	9	
40	OUTPUT12 (Needle upper stop notifying signal) : High Active	10	
41	OUTPUT13 (Needle lower stop notifying signal) : High Active	11	
42	OUTPUT14 (Signal notifying motor is running) : High Active	12	
43	OUTPUT15 (Signal notifying target has been reached) : High Active	13	

★ A : Output PIN function

Function No.	H/W type actual output name	Function No.	H/W type actual output name
0	B/T Solenoid (with duty)	100	inv. B/T Solenoid (with duty)
1	P/F Solenoid (with duty)	101	inv. P/F Solenoid (with duty)
2	T/T Solenoid (with duty)	102	inv. T/T Solenoid (with duty)
3	W/P Solenoid (with duty)	103	inv. W/P Solenoid (with duty)
4	T/R Solenoid (with duty)	104	inv. T/R Solenoid (with duty)
5	Left Solenoid (with duty)	105	inv. Left Solenoid (with duty)
6	Right Solenoid (with duty)	106	inv. Right Solenoid (with duty)
7	AUX Solenoid (with duty)	107	inv. AUX Solenoid (with duty)
8	Left LED (with duty)	108	inv. Left LED (with duty)
9	Right LED (with duty)	109	inv. Right LED (with duty)
10	"Needle Up-stop" notifying signal (with duty)	110	inv. Needle Up-Stopped (with duty)
11	"Needle Down-stop" notifying signal (with duty)	111	inv. Needle Down-Stopped (with duty)
12	"Sewing machine running" notifying signal (with duty)	112	inv. Motor Running (with duty)
13	"Target speed" notifying signal (with duty)	113	inv. Target Speed (with duty)
14	"Trimming" notifying signal (without duty)	114	inv. Trimming (without duty)
15	"End Back Tack" notifying signal (without duty)	115	inv. End Back Tack (without duty)
16	"Emergency stop" notifying signal (without duty) - A signal appears when the motor stops for any error.	116	inv. Emergency Stopped (without duty) - A signal appears when the motor stops for any error
17	Roller Lift Solenoid (without duty)	117	inv. Roller Lift Solenoid (without duty)
18	Hemming Device Output (without duty)	118	inv. Hemming Device Output (without duty)
19	"First step forward pedal" notifying signal (without duty)	119	inv. Pedal Start (without duty)
200	Low signal (without duty)	201	High signal (without duty)

※ If an output signal has been sent twice in the OUTPUT00~OUTPUT15 output pin, the same signal will appear in two different output pins.

Ex) if OUTPUT00 = 0 & OUTPUT03 = 0, then B/T signal is output from both OUTPUT00 & OUTPUT03 pin

※ When setting up other functions apart from the function numbers listed above, the pertinent output pin functions are disregarded.

※ Roller Lift Solenoid = Presser Foot-Lift solenoid + Back Tack solenoid + Roller Lift Switch

43~	NOT USED		
49	NOT USED		



Caution

If the specific items of the parameter are changed carelessly, they could break down or damage the machine, so the user must be well-trained before using it.

No.	Function	Initial value	Step
50	INPUT00 (Button A)	0	※ Output port changing function - Write the function number on the output PIN you want to change after referring to the table below
51	INPUT01 (Button B)	1	
52	INPUT02 (1/4 stitch Switch)	2	
53	INPUT03 (2/4 stitch Switch)	3	
54	INPUT04 (3/4 stitch Switch)	4	
55	INPUT05 (4/4 stitch Switch)	5	
56	INPUT06 (Left Sol. Switch)	6	
57	INPUT07 (Right Sol. Switch)	7	
58	INPUT10 (Presser Foot-Lift Switch)	8	
59	INPUT11 (Counter Switch)	9	
60	INPUT12 (P/U 1/2 stitch Switch Signal)	10	
61	INPUT13 (Safety Switch Signal)	11	
62	INPUT14 (Edge Sensor Signal)	12	
63	INPUT15 (Thread trimmer not allowed Signal)	13	
64	INPUT20 (Pedal Start Signal)	16	
65	INPUT21 (Pedal Presser Foot-Lift Signal)	17	
66	INPUT22 (Pedal Trim Signal)	18	

★ B : Input PIN function

No.	Actual Hardware Output Name	No.	Actual Hardware Output Name
0	Button A Switch	100	inv Button A Switch
1	Button B Switch	101	inv Button B Switch
2	1/4 stitch Switch	102	inv 1/4 stitch Switch
3	2/4 stitch Switch	103	inv 2/4 stitch Switch
4	3/4 stitch Switch	104	inv 3/4 stitch Switch
5	4/4 stitch Switch	105	inv 4/4 stitch Switch
6	Left Solenoid Switch	106	inv Left Solenoid Switch
7	Right Solenoid Switch	107	inv Right Solenoid Switch
8	Presser Foot-Lift Switch	108	inv Presser Foot-Lift Switch
9	Counter Switch	109	inv Counter Switch
10	Program Unit 1/2 stitch Switch	110	inv Program Unit 1/2 stitch Switch
11	Safety Switch	111	inv Safety Switch
12	Edge Sensor Signal	112	inv Edge Sensor Signal
13	Thread Trimmer Signal	113	inv Trimming Disabled Signal
14	Roller Lift Switch	114	inv Roller Lift Switch
15	N_AUTO Switch	115	inv N_AUTO Switch
16	Pedal Start Signal	116	inv Pedal Start Signal
17	Pedal Presser Foot-Lift Signal	117	inv Pedal Presser Foot-Lift Signal
18	Pedal Thread Trimming Signal	118	inv Pedal Thread Trimming Signal
19	External Signal	119	inv External Signal

※ The hardware of input switches and sensors are done with "a point of contact/Active High" input as the standard.

※ When setting up other functions numbers apart from the ones listed above, the pertinent output pin functions are disregarded.



Caution

※ Caution : When any inputs PIN No. INPUT00 ~ INPUT22 are overlapped, it works as the "OR" circuit.
Ex) if INPUT00 = 0 & INPUT01 = 0, then it is recognized as "button A" = INPUT00 + INPUT01.

70	Output Signal Level Collective Reverse Function	0	0/1	1=Output signal Collective Reverse, selection
71	Input Signal Level Collective Reverse Function	0	0/1	1=Input signal Collective Reverse, selection
72~	NOT USED			
99	NOT USED			



Caution

If the specific items of the parameter are changed carelessly, they could break down or damage the machine, so the user must be well-trained before using it.

(4) Group D Parameter: All types of gain parameter related motor control

※ These are functions not used by general users and must be regulated by an A/S technician.

No.	Function	Initial Value	Range	Step
1	speed P-gain Kvp	30	0~30	1
2	speed D-gain Kvd	0	0~3000	1
3	location P-gain Kpp	200	0~1000	1
4	location D-gain Kpd	1000	0~5000	1
5	acceleration A accelA	65	1~100	1
6	acceleration B accelB	70	1~100	1
7	acceleration C accelC	30	1~100	1
8	acceleration D accelD	10	1~100	1
9	sewing machine inertia value Inertia	40	0~255	1
10	positioning speed Wpos	220rpm	100~510	2rpm
11	stopping speed Wstop	75rpm	0~255	2rpm
12	Stop delaying time StopDelay	80ms	4~1020	4ms
13	Positioning distance DIST1	110degree	24~255	1degree
14	upper speed instruction unit spd_unit	100spm	1~100	1spm
15	Positioning P-gain Kpp2	270	0~9999	1
16	Positioning D-gain Kpd2	2027	0~9999	1
17	Positioning P-gain Kpp3	200	0~9999	1
18	Positioning D-gain Kpd3	1000	0~9999	1
19~	NOT USED			
99	NOT USED			



Caution

If the specific items of the parameter are changed carelessly, they could break down or damage the machine, so the user must be well-trained before using it.

(5) Group E Parameters : Parameters relating to change functions of each needle pair

No.	Function	Initial Value	Range	Step
1	STEP 001 : Enter stitch count for side 1.	0	0~999	1
2	STEP 002 : Select a change at the beginning of the first corner.	0	0/1/2	1
3	STEP 003 : Enter stitch count at the beginning of the first corner.	0	0~999	1
4	STEP 004 : Enter stitch count at the end of the first corner.	0	0~999	1
5	STEP 005 : Select a change at the end of the first corner.	0	0/1/2	1
6	STEP 006 : Enter stitch count for side 2.	0	0~999	1
7	STEP 007 : Select a change at the beginning of the second corner.	0	0/1/2	1
8	STEP 008 : Enter stitch count at the beginning of the second corner.	0	0~999	1
9	STEP 009 : Enter stitch count at the end of the second corner.	0	0~999	1
10	STEP 010 : Select a change at the end of the second corner.	0	0/1/2	1
11	STEP 011 : Enter stitch count for side 3.	0	0~999	1
12	not used			
13	not used			
14	not used			
15	not used			
16	not used			
17	not used			
18	not used			
19	not used			
20	STEP 001 : Enter stitch count for side 1.	0	0~999	1
21	STEP 002 : Select a change at the beginning of the first corner.	0	0/1/2	1
22	STEP 003 : Enter stitch count at the beginning of the first corner.	0	0~999	1
23	STEP 004 : Enter stitch count at the end of the first corner.	0	0~999	1
24	STEP 005 : Select a change at the end of the first corner.	0	0/1/2	1
25	STEP 006 : Enter stitch count for side 2.	0	0~999	1
26	STEP 007 : Select a change at the beginning of the second corner.	0	0/1/2	1
27	STEP 008 : Enter stitch count at the beginning of the second corner.	0	0~999	1
28	STEP 009 : Enter stitch count at the end of the second corner.	0	0~999	1
29	STEP 010 : Select a change at the end of the second corner.	0	0/1/2	1
30	STEP 011 : Enter stitch count for side 3.	0	0~999	1
31	STEP 012 : Select a change at the beginning of the 3 corner.	0	0/1/2	1
32	STEP 013 : Enter stitch count at the beginning of the 3 corner.	0	0~999	1
33	STEP 014 : Enter stitch count at the end of the 3 corner.	0	0~999	1
34	STEP 015 : Select a change at the end of the 3 corner.	0	0/1/2	1
35	STEP 016 : Enter stitch count for side 4.	0	0~999	1
36	not used			
37	not used			
38	not used			
39	not used			



Changing set values without thorough understanding of parameter details may lead to machine breakdown or physical damage. Users are recommended to have a full understanding of functions before use.

No.	Function	Initial Value	Range	Step
40	STEP 001 : Enter stitch count for side 1.	0	0~999	1
41	STEP 002 : Select a change at the beginning of the first corner.	0	0/1/2	1
42	STEP 003 : Enter stitch count at the beginning of the first corner.	0	0~999	1
43	STEP 004 : Enter stitch count at the end of the first corner.	0	0~999	1
44	STEP 005 : Select a change at the end of the first corner.	0	0/1/2	1
45	STEP 006 : Enter stitch count for side 2.	0	0~999	1
46	STEP 007 : Select a change at the beginning of the second corner.	0	0/1/2	1
47	STEP 008 : Enter stitch count at the beginning of the second corner.	0	0~999	1
48	STEP 009 : Enter stitch count at the end of the second corner.	0	0~999	1
49	STEP 010 : Select a change at the end of the second corner.	0	0/1/2	1
50	STEP 011 : Enter stitch count for side 3.	0	0~999	1
51	STEP 012 : Select a change at the beginning of the 3 corner.	0	0/1/2	1
52	STEP 013 : Enter stitch count at the beginning of the 3 corner.	0	0~999	1
53	STEP 014 : Enter stitch count at the end of the 3 corner.	0	0~999	1
54	STEP 015 : Select a change at the end of the 3 corner.	0	0/1/2	1
55	STEP 016 : Enter stitch count for side 4.	0	0~999	1
56	STEP 017 : Select a change at the beginning of the 4 corner.	0	0/1/2	1
57	STEP 018 : Enter stitch count at the beginning of the 4 corner.	0	0~999	1
58	STEP 019 : Enter stitch count at the end of the 4 corner.	0	0~999	1
59	STEP 020 : Select a change at the end of the 4 corner.	0	0/1/2	1
60	STEP 021 : Enter stitch count for side 5.	0	0~999	1
61	STEP 022 : Select a change at the beginning of the 5 corner.	0	0/1/2	1
62	STEP 023 : Enter stitch count at the beginning of the 5 corner.	0	0~999	1
63	STEP 024 : Enter stitch count at the end of the 5 corner.	0	0~999	1
64	STEP 025 : Select a change at the end of the 5 corner.	0	0/1/2	1
65	STEP 026 : Enter stitch count for side 6.	0	0~999	1
66	STEP 027 : Select a change at the beginning of the 6 corner.	0	0/1/2	1
67	STEP 028 : Select a change at the beginning of the 6 corner.	0	0~999	1
68	STEP 029 : Enter stitch count at the end of the 6 corner.	0	0~999	1
69	STEP 030 : Select a change at the end of the 6 corner.	0	0/1/2	1
70	STEP 031 : Enter stitch count for side 7.	0	0~999	1
71	STEP 032 : Select a change at the beginning of the 7 corner.	0	0/1/2	1
72	STEP 033 : Select a change at the beginning of the 8 corner.	0	0~999	1
73	STEP 034 : Enter stitch count at the end of the 8 corner.	0	0~999	1
74	STEP 035 : Select a change at the end of the 8 corner.	0	0/1/2	1
75	STEP 036 : Enter stitch count for side 8.	0	0~999	1
76	STEP 037 : Select a change at the beginning of the 8 corner.	0	0/1/2	1
77	STEP 038 : Select a change at the beginning of the 8 corner.	0	0~999	1
78	STEP 039 : Enter stitch count at the end of the 8 corner.	0	0~999	1
79	STEP 040 : Select a change at the end of the 8 corner.	0	0/1/2	1



Changing set values without thorough understanding of parameter details may lead to machine breakdown or physical damage. Users are recommended to have a full understanding of functions before use.

No.	Function	Initial Value	Range	Step
80	STEP 041 : Enter stitch count for side 9.	0	0~999	1
81	STEP 042 : Select a change at the beginning of the 9 corner.	0	0/1/2	1
82	STEP 043 : Select a change at the beginning of the 9 corner.	0	0~999	1
83	STEP 044 : Enter stitch count at the end of the 9 corner.	0	0~999	1
84	STEP 045 : Select a change at the end of the 9 corner.	0	0/1/2	1
85	STEP 046 : Enter stitch count for side 10.	0	0~999	1
86	STEP 047 : Select a change at the beginning of the 10 corner.	0	0/1/2	1
87	STEP 048 : Select a change at the beginning of the 10 corner.	0	0~999	1
88	STEP 049 : Enter stitch count at the end of the 10 corner.	0	0~999	1
89	STEP 050 : Select a change at the end of the 10 corner.	0	0/1/2	1
90	STEP 051 : Enter stitch count for side 11.	0	0~999	1
91	STEP 052 : Select a change at the beginning of the 11 corner.	0	0/1/2	1
92	STEP 053 : Select a change at the beginning of the 11 corner.	0	0~999	1
93	STEP 054 : Enter stitch count at the end of the 11 corner.	0	0~999	1
94	STEP 055 : Select a change at the end of the 11 corner.	0	0/1/2	1
95	STEP 056 : Enter stitch count for side 12.	0	0~999	1
96	STEP 057 : Select a change at the beginning of the 12 corner.	0	0/1/2	1
97	STEP 058 : Select a change at the beginning of the 12 corner.	0	0~999	1
98	STEP 059 : Enter stitch count at the end of the 12 corner.	0	0~999	1
99	STEP 060 : Select a change at the end of the 12 corner.	0	0/1/2	1
100	STEP 061 : Enter stitch count for side 13.	0	0~999	1
101	STEP 062 : Select a change at the beginning of the 13 corner.	0	0/1/2	1
102	STEP 063 : Select a change at the beginning of the 13 corner.	0	0~999	1
103	STEP 064 : Enter stitch count at the end of the 13 corner.	0	0~999	1
104	STEP 065 : Select a change at the end of the 13 corner.	0	0/1/2	1
105	STEP 066 : Enter stitch count for side 14.	0	0~999	1
106	STEP 067 : Select a change at the beginning of the 14 corner.	0	0/1/2	1
107	STEP 068 : Select a change at the beginning of the 14 corner.	0	0~999	1
108	STEP 069 : Select a change at the end of the 14 corner.	0	0~999	1
109	STEP 070 : Select a change at the end of the 14 corner.	0	0/1/2	1
110	STEP 071 : Enter stitch count for side 15.	0	0~999	1
111	STEP 072 : Select a change at the beginning of the 15 corner.	0	0/1/2	1
112	STEP 073 : Select a change at the beginning of the 15 corner.	0	0~999	1
113	STEP 074 : Select a change at the end of the 15 corner.	0	0~999	1
114	STEP 075 : Select a change at the end of the 15 corner.	0	0/1/2	1
115	STEP 076 : Enter stitch count for side 16.	0	0~999	1
116	STEP 077 : Select a change at the beginning of the 16 corner.	0	0/1/2	1
117	STEP 078 : Select a change at the beginning of the 16 corner.	0	0~999	1
118	STEP 079 : Select a change at the end of the 16 corner.	0	0~999	1
119	STEP 080 : Select a change at the end of the 16 corner.	0	0/1/2	1



1. If set values are changed without a thorough understanding of detailed parameter items, mechanical breakdown or physical damage may result. Users are recommended to have a thorough understanding before use.
2. Note that No.100 to 135 are displayed as 00 to 35 due to space issue.

No.	Function	Initial Value	Range	Step
120	STEP 081 : Enter stitch count for side 17.	0	0~999	1
121	STEP 082 : Select a change at the beginning of the 17 corner.	0	0/1/2	1
122	STEP 083 : Enter stitch count at the beginning of the 17 corner.	0	0~999	1
123	STEP 084 : Enter stitch count at the end of the 17 corner.	0	0~999	1
124	STEP 085 : Select a change at the end of the 17 corner.	0	0/1/2	1
125	STEP 086 : Enter stitch count for side 18.	0	0~999	1
126	STEP 087 : Select a change at the beginning of the 18 corner.	0	0/1/2	1
127	STEP 088 : Select a change at the beginning of the 18 corner.	0	0~999	1
128	STEP 089 : Enter stitch count at the end of the 18 corner.	0	0~999	1
129	STEP 090 : Select a change at the end of the 18 corner.	0	0/1/2	1
130	STEP 091 : Enter stitch count for side 19.	0	0~999	1
131	STEP 092 : Select a change at the beginning of the 19 corner.	0	0/1/2	1
132	STEP 093 : Select a change at the beginning of the 19 corner.	0	0~999	1
133	STEP 094 : Enter stitch count at the end of the 19 corner.	0	0~999	1
134	STEP 095 : Select a change at the end of the 19 corner.	0	0/1/2	1
135	STEP 096 : Enter stitch count for side 20.	0	0~999	1



1. Changing set values without thorough understanding of parameter details may lead to machine breakdown or physical damage. Users are recommended to have a full understanding of functions before use.
2. No.100~135 is overlapped as No.00~35 on the screen display so be careful with that.

3) Method of Use and Explanations for Specific Items of the Parameter

(1) Method of Use and Explanations for Specific Items of the Group A Parameter

(General functions of sewing machine)

A. Minimum/maximum sewing speed limit set up method and thread trimming speed set up method

Item No.	Name of function	Method of use and explanation
A-1	Minimum sewing speed limit set up	This item allows user to set up the minimum sewing speed limit or the minimum sewing speed given when the pedal is pressed. (20~510rpm, Initial value : 200rpm)
A-2	Maximum sewing speed limit set up	This item allows user to set up the maximum sewing speed limit or the maximum sewing speed given when the pedal is pressed. (40~9960rpm, Initial value : 4000rpm)
A-3	Thread trimming speed set up	This item allows the user to set up the thread trimming speed when the thread trimming function is operating after sewing

B. Set up method of 1/2 stitch speed by program unit(P/U) and needle plate lift/drop by button A

Item No.	Name of function	Method of use and explanation
A-4	Set up method of stitch speed by program unit (P/U)	This item allows user to set up the stitch speed by program unit (P/U) and hence sets up the stitch operating speed. However, if set up to a rapid speed, many stitches may be sewn after pressing the button.
A-5	Set up the speed of lift/drop of needle plate with button A	This item allows user to set up the speed of lift/drop of the needle plate with button A. However, if set to a rapid speed, many stitches may be sewn after pressing the button.

C. Start B/T sewing speed and end B/T sewing speed set up method

Item No.	Name of function	Method of use and explanation
A-7	Start B/T speed set up	This item allows user to set up the start B/T speed. If the speed is changed, the stitch correction value also has to be set again.
A-8	End B/T speed set up	This item allows user to set up the end B/T speed. If the speed is changed, the stitch correction value also has to be set again.

D. Selection method of thread trimming location with pedal

Item No.	Name of function	Method of use and explanation
A-19	Start B/T speed set up	You can change the thread trimming operation through pedal position by making the following changes to the set up values. <ul style="list-style-type: none"> • 0 : When the pedal position is backward 2 gear, operate thread trimming(Starting set up value). • 1 : When pedal position is backward 1 gear, operate thread trimming • 2 : When pedal position is neutral, operate thread trimming.

E. Edge Sensor method of use Item No.

Item No.	Name of function	Method of use and explanation
A-40	Selection of edge sensor type	The set up method changes according to the set up parts of edge sensor <ul style="list-style-type: none"> • 0 : When edge is sensed and using high output sensor. • 1 : When edge is sensed and using low output sensor.
A-41	Stitches performed after edge sensor sensing	A function that programs the machine to stop after sewing a programmed amount of stitches when edge is sensed.
A-42	Sewing speed of stitches performed after edge sensor sensing	A function that programs the sewing speed after sewing a programmed amount of stitches when edge is sensed.
A-46	Selection of edge sensing sewing mode (select N-stitch mode)	A function that programs the edge sensor to operate normally, even when other sensor signals are inputted in the edge sensor port.



Caution

If the specific items of the parameter are changed carelessly, they could break down or damage the machine, so the user must be well-trained before using it.

F. Pre-stitch function method of use and explanation

Item No.	Name of function	Method of use and explanation
A-47	Selection of pre-stitch function	The pre-stitch function is a function that programs the machine to sew a certain amount of stitches before commencing the actual sewing work.(0 : disable, 1 : enable)
A-48	Set pre-stitching stitch number	This item sets the number of stitches when using the pre-stitch function (0~255 stitches, Initial value : 3 stitches)
A-49	Set pre-stitching speed	This item sets the sewing speed when using the pre-stitch function. (20~2000rpm, Initial value : 2000rpm)


G. Method to select beginning/ending reverse sewing conditions

Item No.	Name of function	Method of use and explanation
A-50	Selection of start B/T conditions (Initial value : 1)	The start B/T function can be one of the following three operations according to their set up value <ul style="list-style-type: none"> • 0 : If user releases pedal during B/T operation, sewing stops. • 1 : If user releases pedal during B/T operation, sewing stops after finishing work. • 2 : The exact amount of stitches is operated, notwithstanding the number of stitch corrections. However, if this function is used, B/T will no operate naturally.
A-51	Selection of end B/T conditions (Initial value : 0)	This item selects whether or not to use the end B/T's exact number of stitches function operation <ul style="list-style-type: none"> • 0 : exact number of stitches function disabled • 1 : exact number of stitches function enabled (If this function is used, reverse sewing will no operate naturally)
A-52	The speed of the first stitch during B/T exact performance	This item selects the speed of the initial reverse stitch when user has selected the exact number of stitches function in the B/T operation(20~1000rpm, Initial value : 200rpm)

H. Method to select buttons A/B functions

Item No.	Name of function	Method of use and explanation
A-54	Selection of button A function (Initial value : 2)	The function of button A can be one of the following four operations according to their set up value. <ul style="list-style-type: none"> • 0 : If user presses A button while sewing, B/T sewing is operated while user keeps on pressing it. • 1 : If user presses the A button while sewing, B/T sewing is operated. If user stops sewing and presses A button once the needle plate is lifted. If user presses it once more, the needle plate is dropped • 2 : If user presses the A button while sewing, B/T sewing is operated while user keeps on pressing it. If user stops sewing and presses A button once, the needle plate is lifted. If user presses it twice consecutively, the needle plate is dropped. • 3 : If user presses A button while sewing, B/T sewing is operated while user keeps on pressing it. When user stops sewing and presses the A button, 1/2 stitch speed is operated.
A-55	Selection of button B function (Initial value : 0)	The function of button A can be one of the following four operations according to their set up value. <ul style="list-style-type: none"> • 0 : This item has the function of inserting/deleting the B/T sewing when user presses the B button. If the user presses the B button where there is no B/T sewing section, B/T sewing is inserted and when it is pressed where there is a B/T sewing section, B/T sewing is deleted. • 1 : If user presses the B button once, the needle plate is lifted and if user presses it once more, it is dropped • 2 : When user stops sewing and presses the B button, 1/2 stitch speed is operated while user presses it. • 3 : When sewing, B/T sewing is operated while user presses B button.

I. Method of use of motor rotating direction selection function

Item No.	Name of function	Method of use and explanation
A-65	Selecting the motor's rotating direction	This item sets up the set up value according to the motor's rotating direction <ul style="list-style-type: none"> • 0 : clockwise rotation • 1 : counterclockwise rotation(Initial value) 



If the specific items of the parameter are changed carelessly, they could break down or damage the machine, so the user must be well-trained before using it.


From the library of Superior Sewing Machine & Supply LLC - www.supsew.com

(2) Group B Parameter Specific Method of Use and Explanation (All types of output, Full-on Time/PWM Duty, checking the input/output movements, sewing machine models and thread trimming sequence programming)

※ These are functions not used by general users and should be regulated by an A/S technician.

A. All types of output, Full-on Time/PWM Duty time set up method (all types of solenoids, LED and signals)

Item No. B-1 ~ B-28

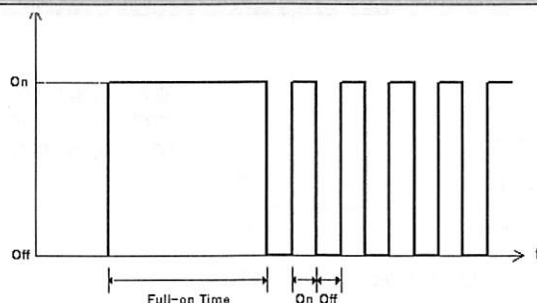

<Type of wave that has a certain amount of Full-on Time and 50% duty>

This figure explains the Full-on Time and PWM Duty. This figure shows the wave type graph where the machine maintains the power 'ON' for a certain amount of time and when that 'Full-on Time' passes, changes itself to a PWM signal with a certain duty. In other words, the certain amount of time that each device starts operating until they become completely, the output wave type maintains itself "On", and when it maintains itself operating the output becomes the duty PWM wave type to maintain operation.

B. B/T stitch correction set up method

Item No.	Name of function	Method of use and explanation	
B-30	Start B/T A side stitch correction value	<p>This item has the function of correcting the B/T sewing stitch that has not been shaped well, and you can change the value of sides A, B, C, D.</p> <ul style="list-style-type: none">• The programmed value in the beginning A : 3, B : 3, C : 4, D : 4• Program range : 0 ~ 9	
B-31	Start B/T B side stitch correction value		
B-32	End B/T C side stitch correction value		
B-33	End B/T D side stitch correction value		
<p>• If the stitch correction values is changed using the program unit, the item value will automatically change. Reversely, if you change the programmed value of the items above, the stitch correction values will also automatically change.</p> <p>• Detailed correction principles and methods of use are the same as the program unit's stitch correction method.</p> <p>Please refer to the program unit method of use of start/end B/T stitch correction method.</p>			

C. Counter function method of use

Item No.	Name of function	Method of use and explanation
B-35	Counter condition set up	<p>For detailed method of use and explanation of counter function, refer to the program unit's counter set up button method of use.</p>
B-36	When using automatic counter after trimming, select increasing/decreasing counter	
B-37	After counter operation is over, set up the next operation	
B-38	After counter operation is over, select the automatic erasing operation	



Caution

If the specific items of the parameter are changed carelessly, they could break down or damage the machine, so the user must be well-trained before using it.

(3) Group C Parameter Specifics Method of Use and Explanation

(Pedal acceleration/deceleration curve, slow starting speed, input/output port change related parameter)

※ These are functions not used by general users and should be regulated by an A/S technician.

A. Pedal stroke step by step section and speed set up method

Item No.	Name of function	Beginning value	Method of use and explanation
C-1	pedal forward first step section	10	After dividing the pedal stroke to 64 steps, the pedal stroke's acceleration/deceleration curve changes according to which stroke step is programmed from pedal forward steps 1 through 5.
C-2	pedal forward second step section	15	
C-3	pedal forward third step section	31	
C-4	pedal forward fourth step section	40	
C-5	pedal forward fifth step section	52	
C-6	sewing speed during pedal forward first step	440rpm	The pedal stroke's acceleration/deceleration curve changes according to how the pedal forward step by step sewing speed set up is done.
C-7	sewing speed during pedal forward second step	920rpm	
C-8	sewing speed during pedal forward third step	4000rpm	
C-9	sewing speed during pedal forward fourth step	5480rpm	
C-10	sewing speed during pedal forward fifth step	9960rpm	

B. Slow-start sewing method of use : this function allows to start the sewing slowly and the user can set up the following specific items.

Item No.	Name of function	Method of use and explanation
C-11	Slow Start after thread trimming	These items help you choose at which point you can apply slow start. If you want to apply it after thread trimming set item No. C-11 value to 1. If you want to apply it after when you start sewing after stopping set item No. C-12 to 1. If both these items are set to 0, the slow starting function will not operate.
C-12	Slow Start after sewing machine stops	
C-13	When Slow Starting, change Slow- starting speed	When using the slow start function, this item gives you the option of maintaining the same starting speed or setting up a new speed. If you want to set up a new speed, use items No. C-14~C-18 and set up a new speed.
C-14	When Slow Starting, the operation speed of beginning stitch	When the item No. C-13 set up value is "1", the slow start beginning values (the specific items that change the set up value) are • 1 : 400rpm • 2 : 400rpm • 3 : 640rpm • 4 : 1000rpm • 5 : 1680rpm
C-15	When Slow Starting, the operation speed of second stitch	
C-16	When Slow Starting, the operation speed of third stitch	
C-17	When Slow Starting, the operation speed of fourth stitch	
C-18	When Slow Starting, the operation speed of fifth stitch	

C. Motor maximum speed limit set up method

Item No.	Name of function	Method of use and explanation
C-19	Set up motor maximum speed limit	This function allows you to limit the maximum motor speed, and the starting value is set to 3000 rpm.



If the specific items of the parameter are changed carelessly, they could break down or damage the machine, so the user must be well-trained before using it.

4) Thread Trimming Sequence Function Method of Use (Items no. 54, 55, 56 of Group B)

 



 

 
※ Thread trimming sequence function characteristics

- The thread trimming sequence is a user programming function of PLC control type used for thread trimming or when a special simple repetitive function is required.
- The user composes the thread trimming sequence he wants, and can program the machine or motor's operation during thread trimming.
- When necessary, the user can change it to exclusive mode and can program all types of special operations.
- The program size is 64 bytes, so compose the program within this size limit.
- The program code is composed of the command field and the data field.
- The thread trimming related parameters are items No. 54, 55, 56 from Group B.


Item No.	Function
B-54	This item that provides the function of thread trimming sequence selection which allows the user to select and use the sequence from item No. B-55
B-55	This item provides the function of allowing the user to compose the thread trimming sequence himself.
B-56	This item provides the function of allowing the user to select other company sewing machine models, and makes automatic changes in the thread trimming sequence that fit the selected sewing machine.

(1) Thread Trimming Sequence Function Related Parameter Method of Use and Explanations



A. Thread Trimming Sequence Data Input Function (Item No. B-55)

① This function allows the user to compose the thread trimming sequence himself. In order to do this, the user must first enter parameter Group B.	
② If the screen changes, go to the specific items and choose item No. 55 from Group B. Then the user will see the letter "Seq" blink. (Use buttons E , F)	
③ If you press the  button where it says "Seq 55", you can now choose the thread trimming sequence. In the figure, you can see the command "--80" which indicates the sequence start. The command "01" is a number within the sequence (01~64) of the "--80" command.	
④ If you use buttons E , F to increase the numbers, you can see the sequence that was set up in the start. Their contents are explained below <ul style="list-style-type: none"> • 01 : "--08" ⇒ Sequence starting code • 02 : "--F3" ⇒ General sequence • 03 : "--00" ⇒ Sequence ending code 	  
⑤ Now the user can change the sequence function according to his objectives but the remember that the program size cannot exceed 64 bytes. Also you can set up several short sequences and then use the sequences you want by using item No. B-54. When you setting this up, each sequence must always have a starting and ending code. ※ Refer to sequence code list	




- If you don't press the  button after changing the parameter item set up value, the set up value will not be saved, so use caution when using it.
- If the specific items of the parameter are changed carelessly, they could cause breakdown or damage the machine. Therefore, the user must be well-trained before using it.






B. Thread Trimming Sequence Selection Function Method of Use (Item No. B-54)

<p>① This function is used when the user wants to use other sequences apart from the sequences that are basically provided. If you want to use this function, first enter Item No.54 in parameter Group B. Then you will see the screen shown in the figure.</p>	
<p>② The starting value is set to "0". If you change this number to a value in the sequence of Item No. B-55, you can now use the extra programmed sequence. (Use the C, D buttons) (Ex : if you want to use the fourth sequence and change the sequence set up)</p>	
<p>③ The user can use Item No. B-55 to save and use several frequently used sequences whenever he needs them.</p>	

 Caution

- If you don't press the  button after changing the parameter item set up value, the set up value will not be saved, so use caution when using it.
- If the specific items of the parameter are changed carelessly, they could cause breakdown or damage the machine. Therefore, the user must be well-trained before using it.


C. Thread Trimming Sequence Automatic Change According to Sewing Machine Model Selection

<p>① This function allows automatic change of thread trimming sequence when user attaches the controller to a sewing machine other than the one being currently used. If you want to use this function, first enter Item No.56 in parameter Group B. You will see then the screen shown in the figure.</p>	
<p>② If you press the  button after changing the set up value to fit the new sewing machine model number, the matching thread trimming sequence is duplicated. ※ Refer to the sewing machine list (Ex : when using the SunStar KM-790BL-7 sewing machine)</p>	
<p>③ The duplicated thread trimming sequence can be check in the Item No. B-55 and if you want to change the contents you can do so using Item No. B-55</p>	
<div data-bbox="276 1344 357 1444"><p>Caution</p></div> <ul style="list-style-type: none">• If you don't press the  button after changing the parameter item set up value, the set up value will not be saved, so use caution when using it.• If the specific items of the parameter are changed carelessly, they could cause breakdown or damage the machine. Therefore, the user must be well-trained before using it.	

 
 
 

 
 
 
 
(2) Thread Trimming Sequence Function Related Parameter Method of Use and Explanations (Economic)

A. Changing the Trimming Sequence with the Simplified Operation Panel

When changing the thread trimming sequence by using the simplified operation panel, the method is a bit different from when changing other parameters. Check the following manual and make the changes in a correct manner.

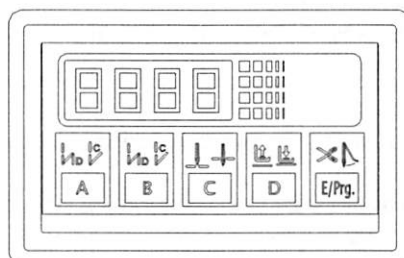

<S-5 Simplified Operation Panel>

	How to Operate	Display	Remarks
1	Press E/Prg button and A button simultaneously. Then the screen for changing parameters appears.		• Program Enable
2	Press B button, and it moves to the parameter B group.		• Parameter B-01
3	Use A button and B button to move to the No. 55 trimming sequence of the B group.		• Parameter B-55
4	Press C button when "b-55" is displayed. Then "SEQ" blinks on the screen.		• Sequence
5	Press C button once again, and the screen displays the starting location number of trimming sequence.		• -80": Trimming sequence start command
6	Press A button and B button to change the location number of the current trimming sequence. ex) When A is pressed, "-80" is changed to "-81".		• The starting location number of trimming sequence has changed from "-80" to "-81".
7	When C button or D button is pressed, the trimming sequence location number increases or decreases. The screen displays the values stored in the concerned sequence location. ex) When C is pressed, the screen displays "-83", the value which is in the second trimming sequence location.		• In case where Model = 88, the "-83" command is stored in the second trimming location.
8	When the trimming sequence change is complete following the above procedure, press E/Prg button to store the sequence.		• Trimming sequence is stored.
9	<p>[Notice]</p> <ul style="list-style-type: none"> • Please make sure that in case of a simplified operation panel, the location value of the current trimming sequence is not shown. • Please make sure that in case of a simplified operation panel, the functions of the buttons A, B, C, D, E are a bit different from those when they are used in other context. • In order to exit the trimming sequence change mode, press "E". Then all the changed values will be stored. • If you want to make several changes, press "E" one time after all changes are made to save the changed values. 		

(3) Basic Structure of Thread Trimming Sequence Program Code

A. The thread trimming sequence program code is basically composed of the command field and data field which comes according to the command field. The size of the program cannot exceed 64 bytes.

Explanation of function		Command field	Data field		
			1st	2nd	3rd
PosStopUp	Needle plate up-stop after sewing given stitch numbers at given speed.	CE H	0~5000[rpm](20rpm)	0~255[stitch]	

B. The table above is an example of the program code structure. If you want to use the function "Needle plate up-stop after sewing given stitches at given speed" you must first select the command code "CE H" and set up the data value according to the command code. In other words, the given sewing speed is the first data and the given stitch numbers is the second data and both of these form the data field. Depending on the command code, there can exist a data field or exist three data in the data field.

(4) Thread Trimming Sequence Program Code List

Category	Explanation	On	Cmd Field	Data Field		
				1st	2nd	3rd
Output Port Control (Total 40)	B/T Solenoid	On	81H			
	P/F Solenoid	On	82H			
	T/T Solenoid	On	83H			
	W/P Solenoid	On	84H			
	T/R Solenoid	On	85H			
	Left Solenoid	On	86H			
	Right Solenoid	On	87H			
	AUX Solenoid	On	88H			
	Left LED	On	89H			
	Right LED	On	8AH			
	Needle Up Signal	On	8BH			
	Needle Down Signal	On	8CH			
	Motor Runing Signal	On	8DH			
	Reaching Target Speed Signal	On	8EH			
	Motor Trimming Signal	On	8FH			
	Motor End Tacking Signal	On	90H			
	Emergency Stop Signal	On	91H			
	Roller Lift Solenoid	On	92H			
	Hemming Device Output	On	93H			
	Pedal Forward Step1 Signal	On	94H			
	B/T Solenoid	Off	98H			
	P/F Solenoid	Off	99H			
	T/T Solenoid	Off	9AH			
	W/P Solenoid	Off	9BH			
	T/R Solenoid	Off	9CH			
	Left Solenoid	Off	9DH			
	Right Solenoid	Off	9EH			
	AUX Solenoid	Off	9FH			
	Left LED	Off	A0H			
	Right LED	Off	A1H			
	Needle Up Signal	Off	A2H			
	Needle Down Signal	Off	A3H			
	Motor Runing Signal	Off	A4H			
	Reaching Target Speed Signal	Off	A5H			
	Motor Trimming Signal	Off	A6H			
	Motor End Tacking Signal	Off	A7H			
	Emergency Stop Signal	Off	A8H			
	Roller Lift Solenoid	Off	A9H			
	Hemming Device Outout	Off	AAH			
	Pedal Forward Step1 Signal	Off	ABH			
Time Delay	Delay by 1[ms] unit		B0H	0~255[ms] (1ms)		
	Delay by 2[ms] unit		B1H	0~510[ms] (2ms)		
	Delay by 4[ms] unit		B2H	0~1020[ms] (4ms)		
	Delay by 0.5[s] unit		B3H	0~127.5[s] (0.5s)		

Category	Explanation		Cmd Field	Data Field		
				1st	2nd	3rd
Motor Control	On Hold	Motor—Holding Start	C0H			
	Off Hold	Motor—Holding Stop	C1H			
	Set Dir CW	Set CW direction)	C2H			
	Set Dir CCW	Set CCW direction)	C3H			
	Set Speed	Make Motor Run with given Speed	C4H	0~5000[spm] (20spm)		
	Set SpdByPed	Make Motor Run with Speed given by pedal	C5H			
	Up Stop	Make Stop in Needle Up (stop)	C6H			
	DN Stop	Make Stop in Needle Down (stop)	C7H			
	Up Stop InSpd	Make Up Stop with given Speed (stop)	C8H	0~500[spm] (2spm)		
	Dn Stop InSpd	Make Dn Stop with given Speed (stop)	C9H	0~500[spm] (2spm)		
	Dacc Up Edge	Decel. in Speed at Up Edge (not stop)	CAH	0~500[spm] (2spm)		
	Dacc Dn Edge	Decel. in Speed at Dn Edge (not stop)	CBH	0~500[spm] (2spm)		
	Move Up Edge	Move to Up Edge with given Speed (not stop)	CCH	0~500[spm] (2spm)		
	Move DnEdge	Move to Dn Edge with given Speed (not stop)	CDH	0~500[spm] (2spm)		
	Pos Stop Up	Up Stop after sewing given stitch with given Speed	CEH	0~5000[spm] (20spm)	0~255[stitch]	
	Pos Stop Dn	Dn Stop after sewing given stitch with given Speed	CFH	0~5000[spm] (20spm)	0~255[stitch]	
	Pos Dacc Up	Dacc Dn Edge after sewing given stitch with given Speed	D0H	0~5000[spm] (20spm)	0~500[spm] (2spm)	0~255[stitch]
	Pos Dacc Dn	Dacc Up Edge after sewing given stitch with given Speed	D1H	0~5000[spm] (20spm)	0~500[spm] (2spm)	0~255[stitch]
	L Move Stop	Move given distance with given Speed	D2H	0~ 500[spm] (2spm)	0~357[deg]	
	SpdInPos	Make motor given Speed in given Position	D3H	0~5000[spm] (20spm)	0~357[deg]	
	Random Stop	Stop randomly	D4H			
Position /Speed Check	Wait Pos1	When position already passed, return	E0H	0~357[deg]		
	Wait Pos2	When position already passed, wait next position and then return	E1H	0~357[deg]		
	Wait Up Edge	Wait until Up Edge detected.	E2H			
	Wait Dn Edge	Wait until Dn Edge detected	E3H			
	Chk Pos	Check the position passed & branch to the address	E4H	0~357[deg]	0~64 (address)	
	Chk Up Edge	Check Up Edge detected & branch to the address	E5H	0~64 (address)		
	Chk Dn Edge	Check Dn Edge detected & branch to the address	E6H	0~64 (address)		
	Clr Up Edge	Clear Up Edge FG (mark UpEdge not detected)	E7H			
	Clr Dn Edge	Clear Dn Edge FG (mark DnEdge not detected)	E8H			
	Wait Speed	Wait until motor speed is target speed	E9H	0~5000[spm] (20spm)		
	Chk Speed	Check if motor speed is target speed & branch to the address	EAH	0~357[deg]	0~64 (address)	

Category	Explanation		Cmd Field	Data Field		
				1st	2nd	3rd
Input Port Check WaitPort	Wait until the port signal detected	Button A	F0H	0(Input Port No		
		Button B		1		
		Switch 1/4 stitch		2		
		Switch 2/4 stitch		3		
		Switch 3/4 stitch		4		
		Switch 4/4 stitch		5		
		Left Solenoid Switch		6		
		Right Solenoid Switch		7		
		Pressor Foot Lift Switch		8		
		Counter Switch		9		
		Button 1/2 switch on P/U Box		10		
		Safety Switch		11		
		Edge Sensor		12		
		Trimming Disable Switch		13		
		Roller lift Switch		14		
		N-AUTO Switch		15		
		Pedal Start Input		16		
		Pedal Pressor-Foot Input		17		
		Pedal Thread Trimming Input		18		
		External Input		19		
	BrChkPort (Check the port and branch the given address)	Button A	F1H	0 (Port No	0~64 (address	
		Button B		1	0~64	
		Switch 1/4 stitch		2	0~64	
		Switch 2/4 stitch		3	0~64	
		Switch 3/4 stitch		4	0~64	
		Switch 4/4 stitch		5	0~64	
		Left Solenoid Switch		6	0~64	
		Right Solenoid Switch		7	0~64	
		t Switch		8	0~64	
		Counter Switch		9	0~64	
		Button 1/2 switch on P/U Box		10	0~64	
		Safety Switch		11	0~64	
		Edge Sensor		12	0~64	
		Trimming Disable Switch		13	0~64	
		Roller lift Switch		14	0~64	
		N-AUTO Switch		15	0~64	
		Pedal Start Input		16	0~64	
		Pedal Pressor-Foot Input		17	0~64	
		Pedal Thread Trimming Input		18	0~64	
		External Input		19	0~64	
Sequence Control	Branch	Branch to given address	F2H	0~64 (Address		
	GenSeq	General Trimming Sequence	F3H			
	StartSeq	Start of the sequence	80H			
	EndSeq	End of the sequence	00H			




[Caution]

- Every the conditional Branch is made to the appropriate number when it is on "No(False)"
- When making the sequence program, please check and use its function because the wrong sequence program can cause the mechanical trouble and the physical damage.

(5) Examples of the Function of Thread Trimming Sequence

● Yamato Three-needle Trimming

① Timing of Thread Trimming Sequence

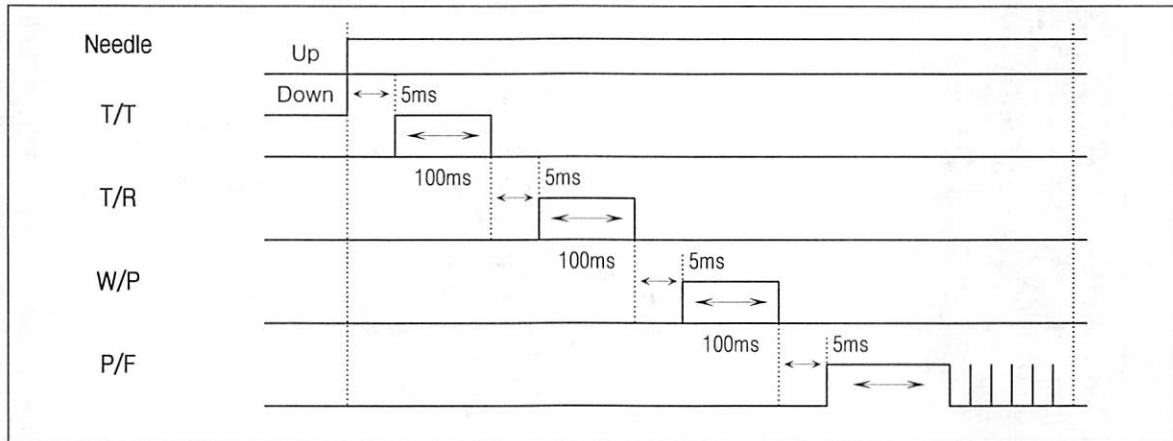

② Flow Chart of Tread Trimming Sequence & Program Code

Flow chart	Code number	Comm. field	Data field			Explanation
			1st	2nd	3rd	
START of Sequence	01	--80				Start of Sequence
Needle Up Stop with 200spm	02	--C8				Stop after moving to needle of upstop at 200spm
wait for 5ms	03		200			
T/T sol. on	04	--B0				Wait for 5[ms]
wait for 100ms	05		5			
T/T sol. off	06	--83				Thread Trimming solenoid , On
wait for 5ms	07	--B0				Wait for 100[ms]
T/R sol. on	08		100			
wait for 100ms	09	--9A				T/T sol.(off)
T/R sol. off	10	--B0				Wait for 5[ms]
wait for 5ms	11		5			
W/P sol. on	12	--85				T/R sol.(on)
wait for 100ms	13	--B0				Wait for 100[ms]
T/R sol. off	14		100			
wait for 5ms	15	--9C				T/R sol.(off)
W/P sol. on	16	--B0				Wait for 5[ms]
wait for 100ms	17		5			
W/P sol. off	18	--84				W/P sol.on(on)
wait for 5ms	19	--B0				Wait for 100[ms]
P/F sol. on	20		100			
wait for 100ms	21	--9B				Wiper solenoid off
P/F sol. off	22	--B0				Wait for 5[ms]
wait for 5ms	23		5			
End of Sequence	24	--00				End of Sequence

※ Operates Presser Foot Solenoid by "Lefting Up function of Automatic Presser Foot after Trimming" being set to A18=1

※ As every command field is displayed close to "--", it is distinguishable from Data Field

※ All Data Fields are displayed easily enough to distinguish them from others, differently from S-II and there's no necessity of transforming the number and conversing the unit

(6) List of Codes by Machine Model – (able to choose from No. 56 of GROUP “B”)

NO	ORDER NO.	TYPE of Sewing	T/T Solenoid type	Sewing Machine	Group B-56
1	S5AC55-□A□-001	Single needle	CAM	KM-250A-7, KM-250AL-7, KM-235A-7	0/75
2	S5AC55-□A□-002			KM-250B-7	76
3	S5AC55-□A□-003			KM-750-7, KM750BL-7, KM-757BL-7, KM-757-7, KM-650-7	78
4	S5AC55-□A□-004			KM-560-7	78
5	S5AC55-□A□-005A			KM-957-7(Slant table)	79
6	S5AC55-□A□-005B			KM-957-7(Flat table)	79
7	S5AC55-□A□-006	Double		KM-790-7, KM790BL-7, KM797-7, KM797BL-7	80
8	S5AC55-□X□-007	Chain	ELEC. Solenoid	UNION 34700, SIRUBA UTP/UTQ	82
9	S5AC55-□X□-008	Stitch	AIR. Solenoid	UNION 34700, YAMATO VC2700, SIRUBA UTP/UTQ	83
10	S5AC55-□X□-010			Maier Unitas D1376	85
11	S5AC55-□X□-011	Heavy	CAM	PFAFF 563	86
12	S5AC55-□X□-013	Chain	ELEC. Solenoid	YAMATO VC2700	88
13	S5AC55-□X□-014	Single	CAM	BROTHER DB2-B737, JUKI DDL550N	89
14	S5AC55-□X□-016		CAM	DURKOPP 273-140042/E9	91
15	S5AC55-□A□-093	Single	CAM	KM640UBL-7	93
16	S5AC55-□X□-019		CAM	TOYOTA LS2-AD341-102	94
17	S5AC55-□X□-021		ELEC. Solenoid	STROBEL KL170-2-FD	96
18	S5AC55-□A□-022	Single	CAM	KM-250 AU-7	97
19	S5AC55-□A□-052			KM-250BH-7, KM-250BL-7	114
20	S5AC55-□X□-024	Chain	AIR. Solenoid	KANSAI RX, DX, WX Series	99
21	S5AC55-□X□-025			DURKOPP 271-140042	100
22	S5AC55-□X□-026	Chain stitch	ELEC. Solenoid	PEGASUS W500/UT100,400, W600/UT100,400	101
23	S5AC55-□X□-030		AIR. Solenoid	PEGASUS W500/UT200, W600/UT200	102
24	S5AC55-□X□-031		AIR. Solenoid	KANSAI RX, DX, WX Series	103
25	S5AC55-□X□-032		AIR. Solenoid	KINGTEX CT6500-0-56M	104
26	S5AC55-□A□-033	Heavy	CAM	KM640BL-7	105
27	S5AC55-□A□-034	Heavy	CAM	KM967BL-7(Roller HIGH-Post-back-tack)	106
28	S5AC55-□A□-036	Heavy	CAM	KM-1060BL-7, KM-1062BL-7	107
29	S5AC55-□X□-035	Single	CAM	TYPE of TANAKA	111
30	S5AC55-□X□-037	PUNCHING	CAM	Pastel Punching for TANAKA	112
31	S5AC55-□X□-038	Heavy	CAM	SEIKO	113
32	S5AC55-□X□-040	Chain		PEGASUS W664-01CB M/UT333	118
33	S5AC55-□X□-041	Chain		PEGASUS W664-08BB UT312	115
34	S5AC55-□X□-042	Chain		PEGASUS EX5214-83BA	116
35	S5AC55-□X□-045	Single	CAM	GEMSY Specification	75
36	S5AC55-□X□-046	Chain stitch	AIR. Solenoid	DINO Thread Trimming Machine for Kingtex	104
37	S5AC55-□A□-048	Heavy	AIR. Solenoid	KM591BL-7	105
38	S5AC55-□A□-050A	SINGLE	CAM	KM-967-7, KM-967B-7 (Slant table)	78
39	S5AC55-□A□-050B			KM-967-7, KM-967B-7 (Flat table)	78
40	S5AC55-□A□-051			KM-506-7, KM-530-7	122
41	S5AC55-□A□-053			KM-350A-7	120
42	S5AC55-□A□-054			KM-350B-7, KM-350BL-7S	121
43	S5AC55-□A□-055			KM-857-7, KM-890-7	78
44	S5AC55-□A□-056			KM-235B	92
45	S5AC55-□DE-49A	Chain stitch	AIR. Solenoid	SC-7300,7350(Available to trim fancy thread) (Table : A-TYPE)	123
46	S5AC55-□DE-49B	Chain stitch	AIR. Solenoid	SC-7300,7350(Available to trim fancy thread) (Table : B-TYPE)	123
47	S5AC55-□DE-58A	Chain stitch	AIR. Solenoid	SF-7500 (Table : A-TYPE)	124
48	S5AC55-□DE-58B	Chain stitch	AIR. Solenoid	SC-7500 (Table : B-TYPE)	124
49	S5AC55-□A□-059	SINGLE	CAM	KM-867-7	78
50	S5AC55-□A□-060	-	-	Waist Band Device for Homan Sewing Machin	0
51	S5AC55-□DE-061A	Chain stitch	AIR. Solenoid	SC-7310(Attachment of left knife) (Table : A-TYPE)	125
52	S5AC55-□DE-061B	Chain stitch	AIR. Solenoid	SC-7310(Attachment of left knife) (Table : B-TYPE)	125
53	S5AC55-□DE-062	Chain stitch	ELEC. Solenoid	SC7300,7500,7510 (Dino사 Electronic solenoid)	126
54	S5AC55-□A□-064	Single	-	DPK-5S (Non-trimming for servo)	127
55	S5AC55-□A□-065	Heavy	CAM	KM-572BL-7S	68




No	GROUP								PROGRAM UNIT SETTING						SYNCH. - TYPE	V Belt Size	PULLEY SIZE φ
	A						B	C	S.B/T	E.B/T	NEEDLE E	P/F	T/T	W/P			
	A2	A3	A7	A8	A24	A65	B56	C52									
1	4000	300	1700	1700	0	1	0/75	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	42"	111
2	4000	300	1700	1700	0	1	76	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	42"	111
3	2400	180	800	800	0	1	78	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	42"	80
4	2400	180	800	800	0	1	78	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	42"	80
5	2400	180	800	800	0	1	79	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	42"	80
6	2400	180	800	800	0	1	79	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	40"	80
7	2400	180	800	800	0	1	80	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	42"	80
8	6000	200	1600	1600	1	0	82	111	OFF	OFF	UP	DOWN	ON	ON	OTHER	36"	111
9	6000	200	1600	1600	1	0	83	111	OFF	OFF	UP	DOWN	ON	ON	OTHER	36"	111
10	1720	230	1600	1600	0	0	85	2	OFF	OFF	UP	DOWN	ON	ON	OTHER	NON	111
11	4000	230	1600	1600	0	1	86	2	ON	ON	DOWN	DOWN	ON	ON	OTHER	NON	111
12	4000	200	1600	1600	1	0	88	111	OFF	OFF	UP	DOWN	ON	ON	OTHER	36"	111
13	4000	230	1600	1600	0	1	89	2	ON	ON	DOWN	DOWN	ON	ON	OTHER	42"	111
14	3000	230	1600	1600	0	1	91	2	ON	ON	DOWN	DOWN	ON	ON	OTHER	42"	111
15	2200	200	800	800	0	1	93	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	43"	60
16	4000	230	1600	1600	0	1	94	2	ON	ON	DOWN	DOWN	ON	ON	OTHER	42"	111
17	2480	200	1600	1600	1	0	96	111	OFF	OFF	UP	DOWN	ON	ON	OTHER	43"	111
18	2600	300	1600	1600	0	1	97	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	42"	111
19	2800	230	1600	1600	0	1	114	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	41"	80
20	5400	200	1600	1600	1	0	99	11	OFF	OFF	UP	DOWN	ON	ON	OTHER	40"	111
21	4800	300	1600	1600	0	0	100	11	OFF	OFF	UP	DOWN	ON	ON	OTHER	43"	111
22	6000	200	1600	1600	1	0	101	111	OFF	OFF	UP	DOWN	ON	ON	OTHER	36"	111
23	6000	230	1600	1600	2	0	102	111	OFF	OFF	UP	DOWN	ON	ON	OTHER	36"	111
24	6000	200	1600	1600	1	0	103	11	OFF	OFF	UP	DOWN	ON	ON	OTHER	40"	111
25	4480	200	1600	1600	1	0	104	111	OFF	OFF	UP	DOWN	ON	ON	OTHER	38"	111
26	2000	200	800	800	0	1	105	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	43"	60
27	3000	180	800	800	0	1	106	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	41"	80
28	3000	180	800	800	0	1	107	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	44"	90
29	4000	200	1600	1600	0	1	111	2	ON	ON	DOWN	DOWN	ON	ON	OTHER	44"	90
30	2000	230	1600	1600	0	1	112	2	ON	ON	DOWN	DOWN	ON	ON	OTHER	44"	80
31	2400	200	1600	1600	0	1	113	2	ON	ON	DOWN	DOWN	ON	ON	OTHER	55"	80
32	6000	230	1600	1600	2	0	118	111	OFF	OFF	UP	DOWN	ON	ON	OTHER	36"	111
33	4000	300	1600	1600	1	1	115	12	ON	ON	DOWN	DOWN	ON	ON	OTHER	36"	111
34	4000	300	1600	1600	1	1	116	12	ON	ON	DOWN	DOWN	ON	ON	OTHER	36"	111
35	4000	300	1700	1700	0	1	75	2	ON	ON	DOWN	DOWN	ON	ON	OTHER	42"	111
36	4480	200	1600	1600	1	0	104	111	OFF	OFF	UP	DOWN	ON	ON	OTHER	42"	111
37	2000	200	800	800	0	1	105	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	43"	60
38	2400	180	800	800	0	1	78	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	42"	80
39	2400	180	800	800	0	1	78	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	40"	80
40	3520	230	1600	1600	0	1	122	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	42"	111
41	3520	230	1600	1600	0	1	120	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	42"	111
42	3000	230	1600	1600	0	1	121	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	42"	111
43	2400	180	800	800	0	1	78	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	55"	80
44	3520	300	1700	1700	0	1	92	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	42"	111
45	4000	200	1600	1600	1	0	123	111	OFF	OFF	UP	DOWN	ON	ON	SUNSTAR	42"	111
46	4000	200	1600	1600	1	0	123	111	OFF	OFF	UP	DOWN	ON	ON	SUNSTAR	35"	111
47	5000	200	1600	1600	1	0	124	111	OFF	OFF	UP	DOWN	ON	ON	SUNSTAR	42"	111
48	5000	200	1600	1600	1	0	124	111	OFF	OFF	UP	DOWN	ON	ON	SUNSTAR	35"	111
49	2400	180	800	800	0	1	78	2	ON	ON	DOWN	DOWN	ON	ON	SUNSTAR	55"	60
50	4000	300	1700	1700	0	1	0	2	ON	ON	DOWN	DOWN	ON	ON		42"	111
51	4000	200	1600	1600	1	0	125	111	OFF	OFF	UP	DOWN	ON	ON	SUNSTAR	42"	111
52	4000	200	1600	1600	1	0	125	111	OFF	OFF	UP	DOWN	ON	ON	SUNSTAR	36"	111
53	4000	200	1600	1600	1	0	126	111	OFF	OFF	UP	DOWN	ON	OFF	SUNSTAR	42"	111
54	4000	300	1700	1700	0	1	75	2	ON	ON	DOWN	DOWN	ON	OFF	SUNSTAR	54"	80
55	2000	176	700	700	0	1	68	2	ON	ON	DOWN	DOWN	ON	OFF	SUNSTAR	43"	60

BREAKDOWN AND TROUBLESHOOTING

※ If the machine breaks down while using the servo motor due to an unforeseen change in the machine, the error indicators mentioned below will appear in the display of the program unit or simple program unit according to the self-checking function of the machine. The machine will then stop along with the sound of a warning buzzer. When an error indicator appears, follow the solution steps described below and resume work. If the problem is not solved after taking these measures, contact a company branch office.

Order	Error indicator	Cause of breakdown	Troubleshooting
1	SF22 Er	Safety switch error	• Check safety switch cable and connector
2	PU26 Er	Trouble with program unit connection	• Check program unit cable and connector
3	PU27 Er	Trouble with simple program unit connection	• Check the simple program unit cable and connector
4	60 Er	This error sign is seen when the user connects the location sensor while the power is still on	• Turn the power off and on again before using it.
5	61 Er	This error sign is seen when the user removes the location sensor while the power is still on	• Turn the power off and on again before using it.
6	126 Er	This error sign is seen when the motor's rotor magnet and stator coil's electric current flow does not match	• Check the condition of the motor's
7	127 Er	This error sign appears when the direction of encoders R S T and the direction of A B do not match.	• Check the encoder cable and the connector
8	128 Er	When there is no signal from encoders R S T	• Check the encoder cable and the connector
9	129 Er	When the motor is overloaded	• Turn the machine manually and check the machine load
10	130 Er	When there is no signal from the location sensor	• Check the location sensor cable and connector
11	131 Er	When there is an electric current overflow in the motor and problems with the connector	• Check the motor cable and the connector
12	132 Er	When does not follow a speed	• Turn the power off and on again before using it.
13	133 Er	When the electric current overflow of the IPM stops	• Turn the power off and on again before using it.
14	135 Er	At the time of the brake which was caused by with overvoltage input or fuse damage	• Input voltage confirmation • Brake resistance and fuse confirmation. Of shift use
15	140 Er	Initial current sensing error	• Check initial current sensing-related voltage setting values
16	200 Er	Excessive error of a motor load factor	• Check motor load factor


HOW TO PLACE FOR CONTROLLER

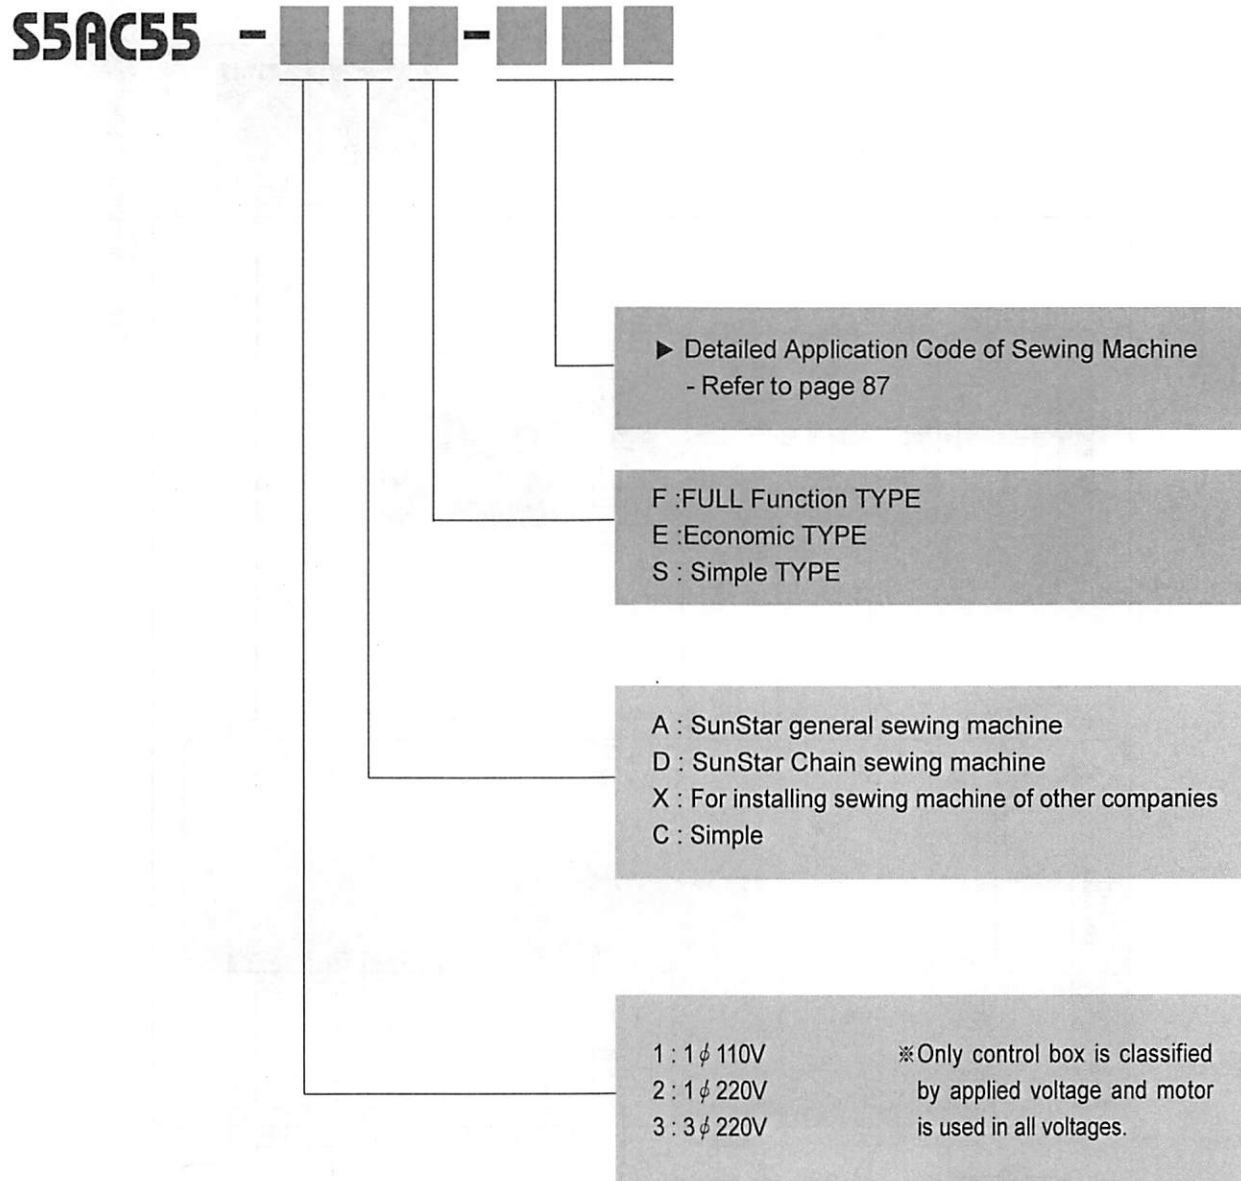

ORDER Ex. S5AC55-2AF refers to SERIES5, 1Phase 220V, FULL FUNCTION CONTROL BOX for normal drop feed.

BLOCK DIAGRAM

FORTUNA SERIES 5 BLOCK DIAGRAM

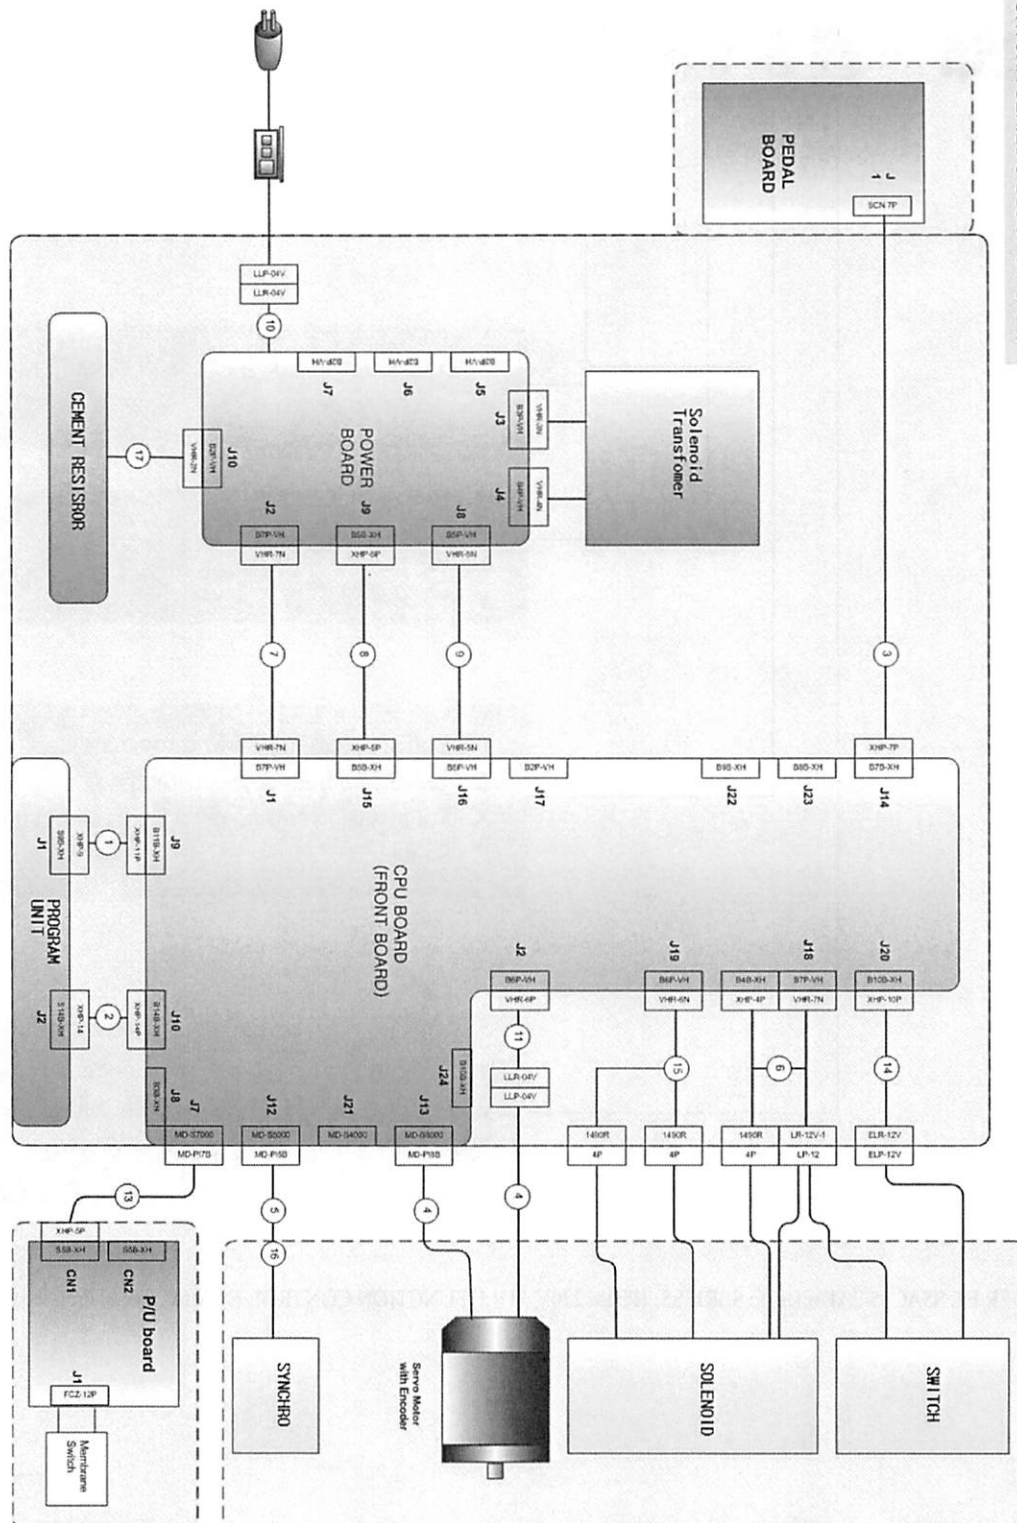

PARTS BOOK



A	Motor Parts - - - - -	90
B	Control Box (FULL Function TYPE) - -	92
C	Control Box (Economic TYPE) - - -	94
C1	Control Box (Simple TYPE) - - - -	96
D	Pedal/Accessories - - - - -	98
E	Synchronizer - - - - -	100
F	Supplementary control box (KM-757/TC cap ribbon cutter) - -	102

• Remarks •

Please let us get the additional details according to the itemized list below for the better service when ordering spare parts for SunStar motors.

※ Order for spare parts for servo motor

- 1) Serial number
- 2) Type of control box & model name
- 3) Electric specification (Phase, Volt)
- 4) Machines' s model name

Parts book

WARNING

1. 조에 속한 파트는 개별 조립 시 제품의 파손 또는 재봉 불량 발생될 수 있어 해당 파트에 대한 주문 시에는 조 품목으로만 구입이 가능합니다.
2. 본 책자는 Part Book으로 제작되었으므로 매뉴얼로 사용 불가합니다.
3. 사전 예고 없이 사양이 변경 될 수도 있습니다.


1. The parts classified as ass'y items may cause damage to the machine or bad sewing when they are separately assembled. Hence, when they are ordered, they can be purchased as ass'y items only.
2. This is a parts book. It cannot be used as a manual.
3. Parts are Subject to change in Design Without Prior Notice.

Note

- 썬스타 제품의 부품은 아래 인터넷주소로 접속하시어 신청할 수 있습니다.
<http://www.sunstarcs.com>
- 가입된 회원께서는 썬스타 포탈 사이트에 로그인후 필요한 부품을 신청할 수 있습니다.
- 부품관리-발주관리-발주등록 항목에서 부품번호와 신청수량을 입력하여 등록하시면 발주가 됩니다.
- 부품번호를 모르시는 경우 파츠북 조회를 클릭하시고 사용하는 기종을 검색하여 선택하시면 해당 기종의 파츠북을 조회할 수 있습니다.
- 파츠북은 관계별로 구분되어 있으며 관계를 알고 있다면 부품 찾기가 용이합니다.
- You can make an order for the parts of Sunstar machine to connect internet address.
<http://www.sunstarcs.com>
- You can request for parts you want after login if you are a registered member.
- In parts Management - Order Management - Order Registration entry, you can place an order by entering the part number and quantity.
- If you don't know the parts number, click the parts book menu bar.
In a download list, you can read parts book by searching model you use.
- This parts book is classified by the mechanism, therefore you can find part easily.

A


MOTOR PARTS

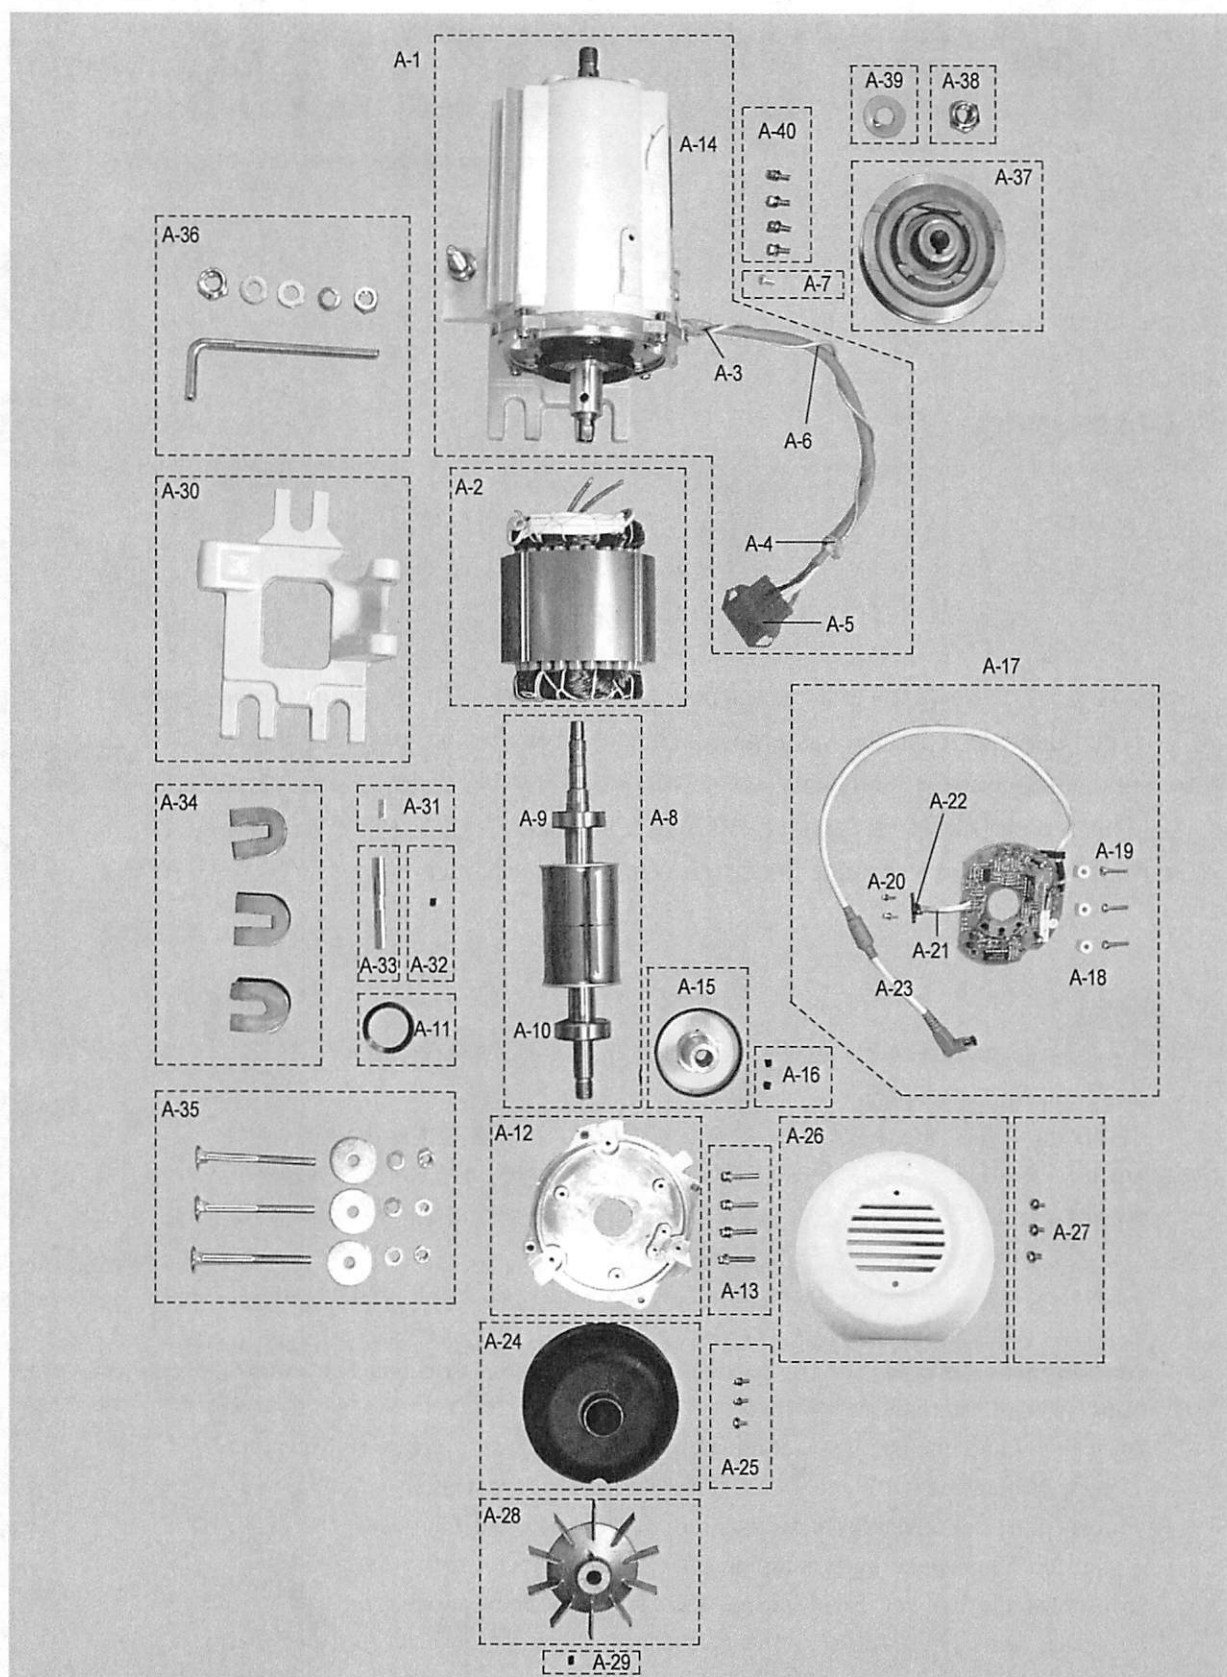

[illegible]

B


CONTROL BOX (FULL Function TYPE)

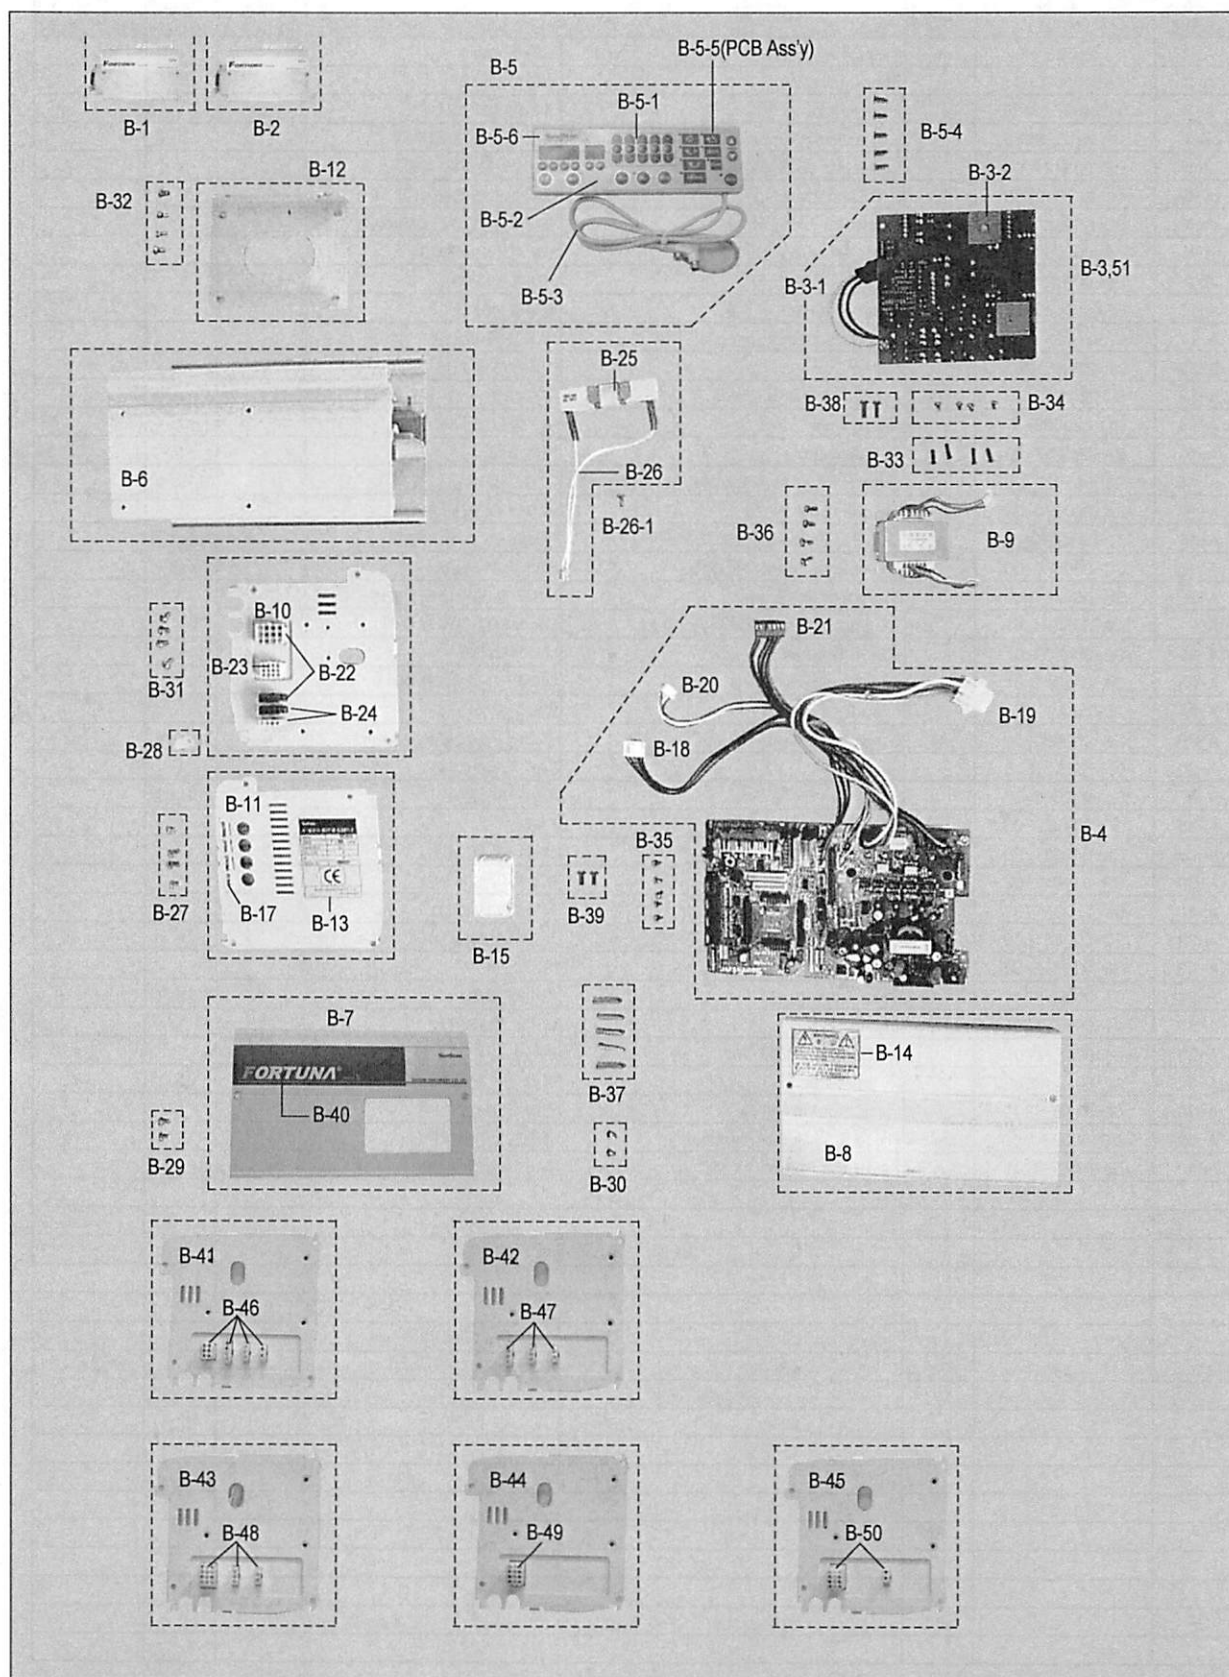

Ref. No.	Parts No.	Note	Name of Parts	품 명	Q'ty	Applied Period
B-1	10-1000-SS55		1- Phase 110V Control Box	단상 110V 콘트롤 박스	1	
B-2	EM-000102-04		1- Phase 220V Control Box / 3- Phase 220V Control Box	단상 220V 콘트롤 박스 / 삼상 220V 콘트롤 박스	1	
B-3	BD-000520-10		Power Board Ass'y(220V)	POWER BOARD Ass'y (220V)	1(Ass'y)	Aug.24.12
	BD-000520-07		Power Board Ass'y(220V)	POWER BOARD Ass'y (220V)	1(Ass'y)	Jul.18.11
B-3-1	11-007B-SE55		Cable For Power Input	전원 입력 케이블 (SE-010)	1	
B-3-2	09-003A-SC51		Bridge Diode 3510	브릿지 다이오드 3510	2	
B-4	BD-000518-30		CPU Board Ass'y	CPU BOARD Ass'y	1(Ass'y)	Jun.12.13
	BD-000518-28		CPU Board Ass'y	CPU BOARD Ass'y	1(Ass'y)	Oct.19.12
	BD-000518-24		CPU Board Ass'y	CPU BOARD Ass'y	1(Ass'y)	Jul.18.11
	BD-000518-23		CPU Board Ass'y	CPU BOARD Ass'y	1(Ass'y)	Aug.12.11
	BD-000518-22		CPU Board Ass'y	CPU BOARD Ass'y	1(Ass'y)	Aug.12.11
B-5	EE-001523-00		S-5 P/U B/D Ass'y	S-5 P/U BOARD Ass'y	1(Ass'y)	
B-5-1	GP-024743-00		Front cover	전면 커버	1	
B-5-2	GP-024747-00		Membrane Switch	멤브레인 스위치	1	
B-5-3	CA-000479-00		P/U Connector Cable(SE-013)	P/U 연결 케이블(SE-013)	1	
B-5-4	01-036S-1701		Screw For P/U Box (M3×L12)	M3×12 플랜지 볼이 고정나사	5(Ass'y)	
B-5-5	BD-000255-03		P/U PCB Ass'y	P/U PCB Ass'y	1	
B-5-6	GP-024744-00		Rear cover	후면 커버	1	
B-6	GP-013914-00		Control Box	콘트롤 박스 (도장)	1	
B-7	GP-014577-00		Control Box Front Cover	콘트롤 박스 전면커버 (도장) - 기본형	1	
B-8	GP-014579-00		Control Box Rear Cover	콘트롤 박스 후면커버 (도장)	1	
B-9	GP-011348-00		Solenoid Transformer S3	솔레노이드 트랜스 (NEW)	1	
B-10	GP-014580-02		Control Box Left Side Cover	측면커버 (좌) - 콘넥터 측	1	Aug.01.10
B-11	GP-014584-00		Control Box Right Side Cover	측면커버 (우) - 단측	1	
B-12	GP-013180-01		Control Box Holder	콘트롤 박스 홀더 (신형)	1	
B-13	GP-011331-02		Name Panel Sticker	명판 스티커	1	
B-14	GP-011049-01		Warning Panel Sticker	주의 스티커	1	Jul.04.11
B-15	10-003C-SE55		Cable Rubber Guide	케이블 고무가이드 C	1	
B-17	10-011C-SE55		Option Sticker	옵션 스티커	1	
B-18	12-005B-SE55		Assistance Signal Cable SE-008	보조신호케이블 (SE-008)	1	
B-19	CA-002483-00		Cable For Motor Output SE-011	모터 출력 케이블 SE-011	1	
B-20	11-006B-SE55		Solenoid Connection Cable SE-009	솔레노이드 전원 케이블 (SE-009)	1	
B-21	CA-002487-00		Cable For DC Power SE-007	직류 전원 케이블 (SE-007)	1	
B-22	12-003B-SE55		Solenoid Cable SE-006	솔레노이드 중간 연결(SE-006)	1	
B-23	12-013B-SE55		Option Switch Connector Cable SE-014	각상침스위치 콘넥터 (SE-014)	1	
B-24	11-014B-SE55		Right & Left Switch Connector Cable SE-015	각상침스위치 콘넥터케이블 (SE-015)	1	
B-25	09-007A-HB10		Cement Resistor (40W160Ω)	석면저항 40W 160Ω (HB)	1	
B-26	11-015B-SE55		Resistant Connector SE-017	저항콘넥터케이블 (SE-017)	1	
B-26-1	10-002S-SW66		Screw For Pedal P. C. B	PCB 고정나사 3×8 SP8	1	
B-27	PSC-BH000300		Screw Control Box Cover	커버조임나사 트러스 4×8 트러스	4(Ass'y)	
B-29	PSC-BH000300		Screw For B-7	커버조임나사 트러스 4×8 트러스	2(Ass'y)	
B-30	PSC-BH000300		Screw For B-8	커버조임나사 트러스 4×8 트러스	2(Ass'y)	
B-31	PSC-BH000300		Screw For B-10	커버조임나사 트러스 4×8 트러스	4(Ass'y)	
B-32	07-027S-SE55		Screw For B-12	홀더고정나사 (B)	4(Ass'y)	
B-33	SC-000466-00		Stud (4-5-15)	스터드 (4-5-15)	4(Ass'y)	
B-34	10-002S-SW66		Screw For Pedal P. C. B	PCB 고정나사 3×8 SP8	4(Ass'y)	
B-35	10-002S-SW66		Screw For Pedal P. C. B	PCB 고정나사 3×8 SP8	5(Ass'y)	
B-36	09-226S-3701		Screw For Solenoid Transformer	트랜스 쉘나사(조)	4(Ass'y)	
B-37	SC-000466-00		Stud (4-5-15)	스터드 (4-5-15)	5(Ass'y)	
B-38	07-004S-SM55		Screw For Encoder Cover	고정나사B(4×20)	2(Ass'y)	
B-39	15-022S-1000		Screw For Encoder Cover	고정나사B(4×20)	2(Ass'y)	
B-40	GP-024746-00		Sticker (Main)	전면스티커	1	
B-41	10-024A-SE55		Control Box Left Side Cover - KANSAI	측면커버(좌)-칸사이	1	
B-42	10-034A-SE55		Control Box Left Side Cover - YAMATO	측면커버(좌)-야마토	1	
B-43	10-044A-SE55		Control Box Left Side Cover - SIRUBA	측면커버(좌)-시루바	1	
B-44	10-064A-SE55		Control Box Left Side Cover - KINGTEX	측면커버(좌)-킹텍스	1	
B-45	10-046A-SE55		Control Box Left Side Cover - DINO Thread Trimming Machine	측면커버(좌)-DINO 사절장치	1	


B

CONTROL BOX (FULL Function TYPE)

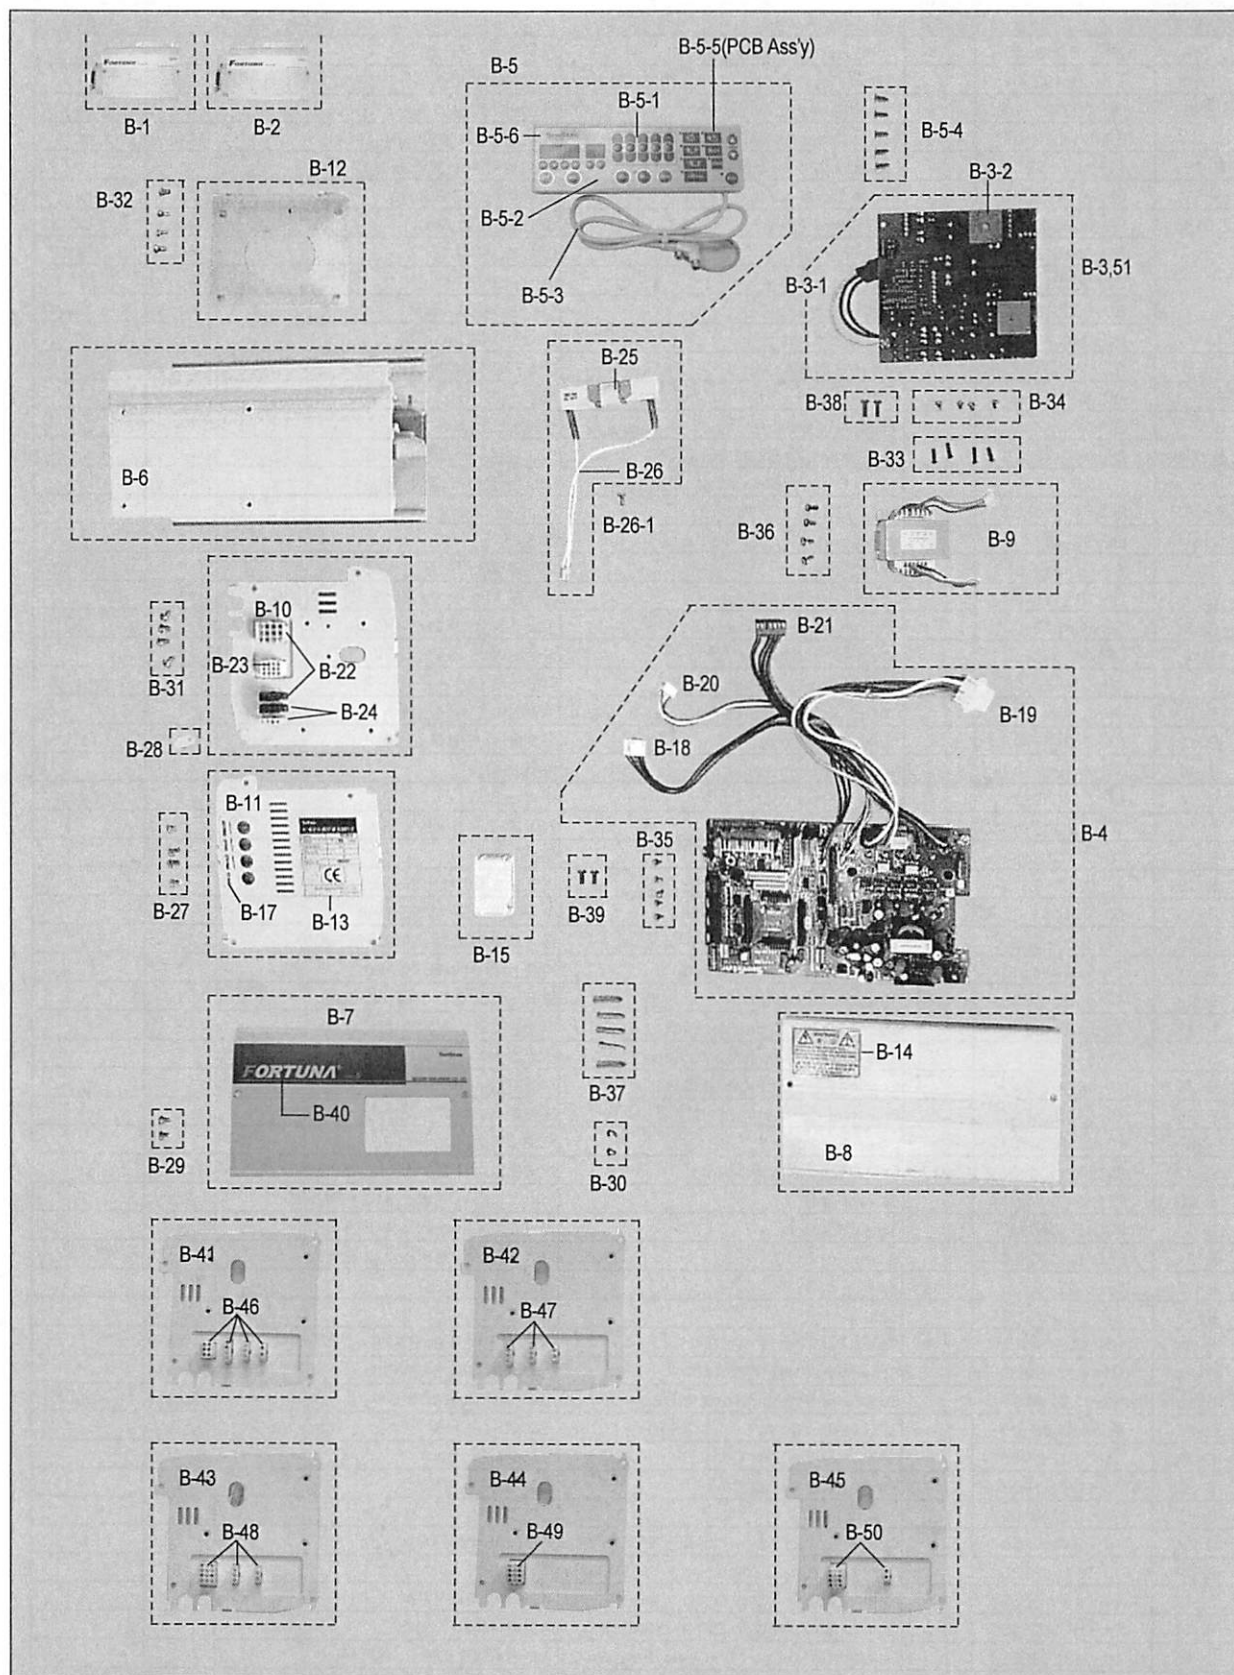

C


CONTROL BOX (Economic TYPE)

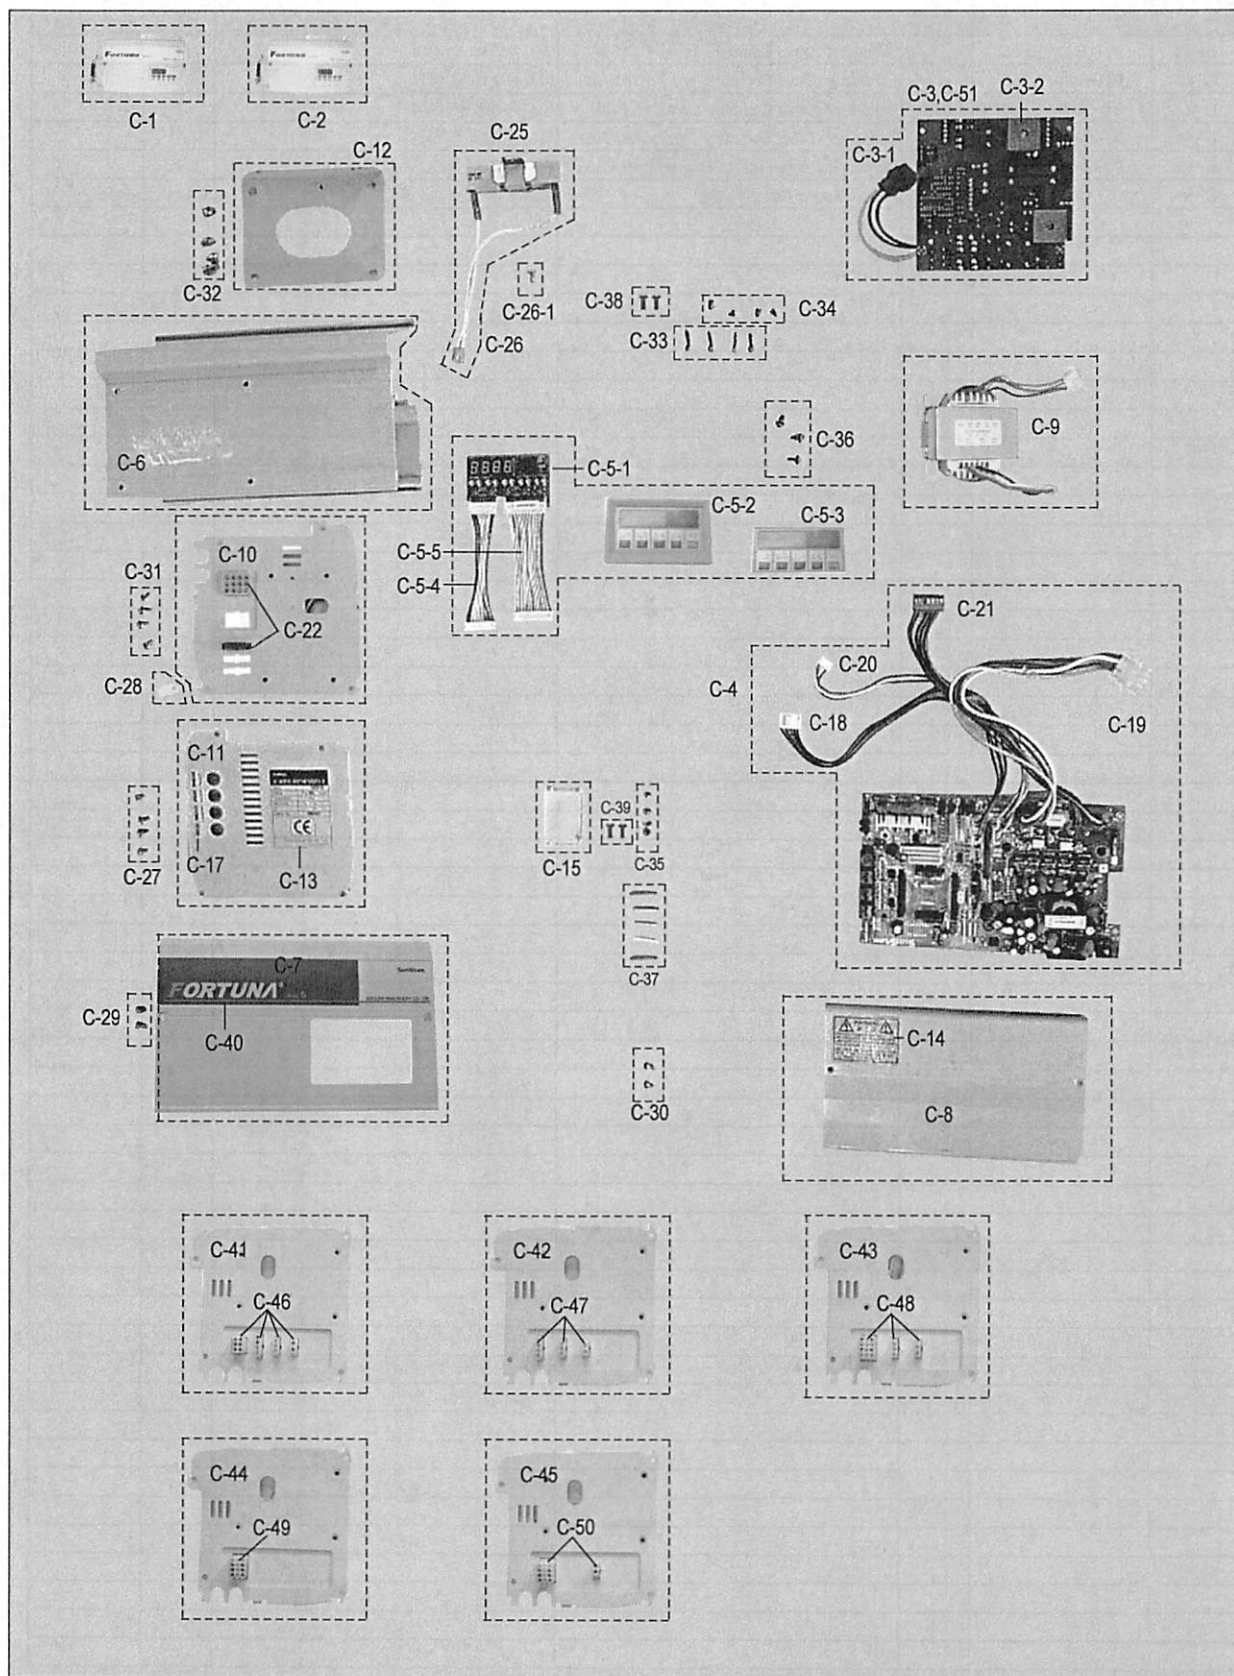

Ref. No.	Parts No.	Note	Name of Parts	품 명	Q'ty	Applied Period
C-1	10-2000-SS55		1- Phase 110V Control Box	단상 110V 콘트롤 박스	1	
C-2	EA-000394-00		1- Phase 220V Control Box / 3- Phase 220V Control Box	단상 220V 콘트롤 박스 / 삼상 220V 콘트롤 박스	1	
C-3	BD-000520-07		Power Board Ass'y	POWER BOARD Ass'y	1(Ass'y)	
C-3-1	11-007B-SE55		Cable For Power Input	전원 입력 케이블 (SE-010)	1	
C-3-2	09-003A-SC51		Bridge Diode 3510	브릿지 다이오드 3510	2	
C-4	BD-000518-25		CPU Board Ass'y	CPU BOARD Ass'y	1(Ass'y)	
C-5-1	03-000A-SE55		S-5 OP PCB Ass'y	S-5 OP PCB Ass'y	1	
C-5-2	10-006A-SE55		Control Box Display Panel	콘트롤박스 디스플레이 패널	1	
C-5-3	GP-024775-01		Display Panel Membrane	디스플레이 패널 멤브레인	1	
C-5-4	11-002B-SE55		Controller Cable(SE-002)	조작반 케이블(SE-002)	1	
C-5-5	11-001B-SE55		Controller Cable(SE-001)	조작반 케이블(SE-001)	1	
C-6	GP-013914-00		Control Box	콘트롤 박스 (가공)	1	
C-7	GP-014578-00		Control Box Front Cover-Economic Type	콘트롤 박스 전면커버 (도장) - 단순형	1	
C-8	GP-014579-00		Control Box Rear Cover	콘트롤 박스 후면커버 (도장)	1	
C-9	GP-011348-00		Solenoid Transformer S3	솔레노이드 트랜스 S3	1	
C-10	GP-014580-00		Control Box Left Side Cover	측면커버 (좌)	1	
C-11	GP-014584-00		Control Box Right Side Cover	측면커버 (우)	1	
C-12	GP-013180-00		Control Box Holder	콘트롤 박스 홀더 (신형)	1	
C-13	GP-011331-02		Name Panel Sticker	명판 스티커	1	
C-14	GP-011049-01		Warning Panel Sticker	주의 스티커	1	
C-15	10-003C-SE55		Cable Rubber Guide C	케이블 고무가이드 C	1	
C-17	10-011C-SE55		Option Sticker	옵션 스티커	1	
C-18	12-005B-SE55		Assistance Signal Cable	보조신호케이블 (SE-008)	1	
C-19	CA-002483-00		Cable For Motor Output SE-011	모터 출력 케이블 SE-011	1	
C-20	11-006B-SE55		Solenoid Connection Cable SE-009	솔레노이드 전원 케이블 (SE-009)	1	
C-21	CA-002487-00		Cable For DC Power SE-007	직류 전원 케이블 (SE-007)	1	
C-22	12-003B-SE55		Solenoid Cable SE-006	솔레노이드 중간 연결 케이블 (SE-006)	1	
C-25	09-007A-HB10		Cement Resistor (40W160Ω)	석면저항 40W 160Ω (HB)	1	
C-26	11-015B-SE55		Resistant Connector SE-017	저항콘넥터케이블 (SE-017)	1	
C-26-1	10-002S-SW66		Screw For Pedal P. C. B	PCB 고정나사 3×8 SP8	1	
C-27	PSC-BH000300		Screw Control Box Cover	커버조임나사 트러스 4×8 트러스	4(Ass'y)	
C-29	PSC-BH000300		Screw For C-7	커버조임나사 트러스 4×8 트러스	2(Ass'y)	
C-30	PSC-BH000300		Screw For C-8	커버조임나사 트러스 4×8 트러스	2(Ass'y)	
C-31	PSC-BH000300		Screw For C-10	커버조임나사 트러스 4×8 트러스	4(Ass'y)	
C-32	07-027S-SE55		Screw For C-12	홀더고정나사 (B)	4(Ass'y)	
C-33	SC-000466-00		Stude (4-5-15)	스터드 (4-5-15)	4(Ass'y)	
C-34	10-002S-SW66		Screw For Pedal P. C. B	PCB 고정나사 3×8 SP8	4(Ass'y)	
C-35	10-002S-SW66		Screw For Pedal P. C. B	PCB 고정나사 3×8 SP8	4(Ass'y)	
C-36	09-226S-3701		Screw For Solenoid Transformer	트랜스 썸나사(조)	4(Ass'y)	
C-37	SC-000466-00		Stude (4-5-15)	스터드 (4-5-15)	5(Ass'y)	
C-38	07-004S-SM55		Screw For Encoder Cover	고정나사B(4×20)	2(Ass'y)	
C-39	15-022S-1000		Screw For Encoder Cover	고정나사B(4×20)	2(Ass'y)	
C-40	GP-024746-00		Sticker (Main)	전면스티커	1	
C-41	10-024A-SE55		Control Box Left Side Cover - KANSAI	측면커버(좌)-칸사이	1	
C-42	10-034A-SE55		Control Box Left Side Cover - YAMATO	측면커버(좌)-야마토	1	
C-43	10-044A-SE55		Control Box Left Side Cover - SIRUBA	측면커버(좌)-시루바	1	
C-44	10-064A-SE55		Control Box Left Side Cover - KINGTEX	측면커버(좌)-킹텍스	1	
C-45	10-046A-SE55		Control Box Left Side Cover - DINO Thread Trimming Machine	측면커버(좌)-DINO 사절장치	1	
C-46	91-031A-SE55		Connector (Other Company Type) - KANSAI	타사콘넥터-칸사이	1	
C-47	91-013A-SE55		Connector (Other Company Type) - YAMATO	타사콘넥터-야마토	1	
C-48	91-008A-SE55		Connector (Other Company Type) - SIRUBA	타사콘넥터-시루바	1	
C-49	91-032A-SE55		Connector (Other Company Type) - KINGTEX	타사콘넥터-킹텍스	1	
C-50	91-046A-SE55		Connector (Other Company Type) - DINO Thread Trimming Machine	타사콘넥터-DINO 사절장치	1	
C-51	BD-000519-06		Power Board Ass'y(110V)	Power Board Ass'y(110V)	1	


C1

CONTROL BOX (Simple TYPE)

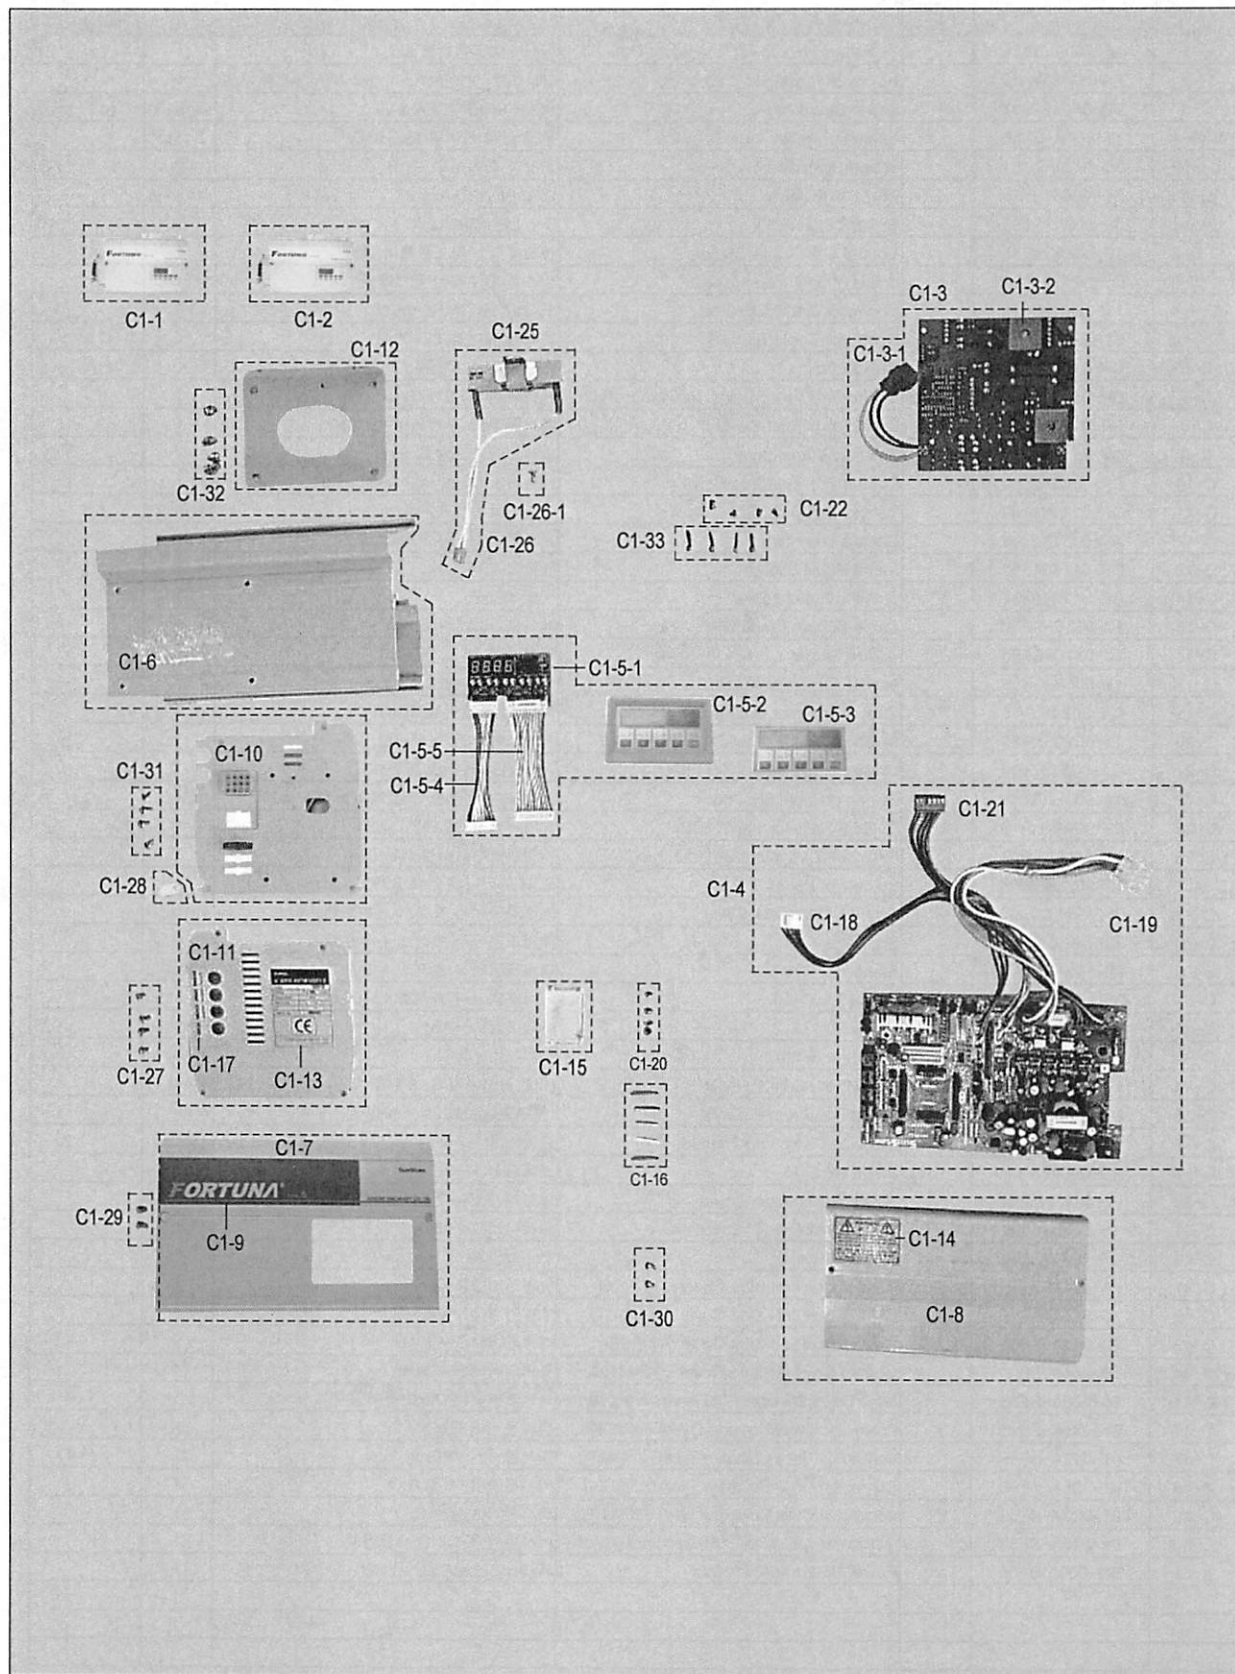

D


PEDAL/ACCESSORIES

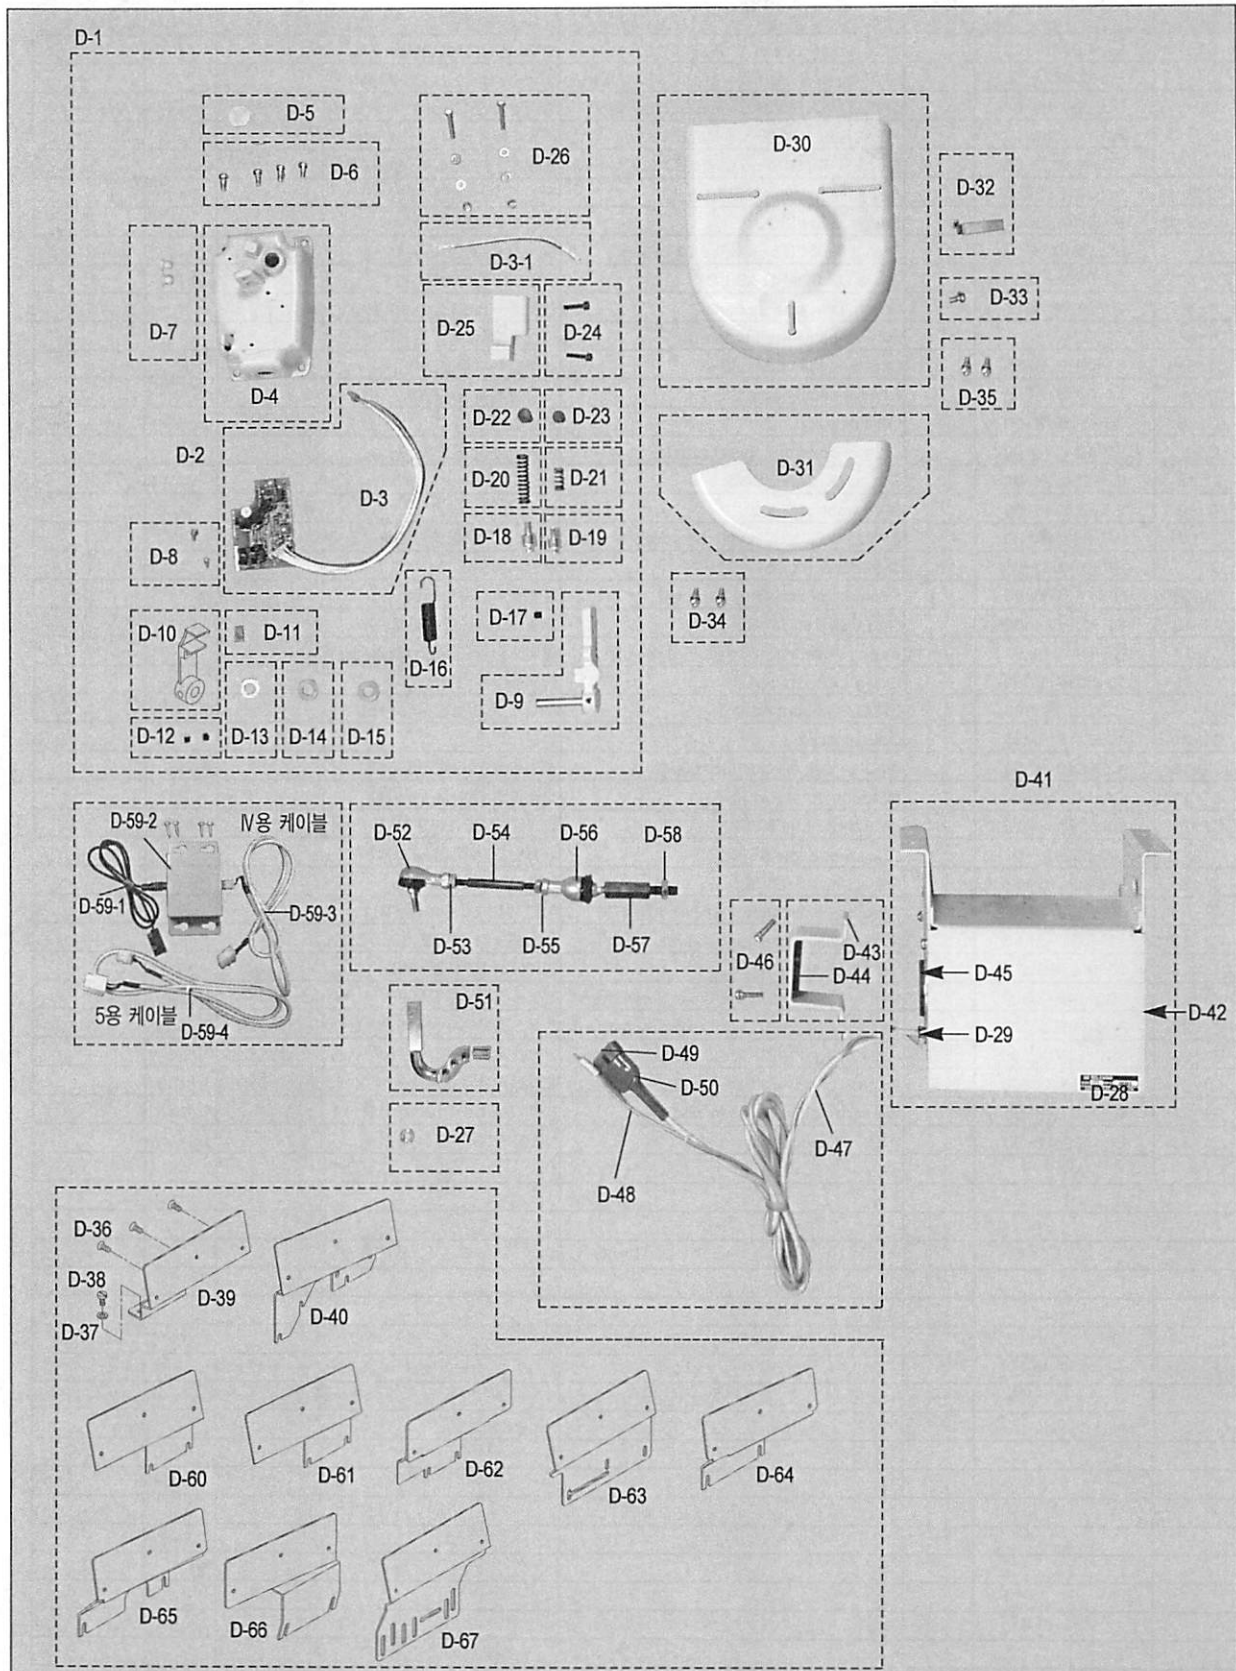

Ref. No.	Parts No.	Note	Name of Parts	품 명	Q'ty	Applied Period
D-1	AS-004004-05		Pedal Unit Assembly	페달 유니트 (조)	1(Ass'y)	
D-2	BD-001009-03		Pedal B/D Ass'y	페달 B/D Ass'y	1	Jun.19.12
	BD-001009-00		Pedal B/D Ass'y	페달 B/D Ass'y	1	May.25.11
D-3	12-009B-SE55		Cable For Pedal Input (SE-003)	페달 입력 케이블 (SE-003)	1	
D-3-1	11-017B-SE55		Cable For Pedal Grounding	페달 접지 케이블	1	
D-4	GP-051581-00		Pedal Base	페달 베이스	1	
D-5	06-001C-SE55		Rubber Cap For Pedal Unit	페달 유니트 위쪽 고무마개	1	
D-6	07-027S-SE55		Screw (Set) 5X10 CR	나사 (Set)5X10 CR	4(Ass'y)	
D-7	10-033C-SF55		Rubber Cap For Pedal Base	페달 베이스 고무마개	2	
D-8	SC-001099-00		Screw For Pedal P. C. B Set	페달 PCB 고정나사 SET	2	
D-8-1	10-002S-SW66		Screw For P. C. B Set	PCB 고정나사 SET	1	
D-9	AS-004002-01		Pedal Control Lever	페달 콘트롤 레바 (조)	1	
D-10	10-026A-SC53		Pedal Magnet Holder	페달 마그네트 홀더	1	
D-11	PTC-AK000300		Pedal Magnet	페달 마그네트	1	
D-12	SC-000681-00		Fixing Bolt For Pedal Magnet & film Base	F.G 고정나사	2	
D-13	10-024W-SC53		Parallel Washer For Pedal Shaft	페달축평와셔	1	
D-14	11-012C-3701		Bushing For Pedal Control Lever Shaft	페달 콘트롤 레바뿔심 (A)	1	
D-15	11-012C-3701		Bushing For Pedal Control Lever Shaft	페달 콘트롤 레바뿔심 (A)	1	
D-16	SP-000078-00		Tension Spring For Pedal	인장스프링 (A)	1	
D-17	SC-000681-00		Fixing Bolt For Pedal Control Lever	F.G 고정나사	1	
D-18	10-030P-SC53		Stopper (B) For Pressure Spring	스토퍼 핀 (B)	1	
D-19	10-029P-SC53		Stopper (A) For Pressure Spring	스토퍼 핀 (A)	1	
D-20	10-019G-SC53		Pressure Spring For Presser Foot	노루발 압력 스프링	1	
D-21	10-020G-SC53		Pressure Spring For Thread Trimming	사절 압력 스프링	1	
D-22	10-025P-SC53		Spring Guide (B)	스프링 가이드 (B)	1	
D-23	10-024P-SC53		Spring Guide (A)	스프링 가이드 (A)	1	
D-24	10-031S-SC53		Screw For Spring Housing	페달 스프링 하우징 고정나사	2	
D-25	GP-014594-00		Spring Housing	스프링 하우징	1	
D-26	10-021S-SC53		Pressure Control Screw For Spring(Ass'y)	스프링 압력 조절나사 (조)	2(Ass'y)	
D-27	18-016S-5607		Joint coupling rod fixation nut (right)	조인트 연결봉 고정너트 (우)	1	
D-28	20-106C-6100		Solenoid sticker	솔레노이드 스티커	1	
D-29	18-029C-5607		Cable guide bushing	케이블안내뿔심	1	
D-30	91-001A-3701		Belt Cover (B)	벨트커버 (B)	1	
D-31	91-101A-SA53		Belt Cover (New Type) (A)	벨트커버 (A) - 신형	1	
D-32	91-004C-SA53		S/V Belt Guide	S/V 벨트가이드	1	
D-33	09-031S-3701		Screw For Belt Guide	콘넥트 고정판 찰나사	1	
D-34	07-027S-3701		Screw For Belt Cover (A)	콘덴서 커버 (조) 찰나사	2	
D-35	01-135S-1701		Screw For Belt Cover (B)	콘덴서 밴드 찰나사	2	
D-36	91-029S-1000		Screw For P/U Box	프로그램박스고정나사(소)	3(Ass'y)	
D-37	01-039W-1701		Spring Washer For P/U box Bracket	중간브라켓 찰와셔(@5)	2(Ass'y)	
D-38	91-030S-1000		Screw For P/U Box Bracket	프로그램박스고정나사(대)	2(Ass'y)	
D-39	GP-051355-00		P/U support(KM-235)	P/U 받침(KM-235)	1	
D-40	GP-051356-00		P/U support(KM-250)	P/U 받침(KM-250)	1	
D-41	18-107B-9000		Knee lifting case	무릎 올림 케이스	1	
D-42	18-108B-9000		Knee lifting case cover	무릎 올림 케이스 커버	1	
D-43	18-109B-9000		Stroke fixing plate (stamp)	스트로크 고정판 (도장)	1	
D-44	18-023R-5607		Rubber washer	고무 와셔	1	
D-45	17-017C-3000		Stopper rubber	스토퍼고무	1	
D-46	01-134C-1701		Middle bracket screw	중간브라켓찰나사	2(Ass'y)	
D-47	12-015M-2350		Grey cable	회색 케이블	1	
D-48	02-001A-SM5C		Knee lifting ground wire (Ass'y))	무릎 올림 어스선 (조)	1	
D-49	17-016B-3000		Green plug 1490P1C	플러그 1490P1C 녹색	1	
D-50	08-014C-3701		Tube (C)	튜브 (C)	1	
D-51	25-006A-3200		Lever shaft joint coupling rod	레바 축 조인트 연결봉	1	
D-52	18-021A-5607		Ball joint (6R)	볼 조인트 (6R)	1	
D-53	18-015S-5607		Middle coupling bar fixation nut (left)	중간 연결대 고정너트 (좌)	1	
D-54	18-018B-5607		Middle coupling rod	중간 연결봉 (A)	1	

D


PEDAL/ACCESSORIES

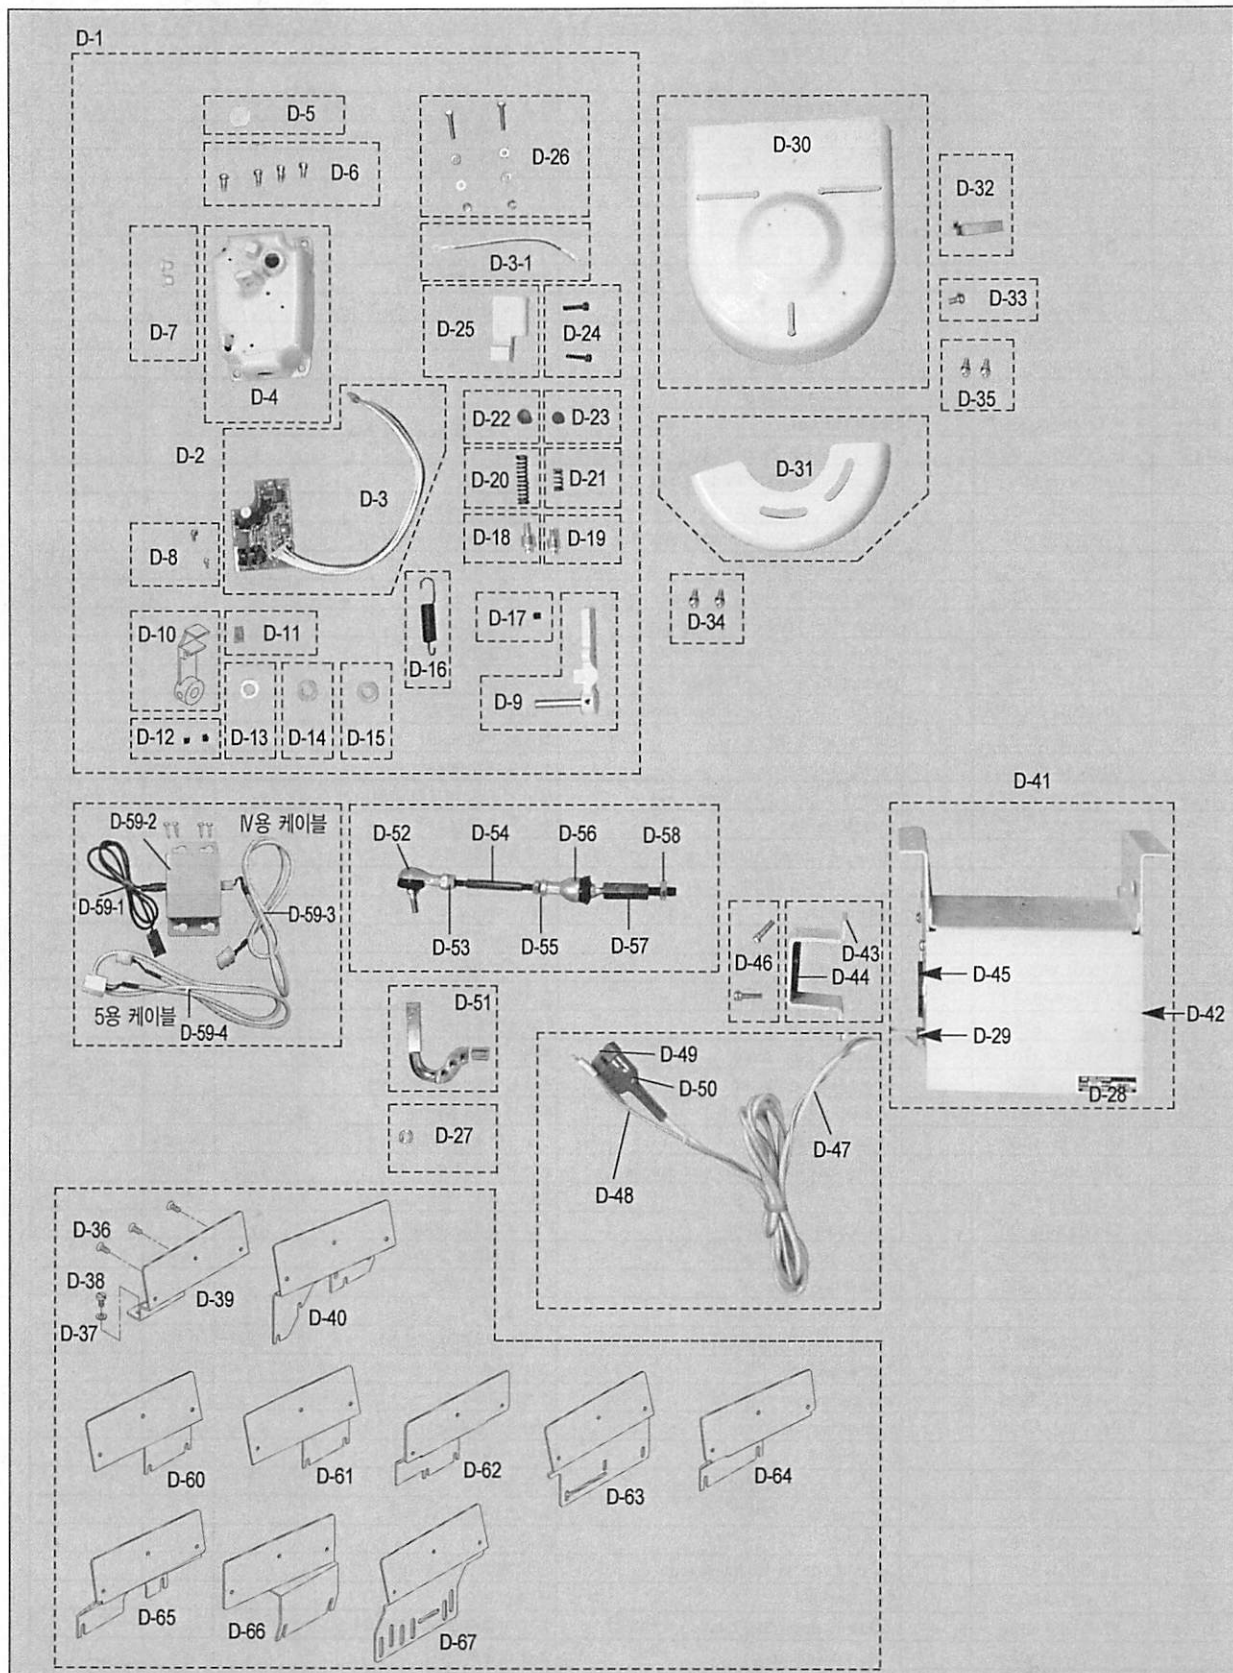


E

SYNCHRONIZER


E-1

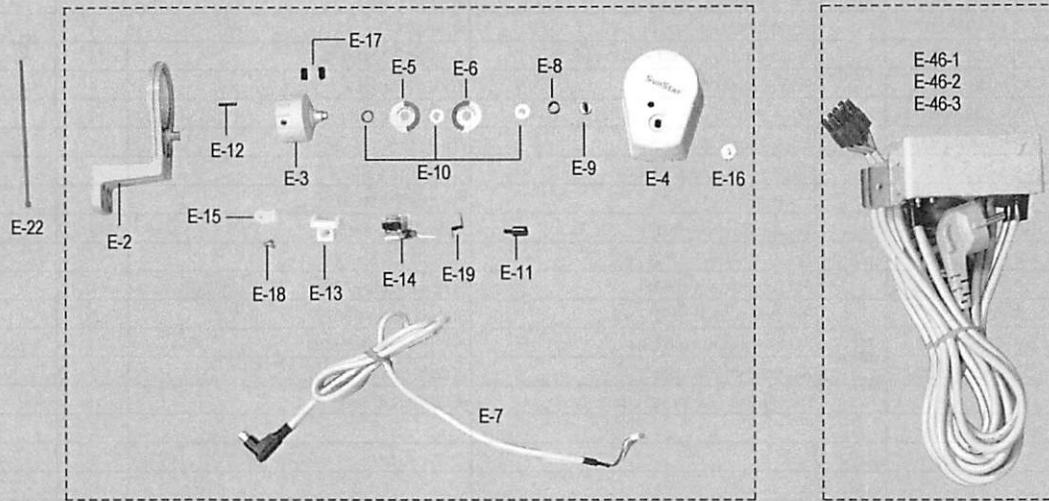

E-20

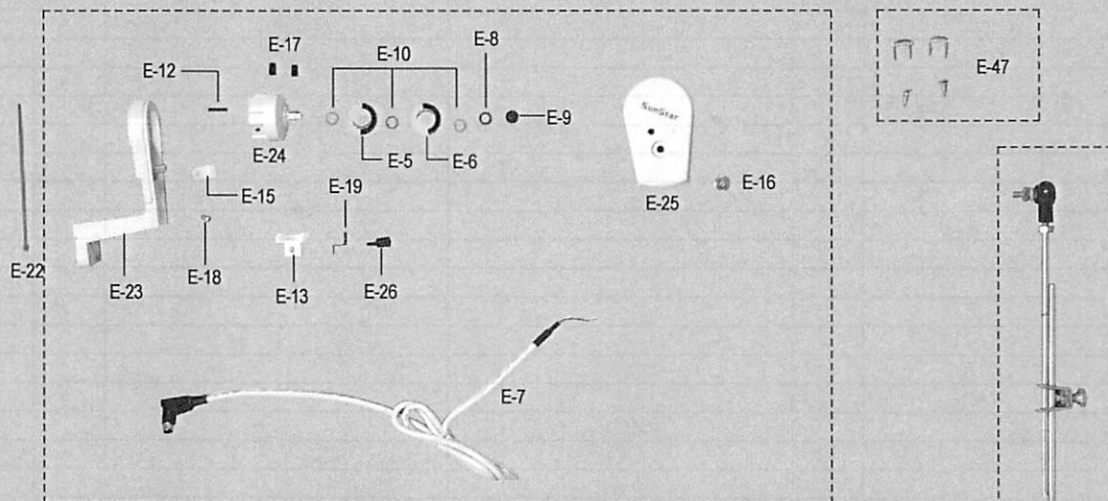

E-21

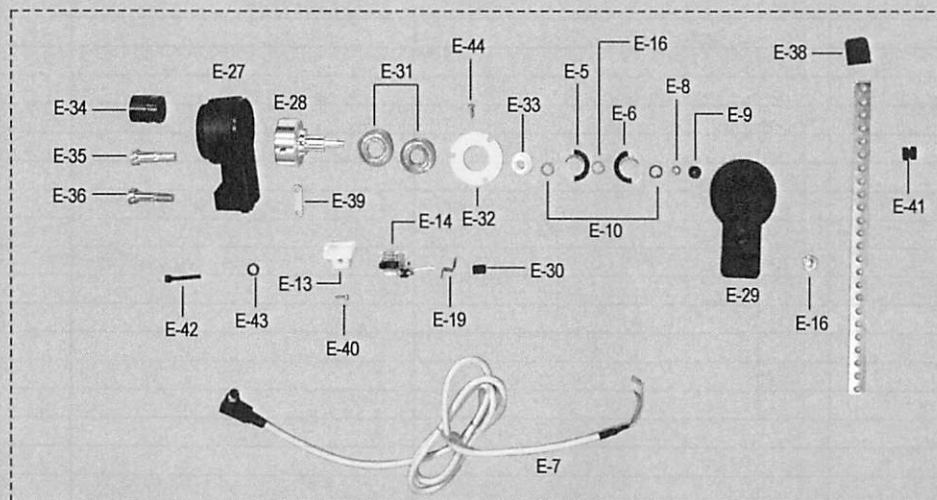

F

SUPPLEMENTARY CONTROL BOX (KM-757/TC cap ribbon cutter)

F-1-1

