



Press pushbutton 9 and lift looper thread take-up 10 to thread the machine easily.

Press the looper thread take-up down and replace it after threading the machine.

