

# [1] NEEDLES & THREADING THE MACHINE

## 1-1 Needles

UY128GAS of Schmetz or Organ


Select the proper needle for the fabric and thread.

< Needles and needle size >

Schmetz UY128GAS	Nm65	Nm70	Nm75	Nm80	Nm90
Organ UY128GAS	#09	#10	#11	#12	#14

## 1-2 Replacing the needle

To replace the needle, check the needle carefully to see that the scarf is turned to the rear of the machine (see the illustration). Then install the needle correctly.

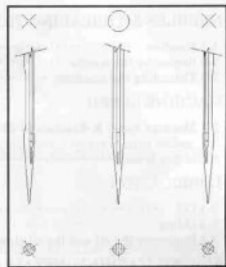

< Note >

Before replacing the needle, be sure to turn off the machine. A clutch motor continues running for a while after the machine is turned off. Therefore keep on pressing the pedal until the machine stops.

## 1-3 Threading the machine

Thread the machine correctly by referring to the illustration below. Threading the machine incorrectly may cause skip stitching, thread breakage and/or uneven stitch formation.

