MITSUBISHI

Mitsubishi Limiservo X G series TECHNICAL INFORMATION MANUAL

Motor XL-G554-10(Y), XL-G554-20(Y)

Control box XC-GMFY(CE)

Induction type AC servo motor and control box with automatic needle positioner



Thank you for purchasing this product.

Please read this manual thoroughly before use to ensure safe and proper use.

Please read the instruction manual for the machine head together with this manual.

Save this manual for future reference.

1 Contents A Names of Each Part 6 1. Installation of the motor ————7 2. Installation of the control box 7 3. Installation of the pulley 7 4. Mounting of the belt 7 5. Installation of the protective cover 8 6. Installation of the position detector 9 7. Connection of the Mitsubishi sewing machine and control box ------9 4. When using the 3-phase 200 - 240V class Limiservo X with single phase 200 - 240V class ·······10 2. Adjustment of pedal toe down pressure, and heeling pressure 12 1. To change solenoid voltage DC24V/DC30V 14 2. Changing the output voltage between 0VDC and 5VDC 14 2. Selection of each mode 16 (2) Selection of each program mode from the normal mode. 17 (3) Direct number call function 19 4. Changing to the tacking, preset, pattern NO. selection mode 21 (1) Tacking setting mode 21 (3) Preset stitching setting mode 22 (4) Pattern No. selection mode 22 5. Using the program mode [1] simple setting 23 1. To change the maximum speed 25 5. To confirm the position where the needle passed through the fabricated to raise the penetration strength of the first stitch with the external switch27 7. Setting the number of stitches to the UP position stop after fabric end is detected with optical sensor, etc. -----28 8. To continue presser foot lifting after the thread trimming, and to bring down the presser foot after the time set on the timer has passed 29 9. When after trimming thread while sewing thick fabric, needle is stuck and fabric cannot be removed29 14. Setting the tacking stitch correction 33

 16. To check the error code history and input/output signal
 36

 17. To return all settings to the factory settings
 38

 18. To adjust the position data for the lever unit
 39

 19. To set the ON/OFF operation of the thread trimming protective signal (S6)
 40

12 To save the setting data	41
13 How to use Simple setting of Program Mode [2]	42
1. How to use the program mode [2]	42
Simple setting table for chain stitch sewing machine	43
I/O signals of connectors Junction wiring	46
Displays and function of each key in the condensed stitch mode	
How to use Simple setting of Program Mode [3]	67
1.How to use Simple setting of Program Mode [3]	67
2. Simple setting table for lock stitch sewing machine	·····68
I/O signals of connectors Junction wiring	·····/0
5. How to connect BROTHER machine	80
6. How to connect JUKI machine	83
7. How to connect TOYOTA machine	
15 Setting in the thread trimming mode TR	00
1. Thread trimming when thread trimming mode TR setting is PRG	
Wiper output timing 2. Wiper output timing	89
Thread trimming timing for each setting in the thread trimming mode TR	90
16 Output TB,TF timings ·····	
17 Output KS1,KS2,KS3 timings	95
18 Simple Sequence	
Simple sequence starting conditions	96
2. Simple sequence forced end conditions	96
3. Simple sequence output starting point setting	96
4. Simple sequence output end point setting	96
5. Simple sequence output timing chart ·····	
19 Example of simple sequence setting	98
1.Example 1	98
2.Example 2	99
3.Example 3 4.Example 4 4.Example 4	
5.Example 5	
20 How to set Thread break detector ·····	103
Setting Thread break detector function	103
2. Timing chart of thread break input and output.	103
21 Cutter output	104
1. Cutter output function	104
2. Setting example of the Cutter output function ······	105
3. BT specifications (*1) operation chart and required settings······	106
4. How to set the tape cutter operation 1	107
5. How to set the tape cutter operation 2·····	107
22 Application examples ·····	108
1. Examples of using control switch panel ······	108
2. Changing the speed limit limiter for the maximum speed using the switches ······	109
Special operation using option B connector variable-speed command VC2	109
Example of down counter function application settings Example of using the counter function	110
(turning on a lamp using a relay when the count is completed)·····	111
6. Example of setting two counters (Using the up counter and down counter simultaneously)	111
7. Setting points for post-type sewing machine	112
8. Examples of application for zigzag sewing machine	113
9. Order of signal priority	······116
10. CP output	117
11. Main input/output circuits 12. Detector compatibility <matrix list=""></matrix>	118 120
23 Function List	121

Table of Program Mode Function	129
- Program mode [P]	
- Program mode [A]	
- Program mode [B]	
- Program mode [C]142	
- Program mode [D]	
- Program mode [E]	
- Program mode [F]169	
- Program mode [G]	
- Program mode [H]······178	
- Program mode [I]179	
- Program mode [J]······180	
- Program mode [K] ······182	
- Program mode [Q] 189	
- Program mode [R]	
- Program mode [S] ———————————————————————————————————	
Table of input/output function for signal on C mode······	··199
26 The composition figure of input and output customization	206
1. Input and output customization ————————————————————————————————————	_00
2. Coupling output signal with input signal ············207	
27 How to Use the Option Connector	208
1. Connector Layout208	
2. The explanation of the input/output signal······209	
3. To use as a standing work type sewing machine210	
28 Error Display·····	··211
29 Specifications ····	212
[29] Specifications	212
30 Options	··213
31 Procedures of Maintenance, Inspection and Replacement	··214
<reference> Table of digital display····································</reference>	
Dimensions (MOTOR and CONTROL BOX)	

2 Safety Instructions

1. To ensure safe use

*Always observe the following items to ensure safe use of the industrial sewing machine drive unit (motor and control box).

1.1 Before starting

Read all instruction manuals thoroughly before starting use of this drive unit, and follow the technical manuals. Also read the instruction manuals for the installed sewing machine.

1.2 Application and purpose

This drive unit is designed to drive a sewing machine and must not be used for other applications or purposes. Do not use this drive unit until it can be confirmed that safety measures for the installed sewing machine have been taken.

1.3 Work environment

Use this drive unit in dry and well-kept clean locations, e.g. in the clothing industry, and which process dry sewing material. Avoid using this control unit in the following types of environments.

(1) Power voltage

- Place where voltage fluctuation exceeds ±10% of the rated voltage.
- Place where the specified power capacity cannot be secured. (Refer to page 10)

(2) Electromagnetic noise

- Place where strong electric or magnetic fields are generated such as near a large-output high frequency oscillator or high frequency welding machine.

(3) Temperature and humidity

- Place where atmospheric temperature is 35 degree or higher and 5 degree or lower.
- Place subject to direct sunlight or outdoors.
- Near a heat source such as a heater.
- Place where relative humidity is 45% or less and 85% or more, or where dew condensation occurs.
- (4) Atmosphere
- Atmosphere with dust or corrosive gases.
- Atmosphere with combustible gases or explosive atmosphere.
 (5) Altitude Place where altitudes exceeds 1,000m above mean sea level.
- (6) Storage Place where storage temperature is 55 °C or higher and -25°C or lower.
- (7) Vibration If excessive vibration occurs when the control box is installed on the sewing machine, install it separately.

2. Installation

2.1 Motor and control box

- Correctly install according to the attached technical manuals.

2.2 Accessories

- Always disconnect this control unit from the main power supply when installing any accessories listed in the technical manual. (Turn the main switch OFF, and remove the plug from the outlet (power supply line).)

2.3 Cable

- (1) Arrange the connection cable so that excessive force is not applied during use, and do not excessively bend the cable.
- (2) Cables near moving parts (e.g., pulley) must be wired at a minimum distance of 25mm.
- (3) Confirm that the power voltage of the power cable for supplying to the control box meets the specifications on the motor and control box rating nameplates before connecting it to the power line. Connect it to the designated places to supply the power. Perform this step with the power switch turned OFF.

2.4 Grounding

- Correctly connect the power cable grounding to the power supply grounding.

2.5 Accompanying appliances and accessories

- Electric accompanying appliances and accessories must be connected to the place listed in this manual.

2.6 Remova

- (1) Turn the power switch OFF and remove the plug from the outlet (power supply line) before removing the motor or control box.
- (2) Do not pull on the cord when removing the plug. Always hold the plug itself.
- (3) There is a high voltage applied inside the control box, so always wait at least 10 minutes after running the power switch OFF and remove the plug from the outlet (power supply line) before opening the control box panel.

3. Maintenance, inspection and repairs

- Follow the technical manuals for maintenance and inspection of this control unit.
- Repairs and maintenance must be done and approved by specially trained personnel.
- Do not run this control with the ventilation openings of the motor's dust-proof filter blocked or clogged with dust, loose cloth, etc.
- Always turn the power switch OFF and remove the plug from the outlet (power supply line) before replacing the sewing machine needle or bobbin, etc.
- Always use original replacement parts for repairs or maintenance.

4. Other safety measures

- Keep fingers away from all moving machine parts (especially near sewing machine needle, etc.).
- Do not drop this control unit.
- Do not operate this product without parts such as the protective cover or protective devices such as the safety breaker.
- The servomotor surface may reach high temperatures depending on the operation conditions and loads. Do not touch directly.
- If any damage is observed on this control unit, if the drive does not run properly or if operator is uncertain about operation, do not operate the drive unit. Operate the drive only after adjustments, repairs and approvals have been made by qualified personnel.
- The user must avoid making modifications or changes based on user's judgment.
- When system have to be stop in case of emergency, remove the power supply plug from the power supply line.

5. Hazard display, warning display

- (1) This symbol indicates risk that may cause personal injury or risk to the machine when mishandling of products.
- (2) This symbol indicates electrical risks and warnings.
- (3) This symbol indicates thermal risks and warnings.
- Always deliver this instruction manual to the end user.
- Save these technical manuals for future reference.









Caution

- 1. Please remove your foot from the pedal when turning the power ON.
- 2. Always turn the power OFF when leaving the machine.
- 3. Do not inspect the control circuit with a tester.
- 4. Always turn the power switch OFF before tilting the sewing machine, replace the needle or threading the needle.
- 5. Always ground the grounding wire.
- 6. Do not use branched wiring.
- 7. The brakes may not function when the power is turned OFF or when there is a power failure during sewing machine operation.
- 8. Match the connector shape and direction, and insert securely.
- 9. Keep the signal wire as short as possible when connecting the external switch to the connector of control box. If it is long, malfunctions may occur. Use a shield wire when possible.
- 10. Install the sewing machine away from sources of strong noise such as high-frequency welders.
- 11. An optical method is used for the detector's detection element so take care not to let dust or oils get on the detection plate when removing the cover for adjustment, etc. If these do get on the plate, wipe off with a soft cloth and do not scratch the plate. Take care not to let oils enter between the detector discs.
- 12. When the position detector connector or the belt has come off or when the sewing machine is completely locked, the motor will be automatically turned OFF after a set time to prevent damage to the motor. (The motor may not turn OFF if the locking is not complete.) After the problem has been resolved, turn the power OFF and ON and normal operation will be possible. The same operation should be taken when the position detector or wires are broken.
- 13. Always turn off the power switch before connecting or disconnecting each connector
- 14. A high voltage is applied inside the machine, so wait at least 10 minutes after turning the power OFF before opening the control box. There is a cable connecting the PCB on the cover side with the PCB on the box side. When disconnecting the cable, gently disconnect at the connector section. Do not pull with force.

 Control box side

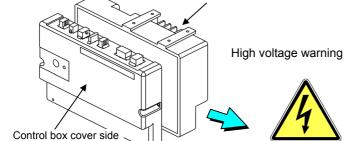



15. Remove the dust that has adhered on the motor's dust-proof filter once every two to three weeks.

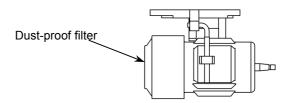

If the motor is run while the filter is clogged, the motor may overheat and affect the motor life.

16. If the fuse blows, remove the cause, and replace the blown fuse with one having the same capacity.

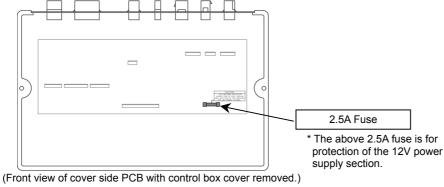

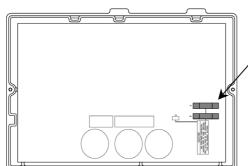


Two 20A Fuses

* The above fuses are for protection of the control box power supply section.




Always wait at least 10 minutes after turning the power switch OFF before opening the control box cover.


(Front view of box side PCB with control box cover removed.)

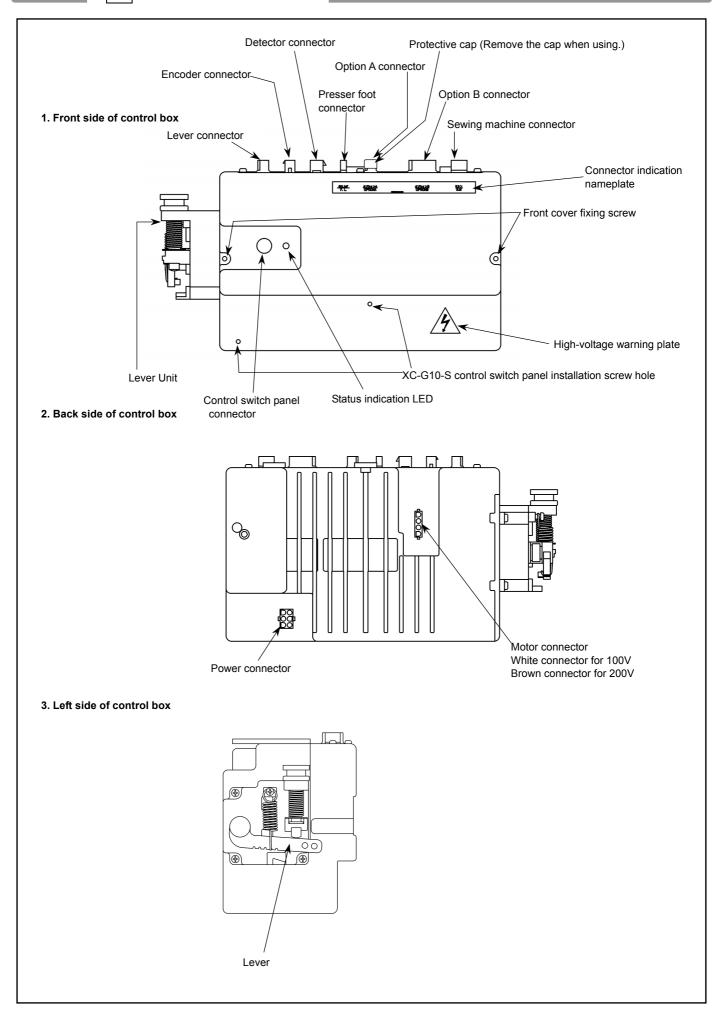


5 Installation

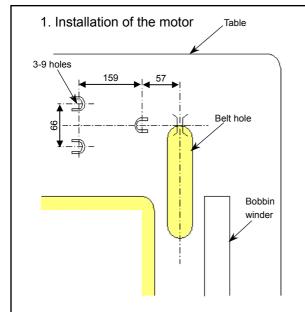

Using the hole opening pattern, open three 9mm holes on the table. Install the motor securely using the installation bolts, washers, spring washers and nuts. The pattern and installation bolts, etc, are included with the motor as accessories.

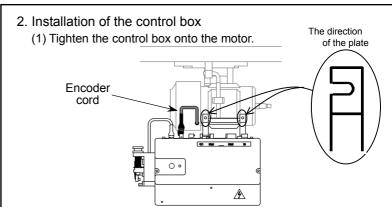

(2) Insert the power cord from the motor into the connector on the back of the control box. Insert the encoder cord from the motor into the encoder connector on the front of the control box.

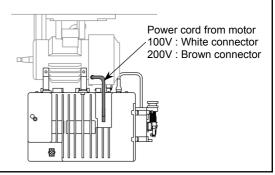

3. Installation of the pulley

* To properly install, the protective cover A (motor side of the protective cover) must be installed onto the motor before the pulley is installed. (Refer to "5. Installing the protective cover".)

Securely tighten the pulley.

Caution Incomplete tightening may cause malfunctions.


Select the correct pulley diameter to ensure complete use of the motor performance.

Selection of the motor pulley:

Motor pulley outer diameter (mm) = $\frac{\text{Normal sewing machine speed}}{(*) \text{Motor speed}} \times \frac{\text{Sewing machine pulley diameter}}{\text{(effective diameter)}} + 5 \text{ mm}$


(*) The motor speed should be set at 3,600rpm. When the motor pulley diameter is selected with the above method and the pulley diameter is too small, select the minimum pulley in the range that the belt will not slip.

(**) Refer to page 24 Simple setting table for Mitsubishi thread trimming sewing machine and motor pulley outside diameter.

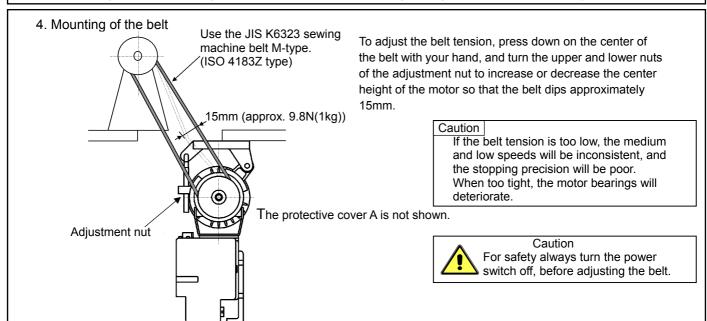


5. Installation of the protective cover (with belt slip off prevention part)

The protective cover is enclosed with the motor as an accessory.

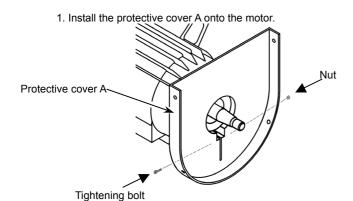


2. Install the pulley and attach the belt. (Refer to "3. Installing the

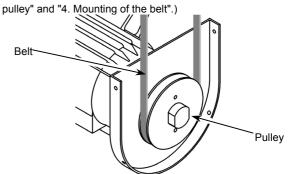


- 3. Install the "belt slip off prevention part mounting plate" onto protective cover B with the following procedures.
 - * Change the direction of the long and short side of the attachment plate according to the motor pulley outer diameter.
- (a) For motor pulley outer diameter ϕ 55 to ϕ 80

(b) For motor pulley outer diameter ϕ 80 to ϕ 125

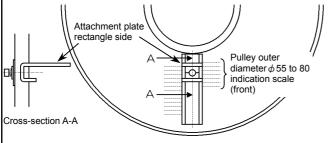


(View from back of protective cover)

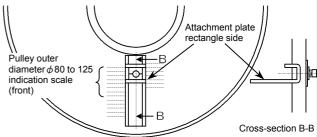



(View from back of protective cover)


- * Set the center of the washer to the pulley diameter indication scale and tighten the bolt.
- * Confirm that the belt does not contact the attachment plate.
- 4. Install the "protective rod" onto the protective cover B with the following steps.
 - * Set the protective rod to the motor pulley rotation direction and install between the belt and motor pulley.

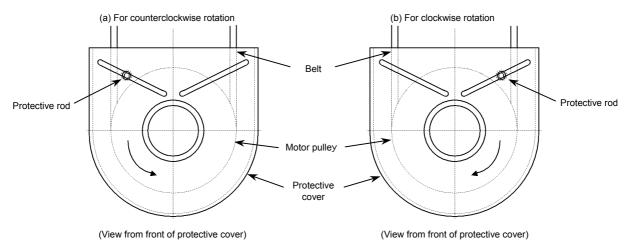


- * Set the center of the protective rod to the position at the center of the belt and motor pulley and tighten the bolt
- 5. Set protective cover B onto protective cover A, and tighten with the four set screws.
- * Confirm that the belt and motor pulley do not contact the protective rod.
- If necessary, adjust the position of the "protective rod" and "belt slip off prevention part mounting plate". Securely tighten after adjusting.

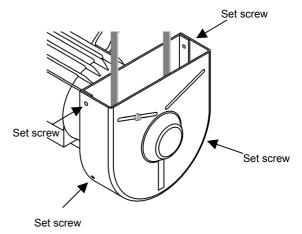


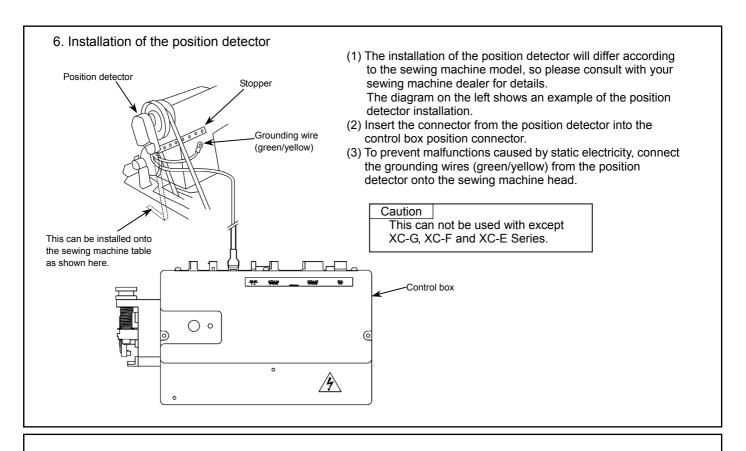


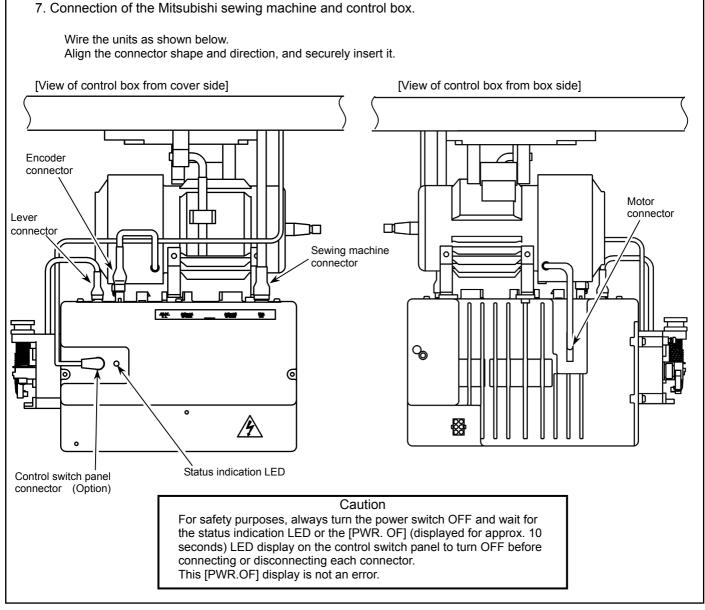

6 Wire and Grounding

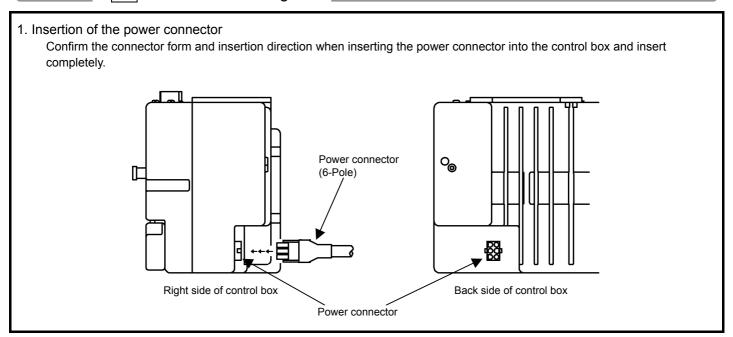


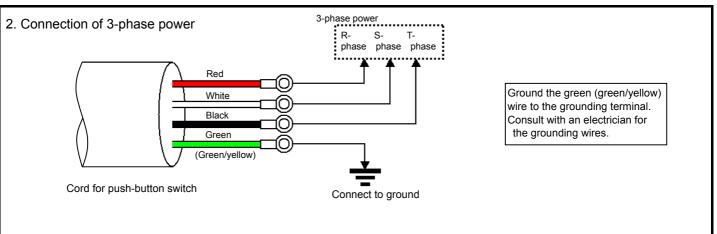

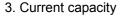

Use a fuse or complete breaker for the power.


Power	Recommended current capacity
Single phase 100 to 120V 550W 200 to 240V 550W	15A
3- phase 200 to 240V 550W	10A

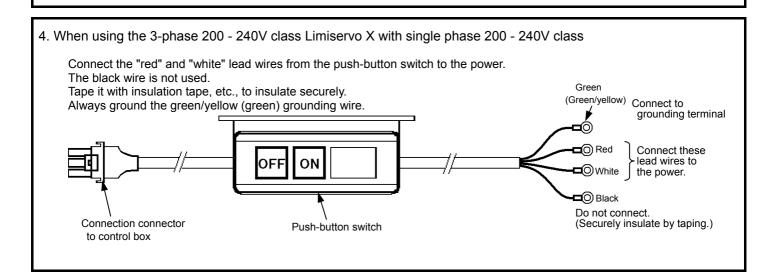

7 Confirmation

1. Before turning switches on......

Places to confirm	Reference
(1) Is the power and capacity suitable ?	Current capacity on page 10.
(2) Is the power voltage the same as the factory preset voltage of the rated nameplate on the side of the control box?	Voltage value given on rated nameplate on side of control box. XC-GMFY-20-05: 200 to 240V XC-GMFY-10-05: 100 to 120V
(3) Are the connectors inserted correctly? -Power connector from push-button switch -Motor connector -Motor encoder connector -Position detection connector	Insertion of the power connector on page 10. Connection of the Mitsubishi sewing machine and control box on page 9. Insertion of the position detector on page 9.
(4) Is the lead wire contacting the V belt?	-
(5) Is the belt tension okay?	Mounting of the belt on page 7.
(6) Are the pulley nuts securely tightened?	Installation of the pulley on page 7.
(7) Can the sewing machine be rotated lightly by hand?	-

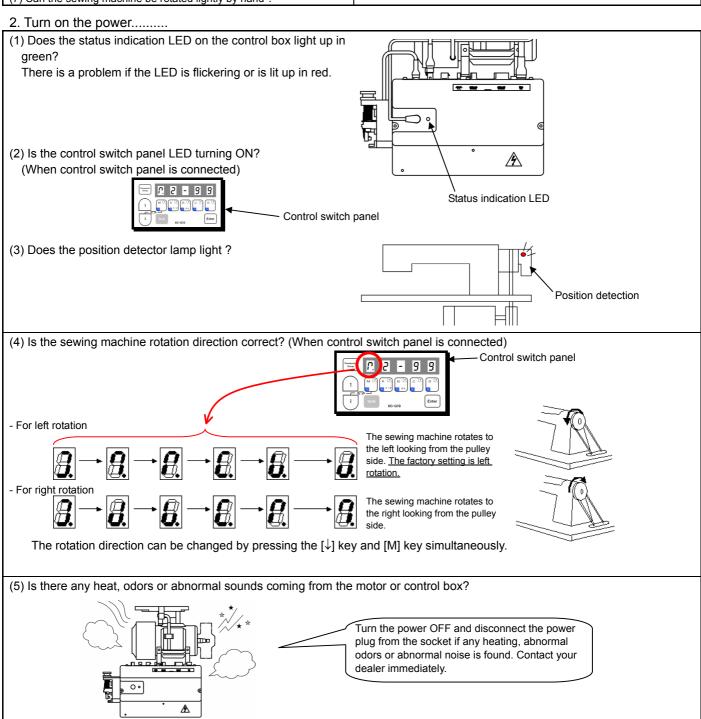

1. Adjustment of stopping position

Adjust this position with the detector installed onto the sewing machine and while stopping at the UP and DOWN positions.


For safety, disconnect the connector for the sewing machine.

(1) Adjustment of UP position

- -Loosen the two set screws on the detector joint, and set the stop position by rotating by hand.
- -If adjustment is not possible by turning the joint, loosen the cross-recessed screw A shown of the following figure, and turn all detector plates simultaneously to adjust to the designated stop position.


(2) Adjustment of DOWN position


- -The relation of the DOWN position and UP position will differ according to the model, so adjust this according to the sewing machine.
- -When changing the DOWN position, remove the detector cover, and turn only the red detector plate to adjust to the designated stop position.
 - (The cross-recessed screw A does not need to be loosened at this time.)
- -Always replace the cover after adjustment.

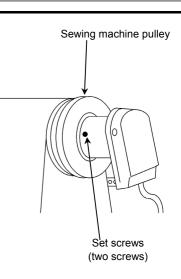


Caution

Refer to the sewing machine instruction manual when adjusting for use with the Mitsubishi sewing machine.

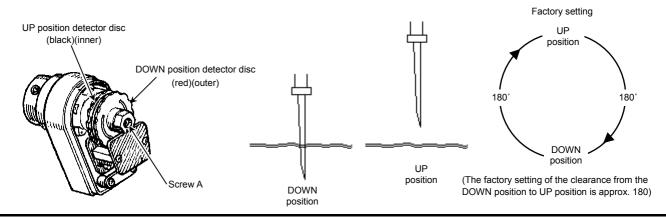

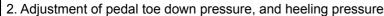

The spring A pressure (toe down pressure) can be adjusted in five levels by changing the position spring A whitch is hooked onto the

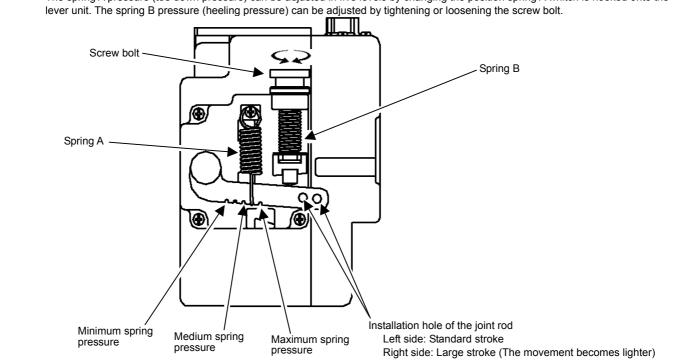


3. Adjustment of operation speed


Adjustment of each speed		Reference	Factory setting (speed)
Maximum speed	Н	Page 25 "To change the maximum speed"	4000
Low speed	L	-	250
Thread trimming speed	Т	-	200
Start tack speed	N	_	1700
End tack speed	V	-	1700
Slow start speed	S	_	250
Operation speed		Adjust between the low speed [L] and hig the [C] and [D] keys on the control switch	
		T. 2 9 9	It is possible to adjust between 0 and 99.% Jkey Adjustment range with the [C] key and [D] key.

Caution

No matter how large the motor pulley diameter is, the speed will not rise higher than the maximum speed H and the speed set with the [C] key and [D] key.

9 Changing the solenoid voltage and output voltage

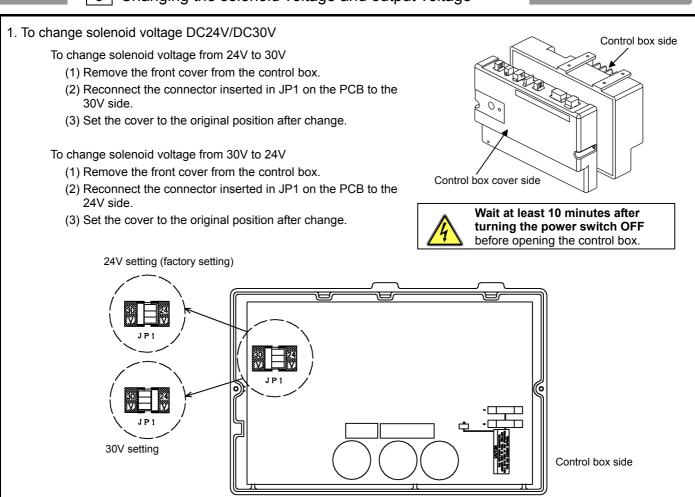

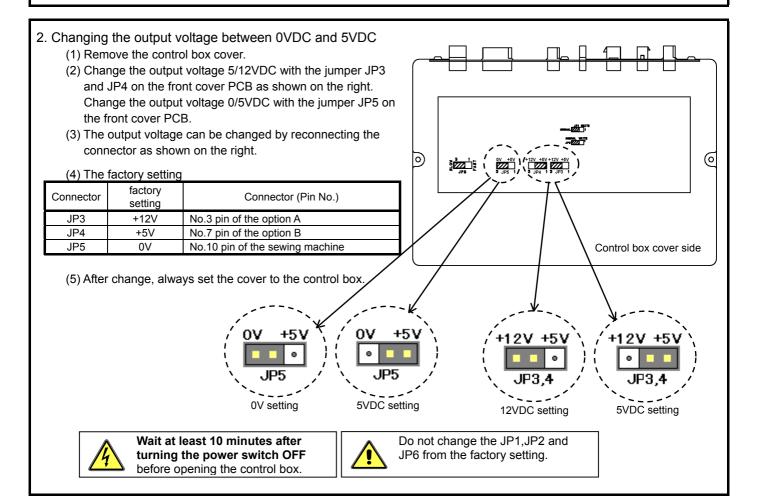


3. How to set the switch for increasing the solenoid return speed.

(1) Remove the cover.





For safety, turn the power switch OFF before opening cover

(2) The solenoid return speed can be increased with the setting of the JP6 connector on the front cover PCB as shown on the right.

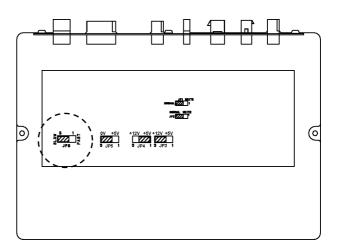

(3) To change the solenoid return speed, pull out the connector and reinsert it into the FAST side.

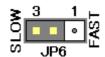

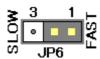

Normal setting

FAST setting

(4) Connector factory settings and solenoid return

Connector	Factory setting	actory setting Output during simple setting Solenoid return				
JP6	SLOW	Sewing machine connector 3-4 pin output	Normal	OA		

(5) After change, always set the cover to the control box.




When you set the JP6 connector to the FAST side, be sure to set the function [OAC] to [OF] in the program mode [C]. If the [OAC] is still set to [ON], which means chopping duty [OAC] still operates, the resistance on the PWB will be burnt out.

10 Operation of the Control Switch Panel Keys(When using XC-G10 type control switch panel)


1. Displays during normal mode and functions of each key

When the power supply switch is turned ON, the rotation direction will display on the LED.M shown below. When the rotation direction is not displayed on LED.M, press the $[\downarrow]$ key any time. This state is called **the normal mode**, and the following keys can be operated.

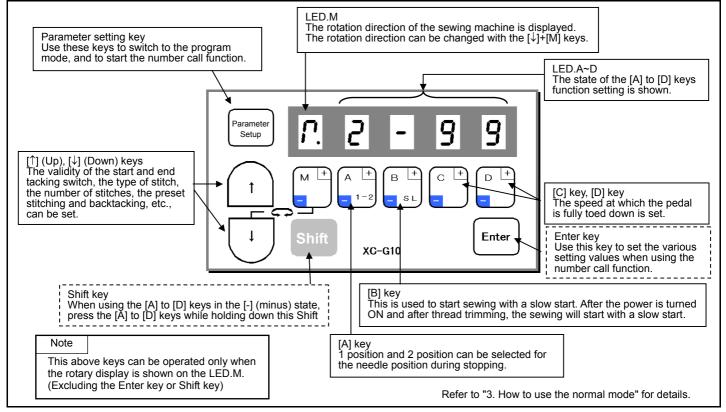

Selection of each mode

The modes can be changed from the normal mode to various program modes and various basic functions and application functions set with this control switch panel. (Refer to "24 Table of Program Mode Function" for details on each mode's function.)

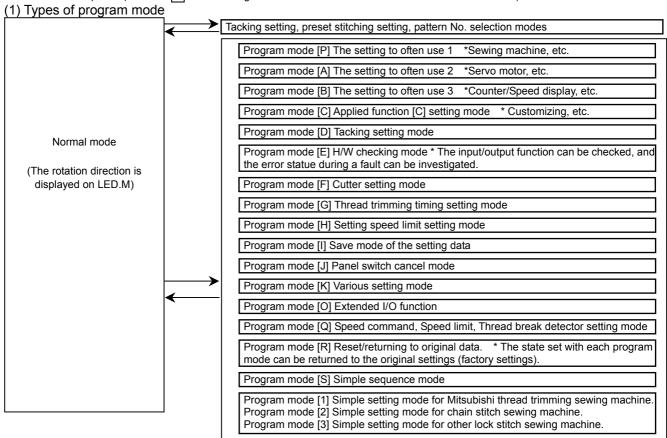


Caution: A program mode cannot be entered from an other program mode.

Always return to the normal mode once before changing the program mode.

Note that when the program mode is selected with the "Direct number call function", a selection exceeding the program mode type can be made with the number selection.

(2) Selection of each program mode from the normal mode.

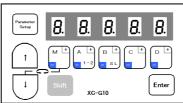


Mode name	Key operation		Digital display		Return to the normal mode									
Tacking type setting mode	Press the [↑] key one time normal mode.	from the	8 - 5 - 5	*The tacking setting mode will be entered.	Press the [↓] key one time.									
No. of tacking stitch setting mode	Press the [↑] key two times the normal mode.	from	Note) Skipping this menu a	*The tacking stitches setting mode will be entered. t the time of pattern No.=4.	Press the [\psi] key two times.									
Preset stitching setting mode	Press the [↑] key three time the normal mode.	es from	- 444	*The preset stitching setting mode. It the time of pattern No.= A to H.	Press the [↓] key three times.									
Pattern No. selection mode	Press the [↑] key four times the normal mode.	from	P. 5 F r. I.	*The pattern No. selection mode will be entered.	Press the [↓] key four times.									
Program mode [P]	While holding down the [↓] key, press the [↑] key for 2 seconds or more from the normal mode.		H. Y O O O	*The display will flicker. *The program mode [P] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.									
Program mode [A]	While holding down the [↓] key, press the [A] key for 2 seconds or more from the normal mode.		G R . L	*The display will flicker. *The program mode [A] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [Ĵ] key, press [↑] key.									
Program mode [B]	While holding down the [↓] key, press the [B] key for 2 seconds or more from the normal mode.	peration". kt section.)	Б. П П О	*The display will flicker. *The program mode [B] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.									
Program mode [C]	While holding down the [↓] key, press the [C] key for 2 seconds or more from the normal mode.	The mode can also be selected with the "Direct number call operation". (Refer to the next section.)	R P S U	*The display will flicker. *The program mode [C] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.									
Program mode [D]	While holding down the [↓] key, press the [D] key for 2 seconds or more from the normal mode.		an also be selected with the "Di	d I	*The display will flicker. *The program mode [D] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.								
Program mode [E]	While holding down the [↓] key , press the [A] key and the [↑] key for 2 seconds or more from normal mode.			can also be sele	can also be sele	can also be sele	can also be sele	can also be sele	can also be sele	can also be sele	can also be sele	can also be sele	1. E	*The display will flicker. *The program mode [E] will be entered. Switch the function item with the [↓] or [↑] key.
Program mode [F]	While holding down the [↓] key, press the [B] key and the [↑] key for 2 seconds or more from normal mode.		■ ■ P - F C - R ■ D	*The display will flicker. *The program mode [F] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.									
Program mode [G]	While holding down the [↓] key , press the [C] key and the [↑] key for 2 seconds or more from normal mode.			*The display will flicker. *The program mode [G] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.									
Program mode [H]	While holding down the [↓] key , press the [D] key and the [↑] key for 2 seconds or more from normal mode.		L H H S O	*The display will flicker. *The program mode [H] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.									

					7	
Program mode [J]	While holding down the [\frac{1}{2}] key, press the [\frac{1}{2}] key and the [A] and the [B] key for 2 seconds or more from normal mode.	eration". tt section.)	■ ■ P - U □ R C. □ F	*The display will flicker. *The program mode [J] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.	
Program mode [K]	While holding down the [↓] key, press the [↑] key and the [A] and the [C] key for 2 seconds or more from normal mode.	The mode can also be selected with the "Direct number call operation". (Refer to the next section.)	P 2 1 0 F	*The display will flicker. *The program mode [K] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.	
Program mode [O]	While holding down the [↓] key, press the [↑] key and the [B] and the [D] key for 2 seconds or more from normal mode.	cted with the "Dire	1 R. 1 n o	*The display will flicker. *The program mode [O] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.	
Program mode [Q]	While holding down the [↓] key, press the [A] key and the [C] key for 2 seconds or more from normal mode.	can also be sele	U C 5. o F	*The display will flicker. *The program mode [Q] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.	
Program mode [S]	While holding down the [↓] key , press the [B] key and the [D] key for 2 seconds or more from normal mode.	The mode	The mode	■	*The display will flicker. *The program mode [S] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.
Program mode [I]	While holding down the [\frac{1}{2}] press the [\frac{1}{2}] key and the [B] the [C] key for 2 seconds of from normal mode.] and	*The display will flicker. 5		Press [D] key for 2 seconds or more. [*1]	
Program mode [R]	While holding down the [\forall] press the [B] and the [C] ke seconds or more from norm mode.	y for 2	■ ■ P - E 5 E C	*The display will flicker. *The program mode [R] will be entered.	Press [D] key for 2 seconds or more. [*1]	
Program mode [1] Simple setting	While holding down the [↓] key, press the [A] and the [B] key for 2 seconds or more from normal mode.		2800	*The display will flicker. *The program mode [1] will be entered. Switch the function item with the [↓] or [↑] key.	Press [D] key for 2 seconds or more. [*1]	
Program mode [2] Simple setting	While holding down the [↓] key, press the [C] and the [D] key for 2 seconds or more from normal mode.		P U 2 U 4	*The display will flicker. *The program mode [2] will be entered. Switch the function item with the [↓] or [↑] key.	Press [D] key for 2 seconds or more. [*1]	
Program mode [3] Simple setting	While holding down the [↓] press the [A] and the [D] ke seconds or more from norm mode.	y for 2	a 6 9 7 L	*The display will flicker. *The program mode [3] will be entered. Switch the function item with the [↓] or [↑] key.	Press [D] key for 2 seconds or more. [*1]	


^[*1] To return to the normal mode without executing each function in mode [I], [R], [1], [2]or [3], press the [\downarrow] and [\uparrow] keys simultaneously.

(3) Direct number call function (Directly selecting program mode function item from normal mode) The number of each function listed in section "23 Function list" can be directly designated to call the function item. [Basic procedures] (1) (The normal mode) in the normal mode and switch to the number selection mode. Enter (1000th) (100th) (10th) (1st place) (2) (The number |0| selection mode) Press the keys to display the target function item number. (To use the above "+/-" key as a "-" key, press while holding down When the target function item number appears, press (Number 33 is called out in this example.) This completes calling of the function item. (In this example, function name [AT.] was called out.) 13 Function list Function No. Maximum speed 0000 0001 Low speed : Thread trimming protection signal (S6) logica 0032 AT [Miscellaneous/Precautions] - Press to return to the normal mode. The display will return in the order of [Function item] → [number selection mode] → [normal mode]. after changing the setting for each function item. - Press The display LED will flicker, and after the changed items are set, the mode will change to the [number selection mode]. (The changed items will be canceled if the normal mode is returned to without pressing - The display LED will flicker if a function number that does not exist is displayed. Select a number that exists. - The range of the number designation can be limited as shown below by pressing entering the [number selection mode] and then pressing the (1) Selection of number for each mode (P, A, B, C...) (Selection can be made in A mode range) (2) Selection of all mode numbers (Selection can be made in all mode ranges)


^{*} Refer to the status transition diagram given on the next page.

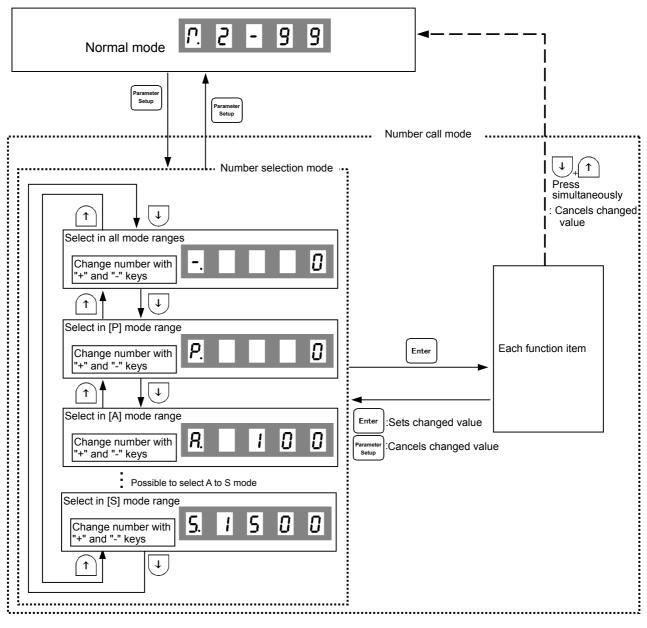

Using the normal mode

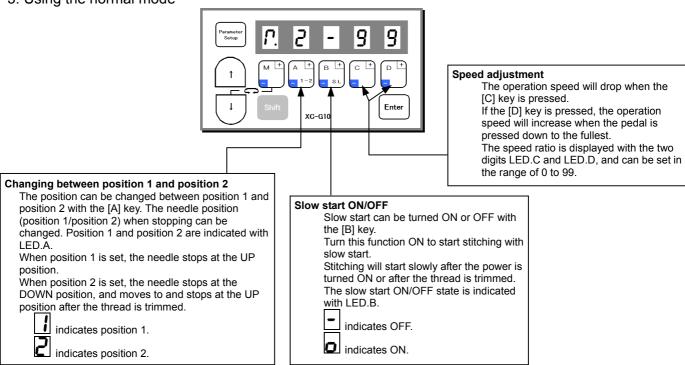


4. Changing to the tacking, preset, pattern NO. selection mode

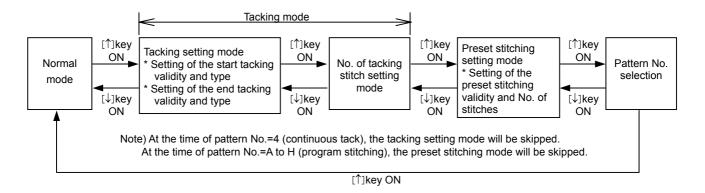


(1) Tacking setting mode (At the time of pattern No.=4, this mode will be skipped.)

When the [↑] key is turned ON, will display above the [M] key, and the tacking setting mode will be entered. The validity and type of start and tacking can be set here.

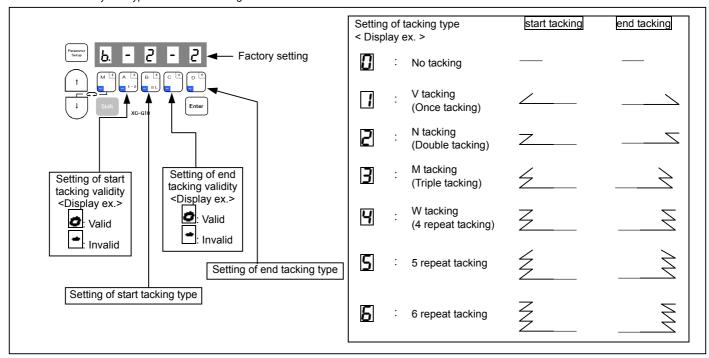

(2) No. of tacking stitches setting mode


When the [↑] key is turned ON again, will display above the [M] key indicator, and the No. of stitches can be set.]

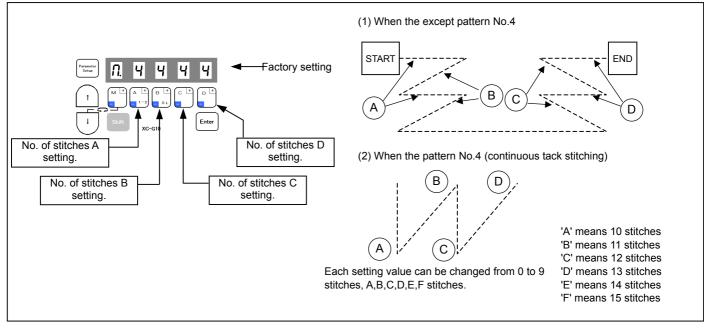

From the library of Superior Sewing Machine & Supply LLC - www.supsew.com


(3) Preset stitching setting mode

The preset stitching setting mode is entered when the [↑] key is turned ON again. The validity of preset stitching and the number of stitches N can be set.

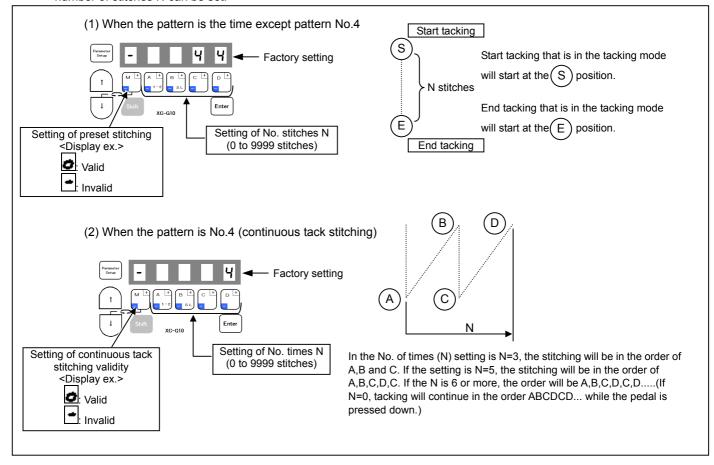

(4) Pattern No. selection mode


When the [↑] key is turned ON again, and the pattern No. selection mode will be entered. Selecting of preset stitching setting (pattern 1 to 3), continuous tack stitching (pattern 4), program stitching (pattern No. A to H).

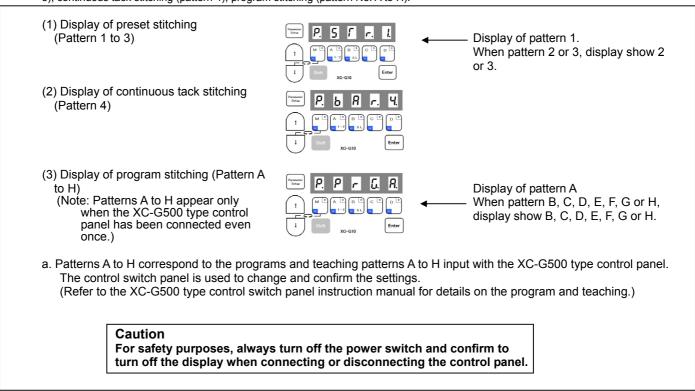

5. Using the program mode [1] simple setting


To set the settings to a specific machine in simple setting. (For example, to set to "LU2-4410-B1T" ... Function setting [410B])

(1)

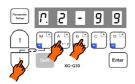


*Enter the program mode [1]. $([\downarrow] + [A] + [B] \text{ keys})$

(3)

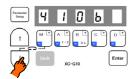


*Press the [\downarrow] key or [\uparrow] key to change the function to [410B].



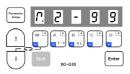


*The mode will return to the normal mode when the [D] key is held down over two seconds or more. (This completes the settings.)

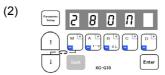

*The mode will change to the program mode [1].



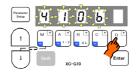

*When the [D] key is held down, [410B] will flicker, and the changes to the setting will be set.

Description


- A. Select the function name corresponding to the sewing machine model from the following simple setting table. The item will change sequentially each time the $[\downarrow]$ or $[\uparrow]$ key is pressed in step (3). (The factory setting is [280M].)
- B. After selecting the function name, holds down the [D] key over 2 seconds or more. The function name's set speed and function setting will be set automatically. To return to the normal mode without setting the function name here, press the [\uparrow] key while holding down the [\downarrow] key.

Caution

When this function is set, all previously set details will be cleared. The set speed and function setting corresponding to the selected sewing machine model will be set automatically.

- C. The set function settings (simple setting value (type)) can be confirmed with the function name corresponding to the set sewing machine model using the following procedures (E mode).
 - (1) Call out the program mode [E] function [T].(The mode can also be called out directly with a number[772]. Refer to pages 17 to 20.)



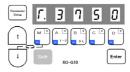

The function name corresponding to the set sewing machine model will appear.

(For example when [3750] is set.)

(3) Return to the normal mode.

(Press [↓]+[↑] or Parameter Setup

ſ					Speed setting					Function setting			
	Function name	Digital display	Sewing machine type	High speed (H)	Low speed (L)	Thread trimming speed (T)	Start tacking speed (N)	End tacking speed (V)	D mode tack alignment (BM)	A mode weak brake (BK)	A mode gain selection (GA)	pulley outside diameter (mm)	
*3	280M	580N	LS2-1280-M1T (W)	4000	250	200	1700	1700	OFF	OFF	L		*1
	280H	580H	LS2-1280-H1T(W)	3000	250	200	1200	1200	OFF	OFF	L		
	280B	580P	LS2-1280-B1T	3000	250	200	1200	1200	OFF	OFF	L		
۷	380M	3800	LS2-1380-M1T(W)	4000	250	200	1700	1700	OFF	OFF	L		
Ī	380H	380H	LS2-1380-H1T(W)	3000	250	200	1200	1200	OFF	OFF	L		
Ī	380B	3806	LS2-1380-B1T	3000	250	200	1200	1200	OFF	OFF	L	85	
Ī	210M	5 10U	LS2-2210-M1T(W)	4000	250	200	1700	1700	OFF	OFF	L		
Ī	230M	230N	LT2-2230-M1TW	3700	250	175	1200	1200	OFF	OFF	Н		
Ī	230B	5306	LT2-2230-B1T	3000	250	175	1200	1200	OFF	OFF	Н		
Ī	250M	2500	LT2-2250-M1TW	3000	250	175	1200	1200	OFF	OFF	Н		
Ī	250B	250b	LT2-2250-B1T	3000	250	175	1200	1200	OFF	OFF	Н		
Ī	3310	33 10	LY2-3310-B1T	2000	250	225	700	700	ON	OFF	Н		
Ī	3319	33 19	LY2-3319-B1T	2000	250	225	700	700	ON	OFF	Н		*2
l	3750	3750	LY2-3750-B1T	2000	250	200	700	700	ON	OFF	L		
Ī	6840	6840	LY3-6840-B0T	2000	250	150	700	700	ON	OFF	Н	65	
Ī	6850	68S0	LY3-6850-B1T	2000	250	150	700	700	ON	OFF	L		
Ī	410B	4 10b	LU2-4410-B1T	2000	250	175	700	700	ON	OFF	L		
*8	412B	4 iSP	LU2-4412-B1T	2000	250	175	700	700	ON	OFF	L		
	430B	4306	LU2-4430-B1T	2000	250	175	700	700	ON	OFF	L		
	4650	4650	LU2-4650-B1T	3000	250	175	700	700	ON	OFF	L		
*8	4652	4852	LU2-4652-B1T	3000	250	175	700	700	ON	OFF	L	85	
	4710	40 IO	LU2-4710-B1T	3000	250	175	700	700	ON	OFF	L	65	
	4730	4730	LU2-4730-B1T	2500	250	175	700	700	ON	OFF	L		
	630	630	LX2-630-M1	800	280	160	500	500	ON	ON	L	65	
٨	280E	3085	LS2-1280-M1T(W)	5000	250	200	1700	1700	OFF	OFF	Н	110	
	FL	۶Ľ	*5	5000	250	200	1700	1700	OFF	OFF	L		
	N	C	*6	5000	250	200	1700	1700	OFF	OFF	L		
	LOAD2	Lod2	*7										
*4	LOAD1	Lodi	*7										

^{*1} Factory setting is [280M].

 $(Note: In \ case \ of \ LY2-3310/3319/3750 \ it \ is \ 80 \ mm, \ LU2-4410/4412/4430/4650/4652/4710/4730 \ it \ is \ 85 \ mm.)$

^{*2} The effective diameter of the sewing machine pulley is 70 mm.

^{*3} A function name is displayed in order to the direction of $[\downarrow]$ every time it presses a $[\downarrow]$ key.

^{*4} A function name is displayed in order to the direction of $[\uparrow]$ every time it presses a $[\uparrow]$ key.

^{*5} For sewing machine with foot lifter, without thread trimmer.

^{*6} For needle positioner.

^{*7} It is possible to load the saved setting data by the function of [SAVE*] in the program mode [1]. (Program mode [1]: $[\downarrow]+[\uparrow]+[B]+[C]$ key)

⁽The factory setting of [LOAD1] is the setting data of [412B] and the factory setting of [LOAD2] is the setting data of [280M].)

^{*8} The short remaining thread trimming function is set.

11 Example of setting the program mode

- 1. To change the maximum speed (Ex. to change to 3500 rotations) Function setting [H.3500]
 - (1)

 Call out the program mode [P] function [H].

 (This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0000"))

(2) H. 3 5 0 0.

Press the [+] and [-] keys ([A], [B], [C], [D]), and set to "3500".

(3) Entering the normal mode

For mode call: [↓] + [↑]

For direct number call: Set with Enter and then press Parameter Setup

Description

- A. The setting range of the maximum speed is 0 to 8999 rotations.
- B. By pressing each of the [A], [B], [C] and [D] keys, the setting value will change between 0 and 9. (However, the [A] key is only between 1 and 8.) To lower the value, press the [A], [B], [C], [D] keys while holding down the [Shift] key.
- C. The factory setting is [4000 rotations].
- D. Low speed, thread trimming speed, start tacking speed, end tacking speed, medium speed and slow start speed can be set in the same manner.

Memo
The LED.D dot will flicker after the setting is changed.
This indicates that the factory setting value (default value) has been changed.



(This explanation regarding the flickering dot is omitted in the following explanations.)

- 2. To set the standing work typeFunction setting [AT.ON]
 - (This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0033"))



*Press the [D] key and set to "ON" for the setting value.

(3) Entering the normal mode

For mode call: [↓] + [↑]

For direct number call: Set with Enter and then press

Description

A. This is used for high speed operation during standing operations.

When setting it to turning ON, it operates at the speed with the rate which has been set with the [C] and the [D] key in normal mode regardless of the pedal stepping quantity.

- B. This setting is first priority to the key switch [AUTO] of control switch panel (XC-G500 type).
- C. The setting value will alternate between [OF] and [ON] with each press of the [D] key in step (2). (The factory setting is [OF])


Note: The switches for standing operation are connected as shown on 27-3-(2) page 210. Be sure to set the function [PDS] to ON in the program mode [C] as shown on page 210.



(1) Call out the program mode [C] function [IE].

(This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0312"))

(2)

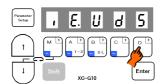


*Press the [D] key and set to "UDS" for the setting value.

Entering the normal mode

For mode call: $[\downarrow]$ + $[\uparrow]$

For direct number call: Set with and then press

sewing machine connector

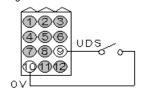

Description

- A. Turning ON the backstitching switch connected No.9 pin in sewing machine connector, backstitching (reverse feed) will start while the sewing machine is running. Half-stitch operation will start while the sewing machine is stopped.
- B. The setting value will be changed with each press of the [D] key in step (2). (The factory setting is [S7])


Note) When using this function, always return to the normal mode before starting operations.

4. Outputting puller output to spare output 02 Function setting [O2.PUL] + [O2C.ON] (Example: To set to half-wave 50%duty)

(1) Call out the program mode [C] function [O2].

(This can be called with mode call or direct number call. Refer to pages 17 to 20.

(Direct call number = "0421"))

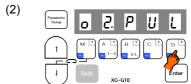

*Press the [D] key and set to "PUL" for the setting value.

(3) Call out the program mode [C] function [O2C].


For mode call: [↓]

For direct number call: Set with _____, select the number [423], and then press _____

*Press the [D] key and set to "ON" for the setting value.

(5) Entering the normal mode For mode call: $[\downarrow] + [\uparrow]$


For direct number call: Set with

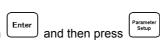

Description

A. Select puller output [PUL]. Set to connect [O2] and [PUL].

B. The spare output O2 turns ON only when the presser foot lifter is operating.

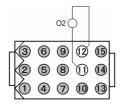

- 5. To confirm the position where the needle passed through the fabricated to raise the penetration strength of the first stitch with the external switch. function setting [IC.BCR]
 - (1) Call out the program mode [C] function [IC].

 (This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0306"))
 - (2)

 Purmetry

 I

 I

 M

 A

 B

 C

 D

 I

 Shift

 NO ALI

 Enter

*Press the [D] key and set to "BCR" for the setting value.

(3) Entering the normal mode For mode call: $[\downarrow] + [\uparrow]$

For direct number call: Set with

Enter and then press Parameter Setup


Description

A. This is used to increase the penetration strength of the first stitch when the fabric is thick. Each time the switch [BCR] connected to the No.6 pin in the option A connector is turned ON, the (forward)-(reverse) operation will be repeated, and the needle will stop right with forward operation, above the fabric. However, when the operation signal is turned ON and the needle is stopped the sewing machine will operate forward after reversing once. When stopped with reverse operation, forward operation will start from that position.

*The needle position stop angle is set with the needle position stop angle [C8] in the program mode [P]

B. Each time the [D] key is pressed in step 2), the set value will be changed. (factory setting is [S0])


Note) When using this function, always return to the normal mode before starting operations.

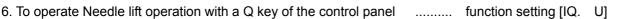

(1) Call out the program mode [C] function [IQ].

(This can be called with mode call or direct number call. Refer to pages 17 to 20.

(Direct call number = "0351"))

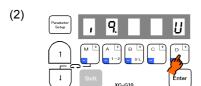

*Press the [D] key and set to "U" for the setting value.

(3) Entering the normal mode


For mode call: [↓] + [↑]

For direct number call: Set with Enter and then press

Description

A. When the [Q] key of the control panel is pushed, the needle lift oparation will start.

B. The setting value will be changed with each press of the [D] key in step 2). (Factory setting is [NO])

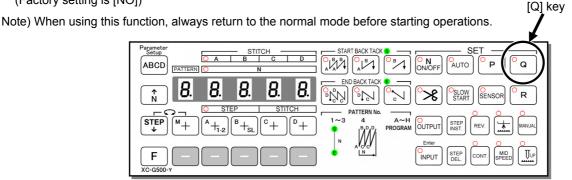


7. Setting the number of stitches to the UP position stop after fabric end is detected with optical sensor, etc. Function setting C mode [IA. PSU] and P mode [PSU.10]

(2)


(5)

(Example: Setting to 10 stitches)

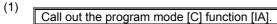

(This can be called with mode call or direct number call. Refer to pages 17 to 20.

(Direct call number = "0300"))

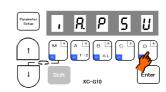

* Press the [D] key and set the value to "PSU".

(3) Set the function [IA] settings.


For mode call: $[\downarrow] + [\uparrow]$

For direct number call: Set with

(4) Call out the program mode [P] function [PSU]. (This can be called with mode call or direct number call. Refer to

pages 17 to 20.

(Direct call number = "0012"))

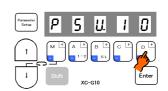


Press the [C] and [D] keys and set the value to "10".

Entering the normal mode

For mode call: $[\downarrow] + [\uparrow]$


For direct number call: Set with

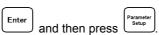


Description

A. Set both the C mode [IA] and P mode [PSU] functions.

- B. When the output from the optical sensor, etc., connects with the No. 2 pin of the option A connector and the optical sensor turns ON, the thread will be trimmed and the needle will stop at the UP position after ten stitches.
- C. The setting value will change sequentially each time the [D] key is pressed in step (2). (The factory setting is [PSU].)
- D. The number of stitch setting range is 0 to 99 stitches.
- E. The setting value will change between 0 and 9 each time the [C] and [D] keys are pressed in step (5).

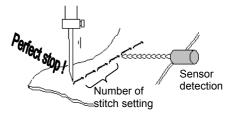

Connection example

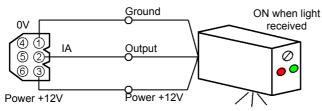

Option A connector

Refer to the Instruction Manual enclosed with the sensor for details on handling the sensor.)

Please choose the one of the following specification to be an optical sensor.

Sensor supply source: DC12V (40mA max.) Sensor output type: NPN open collector type (Residual voltage: 0.4V max. when 5V / 2.0mA) 8. To continue presser foot lifting after the thread trimming, and to bring down the presser foot after the time set on the timer has passed Function setting [FUM.ON]+ [FU.C] (1) Call out the program mode [P] function [FUM]. (This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0021")) (2)*Press the [D] key and set to "ON" for the setting value. (3)Call out the program mode [P] function [FU]. For mode call: [\] Enter For direct number call: Set with select the direct call number "0022", and then press (4)*Press the [D] key and set to "C" for the setting value. (5)Entering the normal mode For mode call: $[\downarrow] + [\uparrow]$ For direct number call: Set with Description A. Set both [FUM](21) and [FU](22) functions. B. Each time of the [D] key is pressed in step (2), the set value will alternate between [OF] and [ON]. (The factory setting is [OF]) C. Each time the [D] key is pressed in step (4), the set value will change in order of [M][C][A][T]. (The factory setting is [M]) D. The timer time can be adjusted with the FUM timer setting [FCT](23) in the [C] mode. (The factory setting is 12 sec.) 9. When after trimming thread while sewing thick fabric, needle is stuck and fabric cannot be removed Function setting [RU.ON] (1)Call out the program mode [P] function [RU] (This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0036")) (2)* Press the [D] key and set the value to "ON". (3)Entering the normal mode For mode call: $[\downarrow] + [\uparrow]$

Description

For direct number call: Set with

A. After the thread is trimmed, the motor is run in reverse, and the needle is stopped near the needle bar top dead center. The reverse run angle can be set with [R8] in two-degree increments between 0 and 500. (The factory setting is [30 degrees].) [R8] can be set by pressing the [\darkslash] key after setting the [RU] function in step (2).

and then press


B. The setting value will alternate between [OF] and [ON] each time the [D] key is pressed in step (2). (The factory setting is [OF].)

10. To display the rotation speed on the control switch panel Function setting [S.****]

(1) Call out the program mode [B] function [S].


(This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0200"))

(2)

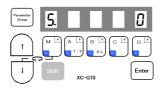

* The rotation speed is indicated as "0" when the sewing machine stops.

(3)

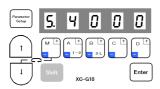

- * For example, if the maximum speed setting is 4000 rotations, the displayed speed will be [S.4000] when the pedal is fully toed down as shown above.
- (4) Return to the normal mode after confirming

For mode call: $[\downarrow] + [\uparrow]$

For direct number call: Press twice.


Description

A. The rotational speed at which the sewing machine is in running is displayed.

- B. If the speed differs from the predicted speed, check the P mode's maximum speed setting [H.] or the speed adjustment setting for the normal mode.
- 11. To run without the detector (when the detector is broken) function setting [NOS.ON]
 - (1) Call out the program mode [A] function [NOS].

 (This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0112"))

(2)

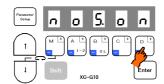

* Press the [D] key and set the value to "ON".

(3) Entering the normal mode

For mode call: $[\downarrow]$ + $[\uparrow]$ For direct number call: Set with and then press

Description

A. Only variable-speed operation will be possible. Set position stopping and thread trimming will not be possible


B. Each time the [D] key is pressed, the setting will alternate between [OF] and [ON]

12. To adjust the tacking accurately

(1) To adjust tacking surely Function setting [D1. CST] + [CT. 10] (To set the stop time at each tacking corner to 100 msec.)

(1) Call out the program mode [D] function [D1].

(This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0600"))

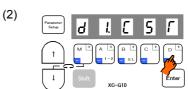


*Press the [D] key and set to "CST" for the setting value.

(3) Call out the program mode [D] function [CT].

For mode call: [↓]

For direct number call: Set with enumber, select the number

"0602", and then press

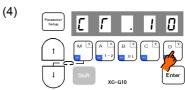

*Press the [C], [D] key and set to "10" for the setting value.

(5) Entering the normal mode

For mode call: $[\downarrow] + [\uparrow]$

For direct number call: Set with and then press

Description

A. Set the start/end tacking and No. of switches with Page 21 before making the above setting.


B. When using W tacking, the sewing machine will stop at each corner for 100msec, so the tacking is surely executed.



- C. Each time the [D] key is pressed in step (2), the setting will change in the order of [M], [D], [N], [CST], [CSU] and [CSD]. (The factory setting is [M])
- D. The setting range of the stop time is 0 to 990 msec. in 10-msec. intervals. The setting display 10 refers to 100 msec., and 20 to 200 msec. (The factory setting is 50 msec.)
- E. The setting value will change between 0 and 9 each time the [C] and [D] key is pressed in step (4). To lower the value, press the [C] or [D] key while holding down the [Shift] key.
 - (2) To align tacking when start/end tacking speed is less than 1000 rpm. Function setting [BM. ON]
 - (1) Call out the program mode [D] function [BM].

(This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0603"))

(2)

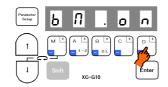

*Press the [D] key and set to "ON" for the setting value.

Entering the normal mode

For mode call: $[\downarrow]$ + $[\uparrow]$

For direct number call: Set with and then press

Description

A. Set function [BM] to [ON] when start/end tacking speed is less than 1000rpm

- B. Set function [BM] to [OF] when start/end tacking speed is 1000rpm or higher. This BM function can be used for a rough tacking alignment of the start and end tacking.
- C. Each time the [D] key is pressed in step (2), the setting will alternate between [OF] and [ON]. (The factory setting is [OF].)

Note) This function can be used for normal tacking (not to stop at each corner).

When the function setting [D1. CST] is set, this function setting [BM. ON] will be invalidated.

13. Application example of the tacking funct(1) To adjust tacking accurately by the(To set the stop time at each tacking corne	stop time at each tac	acking corner to short time [D1. CST] + [CT. 1]
(1) Call out the program mode [D] function (This can be called with mode call or direct pages 17 to 20. (Direct call number = "0600"))	on [D1].	*Press the [D] key and set to "CST" for the setting value.
(3) Call out the program mode [D] function For mode call: [↓] For direct number call: Set with Enter "0602", and then press Enter.	on [CT]. (4	*Press the [C], [D] key and set to "1" for the settin value.
(5) Entering the normal mode		

Description

A. Set the type of start/end tacking and the no.of stitches before making the above setting. (Refer to page 21)

and then press


B. This setting is good for adjust tacking accurately.

For direct number call: Set with

For mode call: $[\downarrow] + [\uparrow]$

- C. Each time the [D] key is pressed in step 2), the setting will change in the order of [M], [D], [N], [CST], [CSU] and [CSD]. (factory setting is [M])
- D. The setting range of the stop time is 0 to 990 milliseconds in 10-millisecond intervals. The setting display 1 refers to 10 milliseconds, and 10 to 100 milliseconds. (factory setting is 50 milliseconds)
- E. Each time the [C] key is pressed in the step 6), the set value will change from 0 to 9, and each time the [D] key is pressed, will change from 0 to 9.
 - (2) To be continuous sewing the next straight line stitching without speed down when start tacking is completed. function setting [D1. N]
 - (1) Call out the program mode [D] function [D1].

 (This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0600"))

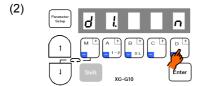

*Press the [D] key and set to "N" for the setting value.

(3) Entering the normal mode

For mode call: [↓] + [↑]

For direct number call: Set with

Enter

and then press

Description

- A. This function is available when the start tacking speed is high.
- B. It can be continuous sewing the next straight line stitching without speed down when start tacking is completed. This is valid when the Operation mode during start tack completion D2 is [CON].
- C. Each time the [D] key is pressed in step 3), the setting will change in the order of [M], [D], [N], [CST], [CSU] and [CSD]. (factory setting is [M])

14. Setting the tacking stitch correction

To correct when the set number of tacking stitches does not match the number of actual stitchesFunction setting [BT1.4] + [BT2.4] + [BT3.8]

(To stitch three start and end tacking stitches (Fig. 1), but actual stitches as shown in (Fig. 2).)


(1) Call out the program mode [D] functions [BT1] to [BT4].

(This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = from "0604" to "0606"))

- Confirm that [BT1] to [BT4] are all set to "0". If not set to "0", reset to "0", and then stitch to check the number of tacking stitches. (If the stitches does not match, correct with the following steps.)
- In Fig.2, there are four stitches at the forward section of the start tacking. Since there is one extra stitch, decrement the number of correction stitches by 1. (Point A)

Call out the program mode [D] function [BT1].

(This can be called with mode call or direct number call "604". Refer to pages 17 to 20.)

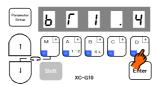


In the following table, the number of correction stitches "-1" corresponds to 4. Set [BT1] to 4.

After (3) is set (Fig. 3), there will be one less stitch at the forward section. The backward section is then incremented by one stitch for a total of four stitches. Decrement the number of correction stitches by 1. (Point B)

Call out the program mode [D] function [BT2].

For mode call: [\$\frac{1}{2}\$]

For direct number call: Set with select the number "605", and then press

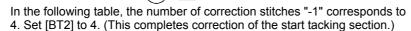

In Fig. 4, the backward section of the end tacking has five stitches, which is two stitches over. Decrement the number of correction stitches by 2. (Point

Call out the program mode [D] function [BT3].

For mode call: [\$\frac{1}{2}\$]

For direct number call: Set with select the number "606", and then press





In the following table, the number of correction stitches "-2" corresponds to 8. Set [BT3] to 8. (The backward section now has three stitches. The forward section is increased to two stitches for a total of three stitches.) (Fig. 1)

(6)Entering the normal mode


For mode call: $[\downarrow] + [\uparrow]$


For direct number call: Set with

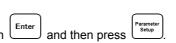


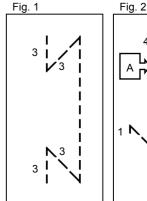


Set stitches

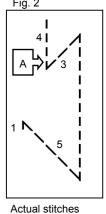

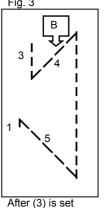

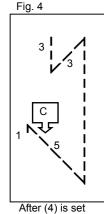

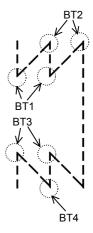

- BT1: Correction for forward start tacking. BT2: Correction for backward start tacking.
- BT3: Correction for backward end tacking.
- BT4: Correction for forward end tacking.

Relation of number of correction stitches and setting value

					10.00.0	J	JI 01 0011	000.000			,					
Setting value	9	8	7	6	5	4	3	2	1	0	Α	В	С	D	Е	F
Number of correction stitches	-2 ¹ / ₄	-2	-1 ³ / ₄	-1 ² / ₄	-1 ¹ / ₄	-1	- ³ / ₄	- ² / ₄	- ¹ / ₄	0	+1/4	+2/4	+3/4	+1	+1 ¹ / ₄	+12/4

[2] When up counter amount "U" become the setting amount "P", sewing will be prohibited. [3] When the input signal "I1" is turned on, Up counter amount become zero and sewing become possible. Call out the program mode [C] function [I1]. (This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0357")) * Press the [D] key and set the value to "CCU". (3)Set the function [11]. For mode call: $[\downarrow] + [\uparrow]$ For direct number call: Set with (4) (5)Call out the program mode [B] function [P]. (This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0203")) Press the [A] to [D] keys and set the value to "100". (6)(7) Call out the program mode [B] function [CUP] For mode call: [\$\frac{1}{2}\$] For direct number call: Set with select number [205], and Ente * Press the [D] key and set the value to "PR". then press (8) Call out the program mode [B] function [UPC]. (9)UPC.on For mode call: [\] For direct number call: Set with select number [208], and * Press the [D] key and set the value to "ON". then press (11)Call out the program mode [B] function [PRN] For mode call: [\display] For direct number call: Set with select number [216], and then press * Press the [D] key and set the value to "ON". Entering the normal mode For mode call: $[\downarrow] + [\uparrow]$ and then press For direct number call: Set with Note) [P] key function selection (Factory setting is [CCU].)[C] mode [IP]=[CCU] : Clear UP counter (counter with control panel [P] key clearness)

Description

[C] mode function selection

[I1.CCU]: Input signal "I1" is set to UP counter clear function.

[B] mode function selection

[P. 100] Set the setting amount of up counter "P". This amount become the target amount for up counter.

*[U. 0] Current up counter amount "0"

15. Example of setting counter function

(1) UP counter for product amount (one hundred times)[1] Up counter amount "U" is add at each thread trimming.

[CUP.PR]: "PRN" function is that up counter is added at each trimming time.

("PRN" is set "1", up counter is added each trimming time in this example)

*[USC. ST]:When the amount of current up counter "U" become setting amount "P", sewing will be prohibited Input signal "I1" is set to the following function. When it is turned on, sewing become possible.

[UPC.ON] Set "UPC" to "ON" to use up counter.

[PRN. 1] one trimming time add one count amount.

Items marked with an asterisk * are the factory settings.

(2) When using down counter as a bobbin thread level counter (Ending count after 10,000 stitches) [1] The current down counter value [D] is decremented by one each time ten stitches are stitched. [2] When the remaining down counter [D] reaches 0, stitching is prohibited after trimming (Stitching is possible until the thread is trimmed.) [3] When the external switch I1, set with the [C] mode function selection, turns ON, the current down counter value [D] value is set to the down counter value [N], and the next stitching is enabled. (1) (2)Call out the program mode [C] function [I1]. (This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0357")) Press the [D] key and set the value to "CCD". (3)Set the function [I1]. For mode call: $[\downarrow] + [\uparrow]$ Enter For direct number call: Set with (5)Call out the program mode [B] function [N]. 100 (This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0201")) Press the [A] to [D] keys and set the value to "1000". (6)Call out the program mode [B] function [D]. (7) d. 1 0 0 0 For mode call: [↓] For direct number call: Set with select number [202], and Enter Press the [A] to [D] keys and set the value to "1000". then press (8)(9)Call out the program mode [B] function [CDN]. For mode call: [\$\frac{1}{2}\$] For direct number call: Set with select number [210], and * Press the [D] key and set the value to "ST". then press (10)(11)Call out the program mode [B] function [DNC]. For mode call: [1] For direct number call: Set with select number [213], and Enter * Press the [D] key and set the value to "ON". then press (13)Call out the program mode [B] function [CNU]. For mode call: [\] For direct number call: Set with select number [217], and

then press

* Press the [C] and [D] keys and set the value to "10".

Entering the normal mode For mode call: $[\downarrow] + [\uparrow]$

For direct number call: Set with

Enter and then press

Note) To clear the down counter with the P key on the control switch panel set the following. [C] mode function selection

[IP.CCD]: Sets the P key on the control switch panel to the counter clear signal [CCD].

Description

[C] mode function selection

[I1.CCD]: Sets the external input I1 to the counter clear signal [CCD].

[N.1000]: Sets the down counter value. The down counter counts (subtracts) from the value set here.

[D.1000]: Current down counter value.

[CDN.ST]: The down counter is decremented by one each time the number of stitches set in [CNU] is stitched. (In this example, [CNU] is set to 10, so the down counter is decremented by one each time 10 stitches are stitched.)

* [DSC.ST]: When the current down counter [D] reaches 0, the next stitching is prohibited after trimming. The next stitching is enabled when the external input I1, set with [C] mode function selection, turns ON.

[DNC. ON]: Down counter is validated. Set this to ON to use the down counter.


[CNU.10]: Set this to count every 10 stitches.

Items marked with an asterisk * are the factory settings.


- 16. To check the error code history and input/output signal
 - (1) How to view the error code history Function setting [1.E--], [2.E--], [3.E--], [4.E--]
- (1) Call out the program mode [E] function [1].

(This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0700"))

(2) Call out function [1].

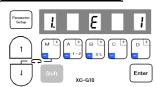

- * The last error code is displayed.
 (Ex. error code E1 is displayed.)
- (4) Call out function [3].

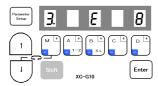

- * The error code before the second is displayed. (Ex. error code E8 is displayed.)
- Entering the normal mode

For mode call: $[\downarrow] + [\uparrow]$


For direct number call: Press




Description

- A. 4 times errors from the last to the fourth error can be viewed.
- B. Refer to page 211 for the error code.

(3) Call out function [2].

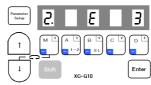

- * The error code before the last is displayed. (Ex. error code E3 is displayed.)
- (5) Call out function [4].

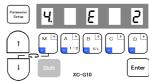

* The error code before the third is displayed. (Ex. error code E2 is displayed.)

(2) To check input signals

........... Function setting [IA] - [IL], [I1] - [I5], [IP] - [IR], [ECA], [ECB], [UP], [DN], [DR], [VC], [V2]

(1) Call out the input signal in program mode [E] to be checked. (In this example, call out [IA].)

(This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0706"))

Permeter Return Rection F Rection Rect


- * Turn the input for the input terminal to be viewed ON and OFF, and confirm that the LED C.D changes between [ON] and [OF].
- * If the input to be viewed is UP or DN, turn the sewing machine shaft. If ECA or ECB, turn the motor shaft.

Caution To turn the signals related to the sewing machine operation ON and OFF when the signal is turned ON and OFF, normal operation will take place.

(3) Entering the normal mode

For mode call: $[\downarrow] + [\uparrow]$

For direct number call: Set with

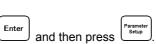

Input signal (Factory setting)	Display
Variable speed run signal (S1) Thread trimming (S2)	IG IH
Presser foot lifter (S3)	<u>'</u> '
Presser foot lifter signal (F)	IF
Thread trimmer cancel signal (TL)	ID
Backstiting signal (S7)	ΙE
Needle UP position priority stop signal (PSU)	IA
Needle DOWN position priority stop signal (PSD)	IB
Low speed run signal (S0)	IC
Input signal (IO1)	I1
Needle lift signal (U)	12
No setting (NO)	14
No setting (NO)	15
Encoder signal display (A phase)	ECA
Encoder signal display (B phase)	ECB
Detector signal display (UP signal)	UP
Detector signal display (DOWN signal)	DN
Display the angle from down position	DR
Display the voltage of VC	VC
Display the voltage of VC2	V2
<u> </u>	•


Description

- A. It is possible to check whether or not input signal is wired right.
 - When the display is not turned [ON][OF] even if the signal is turned ON/OFF, check wiring to a control box from the signal. Note that the sewing machine will run when checking the input of signal terminals related to operation.
- B. Refer to the "Connector layout" on page 208 for the input terminals, and "Table of input/output function for signal on C mode" on page 199 for details on the input function names.

(3) To check output signal (check in operation)
......... Function setting [OAD] - [ODD], [OFD], [OPD] - [ORD], [O1D] - [O7D]

(1) Call out the output signal in program mode [E] to be checked. (In this example, call out [OAD].)

(This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "737"))

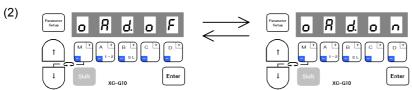

*Confirm the display ON during full pedal heeling operation


Caution Be careful to sewing machine operation when turned ON the signal which the sewing machine operation relates to.

Output signal (Factory setting)	Display
Thread trimming output (T)	OAD
Wiper output (W)	OBD
Backstitch output (B)	OCD
Thread release output (L)	ODD
Presser foot lifter output (FU)	OFD
O1 output (OT1)	O1D
Output for needle cooler (NCL)	O2D
TF output (TF)	O3D

(3) Entering the normal mode

For mode call: $[\downarrow] + [\uparrow]$

For direct number call: Set with

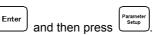

Description


A. This is useful for setting the various items and checking the operation before connecting the output to the solenoid, etc.

B. Refer to the "Connector Layout" on page 208 for the output terminals, and "Table of input/output function for signal on C mode" on page 199 for details on the output function names.

(4)To check an output terminal (To forcibly turn the output ON without running the sewing machine.) Function setting [OAO] - [ODO], [OFO], [OPO] - [ORO], [O1O] - [O7O]

(1) Call out the output signal in program mode [E] to be checked. (In this example, call out [OAO].)

(This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "752")

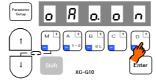


* Output signal is turned ON while pressing the [D] key. Note) While displaying this function, sewing machine can not operate.

Output signal (Factory setting)	Display
Thread trimming output (T)	OAO
Wiper output (W)	OBO
Backstitch output (B)	OCO
Thread release output (L)	ODO
Presser foot lifter output (FU)	OFO
O1 output (OT1)	010
Output for needle cooler (NCL)	020
TF output (TF)	030

(3) Entering the normal mode

For mode call: $[\downarrow] + [\uparrow]$

For direct number call: Set with and then pre

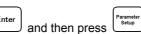


Description

A. This is useful for checking that the wiring to the solenoid, etc., from the control box's output terminals is correct.


B. Refer to the "Connector Layout" on page 208 for the output terminals, and "Table of input/output function for signal on C mode" on page 199 for details on the output function names.

(1)

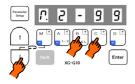


* Enter program mode [R] $([\downarrow] + [B] + [C] \text{ keys})$

(3)

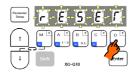

* [RESET] will flicker when the [D] key is held down, and the reset process will be executed.

(2)

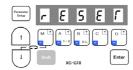

* Program mode [R] will be entered.

(4)



* The data will be set to the factory setting when the [D] key is pressed over 2 seconds or more, and then the normal mode will be returned to. (Process is completed)


Description

- A. All settings will be returned to the factory settings when the [D] key is held down for two or more seconds while [RESET] is displayed. The display will return to the normal mode.
- B. To return to the normal mode from the [RESET] display without executing the reset process, press the [↑] key while holding down the [↓] key. In this case, the settings will not be returned to the factory setting.

Caution

When this function is set, the contents of all settings to this point will be cleared, and will return to the factory settings. Please take care when using this function.

(1) Set the pedal (lever unit) to the neutral position.

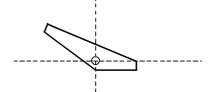


(3)




[VCSET] will flicker when the [D] key is held down.

Fully toe down the pedal (lever unit). (The maximum toe down position is saved.)

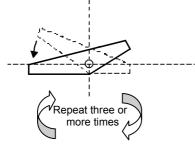


Fully heeling the pedal (lever unit). (The maximum heeling position is saved.)

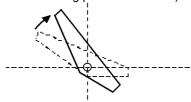

(2) Call out the program mode [Q] function [VCSET].

(This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "1427"))

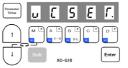


* Enter program mode [Q] $([\downarrow] + [A] + [C] keys)$

(4)



The display will change to [START]. (The neutral position is saved at this point.)

Return the pedal (lever unit) to the neutral position.

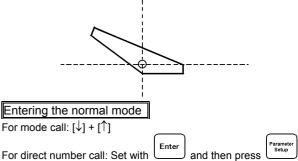

Description

The lever's neutral, toe down and heeling positions can be adjusted.

If the [D] key is held down when the pedal is at the neutral position, the display will flicker and change to the [START] display. (The neutral position is saved at that point.)

After that, repeat the pedal toe down and heeling operation three or more times. (The maximum toe down position and maximum heeling position are saved at this time.)

When finished, always return the pedal to the neutral state, and then return to the normal mode.

Note

- To enter the [VCSET] state with mode call and then return to the normal mode, press down the $[\downarrow]$ and $[\uparrow]$ keys simultaneously. The lever unit's neutral, toe down and heeling positions are not adjusted in this case.
- The error "MA" will appear as shown on note 1, when the position data for the lever unit is faulty. The error "MA" is released by note 2, and confirm the neutral position of the pedal (lever unit), and then save the neutral, toe down and heeling positions again with the above steps.
- 1. The error "MA" appears as follows.
 - · When the neutral position is moved.
 - · When returning to the original lever unit from external variable speed pedal or the external switches operation.
- 2. How to release the error "MA".
 - It is released after 1 msec when the pedal return the neutral position.
 - It is released by pressing [D] key.

(1) Call out the program mode [P] function [S6L].

(This can be called with mode call or direct number call. Refer to pages 17 to 20. (Direct call number = "0032"))

*Press the [D] key and set to "LO" for the setting value.


(3) Entering the normal mode

For mode call: [↓] + [↑]

For direct number call: Set with Enter and then press Parameter setup

Description

- A. The setting value will alternate between [HI] and [LO] with each press of the [D] key.
- B. If the logic changeover [S6L] of the thread trimming protective signal [S6] is set to [HI], the sewing machine will stop when the signal (S6) opens (S6 turns off). This includes the constant open state. (The speed display on the control switch panel will also stop when the sewing machine stops.)
- C. If the logic changeover [S6L] of the thread trimming protective signal [S6] is set to [LO], the sewing machine will stop when the signal (S6) is short circuited (S6 turns on). This includes the constant short circuit state. (The speed display on the control switch panel will also when the sewing machine stops.)
- D. Connection example

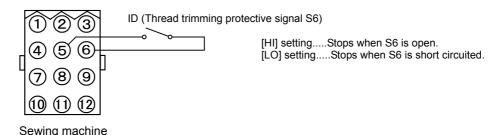


E. The simple setting value is [LO] during function settings [BR1], [RM1], [SRB1] and [JMH]. During the other function setting [YU2] ~ [YU5], [NO1] ~ [NO8],[NOC], [KA1] ~ [KA4], [UN1], [UN2], and [UN3] is [HI].

12 To save the setting data

1. How to use the program mode [I]

To save the setting data Function setting [SAVE*] (Two types of data, [SAVE1] and [SAVE2] can be saved. The [SAVE1] data can be read out with [LOAD1], and the [SAVE2] data with [LOAD2].)

(1)

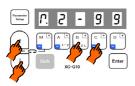

* Enter program mode [I] $([\downarrow] + [\uparrow] + [B] + [C] \text{ key})$

(3)



* When the [D] key is held down, [SAVE1.] will flicker, and the save process will be executed.

(2) 5 A J E L

* Program mode [I] will be entered.

(4) Presente Cetar ...

* Press [D] key over 2 seconds or more, and then the normal mode will be returned to. (Process is completed)

Description

- A. The current setting data can be saved as simple settings. Saving the data is completed when the [D] key is held down for two or more seconds while [SAVE*] is displayed and the display returns to the normal mode.
- B. To return to the normal mode from the [SAVE*] display without saving the data, press the [↑] key while holding down the [↓] key. The set data will not be saved.
- C. The saved setting data is saved in the program mode {1} simple setting [LOAD1] or [LOAD2], and can be read out by selecting [LOAD1] or [LOAD2] with program mode [1]. (As the factory setting, the [412B] data is saved in the simple settings [LOAD1] and the [280M] data is saved in the simple settings [LOAD2].)


Caution

When this function setting [SAVE*] is used, the settings saved in the program mode [1] simple setting [LOAD*] before the new data was set will all be cleared. The current setting data will be newly saved in the simple setting [LOAD*]. Check the current setting data before starting operation.

D. Reading the setting data saved with the [SAVE*] function


The setting data saved with the [SAVE*] function above can be read out with the following procedure (program mode [1]).

(1)

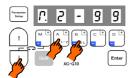

* Enter program mode [1] ([↓]+[A]+[B] key)

(3)

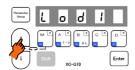

Press the [1] key and set the function to [LOAD1].

(5)




* Press [D] key (2 seconds or more) to return to the normal mode. (Process is completed) (2)



* Program mode [1] will be entered.



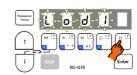

* When the [D] key is held down, [LOAD1] will flicker, and the loading process will be executed.


13 How to use Simple setting of Program Mode [2] (for chain stitch trimming machine)

1. How to use the program mode [2]

No.1 To set the functions for chain stitch sewing machine in simple setting


(Ex. to set for the VC2800, VC3800 class, "YAMATO")........Function setting [YU4]

(1)

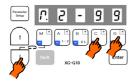


*Enter the program mode [2]. $([\downarrow] + [C] + [D] \text{ keys})$

(3)

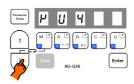

*Press the $[\downarrow]$ key or $[\uparrow]$ key to change the function to [YU4].


(5)

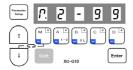

*The mode will return to the normal mode when the [D] key is held down over two seconds or more. (This completes the settings.)



*The mode will change to the program mode [2].

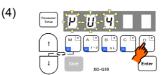

*When the [D] key is held down, [YU4] will flicker, and the changes to the setting will be set.

Description

- A. Select the function that corresponds to the sewing machine model for "Simple setting table for chain stitch sewing machine" on the page 43. Holds down the [D] key over 2 seconds or more, and functions will be carried out automatically for that model. (Refer to the simple setting table for "YAMATO" on page 43.)B. To return to the normal mode from the [YU4] display, press the [↑] key while holding down [↓]. In this case, [YU4] will not be set, and the last settings will be used.
- C. Each time the [\] key is pressed in step 3, the function will change in order from [YU2], [YU3], [YU4].....[JMH].
- D. Refer to Fig.1 (page 46) for the connector input/output signals.
- E. Refer to Fig.5 (page 60) for the junction wiring.
- F. Set the solenoid voltage to 30V. Refer to page 14. (The factory setting is 24V.)
- G. Set the option A connector 5/12V setting to 12V. Refer to page 14. (The factory setting is 12V.)
- H. The thread trimming protection signal S6 will stop the sewing machine when the switch is turned OFF.

2. Simple setting table for chain stitch sewing machine																		
End condensed speed V	1400	1400	1400	1400	1400	1400		1400	1400	1400	1400	1400		1400	1400		1400	1400
Start condensed speed N	1400	1400	1400	1400	1400	1400		1400	1400	1400	1400	1400		1400	1400		1400	1400
Trimming speed T	200	200	200	200	200	200		200	200	200	200	200		200	200		200	200
Low Low	200	200	200	200	200	200		200	200	200	200	200		200	200		200	200
High speed H	0009	0009	0009	0009	0009	0009		4500	4500	4000	0009	0009		0009	0009		0009	0009
1/2 pos	2	2	2	2	~	~		-	-	_	~	~		~	~		~	1
Note 4 Setting of switch to increase solenoid return speed				*Note 6							*Note 6			() () () ()			*Note 6	
Note 3 Logic of thread trimming protection signal S6			Gingo	machine	switch:open					Sewing	stops when switch:open			Sewing machine	stops when switch:open		Sewing machine stops when switch:open	
Note 2 DC5V or 12V setting in option A	12V	12V	12V	12V	5V	5V		20	5V	20	5V	5V		5V	5V		5V	5V
Note 1 solenoid voltage	30V	30V	30V	30V	24V	24V		24V	24V	24V	24V	24V		24V	24V		24V	24V
Junction wiring	Fig.50	Fig.50	Fig.50	Fig.50	Fig.51	Fig.51		Fig.51	Fig.51	Fig.52	Fig.51	Fig.51		Fig.51	Fig.51			
I/O signals of connectors	Fig.1	Fig.1	Fig.1	Fig.1	Fig.2	Fig.2		Fig.2	Fig.2	Fig.2	Fig.3	Fig.3		Fig.4	Fig.4		Fig.5	Fig.6
a)	VC2600, VC2700 class Solenoid-operated under thread trimmer	VC2600, VC2700 class Air-operated under thread trimmer with air wiper	VC3845P,2845P,2840P class Air-operated under thread trimmer with air wiper	Solenoid-operated under thread trimmer with solenoid wiper	W(T) series /UT device Pneumatic under thread trimmer with pneumatic top cover thread trimmer electric under thread trimmer	W(T) series /UT device Pneumatic under thread trimmer with pneumatic top cover thread trimmer	Do not use !!	FW series /UT device electric under thread trimmer	FW series /UT device Pneumatic under thread trimmer	W674/UT device Super tack	W(T)562-82/UT device Angled stitch electric under thread trimmer with pneumatic top cover thread trimmer	W(T)562-82/UT device Angled stitch Pneumatic under thread trimmer with pneumatic top cover thread trimmer	Do not use !!	W(T)600,200 series /UT/MS device Condensed stitch electric under thread trimmer with pneumatic top cover thread trimmer	W(T)600,200 series /UT device condensed stitch Pneumatic under thread trimmer with pneumatic top cover thread trimmer	Do not use !!	W(T)600 series /UT device Stitch lock pneumatic under thread trimmer with pneumatic top cover theread trimmer	EX/BL500,600 series
Sewing machine maker	YAMATO	YAMATO	YAMATO	YAMATO	PEGASUS	PEGASUS	PEGASUS	PEGASUS	PEGASUS	PEGASUS	PEGASUS	PEGASUS	PEGASUS	PEGASUS	PEGASUS	PEGASUS		PEGASUS
Function	YU2	YU3	YU4	YU5	NO1	NO1A	NO2	NO3	NO3A	NO4	NO5	NO5A	90N	NO7	NO7A	80N	NOD	NOF

3ed	_	_			~	_	~												
End condensed speed V	1400	1400	1400	1400	2999	2999	2999									1400	1400	1700	1900
Start condensed speed N	1400	1400	1400	1400	1400	1400	1400									1400	1400	1700	1700
Trimming speed T	250	250	250	250	200	200	200									200	200	200	200
Low Speed L	250	250	250	250	200	200	200									200	200	200	200
High speed H	0009	0009	0009	0009	4000	5500	4000									0009	6000	6000	5500
1/2 pos	2	2	2	2	2	2	2									2	1	2	2
Note 4 Setting of switch to increase solenoid return speed		9 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0			orom v	Set JP6: FAST	2										*Note 6	0 000	
Note 3 Logic of thread trimming protection signal S6		Sewing machine	stops when switch:short			machine stops when	switch:									Sewing	machine	stops when	SWILCH SHOIL
Note 2 DC5V or 12V setting in option A connector	12V	12V	12V	12V	12V	12V	12V									20	5V	5V	5V
Note 1 solenoid voltage	300	300	300	30V	300	708	708									24V	24V	24V	24V
Junction wiring	Fig.53	Fig.53	Fig.53	Fig.53	Fig.54	Fig.54	Fig.55												-
I/O signals of connectors	Fig.7	Fig.7	Fig.8	Fig.7	Fig.9	Fig.10	Fig.10									Fig.11	Fig.12	Fig.13	Fig.14
Model name of sewing machine and device	M, RX series Automatic thread trimmer with solenoid wiper	D series Automatic thread trimmer with air wiper	F series Air-operated under thread trimmer with air wiper	DX series Air-operated under thread trimmer with air wiper	33700, 34500 class Solenoid-operated under thread trimmer	34800skcc class Solenoid-operated under thread trimmer	34700 class Push and Pull air-operated under thread trimmer with air wiper	Do not use !!	FD3, FD4 series			MH-481-4-4, MH-484-4-4 class							
Sewing machine maker	KANSAI	KANSAI	KANSAI	KANSAI	UNION	UNION	UNION									BROTHER	RIMOLDI	SIRUBA	JUKI
Function	X Y	KA2	KA3	KA4	UN1	UN2	NN3	U345	U346	U348	U347	U160	U16	U362	UFCW	BR1	RM1	SRB1	JMH

Note: The function name will display in the order of [YU2], [YU3], [YU4]......[NO1]......[KA1]......[UN1]......[JMH], [YU2] with each press of the [C] key. The function name will display in the order of [YU2], [JMH].....[UN1].....[KA1].....[NO1].....[YU2] with each press of the [D] key.

2. Refer to page 14 for how to change the option A connector DC5V/12V. The factory setting is 12V. 1. Refer to page 14 for how to change the solenoid voltage. The factory setting is 24V.

3. Refer to page 40 for how to change the logic of the thread trimming protection signal S6.

The factory setting is sewing machine stop at switch: short.

(The operation of the thread trimming protection device and thread trimming protection sensor switch ON and OFF will not always match. Consult with your dealer on any unclear points.) 4. Refer to page 15 for how to set the switch to increase the solenoid return speed. Always set JP6 to FAST when [UN1], [UN2] and [UN3] are set.

The factory settings is JP6 : SLOW.


5. The chain stitch sewing machine specifications may be changes in part by the sewing machine maker. Consult with your dealer before selecting the functions from the above table.

6. If the electromagnetic solenoid is connected to the trimming output, the JP6 switch should be set to "FAST"

3. I/O signals of connectors

Fig.1 "YAMATO"


Function setting [YU2],[YU3],[YU4] and [YU5]

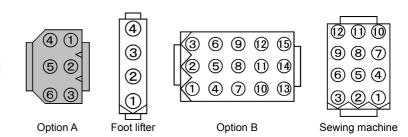



Presser foot lifter

			1
	0V	1	
IF	Presser foot lifting signal	2	
OF	Presser foot lifting output +	3	(FU)————————————————————————————————————
Oi	Presser foot lifting output -	4	

Option A (Black connector)

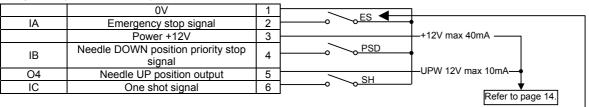

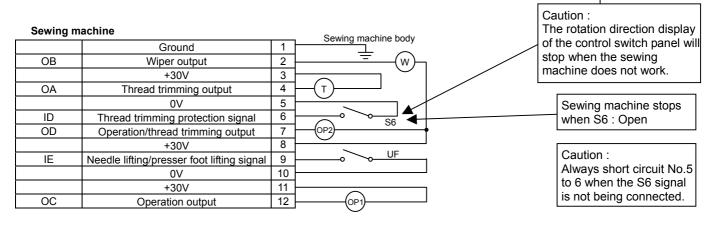


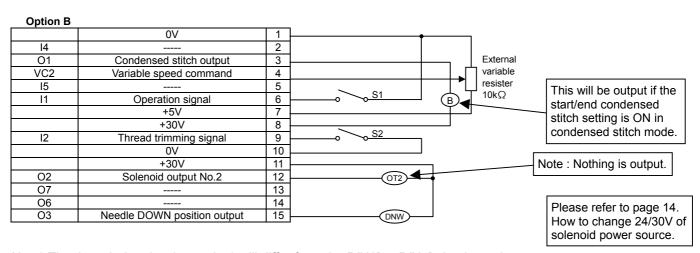

Note) The thread trimming (operation) will differ from the [YU2] to [YU5] simple settings, so select the setting value according to the sewing machine being used.

Fig.2 "PEGASUS"


Function setting [NO1], [NO1A], [NO3], [NO3A] and [NO4]

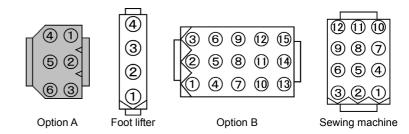


Presser foot lifter

			1
	0V	1	
IF	Presser foot lifting signal	2	
OF	Presser foot lifting output +	3	(FU)
UF	Presser foot lifting output -	4	


Option A (Black connector)

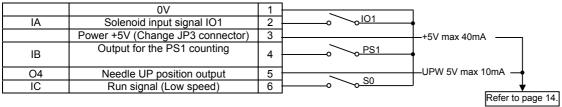

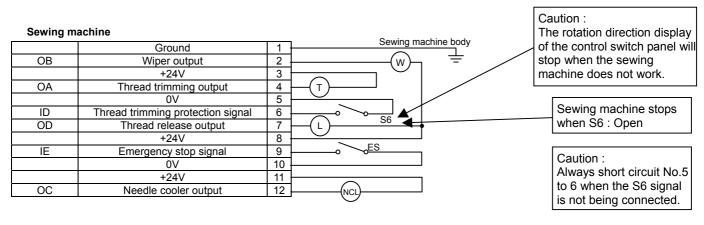

Option B			
	0V	1	
14	Needle DOWN position priority stop signal	2	
01	Thread trimming output	3	External
VC2	Variable speed command	4	variable
15	Thread trimmer cancel signal	5	TL resister 10kΩ
I1	Operation signal	6	S1
	+12V (Change JP4 connector)	7	
	+24V	8	
12	Thread trimming signal	9	S2
	0V	10	
	+24V	11	_
O2	Needle cooler output	12	NCL
07	Output for the PS1 counting	13	_
O6	Virtual output 1	14	
O3	Always ON output	15	UPW

Note) The thread trimming (operation) will differ from the [NO1] to [NO4] simple settings, so select the setting value according to the sewing machine being used.

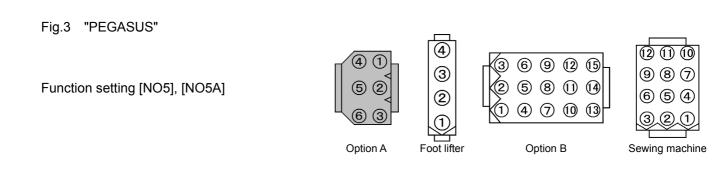


Presser foot lifter


06

O3

			7
	0V	1	
IF	Needle lift, presser foot signal	2	
OF	Presser foot lifting output +	3	(FU)———
l Or	Presser foot lifting output -	4	

Option A (Black connector)

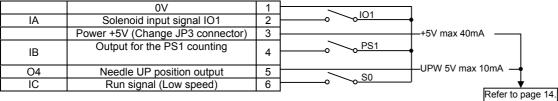

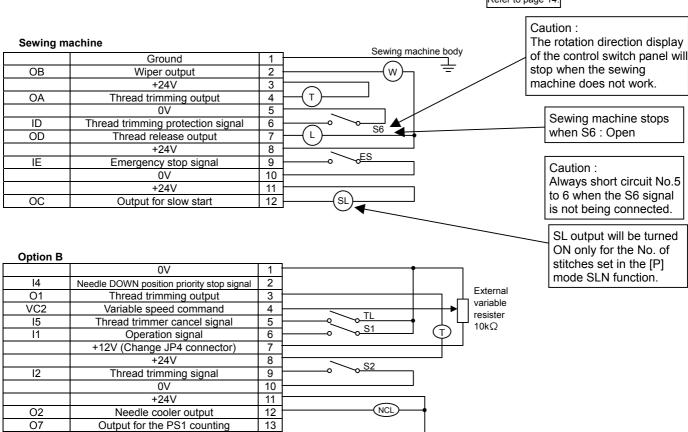

Note) The thread trimming (operation) will differ from the [NO5], [NO5A] simple settings, so select the setting value according to the sewing machine being used.


14

15

Virtual output 1

Always ON output

UPW

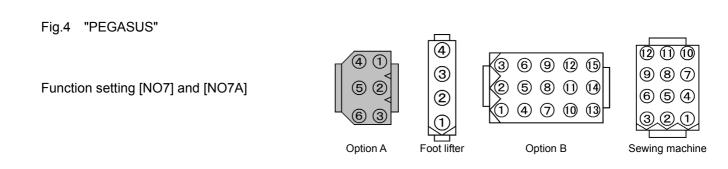


Presser foot lifter


06

O3

	0) /	4	
	0V	1	
IF	Presser foot lifting signal	2	
OF	Presser foot lifting output +	3	(FU)———
UF UF	Presser foot lifting output -	4	

Option A (Black connector)

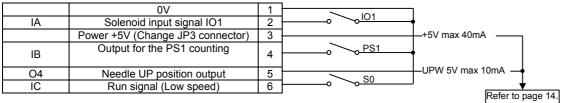

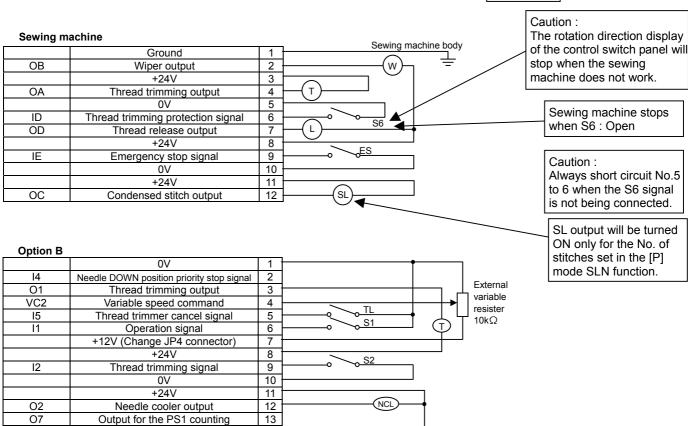

Note) The thread trimming (operation) will differ from the [NO7], [NO7A] simple settings, so select the setting value according to the sewing machine being used.

14

15


Virtual output 1

Always ON output

(UPW)



Function setting [NOD]

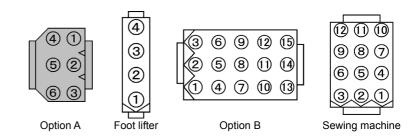


Presser foot lifter

	0) /		1
	ΟV	1	\
IF	Presser foot lifting signal	2	
OF	Presser foot lifting output +	3	(FU)
OF	Presser foot lifting output -	4	

Option A (Black connector)

	0V	1	104
IA	Solenoid input signal IO1	2	001
	Power +5V (Change JP3 connector)	3	+5V max 40mA
IB	Output for the PS1 counting	4	o PS1
04	Needle UP position output	5	UPW 5V max 10mA
IC	Run signal (Low speed)	6	
			Refer to page 14.

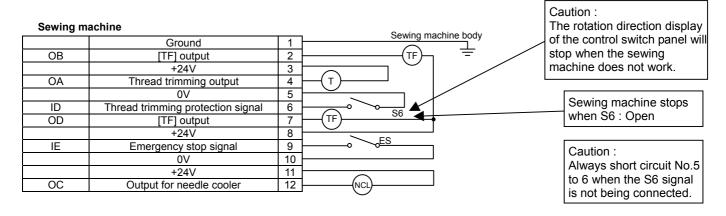


Option B

	0V	1	•
14		2]
01	Thread trimming output	3	External
VC2	Variable speed command	4	variable
15	Thread trimmer cancel signal	5	TL 10kΩ
I1	Operation signal	6	
	+12V (Change JP4 connector)	7	
	+24V	8	60
12	Thread trimming signal	9	S2
	0V	10	
	+24V	11	_
02	Output for needle cooler	12	NCL
07	Output for the PS1 counting	13	
O6	Virtual output 1	14	
O3	Always ON output	15	UPW




Function setting [NOF]

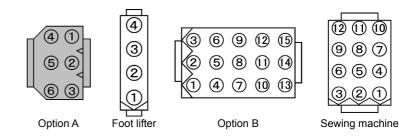


Presser foot lifter

	0) /		1
	0V	1	
IF	Presser foot lifting signal	2	
OF	Presser foot lifting output +	3	(FU)
OF	Presser foot lifting output -	4	


Option A (Black connector)

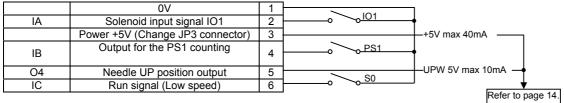

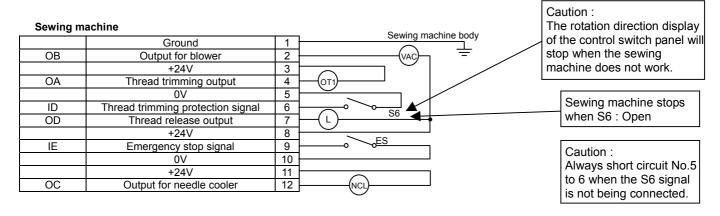

Option B

Option B			
	0V	1	•
14		2]
01	Thread trimming output	3	External
VC2	Variable speed command	4	variable
15	Thread trimmer cancel signal	5	TL 10kΩ
I1	Operation signal	6	
	+12V (Change JP4 connector)	7	
	+24V	8	60
12	Thread trimming signal	9	S2
	0V	10	
	+24V	11	
02	Output for needle cooler	12	NCL
07	Output for the PS1 counting	13	
O6	Virtual output 1	14	
O3	Always ON output	15	UPW

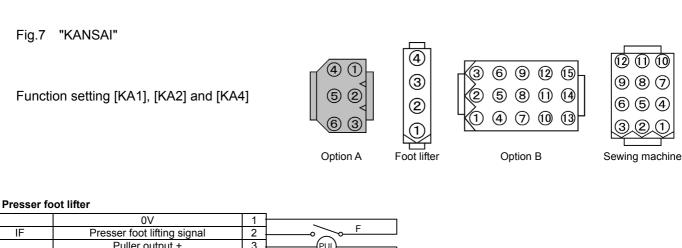

Puller output + OF Puller output -4 Option A (Black connector) 1 **PSU** Needle UP position priority stop signal IΑ 2 Power +12V 3 +12V max 40mA Needle DOWN position priority stop 4 ΙB signal 04 Needle UP position output 5 UPW 12V max 10mA IC One shot signal 6 Refer to page 14. Caution: Sewing machine The rotation direction display Sewing machine body of the control switch panel will Ground 1 stop when the sewing OB Wiper output 2 W 3 machine does not work. +30V Т OA Thread trimming output 4 0V 5 Sewing machine stops ID Thread trimming protection signal 6 when \$6: Short OD Operation output 7 8 +30V ΙE 9 Emergency stop signal ٥V 10 +30V 11 OC В Condensed stitch output 12 This will be output if the start/end condensed stitch setting is ON in condensed stitch mode. Option B 0V 1 14 Virtual input IO7 2 External 01 3 Virtual output OT2 variable VC2 4 Variable speed command resister 5 15 10kΩ OT2 IS3 Signal output to virtual output 3 when 11 6 stopped 7 +5V +30V 8 12 Needle lifting signal 9 10 +30V 11 02 Presser foot lifting output 12 (FU) 07 13 Please refer to page 14. 06 14 How to change 24/30V of О3 Thread tension output (TF. 15

Note) The thread trimming (operation) will differ from the [KA1], [KA2] and [KA4] simple settings, so select the setting value according to the sewing machine being used.


solenoid power source.


Fig.8 "KANSAI" 6 9 12 15 3 987 5 8 11 14 Function setting [KA3] 2 6 5 4 Option A Option B Sewing machine

Presser foot lifter

	0\/	1	
	ÜV		
IF	Presser foot lifting signal	2	
OF	Puller output +	3	(PUL)
OF OF	Puller output -	4	

Option A (Black connector)

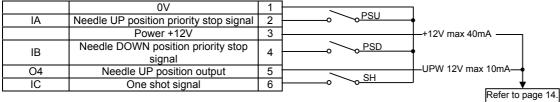

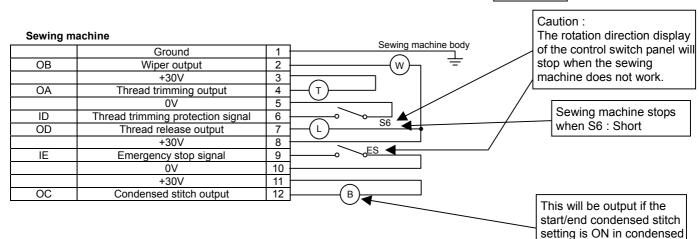


Option B			_
	0V	1	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \
14	Virtual input IO7	2	007
01	Virtual output OT2	3	Externa
VC2	Variable speed command	4	variable
15		5	
l1	Signal output to virtual output 3 when stopped	6	IS3 OT2 TOKS2
	+5V	7	
	+30V	8	
12	Needle lifting signal	9	
	0V	10	
	+30V	11	_
O2	Presser foot lifting output	12	FU
07		13	
O6		14	_
O3	Thread tension output	15	TF)

Please refer to page 14. How to change 24/30V of solenoid power source.

stitch mode.



Function setting [UN1]

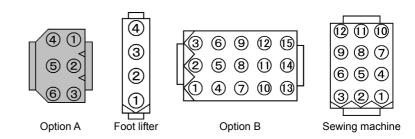


Presser foot lifter

Option B

	01/	1	
	UV	1	
IF	Presser foot lifting signal	2	F
OF	Presser foot lifting output +	3	(FU)
OF .	Presser foot lifting output -	4	

Option A (Black connector)

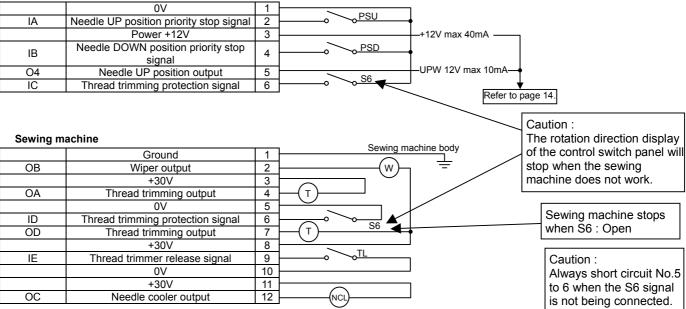

0V 1 Needle cooler output during rotation 2 14 forced [OFF] signal External 01 Solenoid output OT1 3 VC2 Variable speed command 4 Thread trimmer output confirmation TON $10k\Omega$ 15 5 OT1 signal FWD 11

variable resister Non-stitching feed input 6 +12V (Change JP4 connector) +30V 8 IO1 12 Solenoid input signal IO1 9 10 0V +30V 11 02 Output for signal during tacking BT) 12 07 13 [KS3] output 06 14 oKS3 О3 Solenoid output OT3 15 OT3


If input IO1 is turned ON, output OT1 will always be turned ON.

This output is not for the solenoid output.

Please refer to page 14. How to change 24/30V of solenoid power source.

Fig.10 "UNION SPECIAL"


Function setting [UN2], [UN3]

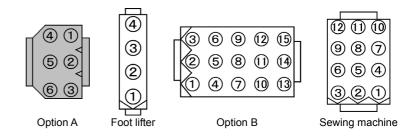


Presser foot lifter

	ΛV	1	
	UV	<u> </u>	
IF	Presser foot lifting signal	2	
OF	Presser foot lifting output +	3	(FU)
OF .	Presser foot lifting output -	4	

Option A (Black connector)

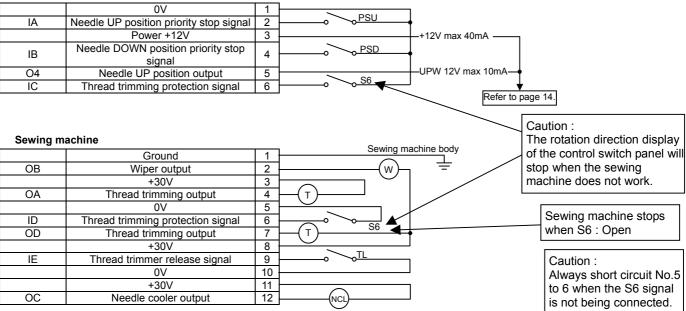


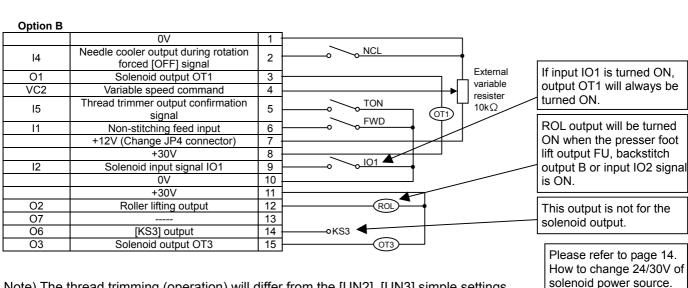

Note) The thread trimming (operation) will differ from the [UN2], [UN3] simple settings, so select the setting value according to the sewing machine being used.


Fig.11 "BROTHER"


Function setting [BR1]

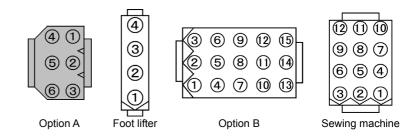

Presser foot lifter

	21.		1
	0V	1	\
IF	Presser foot lifting signal	2	
OF	Presser foot lifting output +	3	(FU)
OF	Presser foot lifting output -	4	

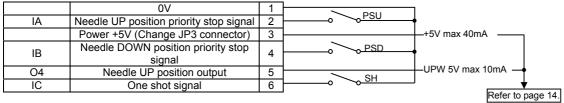

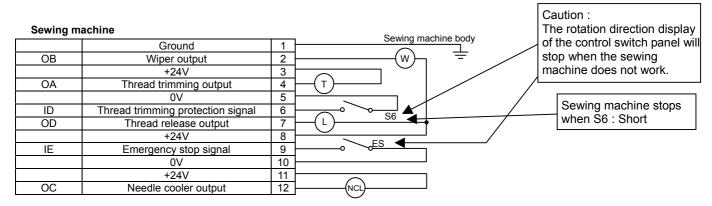


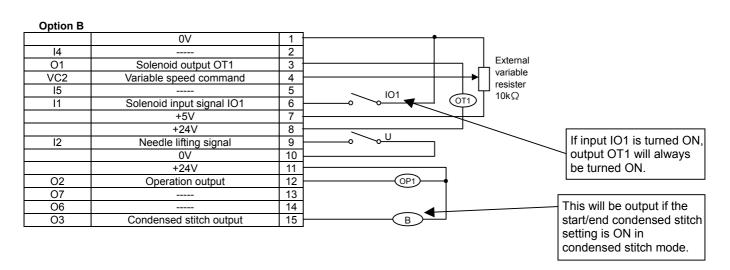



Fig.12 "RIMOLDI"


Function setting [RM1]

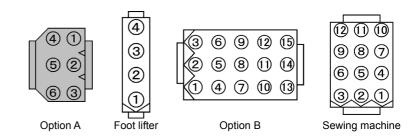

Presser foot lifter

	01/	1	
	UV	1	
IF	Presser foot lifting signal	2	F
OF	Presser foot lifting output +	3	(FU)
OF .	Presser foot lifting output -	4	

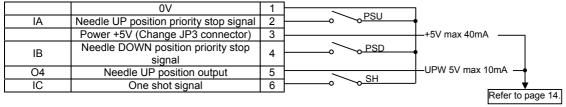

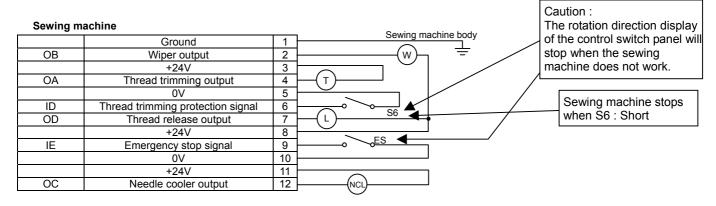


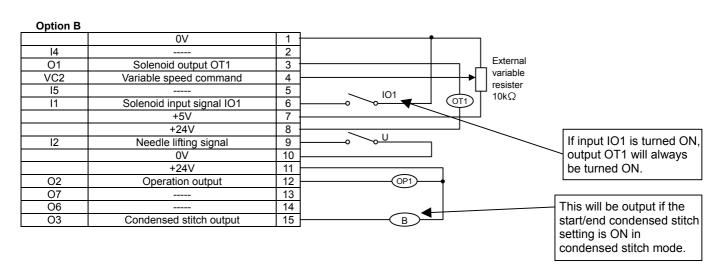


Fig.13 "SIRUBA"


Function setting [SRB1]

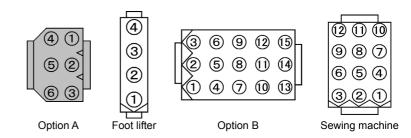

Presser foot lifter


	2) /		1
	0V	1	
IF	Presser foot lifting signal	2	
OF	Presser foot lifting output +	3	(FU)
OF	Presser foot lifting output -	4	

	0V	1	PSU
IA	Needle UP position priority stop signal	2	→
	Power +5V (Change JP3 connector)	3	+5V max 40mA
IB	Needle DOWN position priority stop signal	4	PSD
04	Needle UP position output	5	UPW 5V max 10mA
IC	Low speed run signal	6	Refer to page 14.

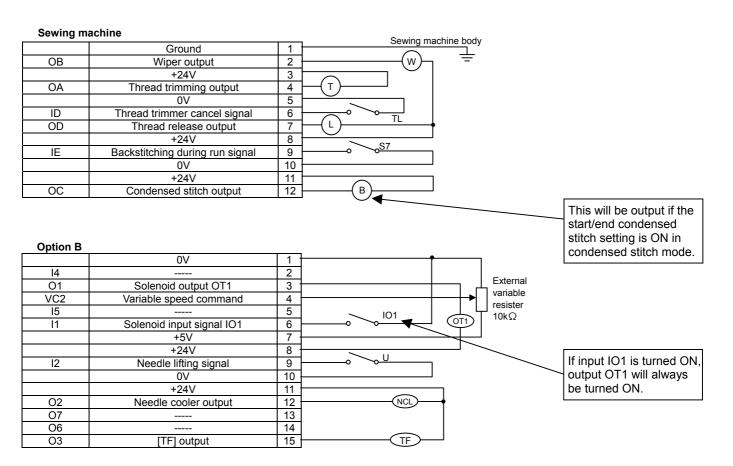




Function setting [JMH]

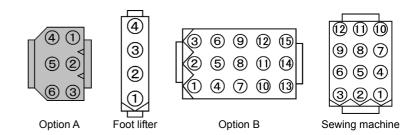



Presser foot lifter


	0) (1
	UV	1	
IF	Presser foot lifting signal	2	
OF	Presser foot lifting output +	3	(FU)———
OF .	Presser foot lifting output -	4	


	0V	1	PSU
IA	Needle UP position priority stop signal	2	→ ○ PSU
	Power +5V (Change JP3 connector)	3	+5V max 40mA
IB	Needle DOWN position priority stop signal	4	PSD
04	Needle UP position output	5	UPW 5V max 10mA
IC	Low speed run signal	6	
			Refer to page 14.

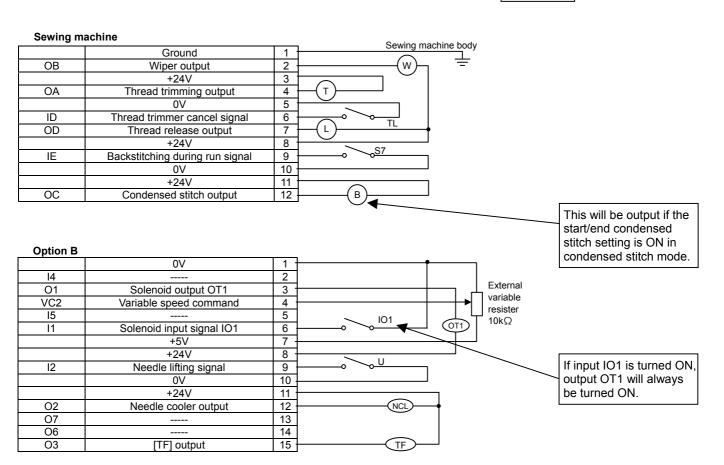


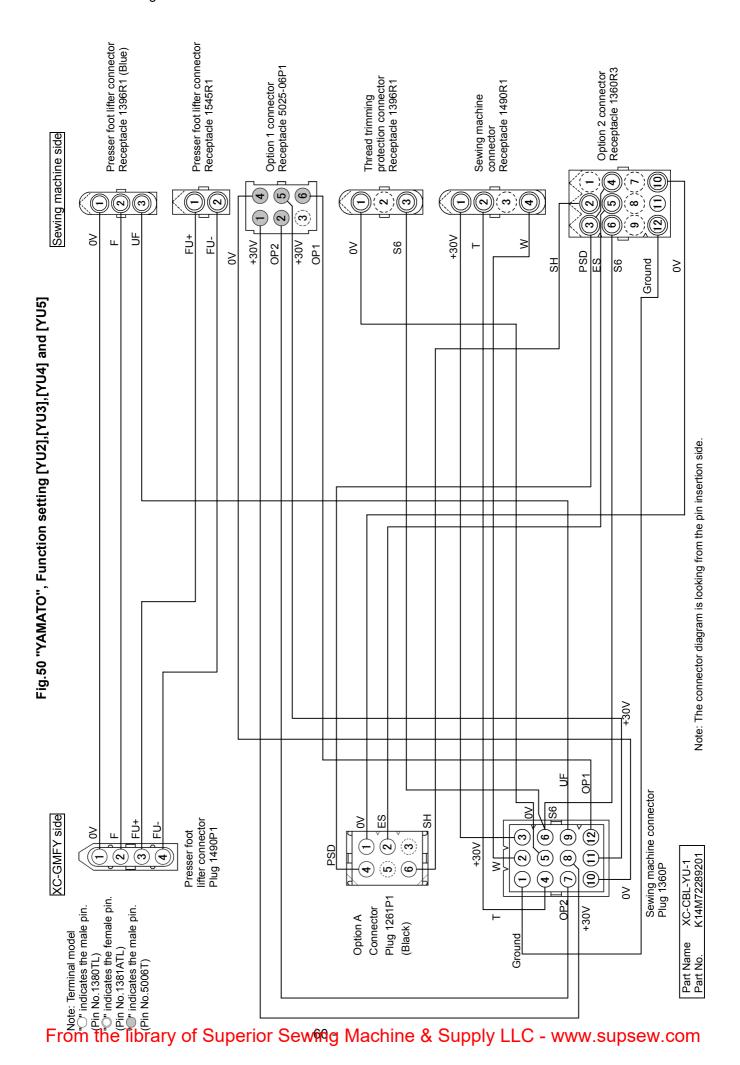

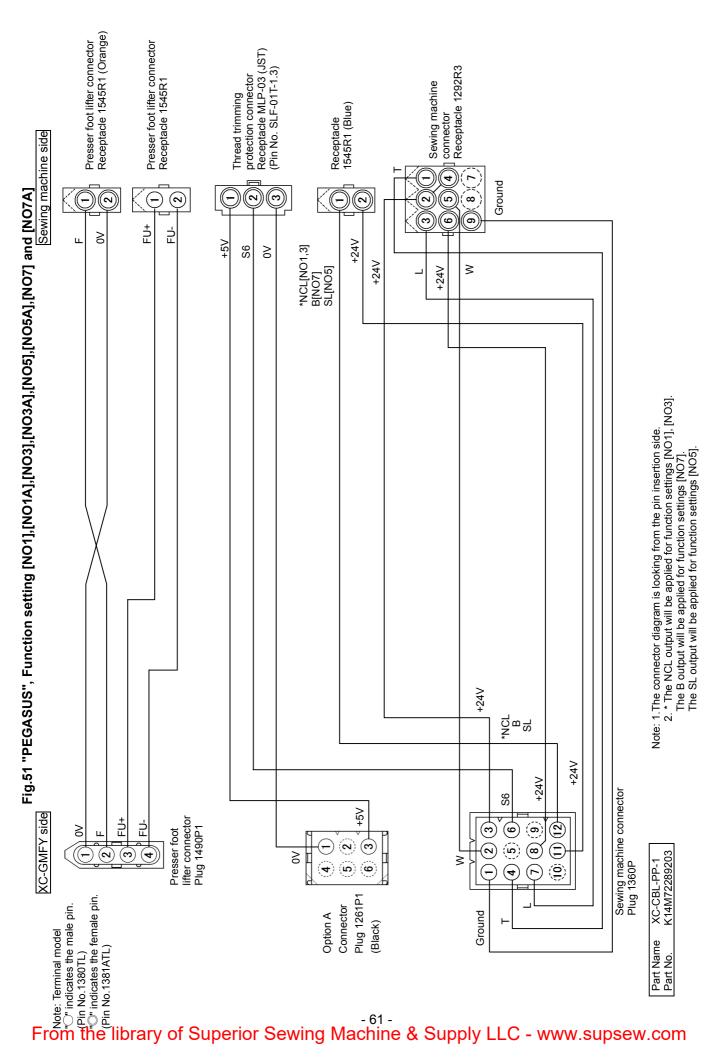

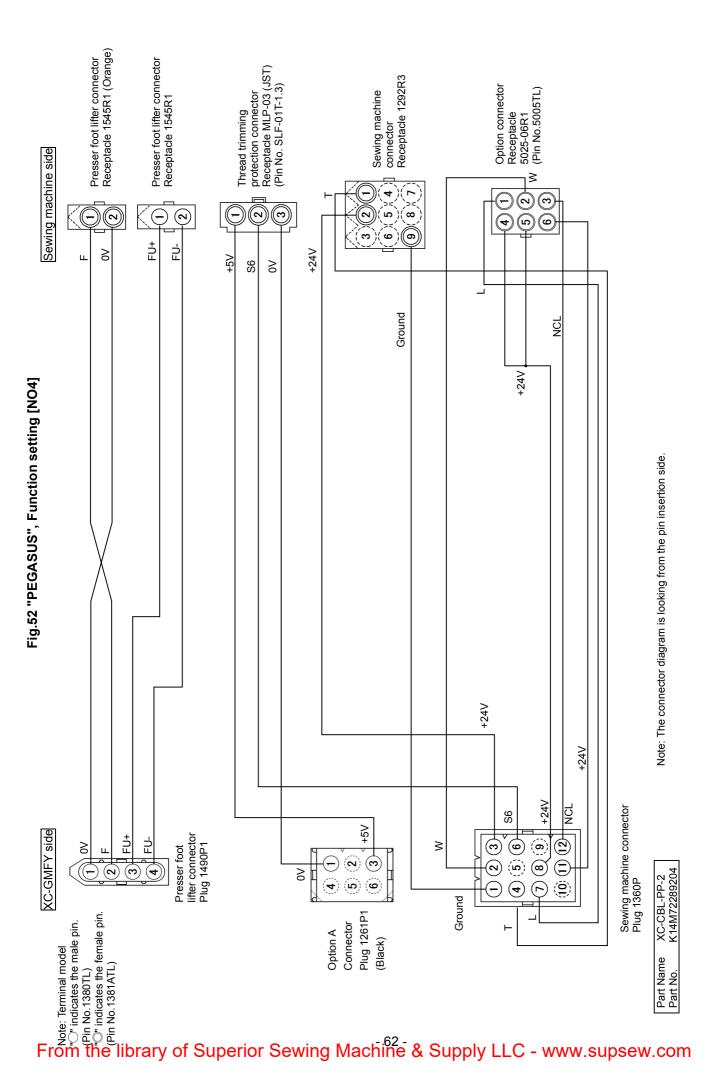


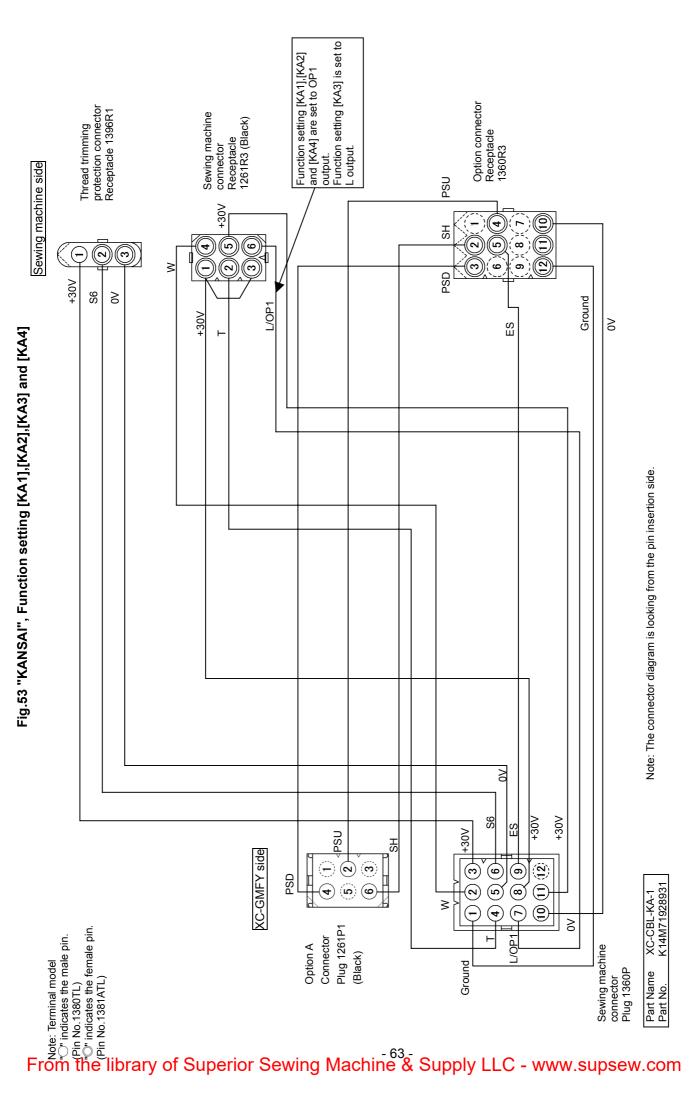

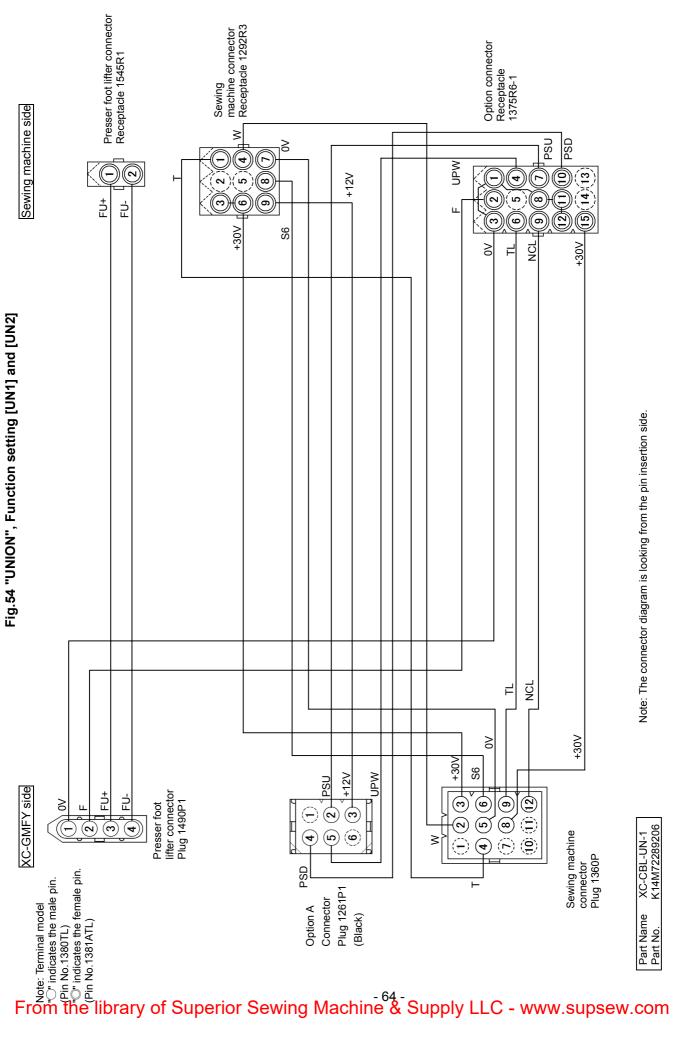

XC-CBL-UN-1 K14M72289206


Note: The connector diagram is looking from the pin insertion side.

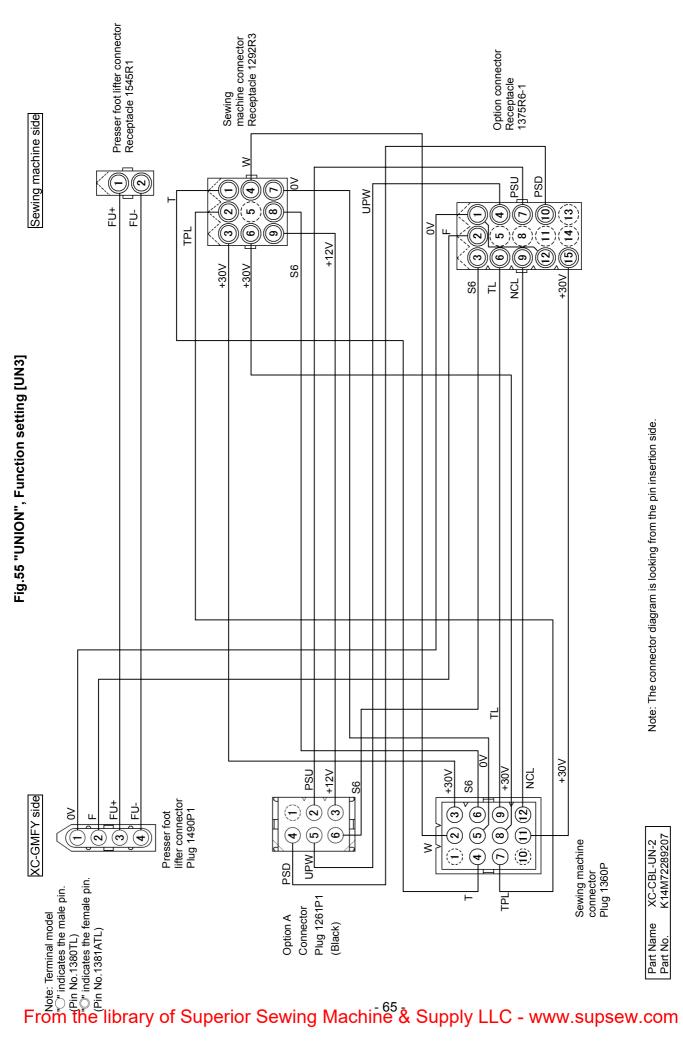


Note: The connector diagram is looking from the pin insertion side.

XC-CBL-UN-2 K14M72289207

5. Displays and function of each key in the condensed stitch mode

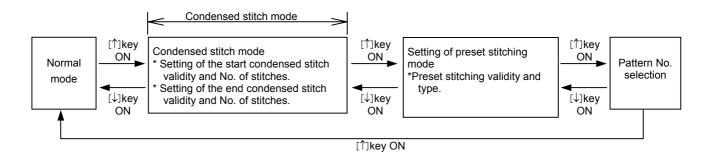


When the [↑] key is turned ON, will display above the [M] key, and the condensed stitch mode will be entered. The validity and No. of stitches of start and end condensed stitch can be set here.

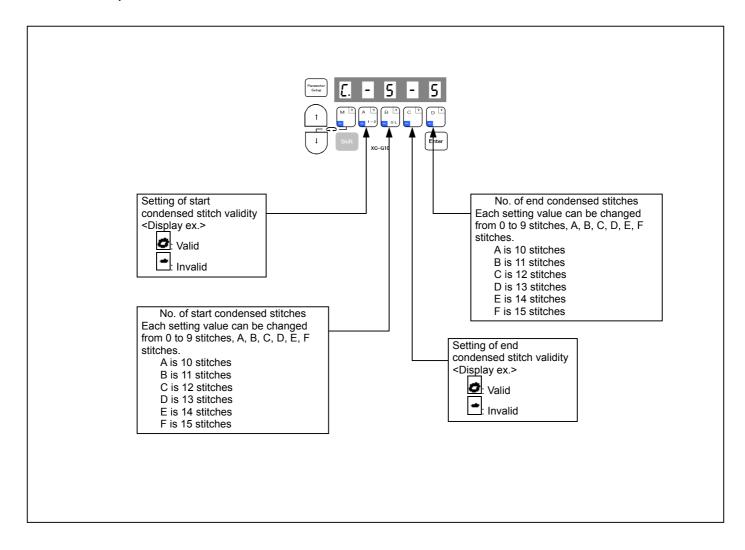

1.How to use Simple setting of Program Mode [3] (for lock stitch trimming machine)


To set the functions for the DÜRKOPP ADLER thread trimming sewing machine in one step
(For example, to set for the 271 class, "DÜRKOPP ADLER")......Function setting [D271]

(1)

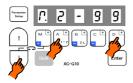


*Enter the program mode [3]. $([\downarrow] + [A] + [D] \text{ keys})$

(3)

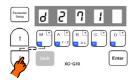


*Press the $[\downarrow]$ key or $[\uparrow]$ key to change the function to [D271].


(5)

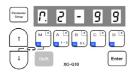

*The mode will return to the normal mode when the [D] key is held down over two seconds or more. (This completes the settings.)

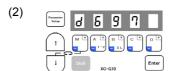

*The mode will change to the program mode [3].

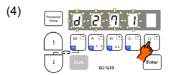

*When the [D] key is held down, [D271] will flicker, and the changes to the setting will be set.

Description

- A. Select the model name that corresponds to the sewing machine model for the simple setting values for the DÜRKOPP ADLER thread trimming sewing machine on the "Technical manual". After selecting the function name, holds down the [D] key over 2 seconds or more. The function name's set speed and function will be set automatically.
- B. To return to the normal mode from the [D271] display, press the [↑] key while holding down [↓]. In this case, [D271] will not be set, and the last settings will be used.
- C. Each time the [↓] key is pressed in step 3, the function will change in order from [D697], [D271], [D273]....[750].

Caution

To use this mode, please ask your dealer or look at "TECHNICAL INFORMATION MANUAL" about simple setting, I/O signal, Junction wiring in detail.

Function	Digital display	Sewing machine maker	Model name of sewing machine and device	I/O signals of connectors	Junction wiring	Note 1 solenoid voltage	Note 2 DC5V or 12V setting in option A connector	1/2 pos	High speed H	Low	Trimming speed T	Start condensed speed N	End condensed speed V
269Q	4697	DÜRKOPP ADLER	697-15000 class	Fig.20	Fig.57	24V	12V	2	1500	250	150	200	700
D271	1620	DÜRKOPP ADLER	271-14000,272-14000 class	Fig.21	Fig.58	24V	12V	2	3000	170	250	1500	1500
D273	6529	DÜRKOPP ADLER	273-14000,274-14000 class	Fig.22	Fig.59	24V	12V	2	3000	170	250	1500	1500
B715	51 18	BROTHER	DB2-B705,DB2-B707,DB2-B715 class			300	20	2	4300	215	215	1800	1800
B716	91 18	BROTHER	DB2-B716-?, DB2-B716-1, DB2-B716-?, DB2-B716-5 class	-	Re	30V	5V	2	3500	215	215	1800	1800
B737	6434	BROTHER	DB2-B737-1,DB2-B737-3,DB2-B737-5 class	-	efer E	30V	5V	2	4000	215	215	1800	1800
B740	8748	BROTHER	DB2-B746-5,DB2-B746-7,DB2-B746-8,DB2-B747-5,DB2-B748- 5,DB2-B748-7 class	1		30V	5V	7	2000	215	215	1800	1800
B757	6569	BROTHER	DB2-B757 class			30V	20	2	2000	215	215	1800	1800
B770	0669	BROTHER	DB2-B772,DB2-B774,DB2-B7740,DB2-B778 class			300	20	2	4500	215	215	1800	1800
B790	8790	BROTHER	DB2-B790,DB2-B791-3,DB2-B791-5,DB2-B7910-5,DB2-B7910 -5,DB2-B792,DB2-B793-403,DB2-B795,DB2-B798 class	1	TO C	300	5V	2	3500	215	215	1800	1800
B830	9830	BROTHER	DB2-B837,DB2-B838 class	-		300	20	2	3000	215	215	1800	1800
ВГТ	P f. <i>f</i>	BROTHER	LT2-B841-1,LT2-B841-3,LT2-B841-5,LT2-B842-1,LT2-B842-3,L T2-B842-5,LT2-B845,LT2-B8450,LT2-B8480,LT2-B847,LT2-B8 48,LT2-B872,LT2-B875,LT2-B8750 class	1	INECT	30V	5V	7	3000	185	185	1000	1000
BLZ	<u> </u>	BROTHER	LZ2-B852,LZ2-B853,LZ2-B854,LZ2-B856,LZ2-B857 class	-		300	20	2	3000	185	185	1800	1800
1500	00Sr	JUKI	DDL-500, DMN-5420NFA-6-WB class	-		300	20	2	2000	200	200	1700	1900
J505	7505	JUKI	DDL-505, DDL-505A, DDL-506, DDL-506A, DDL-506E, DDL-560- 5, DDL-5600, DLU-5494NBB-6-WB, PLW-1245-6, PLW-1246-6, P LW-1257-6, PLW-1264-6, PLW-1266-6 class		Re	30V	5V	2	4000	200	200	1700	1900
325L	J555	JUKI	DDL-555-2-28,DDL-555-2-48,DDL-5550N,DDL-5570,DDL-557 1,DDL-5580 class		fer to	30V	5V	2	4000	200	200	1700	1900
JDL	ህժኒ	JUKI	DLD-432-5,DLD-436-5,DLM-5400N-6,DLM-5400-6,DLN-415-5, DLN-5410N-6,DLN-5410-6,DLU-450,DLU-490-5,DLU-491-5,DL U-5490BB-6-OB,DLU-5490BB-6-WB,DLU-5490N-6,DMN-530- 5,DMN-531-5 class		"6. HOW ⁻ JUKI MAC	300	5V	2	4200	200	200	1700	1900
nar	ព្រក	JUKI	DNU-241H-5,DNU-241H-6,DSC-244-6,DSC-244V-6,DSC-245- 5,DSC-245-6,DSC-246-6,DSC-246V-6,DSU-142-6,DSU-144-6, DSU-145-5,DSU-145-6,DU-141H-4,DU-141H-5,DU-141H-6,DU -161H-6 class		TO CONNI CHINE".	300	5V	2	2000	200	200	1700	1900
ЭГН	JLH	JUKI	LH-1172,LH-1180-5,LH-1182-5,LH-1150,LH-1152,LH-1160,LH-1 162 class		ECT	30V	5V	1	2300	200	200	1700	1900
JLU1	ו וו זוי	JUKI	DDL-5560NL-6, LU-1114-5, LU-1114-6, LZH-1290-6 class	-		30V	5V	2	2800	200	200	1700	1900
JLU2	שלו זה	JUKI	LU-2210-6-0B class			30V	5V	2	3500	200	200	1700	1900

Function	Digital display	Sewing machine maker	Model name of sewing machine and device	I/O signals of connectors	Junction wiring	Note 1 solenoid voltage	Note 2 DC5V or 12V setting in option A connector	1/2 pos	High speed H	Low speed L	Trimming speed T	Start condensed speed N	End speed V
T100	r 100	TOYOTA	AD1012,AD1012B,AD1012G,AD1013,AD1013A,AD1013G,AD1 020,AD1102,AD1102B,AD1102G,AD1103A,AD1202,A D1203,AD1204S,AD1205,AD1205S,AD1212G,AD1213,AD220 0,AD5010S class		Refer t CONN M	300	12V	7	3500	200	200	1700	1700
T157	157	TOYOTA	AD157,AD157G class	1	IEC	30V	12V	2	4000	200	200	1700	1700
T158	£ 158	тоуота	AD158,AD158-2,AD158-22,AD1584-3,AD158A-32,AD158B-2, AD158B-22,AD158G-2,AD158G-22,AD158-3,AD158-32 class			30V	12V	2	3500	200	200	1700	1700
T300	r300	TOYOTA	AD3110,AD3110P,AD320-2,AD320-22,AD320-202,AD331,AD3 310,AD3310P,AD332,AD340-2,AD340-22,AD340-202,AD340B- 2,AD340B-22,AD340B-202,AD341-2,AD341-22,AD341-202,AD 345-2,AD345-22,AD345-202,AD352 class	-	YOTA	30V	12V	2	1900	200	200	1700	1700
6E9N	6E 9A	UNION SPECIAL	Class 63900 Solenoid-operated needle feed under trimmer	Fig.23	-	300	12V	2	4000	250	180	1700	1700
SLH2	24 JS	SEIKO	SLH-2B			24V	12V	2	220	100	100	1700	1700
457G	365h	SINGER	457 Wiper	Fig.24	Fig.60	24V	12V	2	4000	250	160	1500	1500
457F	ქსნხ	SINGER	457 Thread pull	Fig.24	Fig.60	24V	12V	2	4000	250	160	1500	1500
591	1 65	SINGER	591, 1591	Fig.24	Fig.60	24V	12V	2	4000	250	200	1500	1500
211A	8112	SINGER	211A	Fig.24	Fig.60	24V	12V	2	2300	200	180	1000	1000
212A	821 Z	SINGER	212A	Fig.24	Fig.60	24V	12V	2	3500	200	180	1000	1000
411U	<i>î!! h</i>	SINGER	4110	Fig.24	Fig.60	24V	12V	2	4000	250	180	1500	1500
412U	በ2፣ አ	SINGER	412U	Fig.24	Fig.60	24V	12V	2	4500	250	180	1500	1500
591V	<i>∾</i> ! 65	SINGER	591V	Fig.24	Fig.60	24V	12V	2	4000	250	200	1500	1500
691A	89 18	SINGER	1691D250	Fig.24	Fig.60	24V	12V	2	4000	250	200	1500	1500
691B	89 18	SINGER	1691D210, 1691D200	Fig.24	Fig.60	24V	12V	2	4000	250	200	1500	1500
750	750	SINGER	750	Fig.24	Fig.60	24V	12V	2	4500	250	215	1500	1500
			i :										


Note: 1. Refer to page 14 for how to change the solenoid voltage. The factory setting is 24V.

2. Refer to page 14 for how to change the option A connector DC5V/12V. The factory setting is 12V.

3. I/O signals of connectors

Fig.20 "DÜRKOPP ADLER"




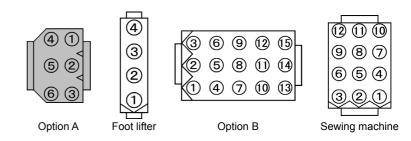


Presser foot lifter

	0\/	4	
	UV	1	
IF	Presser foot lifting signal	2	
OF	Presser foot lifting output +	3	(FU)———
OF	Presser foot lifting output -	4	

Option A (Black connector)

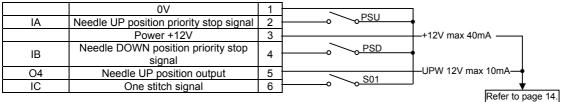

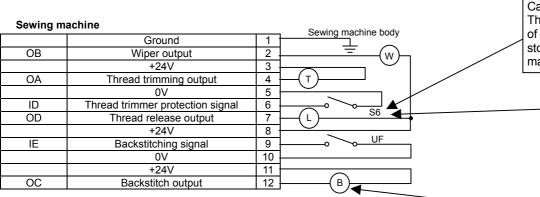

Caution:
The rotation direction display
of the control switch panel will
stop when the sewing
machine does not work.

Sewing machine stops

when S6: Short

This will be output if the start/end tacking stitch

setting is ON in tacking


mode.

Option B

	0V	1	07
14	Backstitching signal	2	\$7
01	Presser foot lifting output +	3	External
VC2	Variable speed command	4	variable
15	One stitch signal	5	S01 resister
I1	Half-stitch signal	6	When input UD is turned ON,
	+5V	7	half-stitch sewing will start.
	+24V	8	
12	Tacking cancel signal	9	BTL AND A DETAIL OF A DETAIL O
	0V	10	When input BTL is turned ON, start
	+24V	11	and end tacking will be prohibited.
02	Needle cooler output	12	NCL NCL
07	[KS3] output	13	This output is not for the
06		14	solenoid output.
O3	TF output	15	TF_
			Refer to page 93.

Fig.21 "DÜRKOPP ADLER"

Function setting [D271]

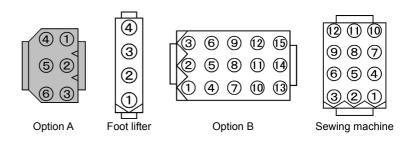


Presser foot lifter

	0V	1	
IF	Presser foot lifting signal	2	F F
OF	Presser foot lifting output +	3	(FU)
OF	Presser foot lifting output -	4	

Option A (Black connector)


	0V	1	1
	<u> </u>	2	PSU
IA	Needle UP position priority stop signal	2	
	Power +12V	3	+12V max 40mA
ID.	Needle DOWN position priority stop	4	PSD
IB	signal	4	
04	Needle UP position output	5	UPW 12V max 10mA
IC	One stitch signal	6	S01
	-		Refer to page 14.

Sewing machine

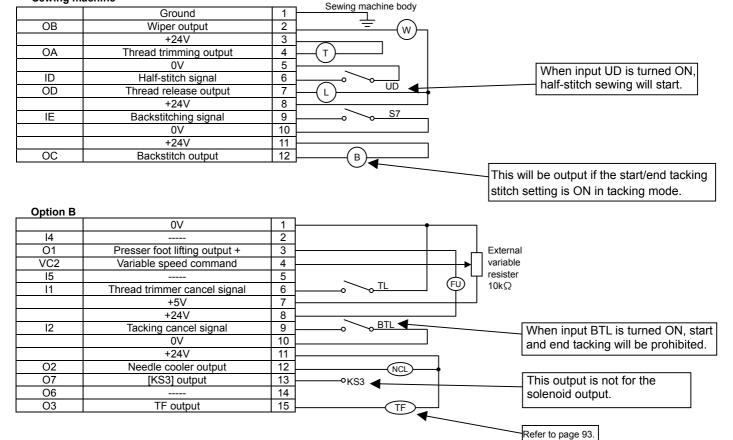



Function setting [D273]

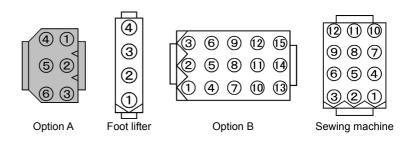

Presser foot lifter

	٥V	1	
IF	Presser foot lifting signal	2	F
OF	Presser foot lifting output +	3	FU
OF	Presser foot lifting output -	4	

Option A (Black connector)

	0V	1	<u> </u>
IA	Needle UP position priority stop signal	2	PSU
	Power +12V	3	+12V max 40mA
IB	Needle DOWN position priority stop signal	4	PSD
04	Needle UP position output	5	UPW 12V max 10mA
IC	One stitch signal	6	S01
			Refer to page 14.

Sewing machine


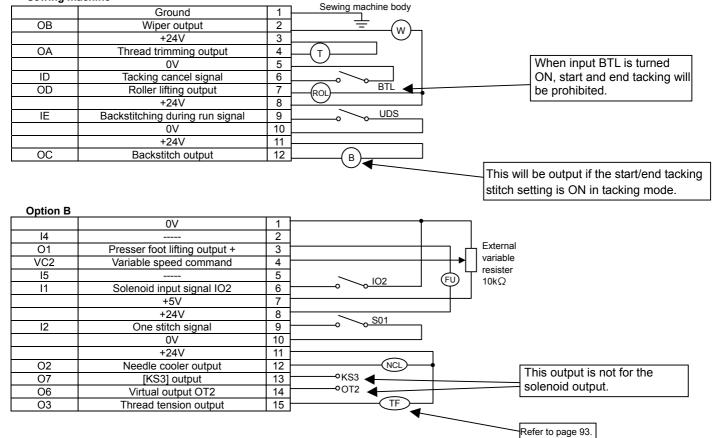


Fig.23 "UNION SPECIAL"


Function setting [U639]

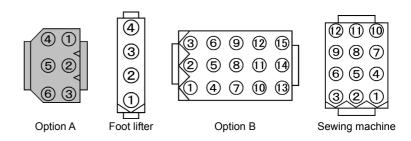


Presser foot lifter

	0V	1	
IF	Presser foot lifting signal	2	
OF	Presser foot lifting output +	3	(FU)
OF .	Presser foot lifting output -	4	

Option A (Black connector)

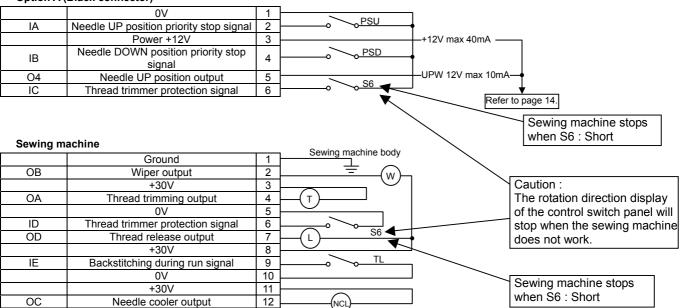

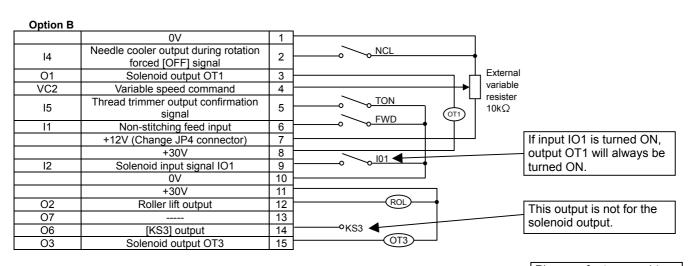


Please refer to page 14. How to change 24/30V of solenoid power source.


Fig.24 "SINGER"


Function setting [457G], [457F], [591], [211A], [212A], [411U], [412U], [591V], [691A], [691B] and [750]



Option A

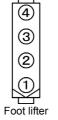

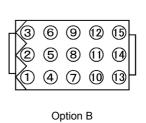

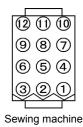

Presser foot lifter

	0V	 1	
IF	Presser foot lifting signal	 2	
OF	Presser foot lifting output +	 3	(FU)
OI OI	Presser foot lifting output -	 4	

Option A (Black connector)

	0V		1	0V
	Start tacking cancel signal	Except 750		When this input is turned ON, start tacking will be inhibited while the signal is ON.
IA	Thread trimmer protection signal	750	2	When input S6 is turned ON while the sewing machine is running, the sewing machine will stop. When input S6 is turned ON during thread trimming, the operation will be completed, and operation will not be possible until input S6 is turned OFF.
	Power +12V		3	DC12V (max 40mA) is output.
IB	End tacking cancel signal		4	When this input is turned ON, end tacking will be inhibited while the signal is ON.
04	Needle UP position output		5	The needle UP position signal is output. The output voltage is DC12V.
IC	Thread trimmer cancel signal		6	When pedal full heeling is turned ON while this input is ON, the thread will not trimmed. After the thread trimmer interlock time passes, the presser foot lifting operation will start.


Sewing machine


	Ground		1	Ground
	Wiper solenoid output	457G, 457F,750	It will be for wiper solenoid output.	
0.5	Thread release solenoid output	691A,691B		It will be for thread release solenoid output.
OB	Option solenoid output	411U,412U, 591,211A, 212A,591V	2	This output is always turned ON when option solenoid input signal is ON.
	+24V		3	+24V
OA	Thread trimming output		4	It will be for thread trimming solenoid output.
	0V		5	0V
ID	Needle up input		6	When this input is turned ON, the needle up input will function.
	Thread release solenoid output	457G, 457F,750		It will be for thread release solenoid output.
OD	Wiper solenoid output	Except 457G, 457F,750	7	It will be for wiper solenoid output.
	+24V		8	+24V
IE	Manual backtacking signal		9	When this input is turned ON, the backtacking operation will start.
	0V		10	0V
	+24V		11	+24V
OC	Backstitch output		12	It will be for Backstitch solenoid output.


Option B

Option B				
	0V		1	0V
14			2	
01		Except 691A,691B, 750	3	Not output.
	ADD.BT solenoid output	691A,691B		It will be for ADD.BT solenoid output.
	Thread trimmer output	750		Thread trimming starts.
VC2	Variable speed command		4	This input is for external speed command. (If voltage is applied to this input, sewing machine will start.)
15			5	
I1	Needle UP position priority stop signal		6	When input PSU is turned ON while the sewing machine is running, the needle will stop at the UP position after swing PSU stitches and thread trimming.
	+5V		7	DC5V (max 10mA) is output.
	+24V		8	+24V
12	Emergency stop signal	457G,457F, 691A,691B, 750	9	When this input is turned ON while the sewing machine is running, all running states will be canceled, and the sewing machine will stop with the brakes.
	Option solenoid input signal	591,211A, 212A,411U, 412U,591V		When this input is turned ON, the option solenoid output will start.
	0V		10	0V
	+24V		11	+24V
02		Except 691A,750	10	Not output.
O2	Air blow output	691A	12	It will be for the air blow output.
	Wiper solenoid output	750		It will be for wiper solenoid output.
07			13	
O6			14	
О3	Thread pull output	691A	15	It will be for the thread pull output.
		Except 691A	'0	Not output.


Note) The thread trimming (operation) will differ with the [457G], [457F], [591], [211A], [212A], [411U], [412U], [591V], [691A], [691B] and [750] simple setting, so select the setting value according to the sewing machine being used.

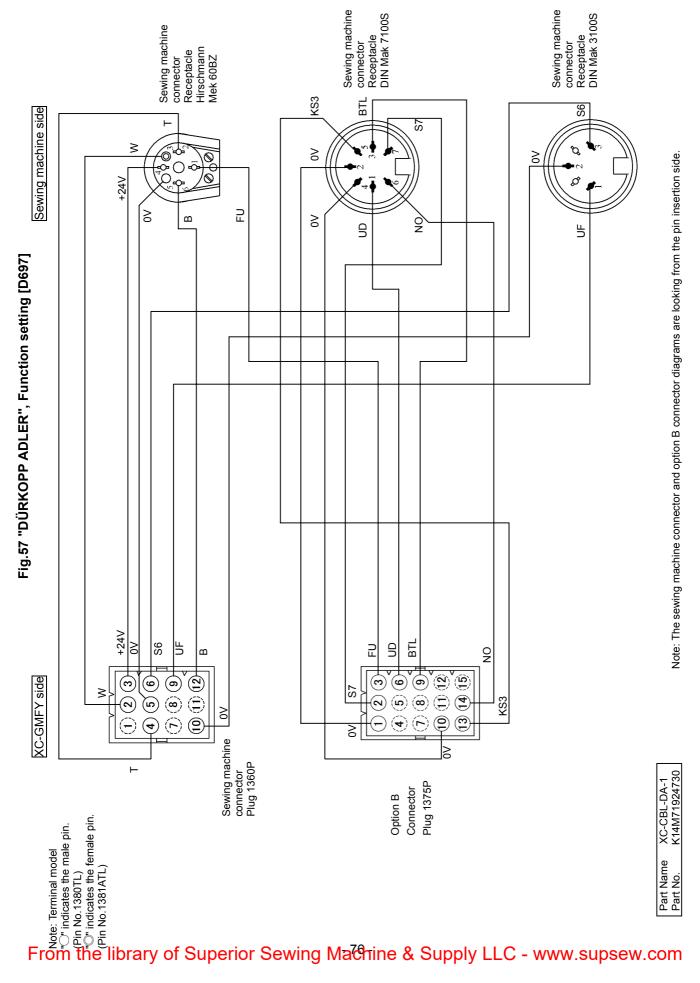

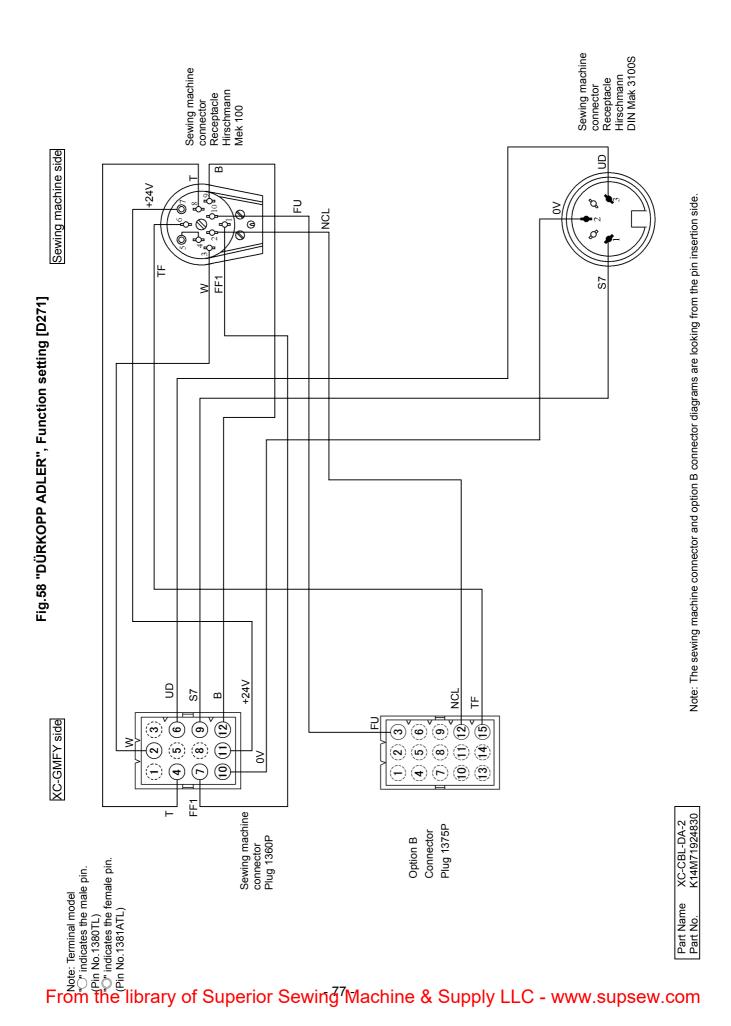

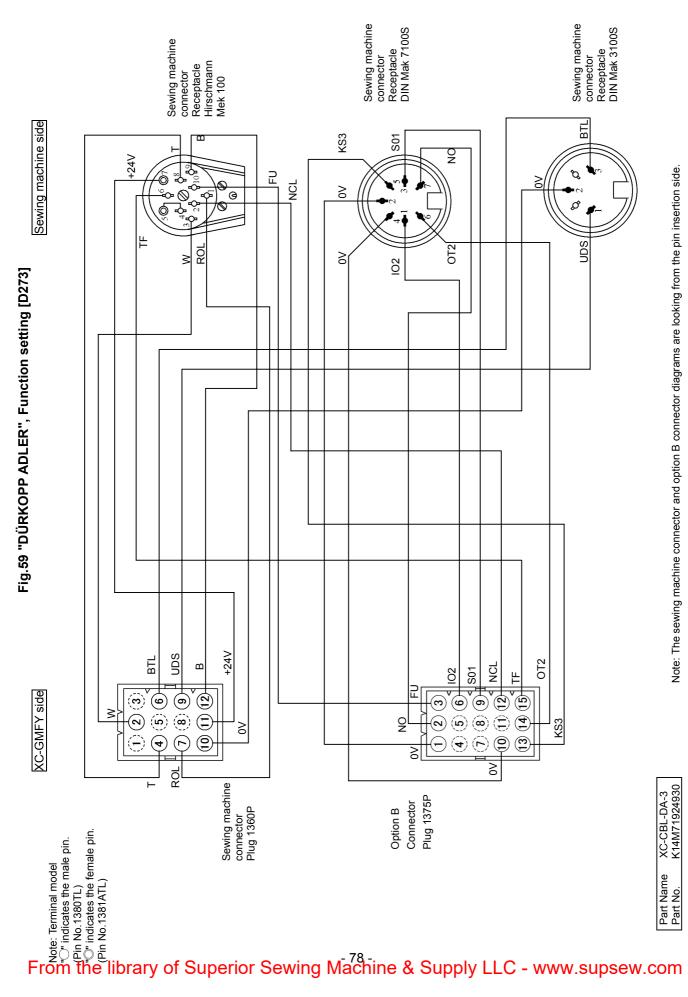


Note: The sewing machine connector and option B connector diagrams are looking from the pin insertion side.

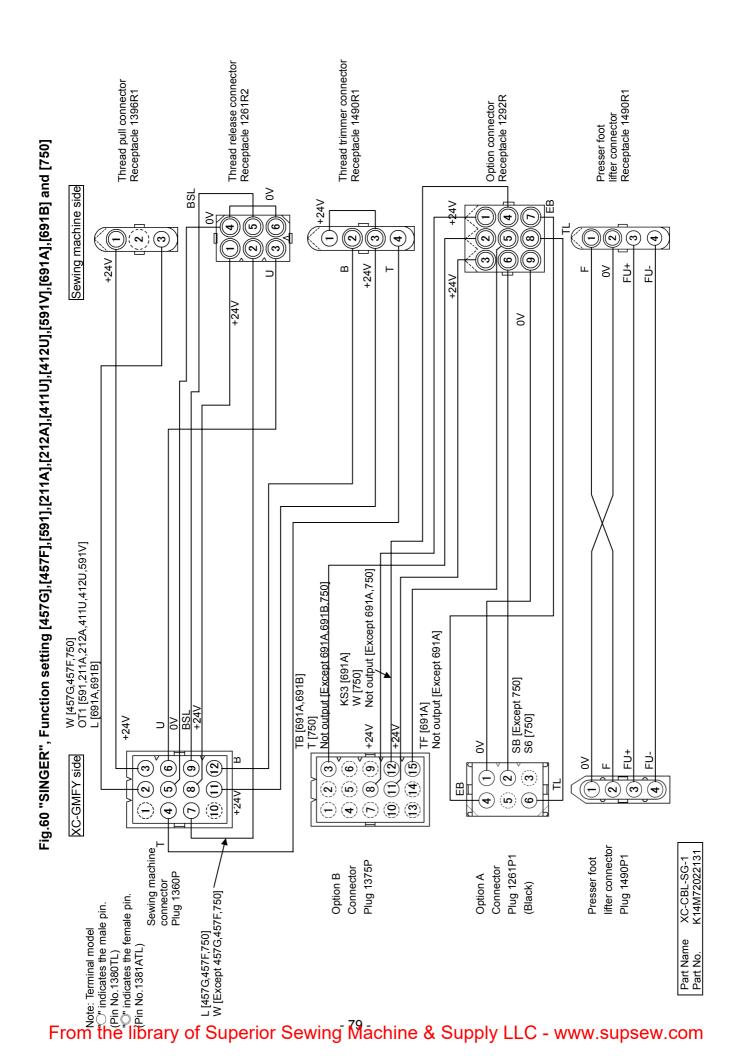


5. How to connect BROTHER machine


5.1 Junction wiring (1)DB2-715 (XC-CBL-BR-1)

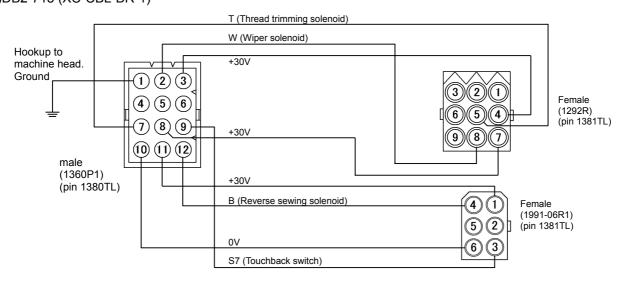

(2)DB2-716 (XC-CBL-BR-2)

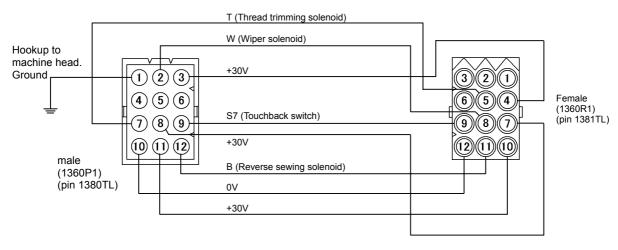

(3)DB2-B737, B737 MARK II, B748, B791, B7910, B793, B795, B798, LT2-B842, B845, B847, B848, B872, B875, LZ2-B852, B853, B854 (XC-CBL-BR-3)

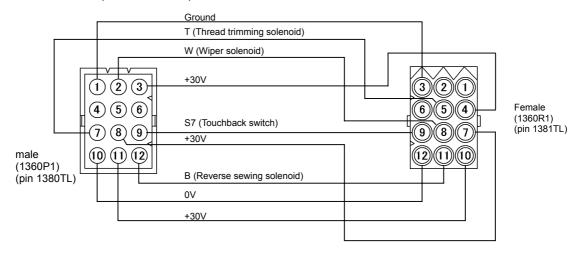

5.2 How to use BROTHER'S built-in detector by LIMI-SERVO X

(1). MODEL


- (a) Applicable brother built-in type detector brother control box: MODEL MD-803, MD-813
- (b) MITSUBISHI LIMI-SERVO MOTOR
 LIMI-SERVO X MODEL XC-GMFY control box

(2). How to connect

(a) Set up for over-change connector

First, turn off the power. After 10 min. of turning off, screw down and remove the front cover. Power for brother's built-in detector is +5v, so open the cover of MITSUBISHI LIMI-SERVO control box, and change from +12v to +5v inside connector (JP3).

(b) Connect by relay cable (XC-CBL-BR-4)

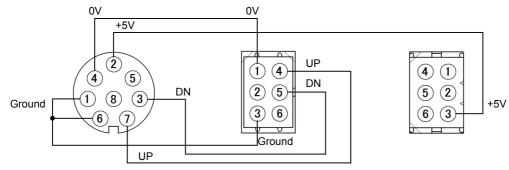

TO BROTHER BUILT-IN DETECTOR CONNECTOR 8 PIN DIN TYPE HOSIDEN CONNECTOR TCS8086-01-5201 TO LIMI-SERVO
DETECTOR
CONNECTOR
MOLEX CONNECTOR
CONNECTOR 1991-06P1
TERMINAL 1380TL
OR AMP CONNECTOR
CONNECTOR 770361-1
TERMINAL 770147-1

TO LIMI-SERVO
OPTION A
CONNECTOR
MOLEX CONNECTOR
CONNECTOR 1261P1
TERMINAL 1380TL
OR AMP CONNECTOR
CONNECTOR 770090-1
TERMINAL 770147-1

5.3 How to connect BROTHER'S built-in volume type push button switch

(1). Applicable brother push bottom switch built-in volume type push bottom switch

OFF ON LOW ______ HIGH

(2). MITSUBISHI LIMI-SERVO MOTOR

(a) 100V, 1-phase use.

CONTROL BOX : XC-GMFY-10-05 MOTOR : XL-G554-10Y


(b) 200V, 3-phase use.

CONTROL BOX : XC-GMFY-20-05 MOTOR : XL-G554-20Y

(3). How to connect

(a) Connect push bottom switch with LIMI-SERVO (XC-CBL-BR-6)
Using the junction wire of following indication, connect the control box and volume of push bottom switch.

(b) Turn off the power. After 10 min. of turning off, screw down and remove the front cover. Power for brother's variable speed command is 12v, so open the cover of MITSUBISHI LIMI-SERVO control panel, and change from +5v to +12v inside connector (JP4).

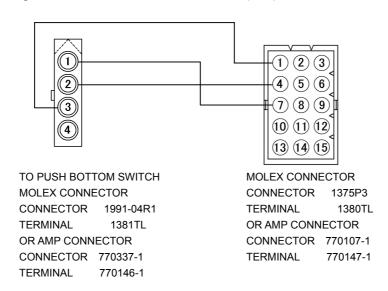


(4). Set up by control panel

- (a) Press the key [↓], [A] and [C] key simultaneously over 2 seconds at normal mode (indication is rotating) and set "Q" mode. Indicate the thread trimming time like [VCS.OF].
- (b) Press key [↓] few times, and find out VC2 (action mode VC2 for speed instructions). Indication become like [VC2.VC].
- (c) Press the key "D" few times, change the indication for [VC2.VR] (function of speed ordering input VC2 of connector option-b change into the function of speed volume of control panel).
- (d) Press key [↓] few times, and find out V25 (VC2 input 5V/12V changeover mode). Indication become like [V25.ON].
- (e) Press the key "D" once, change the indication for [V25.OF] (function of VC2 maximum input voltage change into 12v).
- (f) Press the key $[\downarrow]$ and $[\uparrow]$ simultaneously, return to the normal mode.


6. How to connect JUKI machine

6.1 Junction wiring


(1) For DDL-500 (XC-CBL-JK-1)

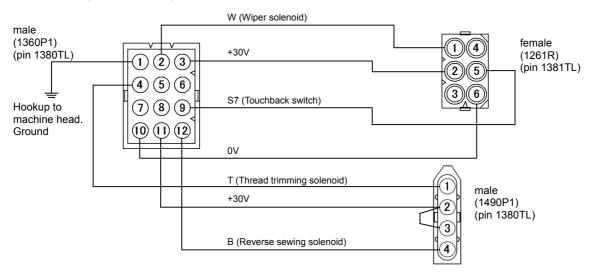

(2) For DDL-555-2-2B, 4B (XC-CBL-JK-2)

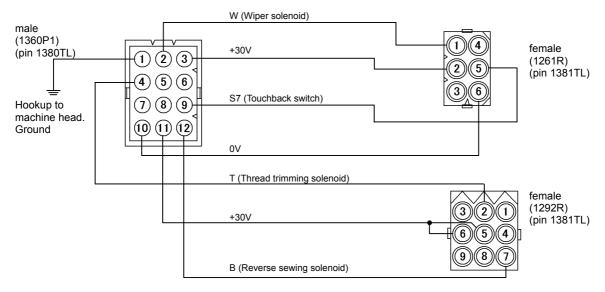


(3) For DDL-505, 506, 5570, 5580, DLU-5490 (XC-CBL-JK-3)

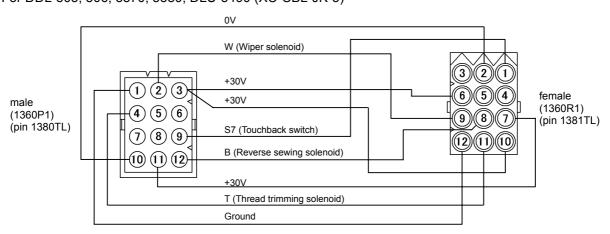

(a) For thread trimming


[Parts Name:XC-CBL-JK-5 (Parts No.:K14M72021130)]

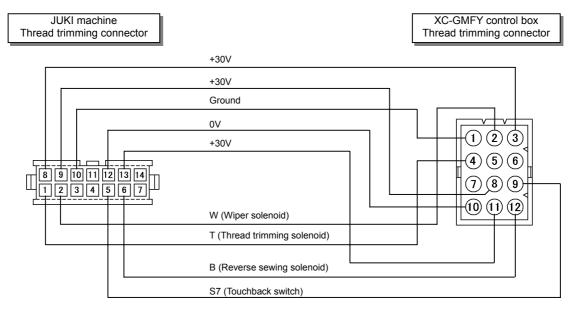

Connector 5559-14P (MOLEX) Terminal 5558TL (MOLEX)

Connector 1360P1 (MOLEX) 770102-1 (AMP) Terminal 1380TL (MOLEX) 770147-1(AMP)

(b) For foot lifter [Parts Name:XC-CBL-JK-6 (Parts No.:K14M72021230)]

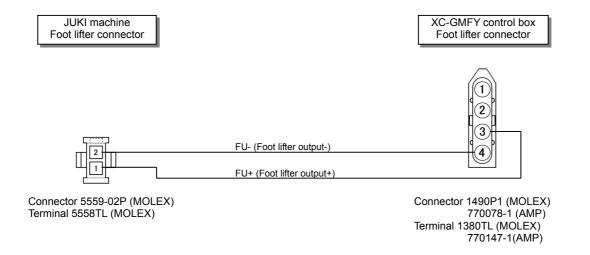

6.2 How to use JUKI'S built-in detector by LIMI-SERVO X

(1). MODEL

(a) JUKI'S built-in detector

THE models for JUKI'S control box j1aeas

(b) MITSUBISHI'S SERVO MOTOR


LIMI-SERVO X MODEL XC-FMFY control box

(2). How to connect

(a) Set up the dc5v/12v changeover switch

First, turn off the power. If turned off the power, the voltage is high, and please wait 10 more minutes after you turned off, please take off the front cover to screw down by plus driver. The power for JUKI'S built-in detector is +5v, open the control panel for MITSUBISHI LIMI-SERVO X, change over the inside connector (JP3) from side +12v to side +5v.

(b) Connection with junction wire (XC-CBL-JK-4)

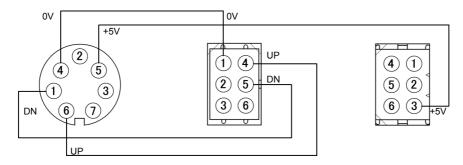


TO JUKI BUILT-IN
DETECTOR
CONNECTOR
7 PIN DIN TYPE
HOSIDEN CONNECTOR
TCS8076-01-5201

TO LIMI-SERVO
DETECTOR
CONNECTOR
MOLEX CONNECTOR
CONNECTOR 1991-06P1
TERMINAL 1380TL
OR AMP CONNECTOR
CONNECTOR 770361-1
TERMINAL 770147-1


TO LIMI-SERVO
OPTION A
CONNECTOR
MOLEX CONNECTOR
CONNECTOR 1261P1
TERMINAL 1380TL
OR AMP CONNECTOR
CONNECTOR 770090-1
TERMINAL 770147-1

7. How to connect TOYOTA machine

7.1 Junction wiring (1)XC-CBL-TY-1

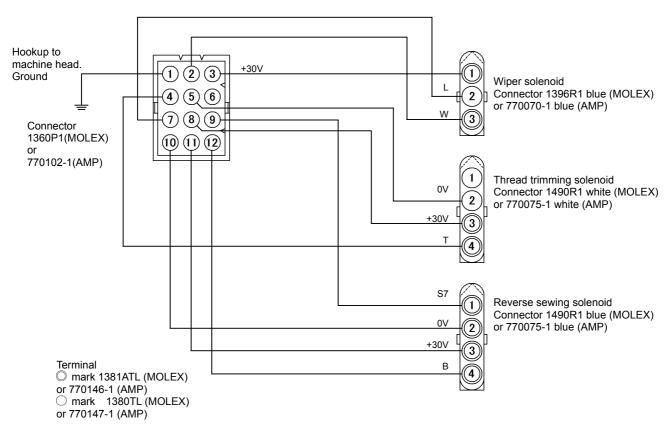


(2)TOYOTA FOOT LIFTING DEVICE (XC-CBL-TY-2)

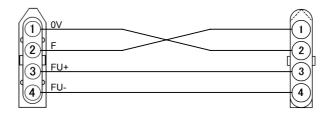

To LIMI-SERVO foot lifting connector Connector 1490P1 white (MOLEX) or 770078-1 white (AMP) Terminal 1380TL male (MOLEX) or 770147-1 (AMP) To TOYOTA machine foot lifting Connector 1490R1 black (MOLEX) or 770075-1 black (AMP) Terminal 1380TL male (MOLEX) or 770147-1 (AMP)

(3)TOYOTA BUILT-IN SYNCHRONIZER (XC-CBL-TY-3)


To LIMI-SERVO detector connector Connector 1991-06P1 (MOLEX) or 770361-1 (AMP) Terminal 1380TL male (MOLEX) or 770147-1 (AMP)

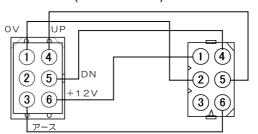

To TOYOTA built-in synchronizer Connector 1261R1 white (MOLEX) or 770086-1 white (AMP) Terminal 1380TL male (MOLEX) or 770147-1 (AMP)

(4)TOYOTA FOOT PEDAL MODEL RT-26, RT-27 (XC-CBL-TY-4)

To foot pedal model
Connector 1261R1 (MOLEX)
or 770086-1 (AMP)
Terminal
 mark 1381ATL (MOLEX)
or 770146-1 (AMP)
 mark 1380TL (MOLEX)
or 770147-1 (AMP)

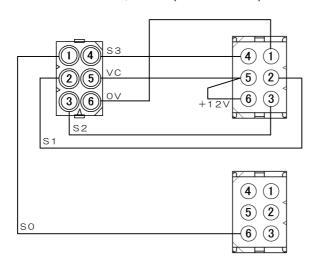

To LIMI-SERVO lever connector Connector 1261P1 white (MOLEX) or 770090-1 white (AMP) Terminal 1380TL male (MOLEX) or 770147-1 (AMP)


To LIMI-SERVO option A connector Connector 1261P1 black (MOLEX) or 770090-1 black (AMP) Terminal 1380TL male (MOLEX) or 770147-1 (AMP)

* Turn the program mode [C] function [PDS] ON. Refer to the page 210.

(5)TOYOTA VARIABLE SPEED PEDAL (XC-CBL-TY-5)

To LIMI-SERVO lever connector Connector 1261P1 (MOLEX) or 770090-1 (AMP) Terminal

mark 1381ATL (MOLEX) or 770146-1 (AMP)
mark 1380TL (MOLEX) or 770147-1 (AMP)

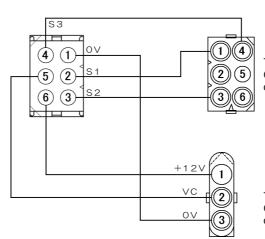


To TOYOTA variable speed pedal Connector 1261R1 (MOLEX) or 770086-1 (AMP)

To TOYOTA variable speed pedal Connector 1396R1 black (MOLEX) or 770070-1 black (AMP)

* Turn the program mode [C] function [PDS] ON. Refer to the page 210.

1. Thread trimming timing when thread trimming mode TR setting is PRG

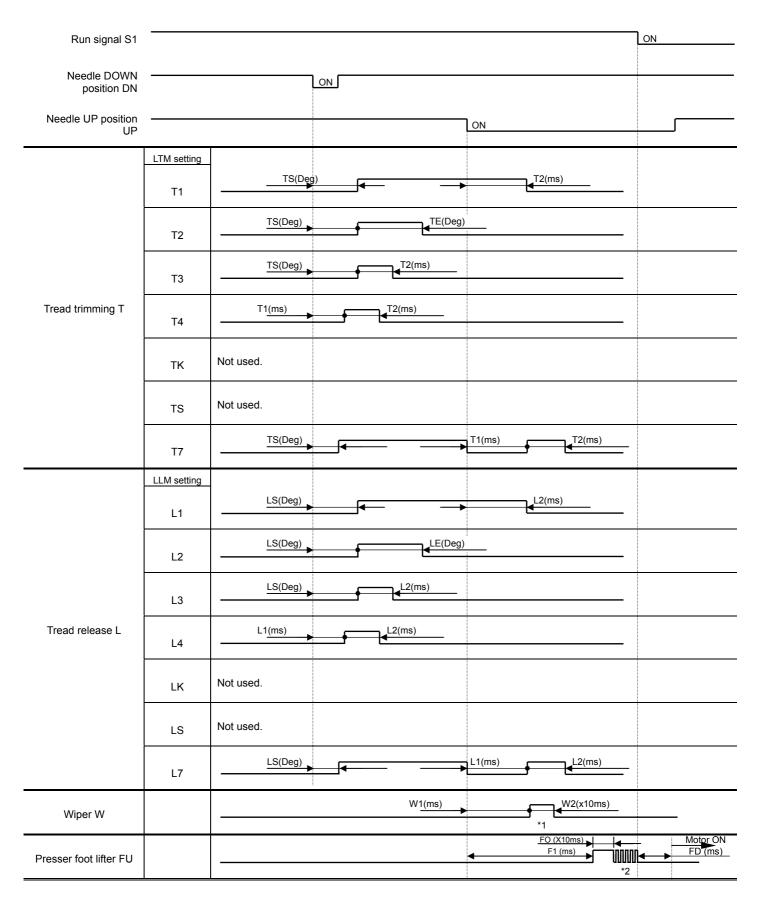


Notes: *1.The wiper output [W] becomes special operation according to the [G] mode WMD setting, as shown on page 89.

^{*2.} The presser foot lifter [FU] chopping duty can be set with FUD in the [P] and [C] mode.


2. Wiper output timing


Wiper output OFF timing with (S2) signal by using WMD setting (in program mode G)

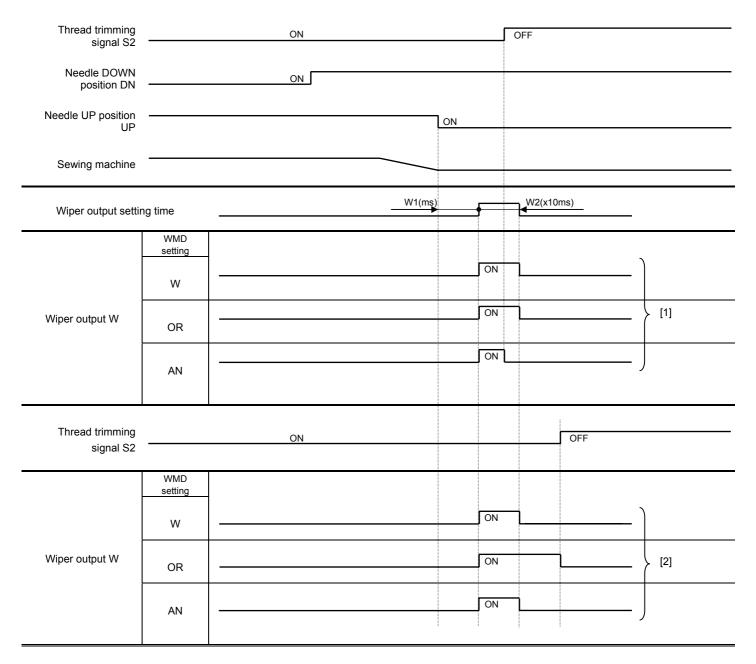



^{*} Wiper output OFF timing is changed by S2 signal OFF timing like above chart [1] and [2].

3. Thread trimming timing for each setting in the thread trimming mode TR

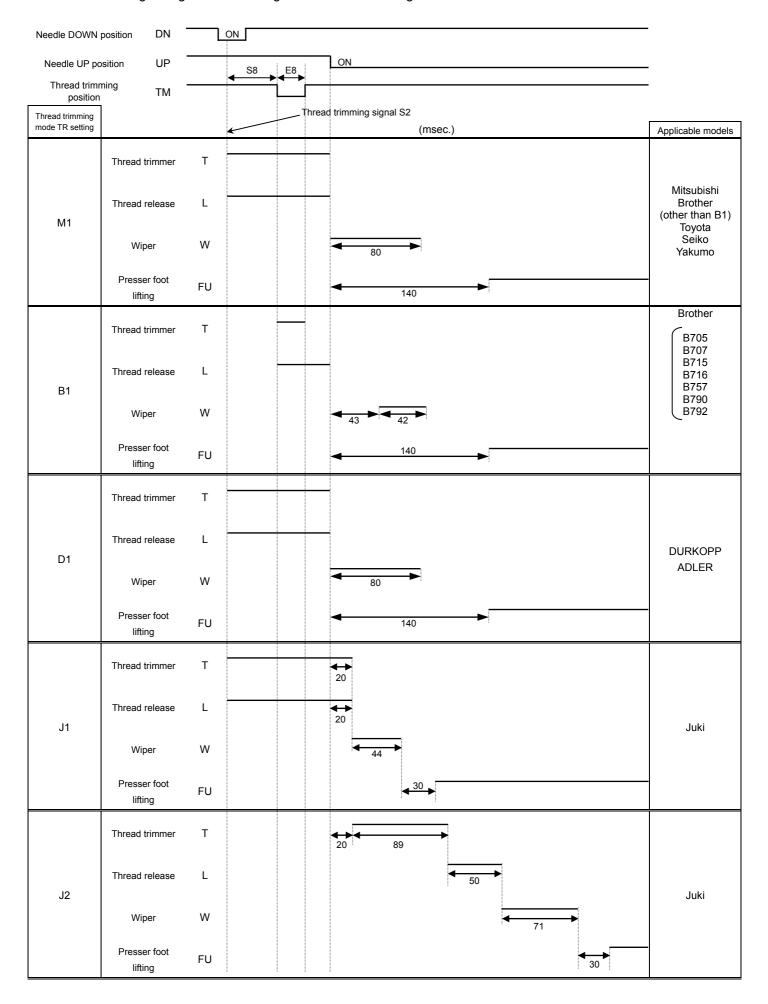


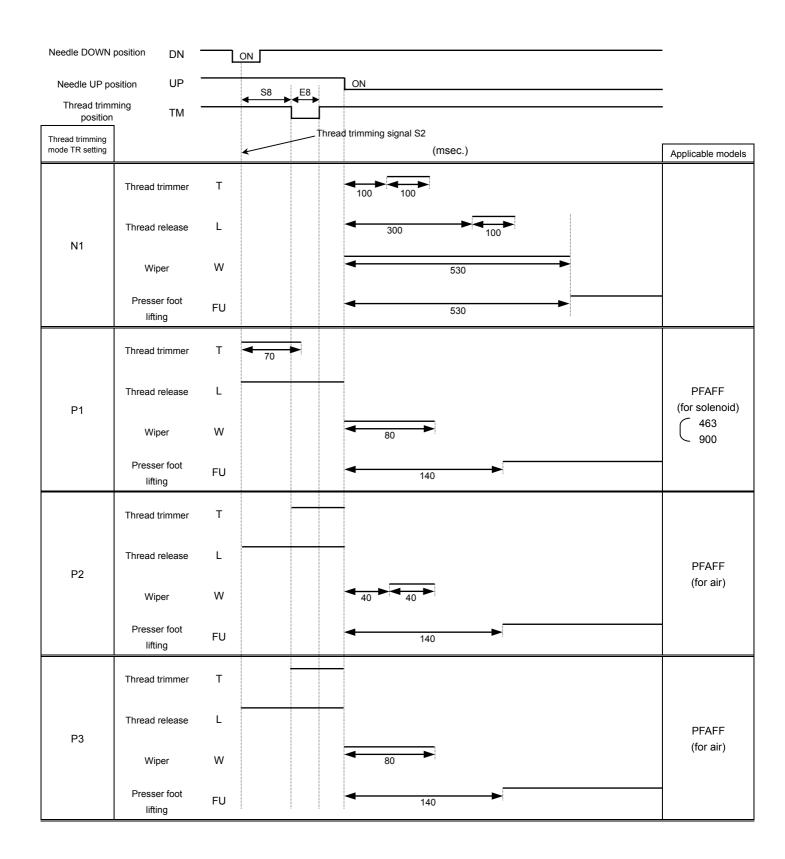

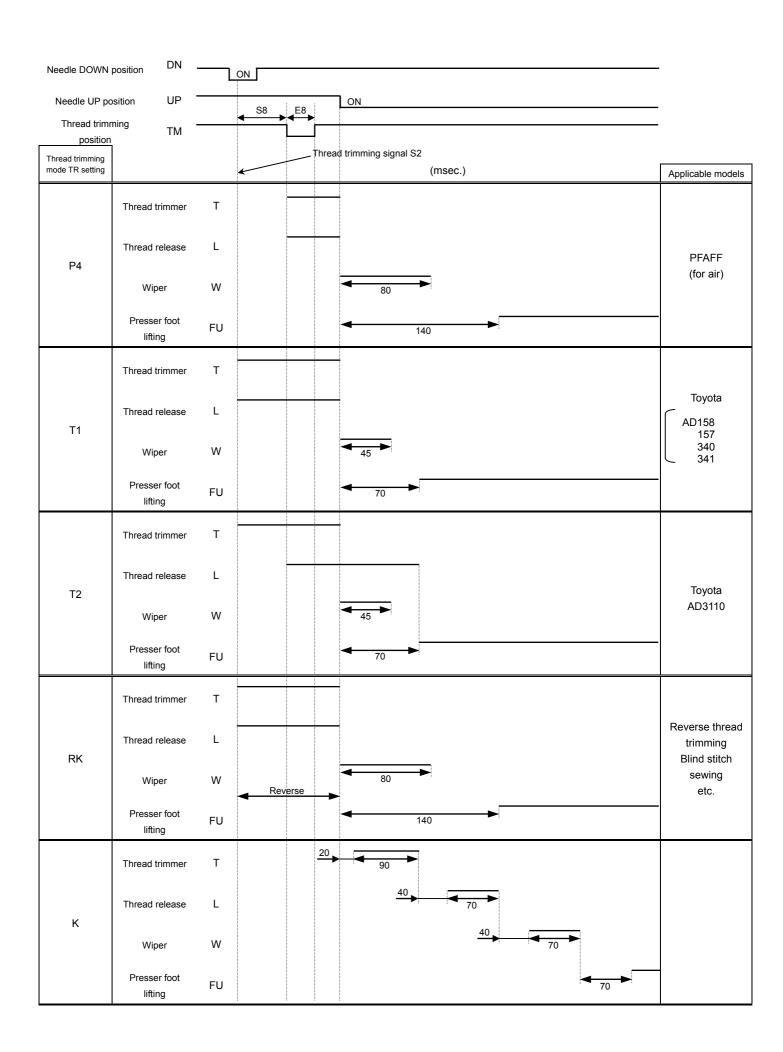

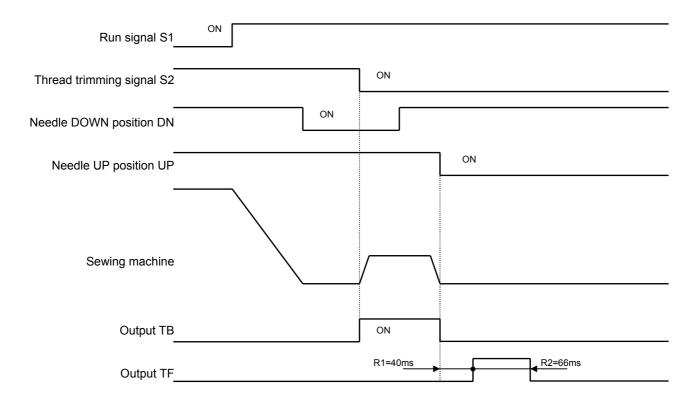

(2) Function setting [RU [ON]] in program mode [P]

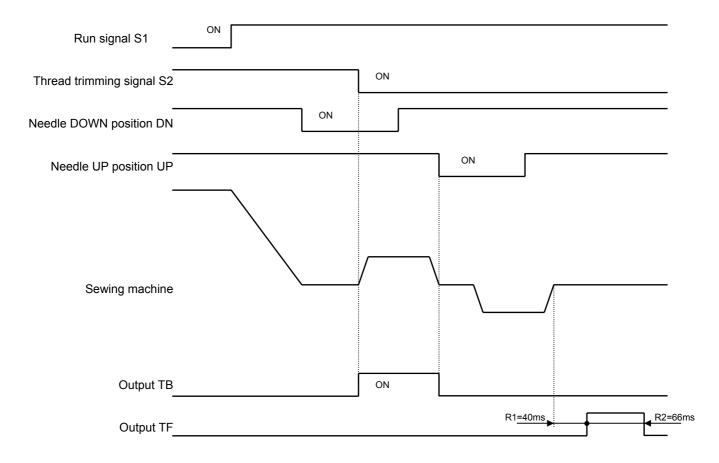



Note 1. The TF output start time can be set with R1 in the [G] mode.

The TF output time can be set with R2 in the [G] mode.

2. The above-mentioned timing is function setting [TRM [LK]] in program mode [G].

(3) Chain stitch sewing machine (Condensed stitch is valid.)

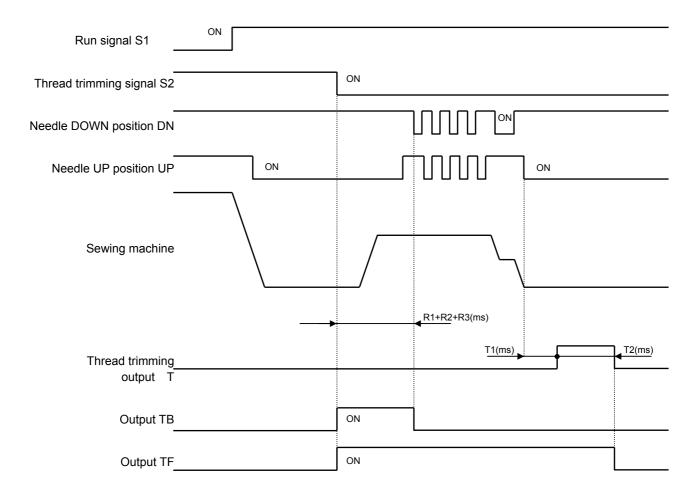

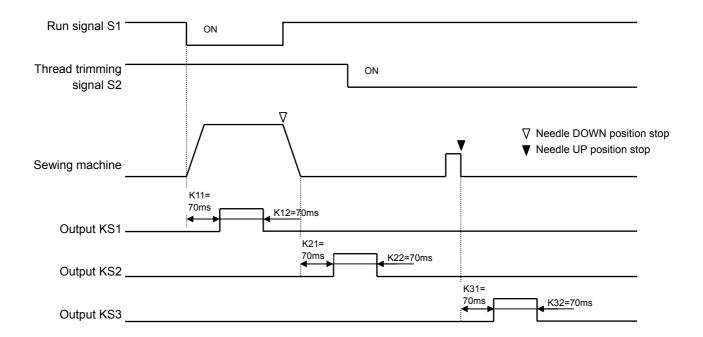

Note. The KS1 to KS3 output start time and output time can be set with K11 to K32 in the [S] mode.

Caution

This timing chart (sequence) is only available when [SQS] is set to [NO]. When [SQS] is not set to [NO], please refer to "[18] Simple sequence".

18 Simple Sequence

The function outputs [KS1], [KS2], [KS3] and [KS4] can be set as simple sequence outputs. To set the simple sequence output, the starting conditions [IN] [T][R][S][TR][SB][GO] are set in the simple sequence starting condition setting function [SQS] of the [S] mode. With this, function outputs [KS1], [KS2], [KS3] and [KS4] will be simple sequence outputs. (The default setting is the [NO] setting.)

1. Simple sequence starting conditions

The simple sequence starting condition setting function [SQS] is as follows.

[NO] : The simple sequence is not started. (The default setting is the [NO] setting.)

(Refer to "[17] Output KS1, KS2, KS3 timings".)

[IN] : When virtual input IO4 is turned ON.[T] : When thread trimming is completed.

[R] : When operation is starting.

[S] : When motor is stopped. (This also includes when single-stitch operation is stopped.)

[TR] : When starting stitching after thread trimming.

[SB] : When start tacking is completed. (If the start tacking setting is "NO", it is when starting stitching after thread trimming.)

[GO] : Always start.

[R]

Simple sequence forced end conditions

The simple sequence forced end conditions can be set.

[NO] : The simple sequence will not forced end. (The default setting is the [NO] setting.)

[LV] : When virtual input IO5 is ON level.[IN] : When virtual input IO5 is turned ON.[T] : When thread trimming is completed.

When operation is starting.

[S] : When motor is stopped. (This also includes when single-stitch operation is stopped.)

[TR] : When starting stitching after thread trimming.

[SB] : When start tacking is completed. (If the start tacking setting is "NO", it is when starting stitching after thread trimming.)

3. Simple sequence output starting point setting

The simple sequence output starting point setting [S1S], [S2S], [S3S] and [S4S] can be set.

[KS] : Linked output. (ON edge of the front output)

[IN] : Virtual input ON point. (KS1:IO6, KS2:IO7, KS3:IO8, KS4:IO9)

[T] : When thread trimming is completed.

[R] : When operation is starting.

[S] : When motor is stopped. (This also includes when single-stitch operation is stopped.)

[TR] : When starting stitching after thread trimming.

[SB] : When start tacking is completed. (If the start tacking setting is "NO", it is when starting stitching after thread trimming.)

4. Simple sequence output end point setting

The simple sequence output end point setting [S1E], [S2E], [S3E] and [S4E] can be set.

[KS] : Linked output. (Each output starting point)

[OF] : Virtual input OFF point. (KS1:IO6, KS2:IO7, KS3:IO8, KS4:IO9)
[IN] : Virtual input ON point. (KS1:IOA, KS2:IOB, KS3:IOC, KS4:IOD)

[T] : When thread trimming is completed.

[R] : When operation is starting.


[S] : When motor is stopped. (This also includes when single-stitch operation is stopped.)

[TR] : When starting stitching after thread trimming.


[SB] : When start tacking is completed. (If the start tacking setting is "NO", it is when starting stitching after thread trimming.)

5. Simple sequence output timing chart


5-1. (Starting point setting : [KS], End point setting : [KS])

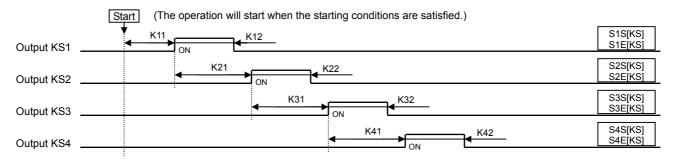

5-2. (Starting point setting: [IN], End point setting: [OF])

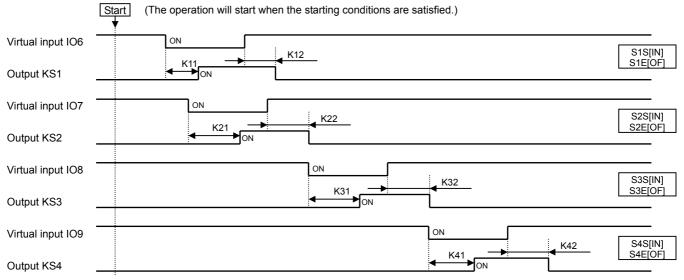

5-3. (Starting point setting: [IN], End point setting: [IN])

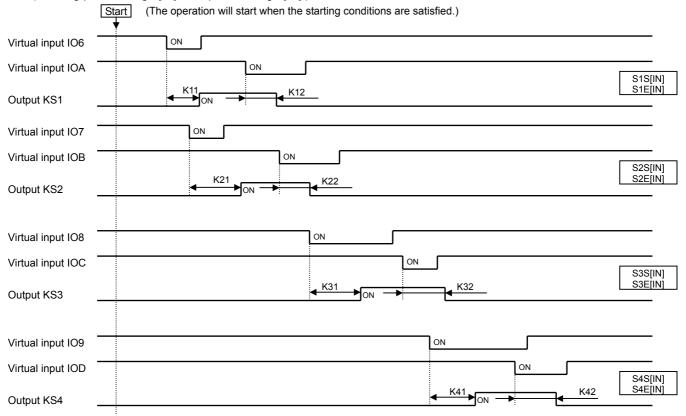

Explanation of setting functions

(a) Sequence output [KS1] [KS2] [KS3] [KS4] output start time/No. of stitch setting changeover [NS1] [NS2] [NS3] [NS4]

[OF] setting : Time setting ([K11] [K21] [K31] [K41] : 10 msec unit)

[ON] setting: No. of stitch setting ([K11] [K21] [K31] [K41])

(b) Sequence output [KS1] [KS2] [KS3] [KS4] output time/No. of stitch setting changeover [NE1] [NE2] [NE3] [NE4]

[OF] setting : Time setting ([K12] [K22] [K32] [K42] : 10 msec unit)

[ON] setting: No. of stitch setting ([K12] [K22] [K32] [K42])

(c) Sequence output [KS1] [KS2] [KS3] [KS4] time setting/No. of stitch setting each by ten times setting [KL1] [KL2] [KL3] [KL4]

[OF] setting : Time setting/No. of stitch setting ([K11][K12], [K21][K22], [K31][K32], [K41][K42])

[ON] setting: Time setting/No. of stitch setting by ten times ([K11][K12]x10, [K21][K22]x10, [K31][K32]x10, [K41][K42]x10)

(d) Sequence output [KS1] [KS2] [KS3] [KS4] time setting by ten times setting [KSL]


 $[OF] \ setting: Time \ setting \ ([K11][K12][K21][K22][K31][K32][K41][K42])$

[ON] setting : Time setting by ten times ([K11][K12][K21][K22][K31][K32][K41][K42]x10)

Note 1. When using the simple sequence, make each simple sequence related setting shown above, and assign the function output [KS1] [KS2] [KS3] [KS4] to the output setting of the output pin being used by setting the [C] mode output function.

2. If the starting conditions are not set in the simple sequence setting starting condition setting [SQS] above (when [NO] is set), the function output [KS1] [KS2] [KS3] will have the output timing shown on the next page.

When the following timing output is to be output to the option B connector's No.3 pin, No.12 pin and No.15 pin. ([O1],[O2],[O3])

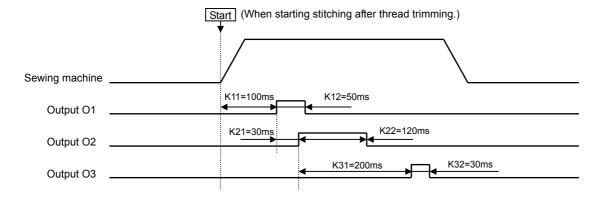


[Setting]

C Mode	([↓]+[C] key)
--------	---------------

Function	Standard	Setting	Description
01	OT1	KS1	Selection of output signal function
O2	NCL	KS2	Selection of output signal function
O3	TF	KS3	Selection of output signal function

Function	Standard	Setting	Description
SQS	NO	TR	Simple sequence start condition (When starting stitching after thread trimming)
SQE	NO	T	Simple sequence forced end condition (When thread trimming is completed)
S1S	KS	KS	KS1 output starting point setting (Linked output. (ON edge of the front output))
S1E	KS	KS	KS1 output end point setting (Linked output. (Each output starting point))
S2S	KS	KS	KS2 output starting point setting (Linked output. (ON edge of the front output))
S2E	KS	KS	KS2 output end point setting (Linked output. (Each output starting point))
S3S	KS	KS	KS3 output starting point setting (Linked output. (ON edge of the front output))
S3E	KS	KS	KS3 output end point setting (Linked output. (Each output starting point))
K11	7	10	KS1 output start [Time] setting (10x10ms=100ms)
K12	7	5	KS1 output [Time] setting (5x10ms=50ms)
K21	7	3	KS2 output start [Time] setting (3x10ms=30ms)
K22	7	12	KS2 output [Time] setting (12x10ms=120ms)
K31	7	20	KS3 output start [Time] setting (20x10ms=200ms)
K32	7	3	KS3 output [Time] setting (3x10ms=30ms)

When the following timing output is to be output to the option B connector's No.3 pin, No.12 pin and No.15 pin. ([O1],[O2],[O3])

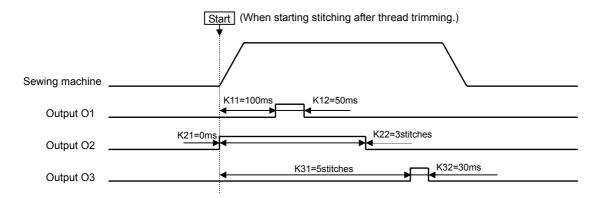


[Setting]

C Mode ([\]+[C] key

Function	Standard	Setting	Description
01	OT1	KS1	Selection of output signal function
O2	NCL	KS2	Selection of output signal function
O3	TF	KS3	Selection of output signal function

Function	Standard	Setting	Description
SQS	NO	TR	Simple sequence start condition (When starting stitching after thread trimming)
SQE	NO	T	Simple sequence forced end condition (When thread trimming is completed)
NS1	OF	OF	KS1 output start time/No. of stitch setting changeover (Time count setting)
NE1	OF	OF	KS1 output time/No. of stitch setting changeover (Time count setting)
S1S	KS	TR	KS1 output starting point setting (Linked output. (ON edge of the front output))
S1E	KS	KS	KS1 output end point setting (Linked output. (Each output starting point))
NS2	OF	OF	KS2 output start time/No. of stitch setting changeover (Time count setting)
NE2	OF	ON	KS2 output time/No. of stitch setting changeover (Stitch count setting)
S2S	KS	TR	KS2 output starting point setting (Linked output. (ON edge of the front output))
S2E	KS	KS	KS2 output end point setting (Linked output. (Each output starting point))
NS3	OF	ON	KS3 output start time/No. of stitch setting changeover (Stitch count setting)
NE3	OF	OF	KS3 output time/No. of stitch setting changeover (Time count setting)
S3S	KS	TR	KS3 output starting point setting (Linked output. (ON edge of the front output))
S3E	KS	KS	KS3 output end point setting (Linked output. (Each output starting point))
K11	7	10	KS1 output start [Time] setting (10x10ms=100ms)
K12	7	5	KS1 output [Time] setting (5x10ms=50ms)
K21	7	0	KS2 output start [Time] setting (0ms)
K22	7	3	KS2 output [No. of stitches] setting (3stitches)
K31	7	5	KS3 output start [No. of stitches] setting (5stitches)
K32	7	3	KS3 output [Time] setting (3x10ms=30ms)

By input signal of the option A connector's No.2 pin ([IA]), When the following timing output is to be output to the option B connector's No.3 pin, No.12 pin and No.15 pin. ([O1],[O2],[O3])

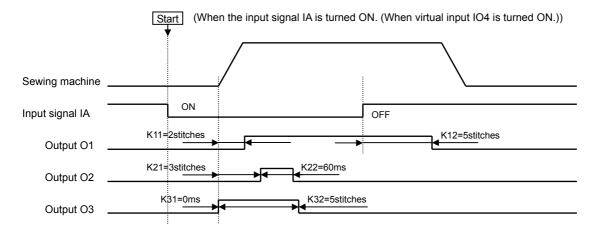


[Setting]

C Modo	([∐]+[C] kev)	
CIVIOUE	(IIIITICI NEVI	

Function	Standard	Setting	Description
IA	PSU	104	Selection of input signal function
IM	NO	106	Selection of input signal function
01	OT1	KS1	Selection of output signal function
O2	NCL	KS2	Selection of output signal function
O3	TF	KS3	Selection of output signal function
OM	NO	OT4	Selection of output signal function

Function	Standard	Setting	Description
SQS	NO	IN	Simple sequence start condition (When virtual input IO4 is turned ON.)
SQE	NO	T	Simple sequence forced end condition (When thread trimming is completed)
NS1	OF	ON	KS1 output start time/No. of stitch setting changeover (Stitch count setting)
NE1	OF	ON	KS1 output time/No. of stitch setting changeover (Stitch count setting)
S1S	KS	TR	KS1 output starting point setting (When starting stitching after thread trimming)
S1E	KS	OF	KS1 output end point setting (Virtual input OFF point. (KS1:IO6))
NS2	OF	ON	KS2 output start time/No. of stitch setting changeover (Stitch count setting)
NE2	OF	OF	KS2 output time/No. of stitch setting changeover (Time count setting)
S2S	KS	TR	KS2 output starting point setting (When starting stitching after thread trimming)
S2E	KS	KS	KS2 output end point setting (Linked output. (Each output starting point))
NS3	OF	OF	KS3 output start time/No. of stitch setting changeover (Time count setting)
NE3	OF	ON	KS3 output time/No. of stitch setting changeover (Stitch count setting)
S3S	KS	TR	KS3 output starting point setting (When starting stitching after thread trimming)
S3E	KS	KS	KS3 output end point setting (Linked output. (Each output starting point))
K11	7	2	KS1 output start [No. of stitches] setting (2stitches)
K12	7	5	KS1 output [No. of stitches] setting (5stitches)
K21	7	3	KS2 output start [No. of stitches] setting (3stitches)
K22	7	6	KS2 output [Time] setting (6x10ms=60ms)
K31	7	0	KS3 output start [Time] setting (0ms)
K32	7	5	KS3 output [No. of stitches] setting (5stitches)

By input signal of the option A connector's No.2 pin ([IA]), When the following timing output is to be output to the option B connector's No.3 pin, No.12 pin and No.15 pin. ([O1],[O2],[O3])

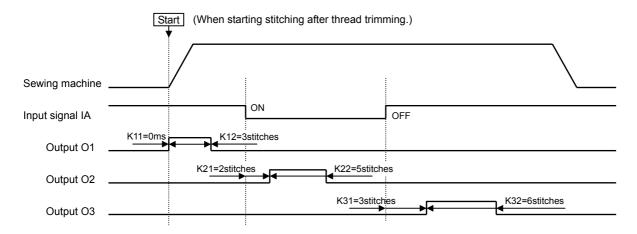


[Setting]

C Mode	([↓]+[C] key)

Function	Standard	Setting	Description
IA	PSU	107	Selection of input signal function
IM	NO	108	Selection of input signal function
01	OT1	KS1	Selection of output signal function
O2	NCL	KS2	Selection of output signal function
O3	TF	KS3	Selection of output signal function
OM	NO	OT7	Selection of output signal function
OML	OF	ON	Output signal logical changeover

(141 1 1 1	,		
Function	Standard	Setting	Description
SQS	NO	TR	Simple sequence start condition (When starting stitching after thread trimming)
SQE	NO	T	Simple sequence forced end condition (When thread trimming is completed)
NS1	OF	OF	KS1 output start time/No. of stitch setting changeover (Time count setting)
NE1	OF	ON	KS1 output time/No. of stitch setting changeover (Stitch count setting)
S1S	KS	TR	KS1 output starting point setting (When starting stitching after thread trimming)
S1E	KS	KS	KS1 output end point setting (Linked output. (Each output starting point))
NS2	OF	ON	KS2 output start time/No. of stitch setting changeover (Stitch count setting)
NE2	OF	ON	KS2 output time/No. of stitch setting changeover (Stitch count setting)
S2S	KS	IN	KS2 output starting point setting (Virtual input ON point. (KS2:IO7))
S2E	KS	KS	KS2 output end point setting (Linked output. (Each output starting point))
NS3	OF	ON	KS3 output start time/No. of stitch setting changeover (Stitch count setting)
NE3	OF	ON	KS3 output time/No. of stitch setting changeover (Stitch count setting)
S3S	KS	IN	KS3 output starting point setting (Virtual input ON point. (KS3:IO8))
S3E	KS	KS	KS3 output end point setting (Linked output. (Each output starting point))
K11	7	0	KS1 output start [Time] setting (0ms)
K12	7	3	KS1 output [No. of stitches] setting (3stitches)
K21	7	2	KS2 output start [No. of stitches] setting (2stitches)
K22	7	5	KS2 output [No. of stitches] setting (5stitches)
K31	7	3	KS3 output start [No. of stitches] setting (3stitches)
K32	7	6	KS3 output [No. of stitches] setting (6stitches)

By input signal of the option A connector's No.2 pin ([IA]) and No.4pin ([IB]), When the following timing output is to be output to the option B connector's No.3 pin, No.12 pin and No.15 pin. ([O1],[O2],[O3])

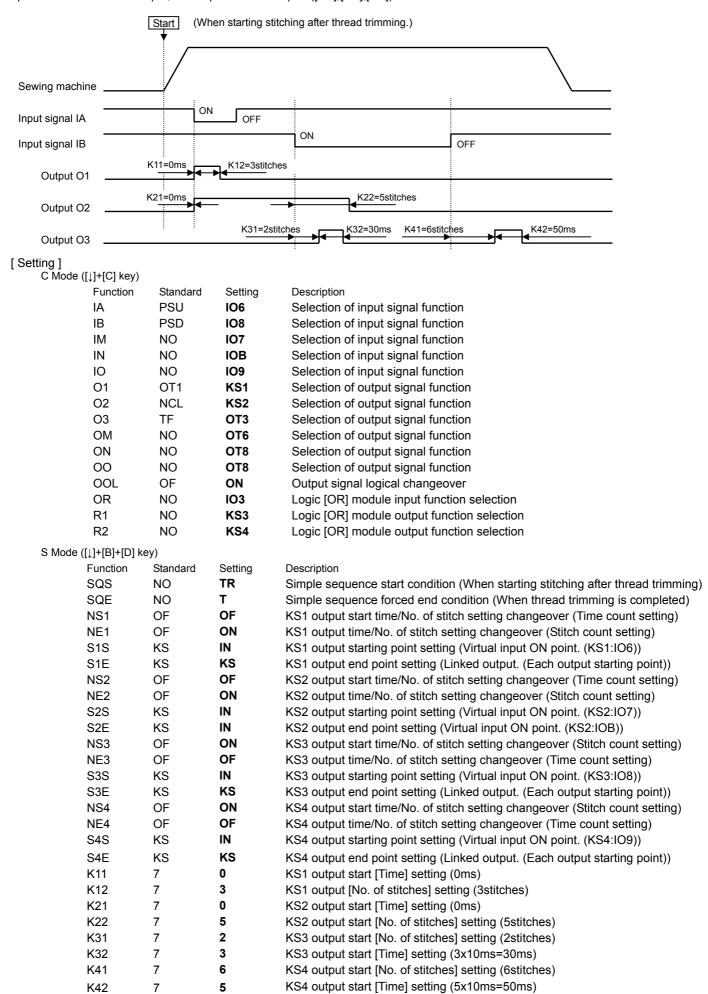

20 How to set Thread break detector


1. Setting Thread break detector function

(1) Call out the program mode [Q] function [TH].

(This can be called with mode call or direct number call. Refer to pages 17 to 20.

(Direct call number = "1416"))

* Enter program mode [Q] ([↓] + [A] + [C] keys)

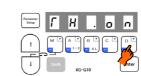

(2)

* Press the [D] key and set the value to "ON".

(3) Set the function [TH].

For mode call: $[\downarrow] + [\uparrow]$

For direct number call: Set with

(4) Call out the program mode [C] function [I1].

(This can be called with mode call or direct number call. Refer to pages 17 to 20.

(Direct call number = "357"))



* Press the [D] key and set the value to "THI".



For mode call: [↓]

For direct number call: Set with then press Enter, select number [416], and

(8) Entering the normal mode

For mode call: $[\downarrow] + [\uparrow]$

For direct number call: Set with and then press



* Press the [D] key and set the value to "THO".

Description

Selection the function on program mode [Q].

[TH.ON]: To use upper thread break detector function, set to "ON"

[TH.OF]: Upper thread break detector function is invalid.

Selection the function on program mode [Q].

[TST.]: Setting the action, after thread was broken.

[NO]: "THO" output function become on and continue to sew.

[TR]: "THO" output function become on and trimming thread.

[ST]: "THO" output function become on and sewing machine will be stooped.

* When the sewing machine run again, "THO" output will be clear.

[B.]: To set the speed neglect thread break function.

When sewing machine rotation speed become under this speed, it neglect thread break function.

[THS.]: To set the stitch numbers to neglect thread break function, after sewing machine speed becomes over "B" speed.


[THF.]: Setting the judgment stitch amount of thread break.

Selection the function on program mode [C].

[11.THI]: No. 6 pin of option connector B will be set to thread break input function.

[O1.THO]: No. 3 pin of option connector B will be set to thread break output function.

2. Timing chart of thread break input and output.

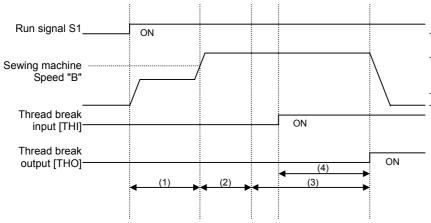


Term (1): Sewing machine speed is under "B" speed, so it neglect thread break function.

Term (2): After sewing machine speed become over "B" speed, still under "THS" stitch amount, so it neglect thread break function.

Term (3): Thread break function is valid.

Term (4): The judgment stitch amount "THF" of thread break. after this stitch amount, thread break function move to "TST" function.

1. Cutter output function

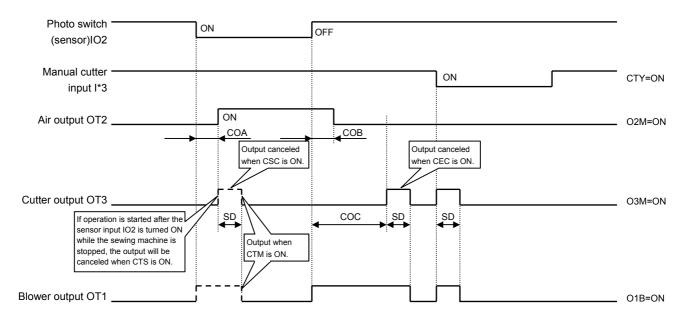

(Note) Use of the I*1 input is prohibited when using the blower output.

F mode setting


Function name	Specification
O1B	Set OT1 output to blower output.
O2M	Set OT2 output to air output.
O3M	Set OT3 output to cutter output.
I2M	Add mesh judgment control to IO2 input. (If output stays ON or OFF for longer than the mesh judgment time set with ED, the IO2 input will not be fixed.)
CTY	Set I*3 input to manual cutter input.
CTM	Set OT3 cutter output to both OFF→ON and ON→OFF of IO2 photo switch.
COA	No. of stitches A
COB	No. of stitches B
COC	No. of stitches C
SD	Cutter ON time
ED	Mesh judgment time
CSC	The output of the automatic cutter output is prohibited while the sensor is ON.
CEC	The output of the automatic cutter output is prohibited while the sensor is OFF.
CTS	The output of the automatic cutter output is prohibited when the sensor input is ON while the sewing machine is stopped.

Note 1.Always set O2M to ON even when not using the air output.

2.Customize the option connectors I1, I2 and O1 to O3 to the required functions using the program mode beforehand.

2. Setting example of the Cutter output function

1). Timing

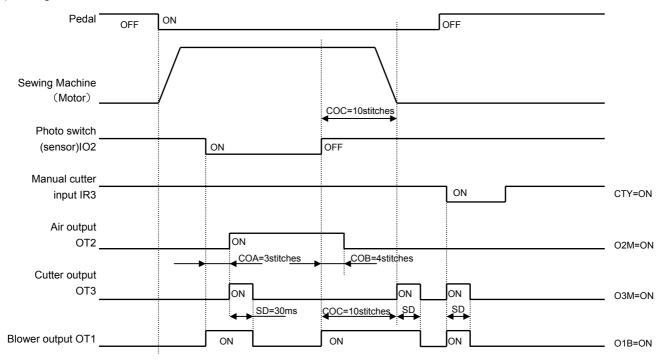

2). Setting

C Mode ([↓]+[C] key)			
Function	Standard	Setting	Description
IA	PSU	IO2	Input signal select (Sensor signal)
I1	IO1	IR3	Input signal select (Manual cutter input)
01	OT1	OT1	Output signal select (Blower output)
O2	NCL	OT2	Output signal select (Air output)
O3	TF	OT3	Output signal select (Cutter output)

Setting

F Mode	([↓]+[↑]+[B] key)
--------	-------------------


Function

Standard


O1B	OF	ON	Set OT1 output to blower output.
O2M	OF	ON	Set OT2 output to air output.
O3M	OF	ON	Set OT3 output to cutter output.
CTY	OF	ON	Set I*3 input to manual cutter input.
СТМ	OF	ON	Set OT3 cutter output to both OFF→ON and ON→OFF of IO2 photo switch.
CTS	OF	ON	Cutter output prohibit when sensor is ON while stopped
CAT	OF	ON	Automatic thread trim setting after cutter sensor is turned off
COA	0	3	No. of stitches (0~99 stitches)
COB	0	4	No. of stitches (0~99 stitches)
COC	0	10	No. of stitches (0~99 stitches)
SD	0	30	Cutter ON time (0~508msec)

Description

3). Wiring example

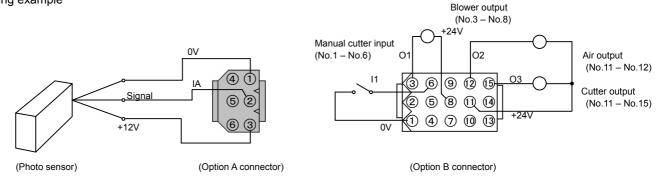

3. BT specifications (*1) operation chart and required settings

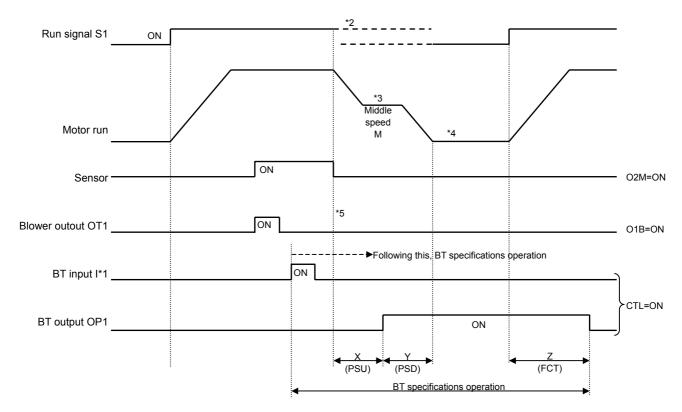


- *1 : When CTL is set to ON, the BT specifications operation will be applied after the I*1 input turns ON. (If the BT output is turned OFF after I*1 turns OFF, the BT specifications will be canceled.)
- *2 : S1 is invalidated after the photo sensor detection. Operation will restart after stopping and then turning S1 OFF and ON.
- *3 : Medium speed preset stitching when photo sensor turns OFF after BT input.
- *4 : Up position stop after thread trimming.
- *5 : Not output when photo sensor is OFF after BT input.

Note 1.Always set O2M to ON even when not using the air output.

- Customize the option connectors I1, I2 and O1 to O3 to the required functions using the program mode beforehand.
- 3.The No. of stitch settings PSU, PSD and FCT are common with the other settings. Thus, when using as the BT specifications, the PSU/PSD input and the function that automatically lowers the presser with a timer cannot be used.

4. How to set the tape cutter operation 1

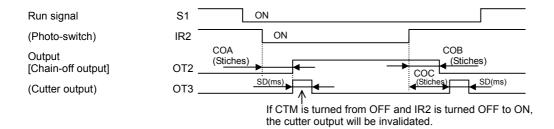

(1) Function setting of the program mode [C]

Ex. function setting [I1. IR2] + [O1. OT2] + [O2. OT3]


(2) Function setting of the program mode [F]

1) Function setting [CTM. ON] : Cutter output mode

2) Function setting [O2M. ON] : Operation mode of output OT2
3) Function setting [O3M. ON] : Operation mode of output OT3
4) Function setting [COA. **] : No. of stitches COA setting
5) Function setting [COB. **] : No. of stitches COB setting
6) Function setting [COC. **] : No. of stitches COC setting
7) Function setting [SD. ***] : Cutter output time SD setting

Note 1. Always set the F mode function CTR to OFF when using this operation.

5. How to set the tape cutter operation 2

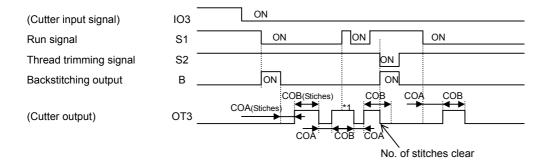

(1) Function setting of the program mode [C]

Ex. function setting [11. IO3] + [O1. OT3]

(2) Function setting of the program mode [F]

1) Function setting [CTR. ON] : Cutter output mode
2) Function setting [COA. **] : No. of stitches COA setting
3) Function setting [COB. **] : No. of stitches COB setting

- Note 1. Function setting [IO3]: When the cutter input signal is set to IO3, the cutter output will not turn OFF even if the sewing machine is stopped during No. of stitches [COB] counting. (*1)
 - 2. Function setting [IR3]: When the cutter input signal is set to IR3, the cutter output will turn OFF when the sewing machine is stopped during No. of stitches [COB] counting.
 - 3. Always set the F mode functions CTY, CTM, O2M, O3M to OFF when using this operation.


Control switch panel applications

1. Examples of using control switch panel

SELECTION OF MODE

There are 2 kinds of modes in the control panel

- 1) G10 mode : Display of setting data for control box like sewing machine direction, sewing machine speed and so on. (The same display as the XC-G10 control panel)
- 2) Control panel mode : Display of back tacking data, program input data, teaching input data and so on. (The specific display of the XC-G500 control panel)

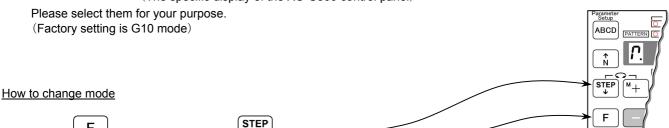

The previous mode is returned at the same operation.

Note: Mode is not changed while the INPUT is lighted on control panel mode.

Press the OTPUT key and after the Is turned OFF the light, it is possible to change mode.

Settings Data Copy Function

The control panel can be used to read the machine control box settings data and write to another control box.

Reading Settings Data (Control Box → Control Panel)

key while pressing the

- (1) Turn ON the power while pressing the ABCD key. The display will indicate
- (2) Turn the key ON to copy the settings data from the control box to the control panel.
- (3) Copying is completed successfully if the normal display appears after several tens of seconds. If M5 (75) displays, an error has occurred. Use the following procedure to perform the operation again.
 - 1) Turn the power OFF. \rightarrow 2) Turn OFF the M5 display.
 - \rightarrow 3) Inspect the connector connection. \rightarrow 4) Repeat the operation from step 1.

Writing Settings Data (Control Panel → Control Box)

- (1) Turn ON the power while pressing the key. The display will indicate
- (2) Turn the F key ON to copy the settings data from the control panel to the control box.
- (3) Copying is completed successfully if the normal display appears after ten seconds. If M5 (\$\overline{\cap5}\$) displays, an error has occurred. Use the following procedure to perform the operation again.
 - 1) Turn the power OFF. \rightarrow 2) Turn OFF the M5 display. \rightarrow 3) Check the control box voltage/model.
 - \rightarrow 4) Inspect the connector connection. \rightarrow 5) Repeat the operation from step 1.

Notes: 1. The settings data cannot be written if the voltage and model (control box model name) do not match. (M5 (**75**) displays.)

2. Never disconnect the control panel while reading or writing settings data. Control box operation after disconnection cannot be guaranteed.

2. Changing the speed limit limiter for the maximum speed using the switches

• Applicable control box : XC-GMF

Working specifications : The high-speed speed limit limiter is changed with the switch.

(Variable-speed operation is carried out with the variable-speed pedal XC-CVS-2.)

[Setting] (For example, to change the high-speed speed limit between 2000 rotations and 600 rotations.)

(1). For example, set the Mitsubishi sewing machine simple setting (Direct call number = "1423") LU2-4410 or LU2-4430 for the model setting.

(2) Q mode ($[\downarrow]$ + [A] + [C] key)

Function [LIM. OF] \rightarrow [LIM.ON]

(Set the speed limit during OT1 output ON to medium speed M.)


(3) P mode ($[\downarrow]$ + $[\uparrow]$ key)

Set the medium speed setting to 600 rotations.

[M. 800] →

[M. 600] (Direct call number = "0005")

[Connection]

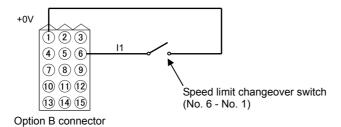

Caution 1 : When the switch is OFF, the normal speed limit (2000 rotations) will be applied. When the switch is ON, the speed will be limited to the medium speed M setting value (600 rotations).

Caution 2: Do not use the 01 (OT1) output. (Do not connect.)

Caution 3: When using only 2 pin with the option B connector, the connector could dislocate easily with vibration. Thus, insert an empty pin into the pins that are not being used.

Variable-speed pedal + separate switch operation

3. Special operation using option B connector variable-speed command VC2 (The speed can be adjusted with the digital potentiometer on the setting panel.)

• Applicable control box : XC-GMF

• Working specifications : High-speed operation using variable-speed pedal (XC-CVS-2) and separate switch

(Digital keys C and D on the control panel is valid)


[Setting]

Q mode setting ([↓] + [A] + [C] keys)

- VC2=VC → VC2=VS

(Direct call number = "1405")

[Connection]

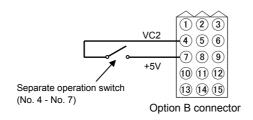

4. Example of down counter function application settings

Operation

Number of count stitches: 900 stitches.

The number of stitches is displayed on the control box or control switch panel.

Thread trimming (pedal heeling operation) is carried out while stitching (while counting).

After 900 stitches are counted, the needle stops at the DOWN position, and further stitching is prohibited. The thread is trimmed with pedal heeling, and then the automatic counter is cleared.

```
[Setting]
```

```
B mode ([\downarrow]+[B] key)
                         (Direct call number = "0201")
  N=900
  D=900
                         (Direct call number = "0202")
  CDN=ST
                         (Direct call number = "0210")
  DSC=ST
                         (Direct call number = "0211")
  DNC=ON
                         (Direct call number = "0213")
  CNU=1
                         (Direct call number = "0217")
C mode ([\downarrow]+[C] key)
  CNF=DN (For XC-G500Y type control box display)
                                                                   (Direct call number = "0529")
  IM=PSD
                         (Direct call number = "0339")
  IN=CCD
                         (Direct call number = "0342")
  OM=CDE
                         (Direct call number = "0449")
  ON=OT2
                         (Direct call number = "0453")
  A1=IO2
                         (Direct call number = "0477")
  N1=CDE
                         (Direct call number = "0480")
  N2=T(or, N2 = KS3 :
                           when counter clearing is mistaken with pedal heeling)
                                                                                        (Direct call number = "0482")
P mode ([\downarrow] + [\uparrow] key)
  PSD = 0 stitches (default value)
```

Note that when stitching at a high speed, the needle will stop at the DOWN position after stitching the number of stitches instead of following the counter setting value. (After the set number of stitches are counted, PSD stop will take place with the count end signal, so the needle will not stop immediately.) Thus, set the number of stitches for the down counter setting value as a value obtained by subtracting several stitches (number of stitches exceeded to the DOWN position) in respect to the number of stitches to be actually stitched. (In this case, the excessive number of stitches will be displayed as a minus value.)

Add the following setting when a minus count is not to be displayed.

```
B mode ([\downarrow]+[B] key)

NXD = ON (Direct call number = "0214")
```

Note that in this case, the display will stop at "0". However, the down counter setting value and the number of excessive stitches during actual stitching will differ in the same manner as above.

```
In the above setting example,
```

```
B mode ([↓]+[B] key)

If the B mode is set to CNU = 10 (stitches), set N = 90 and D = 90 (For 900 stitches)

B mode ([↓]+[B] key)

In this case, the B mode NXD = ON does not need to be set. (Set NXD to OFF)

One count will consist of 10 stitches, and 90 will be counted (900 stitches to 909 stitches).

In other words, the actual number of stitches will be between 900 stitches and 909 stitches.
```

(The number of excessive stitches when stopping at the DOWN position (PSD stop) will be within these ten stitches.)

- 5. Example of using the counter function (turning on a lamp using a relay when the count is completed)
- Use the down counter as a bobbin thread level counter (end count at 10,000 stitches), and after ending count turn on lamp using a relay.

[Setting]

C Mode ($[\downarrow]+[C]$ key)


Functio	(1)	Standard	Setting	Description
14	(Direct call number = "0378")	NO	CCD	Input signal function selection
О3	(Direct call number = "0426")	TF	CDE	Output signal function selection

B mode ([↓]+[B] kev)

mode (,√]⊥[D] v∈λ)			
Functi	on	Standard	Setting	Description
N	(Direct call number = "0201")	99	1000	Down counter value setting
CDN	(Direct call number = "0210")	CU	ST	Count by number of stitches setting
DSC	(Direct call number = "0211")	ST	ST	Operation at end of down counter count selection
DNC	(Direct call number = "0213")	OF	ON	Down counter validity setting
CNU	(Direct call number = "0217")	1	10	Number of stitches per counter setting

Cotting

[Connection example]

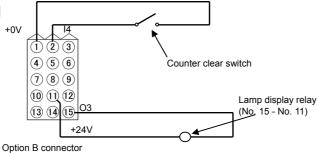

- Cautions) 1: Prepare the lamp (display lamp) and lamp power supply separately. (Power (current capacity) sufficient to turn the lamp on cannot be supplied from the control box.)
 - 2: Use a 24V compatible relay. Contact Mitsubishi when using a 12V relay.
 - 3: When using the control box (XC-G500-Y), a buzzer will sound with the above setting. (In addition, the counter can be displayed on the control box, and the counter can be cleared with the P key on the control box, etc.)

Counter function applications 3

Input signal selection (up counter clear signal)

(Option B connector pin No. 9)

6. Example of setting two counters (Using the up counter and down counter simultaneously)

[Setting example] 1) Down counter setting (Example: Count 10,000 stitches)

B mode ([ͺ	+[\	[B]	key)
----------	----	-----	-----	------

Funct	ion	Standard	Setting	Description
N	(Direct call number = "0201")	99	1000	Down counter setting
D	(Direct call number = "0202")	99	1000	Current down counter value
CDN	(Direct call number = "0210")	CU	ST	Down counter count conditions
				(Count with number of stitches)
DSC	(Direct call number = "0211")	ST	ST	Operation at end of down counter count selection
DNC	(Direct call number = "0213")	OF	ON	Down counter validity
CNU	(Direct call number = "0217")	1	10	Number of stitches per count setting
C Mode ([↓]+[C] key)			
Funct	ion	Standard	Setting	Description
I1	(Direct call number = "0357")	IO1	CCD	Input signal selection (down counter clear signal) (Option B connector pin No. 6)

[Setting example] 2) Up counter setting (Example: Count 12,000 stitches)

(Direct call number = "0370")

B_m

12

B mode ([↓]+[B] key)			
Funct	ion	Standard	Setting	Description
Р	(Direct call number = "0203")	99	1200	Up counter setting
U	(Direct call number = "0204")	0	0	Current up counter value
CUP	(Direct call number = "0205")	CU	ST	Up counter count conditions
				(Count with number of stitches)
USC	(Direct call number = "0206")	ST	ST	Operation at end of up counter count selection
UPC	(Direct call number = "0208")	OF	ON	Up counter validity
C Mode ([↓]+[C] key)			
Funct	ion	Standard	Setting	Description

CCU

U

7. Setting points for post-type sewing machine

1. Sewing machine model : Post-type sewing machine

2. Applicable control box : XC-GMF type

3. Details of fault : Stop position inconsistency, overrunning, etc.

- 4. Setting points (In respect to standard setting value or ultra-thick material setting value)
 - (1) If the sewing machine has a belt longer than a normal sewing machine, the [GA. LL] setting is valid for the gain setting [GA.]. If the belt is not long, or if the sewing machine pulley is not large, the [GA.L] or [GA.H] setting is more effective. If the torque or power at the start of stitching is a problem, the [GA.H] setting is more effective.
 - (2) When using the sewing machine for ultra-thick material or the post-type sewing machine, the pulley may be larger than the normal sewing machine. Set the size of the pulley on the sewing machine being used, and the size of the pulley on the motor.

A mode : **[PL.ON]** (Direct call number = "0109") (Pulley ratio manual setting) **[MR.***]** (Direct call number = "0110") (Motor side pulley diameter setting) **[SR.***]** (Direct call number = "0111") (Sewing machine side pulley diameter setting)

(3) Speed setting

If the stop position is inconsistent or if overrunning occurs when stopping from high-speed operation, lower the high-speed setting value.

P mode : **[H.2000]** (Direct call number = "0000") (For example, even if the sewing machine specification is 3000 rotations, lower the setting value.)

If the stop position is inconsistent when stopping from low-speed operation or inching, lower the low-speed setting value.

P mode : **[L. 150]** (Direct call number = "0001") (For example, 150 rotations, etc.)

If the stop position is inconsistent when stopping with pedal healing needle lift (thread trimming), lower the needle lifting speed setting.

P mode: [T. 150] (Direct call number = "0002") (For example, 150 rotations, etc.)

(4) Set the deceleration time for stopping to a large value. (Note that this will delay the time for stopping.) Set the deceleration time in [DC.-]. Set the deceleration time to a value larger than the [DCT.16] setting value.

A mode : **[DC. -]** (Direct call number = "0104") **[DCT. 30]** (Direct call number = "0105") (For example, 30, etc.)

(5) Braking time at sewing machine stop (Use the original setting value if this does not need to be improved.)

In addition to changing the deceleration time in item (4) above, increase the braking time setting value for stopping the sewing machine.

A mode : **[BKT. 30]** (Direct call number = "0115") (For example, 30 (30 x 10msec = 300msec), etc.)

(6)When the stop position deviates during DOWN position stop (2-position) Do not set the needle DOWN stop position angle (coasting angle) setting [D8.] to less than the default setting [28].

Set [D8.] to a value larger than [28].

(This is effective when the sewing machine does not stop at the DOWN position.)

P mode : **[D8. 50]** (Direct call number = "0054") (For example, 50 degrees, etc.)

(7)When the stop position deviates during UP position stop (1-position or needle lifting (thread trimming)) Do not set the needle UP stop position angle (coasting angle) setting [U8.] to less than the default value [14].

Set [U8.] to a value larger than [14].

(This is effective when the sewing machine does not stop at the UP position.)

P mode : **[U8. 50]** (Direct call number = "0055") (For example, 50 degrees, etc.)

Caution) Adjust the DOWN and UP stop positions with the detector.

(When changing the [U8.] setting value, always adjust the detector's coupler.)

(When changing the [D8.] setting value, always adjust the detector's DOWN position disk.)

(8) If the A mode speed loop stop setting [STM.] does not pose a problem with normal starting or stopping, set [STM. OF].

(This may be effective for ultra-thick material sewing machines, but is not very effective for the post-type sewing machine.)

(9) The effectiveness of the following settings for the post-type sewing machine is not cleared, but can be tried.

(9-1) K mode function setting [NAN. ON] (Deceleration immediately when operation signal turns OFF.)

(9-2) K mode function setting [HWG. ON] (Large inertia sewing machine operation gain valid)

(K mode : ([\downarrow] + [\uparrow] + [A] + [C] key))

(10)When degree of pedal pressing does not feel correct during 1-stitch sewing with pedal or inching

A mode : [SC. ON] (Direct call number = "0106") (S-pattern cushion valid at start)

[SCT. 7] (Direct call number = "0107") (S-pattern cushion time setting. Increase this value slightly as required.)

* For 1-stitch sewing, the K mode function setting [NAN.ON] in item (9-1) above is also effective.

Set and adjust the sewing machine referring to the above points.

Methods of fixing needle stop position to left and right sides using zigzag sewing machine

Setting example 1. Using the K mode function [ZNC.]

With the zigzag sewing machine, the number of zigzag stitches (shifting width) can be set.

- (1) K mode: Press the four keys $[\downarrow] + [\uparrow] + [A] + [C]$, and enter the K mode.
- (2) Next, press the $[\uparrow]$ or $[\downarrow]$ key several times, and display the function [ZNC.]. (Direct call number = "1240") The following display will appear.

E n C. 0

(3) Press the [D] key, and set the number of zigzag stitches (shifting width). For example, to stop at either the left or right side after zigzagging for four points, set the number of stitches to 3. The following display will appear.



(4) To always stop at the left side or at the right side, set the number of stitches to 6. The following display will appear.



Caution: With the K mode function [ZNC.], the sewing machine will stop at each of the set number of stitches.

When using the zigzag sewing machine with automatic thread trimmer, or when using 2-position setting (needle DOWN stop setting) etc, the stop position could deviate and may not stop at the end depending on the stitching start position. In this case, carry out the settings given in example 2 below.

Setting example 2. Using the back tacking function


(Note that when using the back tacking function, start/end tacking (automatic repeat sewing) cannot be used.) An example for 4-point zigzag sewing is given below. For other cases, change the number of stitches. (Note: When setting example 1 above has been set, always return the function [ZNC.] setting to [ZNC.0].)

1 Using the control box (without control switch panel)


(1) Select the pattern sewing mode with the setting panel on the control box.


Key operation	Display
Dragg 1 kgy faur times	* The pattern No. selection mode will appear.
Press key four times from normal mode.	P. S. F. r. I.

(2) In the pattern sewing mode, set the back tacking mode (pattern 4). Press the [D] key and set the pattern No. to 4. (Back tacking mode) The following display will appear.

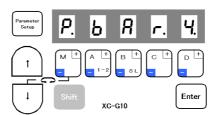

- (3) Next, press the $[\downarrow]$ key, and set the back tacking validity and the number of times.
 - Set the back tacking validity setting to [Valid].
 - Set the number of back tacking times N to "0".

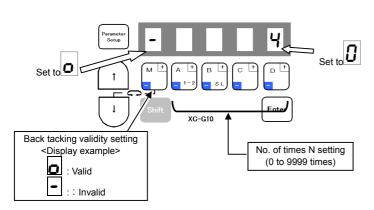

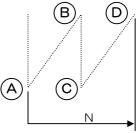


If the number of times N is set to 3, stitching will take place in the order of A, B, C.

If N is set to 5, the order will be A, B, C, D, C

If N is set to 6 or higher, the order will be A, B, C, D, C, D... (When N is set to 0, the tacking operation will be continued in the order of A, B, C, D, C, D ... while the pedal is pressed down

(4) Next, press the [↓] key, and enter the number of back tacking stitch setting mode, and set the number of stitches for A, B, C and D.

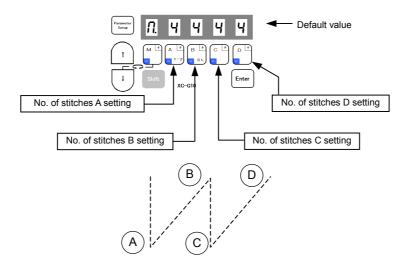

With this setting, the following can be determined:


A: Stop needle at either left end or right end.

B: Fix needle stop position to left end or right end.

the following can be determined:


(4-1) A: Stop needle at left end or right end.

Set the number of stitches to A = 2 (or 3), and B = C = D = 3 (stitches).

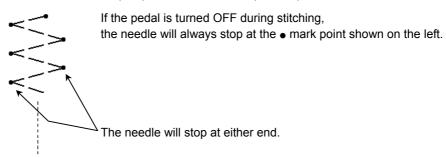

(4-2) B: Fix needle stop position to left end or right end.

Set the number of stitches to A = 5 (or 6), and B = C = D = 6 (stitches).

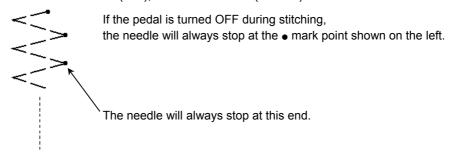

Caution: 1. N is set to 0, so while the pedal is pressed down.

the stitches will be repeatedly stitched in the order of A, B, C, D, C, D, C, D

C and D are repeated.

To eliminate the A and B stitches, set A and B to 0 stitches.

- 2. This explanation is for 4-point zigzag, so change the number of stitches for other types of zigzag.
- 3. The back tacking mode is used, so the automatic tacking (start/end tacking) and touch back output cannot be used.
- 2 Using the control switch panel (XC-G500-Y)

When using the control switch panel, refer to the respective manual, and set the number of times and stitches in the same manner in the back tacking settings.

3 Set the various settings for the program mode.

(1) Set the stitching speed for back tacking to variable-speed.

- In the normal mode, hold down the $[\downarrow]$ key, and press the [D] key for two or more seconds to enter the program D mode.

- When in the D mode, press the [D] key several times, and display the function [D1.D]. (Direct call number = "0600") The following display will appear.

d 1. d

- Next, press the [\$\psi\$] several times, and display the tacking alignment function [BM]. (Direct call number = "0603") Press the [D] key, and set the function [BM.ON]. The following display will appear.



- After making the above setting, press the [↓] and [↑] keys simultaneously to return to the normal mode.

(2) Change the speed setting limiter for the back tacking speed.

- In the normal mode, hold down the [↓] key, and press the [D] key for two or more seconds to enter the program H mode.

- Next, press the [↓] key several times, and display the tacking speed limiter function [LNH.]. (Direct call number = "1006") Press the [C] key several times, and set [LNH.90]. The following display will appear.



- After making the above setting, press the [↓] and [↑] keys simultaneously to return to the normal mode.

(3) Change the backtacking speed.

- In the normal mode, hold down the [↓] key, and press the [↑] key for two or more seconds to enter the program P mode.

- First, confirm the maximum speed setting [H.]. (Direct call number = "0000") (If the value must be changed, press the key below the value, and set the required speed.)

- Next, press the [↓] key several times, and display the start tacking speed setting [N.]. (Direct call number = "0003") Press the [A] key and [B] key to set the same value as that set for the maximum speed above.

Next, press the [↓] key, and display the end tacking speed setting [V.]. (Direct call number = "0004")
 In the same manner, press the [A] and [B] keys to set the same value as that set for the maximum speed above.
 (Set the start tacking speed and end tacking speed values to the same value.)

- After making the above setting, press the $[\downarrow]$ and $[\uparrow]$ keys simultaneously to return to the normal mode.

(4) To trim thread at an angle when heeling while sewing with a zigzag machine with thread trimmer.

- In the normal mode, hold down the [↓] key, and press the [↑] + [A] + [C] key for two or more seconds to enter the program K mode.

- Next, press the [↓] key several times, and display the special setting function [CDR. ON]. (Direct call number = "1239") Press the [D] key, and set the function [CDR. ON]. The following display will appear.



- After making the above setting, press the [↓] and [↑] keys simultaneously to return to the normal mode.

(5) To carry out manual touch back when using a zigzag machine with touch back switch.

(Note that automatic repeat sewing such as start/end tacking cannot be used.)

- Connect the touch back switch between the sewing machine connectors No. 9 and No. 10. Connect the repeat sewing output solenoid between the sewing machine connectors No. 11 and No. 12.

- In the normal mode, hold down the [↓] key, and press the [C] key for two or more seconds to enter the program C mode.

- Next, press the $[\mbox{$\downarrow$}]$ key several times and display the input signal selection function [IE.]. (Direct call number = "0312") Press the [D] key several times, and set either [IE.IO3] or [IE.IR3].

The following display will appear.



When [IE.IO3] is set, the touch back solenoid can be driven even when the sewing machine is stopped.



When [IE.IR3] is set, the touch back solenoid can be driven only when the sewing machine is running.

- Next, press the [↓] key several times, and set the output signal selection function [OC.]. (Direct call number = "0400") Press the [D] key several times, and set [OC.OT3].

- After making the above setting, press the [↓] and [↑] keys simultaneously to return to the normal mode.

Order of signal priority

9. Order of signal priority

(1) Order of lever unit's (lever connector) S1 (run), S2 (thread trimmer) and S3 (presser foot lifter) signals

S1 (run) > S2 (thread trimmer) > S3 (presser foot lifter)

- (Note 1) : For the (run) signal, an interlock is applied when the power is turned ON, thus, this will be invalid even if the S signal is ON when the power is turned ON. (The signal must be turned ON again.) * If the pedal is not at the neutral position or if the S1 signal is ON when the power is turned ON, the error message "MA" will appear.
- (Note 2) : The S2 (thread trimmer) signal will be validated only after operation has been carried out once. (This signal is validated when the S1 signals turns OFF after operating once.)
- (Note 3) : The S3 (presser foot lifter) signal is valid only when the S1 and S2 signals are invalid (when the motor is stopped.) (In other words, the S3 signal is invalid when the motor is running, including when the thread trimmer is operating.)

(2) Order of speed command signal priority

The order of priority for the S1 (variable-speed run signal), S0 (low-speed run signal), S4 (high-speed run signal), S5 (medium-speed run signal), SPL (speed low-speed signal), SPM (speed medium-speed signal) and SPH (speed high-speed signal) is as follows.

$$\begin{pmatrix} \text{S0} \\ \text{SPL} \end{pmatrix} > \begin{pmatrix} \text{S5} \\ \text{SPM} \end{pmatrix} > \begin{pmatrix} \text{S4} \\ \text{SPH} \end{pmatrix} > \begin{pmatrix} \text{S1+A} \end{pmatrix} > \begin{pmatrix} \text{S1 only} \end{pmatrix}$$

Note 1) S1 + AT: Indicates the S1 signal and P mode automatic operation function [AT.ON]

(3) Supplements (Operation in S2 signal and S3 signal short-circuit state)

For example, operation when only the S1 (run) signal is turned ON and OFF while the S2 (thread trimmer) and S3 (presser foot lifter) signals are always ON in the normal setting state. (Lever connector pins No. 5 and 6 are short-circuited.)

[Operation]

When the power is turned ON, the presser foot lifter will turn ON, when the S1 signal turns ON, the presser foot lifter will turn OFF.

Operation (high-speed operation) will start.

→ When the S1 signal is then turned OFF, the thread trimmer will operate, the machine will stop, and then the presser foot lifter will operate.


When feed pulse will be used, set this function to "OF" This signal output CP output Setting the number of pulse [CP]. After changing this number, turn on The prohibited angle section of pulse generated can be set from UP position. The start prohibited angle can be set with [TS] (G mode). (G mode) The end prohibited angle can be set with [TE] Specification the sewing machine is high speed and a usage in which output might not be output according to setting. Use an external counter separately in the business mind when When the sewing machine is high-speed, the pulse is from the same pin of "O6" Feed pulse [CP] is invalid. power switch again accuracy is demanded N P 8 R * Note) Setting Digital display 0 0 0 0 0 0 [CP output] (CP output: No. 14 pin of Option B connector. (Note: CP output is not for solenoid output.)) * Function 19t CPC ď. <u>N</u> <u>N</u> Setting range $1\sim$ 99 Unit Factory setting GMFY NO Ы 32 1 rotaion 1 rotaion 1 rotaion Example 3 : [CPK.OF], [CP.32], [CPC.ON], [TS.30], [TE.90] 0 Operability 0 0 32 pulses 32 pulses TE=90 (degree) Direct call 0522 0520 0521 number CPC. CPK. G. Example 2 : [CPK.OF], [CP.16], [CPC.OF] Example 1 : [CPK.OF], [CP.32], [CPC.OF] Not output Function name Prohibited angle of output CP pulse Setting CP pulse amount N O <u>N</u> <u>N</u> Feed pulse output (CP) cancel function TS=30 (degree) CP output_ CP output CP output **UP** signal **UP** signal **UP** signal Mode name C mode \rightarrow +

10. CP output

Input/output circuits

11. Main input/output circuits


(1) Input circuit for option A connector No. 2 pin (IA)

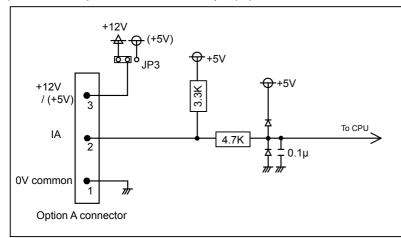

Caution)

The input circuit for the option A connector's No. 4 pin (IB) and No. 6 pin (IC) is the same as that shown on the left.

(2) Output circuit for option A connector No. 5 pin (O4)

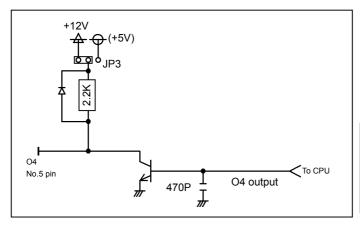

Caution)


As the default, the O4 output is set to the needle UP position output (UPW).

The needle UP position signal is output.

The output will be 12V output (default).

The output can be selected with the C mode settings.


(3) Input circuit for option B connector pin No. 6 (I1) and pin No. 9 (I2)

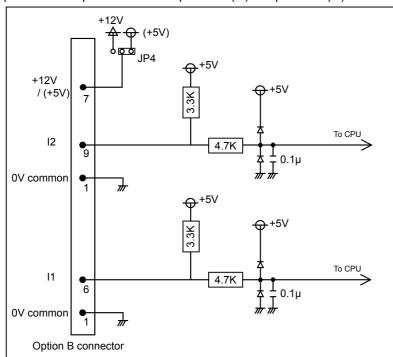


Caution)

The input circuit for the option B connector No. 2 pin (I4) and No. 5 pin (I5) is the same as that shown on the left.


(4) Output circuit for sewing machine connector T output (OA)

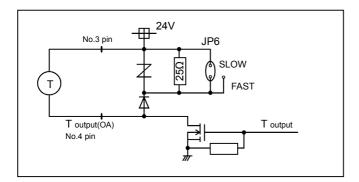


(5) Output circuit for sewing machine connector B output (OC)

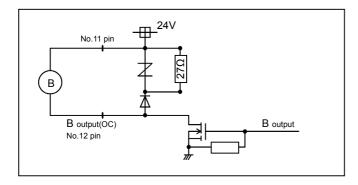

(6) Output circuit for other solenoids [(OB), (OD), (O1), (O2), (O3) outputs]

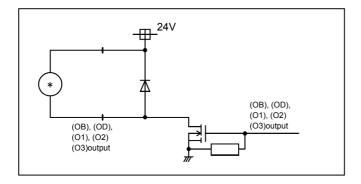

(7) Output circuit for option B connector No. 13 pin (O7), pin No. 14 (O6/CP)

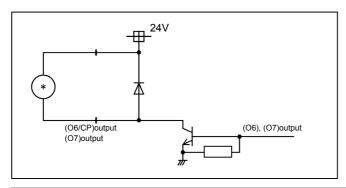

Caution 1)

The option B connector pin No. 13 (O7) and pin No. 14 (O6) are output terminals for the solenoid valve. The solenoid cannot be driven.

Caution 2)

When using the option B connector pin No. 14 (O6/CP) as the pulse output (CP), several settings are required including the CPK function and CP function (cycle division ratio) in the C mode. These are not set as the default.

Detector compatibility

12. Detector compatibility <Matrix list>

		LF-MDF (DIP switch 64P side)	×	×	×	×	×	×	×	×	×	×	×	×	×	0	×	0	×
	LF Series	LF-MDF LF (DIP switch (D 32P side) 6-	×	X Note2	△ Note3	0	X Note2	0	△ Note3	0	△ Note3	X Note2	0	0	0	×	0	×	0
Φ		LF-M (0	×	0	0	0	0	0	0	0	0	0	0	0	0	×	0	×	0
lion not possibl	ZK Series	ZK-MBL ZK-FL ZK	×	0	0	0	0	0	0	0	0	0	0	0	0	×	0	×	0
"X" mark: Connection not possible	LF-A Series	LF-AMDF LF-AM	×	× Note2	△ Note3	0	× Note2	0	△ Note3	0	△ Note3	× Note2	0	0	0	×	0	×	0
	ZK-A Series	ZK-AMBL	×	0	0	0	0	0	0	0	0	0	0	0	0	×	0	×	0
"∆" mark: Caution required,	Series	XC-MF	×	X Note2	△ Note3	0	X Note2	0	△ Note3	0	△ Note3	X Note2	0	0	0	×	0	×	0
		XC-M XC-FL XC-N	×	0	0	0	0	0	0	0	0	0	0	0	0	×	0	×	0
"O" mark: Connection possible,	Series	XC-AMF XC-AM	×	X Note2	△ Note3	0	X Note2	0	△ Note3	0	△ Note3	X Note2	0	0	0	×	0	×	0
		XC-AFL XC-AN	×	0	0	0	0	0	0	0	0	0	0	0	0	×	0	×	0
nal (enclosed)	XC-B Series	XC-BMF XC-BMBL XC-BFL XC-BN	O Note1	0	0	×	0	×	0	×	0	0	0	0	0	O Note4	0	O Note4	0
"©" mark: original (enclosed),	XC-E Series	XC-EMF XC-EN	0	0	0	×	0	×	0	×	0	0	0	0	0	0	0	0	0
	XC-F Series	XC-FMF	0	0	0	×	0	×	0	×	0	0	0	0	0	0	0	0	0
'	XC-G Series	XC-GMF	0	0	0	×	0	×	0	×	0	0	0	0	0	0	0	0	0
is: Detector companionity	Control box series	Control box type Detector type	XC-KE-01P	XC-KB-12P	XC-KB-12	දුර XC-KB-22	ও বি XC-K-12P	en G XC-K-22	XC-K-12	LA-K-22	LA-K-12	XC-K-2000 XC-K-1002	etecto XC-K-1000 XC-K-1001	d XC-K-230-E in XC-K-230-F	ma XC-K-180	ing XC-K-230-C W XC-K-230-D	isi LA-K-180	xA-K-230-C Mits XA-K-230-D	LA-K-190

Note1: The detector does not have a PG signal, so when using a pulse output (CP output) with the XC-BFL or XC-BMF, the pulse output cannot be output. Note2: The ground from the sewing machine is connected to the control box's TM signal (thread trimming position), so this cannot be connected.

However, this can be used if the detector's ground wire is cut off (pin removed), etc., and the ground is not connected.

Note3: The detector does not have a TM signal (thread trimming position), so this cannot be used with a sewing machine that uses the thread trimming position TM signal. Note4: When using the pulse output (CP output) with the XC-BFL or XC-BMF, the pulse output will be double at 64 pulses.

From the library of Superior Sewing Machine & Supply LLC - www.supsew.com

23 Function List

Refer to "24 Table of Program Mode Function" for details on each function. The numbers in the table are used with the direct number call function.

	name	Function	No.
	Н.	Maximum speed	0000
	L.	Low speed	0001
	Т.	Thread trimming speed	0002
	N.	Start tacking speed	0003
	V.	End tacking speed	0004
	М.	Medium speed	0005
	S.	Slow start speed	0006
	SLN.	No. of slow start stitches	0007
_	SLM.	Slow start operation mode	0007
G	SLP.	Slow start when power is turned ON	0008
ㅗ	SH.	One shot	0010
\equiv	SHM.	One shot operation mode	0010
Ξ	PSU.		
\rightarrow	PSD.	No. of stitches after PSU input No. of stitches after PSD input	0012
··	PS1.	Sensor input signal PS1 operation mode	0013
e			0014
I∵⊨	1.	No. of stitches after PS1 input	0015
S	PS2.	Sensor input signal PS2 operation mode	0016
P mode (For sewing machine): [↓]+[↑] key	2.	No. of stitches after PS2 input	0017
	PSN.	Restart after PSD,SEN input PSN	0018
l	SEN.	Input sensor function valid / invalid	0019
₹	SE.	Setting stitch amount to stop by "SEN"	0020
ě	FUM.	Presser foot lift momentary	0021
S	FU.	FUM operation mode	0022
ĮŌ	FCT.	Time setting for FUM operation mode	0023
H.	FD.	Time to motor drive after presser foot lifter	0024
Ð		bring down	0024
ρ	FO.	Full wave time of presser foot lifter output	0025
ΙĔ	S3D.	Delay time of presser foot signal S3 input	0026
<u>ا</u> ا	FUD.	Presser foot lifting output chopping duty	0027
_	PFU.	Presser foot lifting output when power is	0000
	FFU.	turned ON	0028
	FL.	Cancel the presser foot lifting with full heeling	0029
	S3L.	Cancel presser foot lifting with light heeling	0030
	S2L.	Cancel of thread trimming operation	0031
	CCI	Thread trimming protection signal (S6) logical	0000
	S6L.	changeover	0032
	AT.	Automatic operation	0033
	TL.	Thread trimmer cancel	0034
	TLS.	Auto-stop of preset stitch sewing before trim	0035
	İ	Reverse run needle lifting after thread	
	RU.	trimming	0036
	R8.	RU reverse run angle	0037
	TB.	Thread trimming with reverse feed	0038
	TBJ.	Not used.	0039
	S2R.	Full heeling, S2 signal operation mode	0040
	IL.	Cancel of interlock after full pedal heeling	0040
	TR.	Thread trimming mode	0041
	POS.	Thread trimming mode Thread trimming validity at neutral pedal	0042
		Operation when power is turned ON during 1	00+0
	P1P.	position setting.	0044
		Operation when power is turned ON during 2	
	P2P.	position setting.	0045
	C8.	Needle stop position before fabric	0046
	CO.	Reverse run angle from DOWN position to	0040
	K8.	UP position	0047
	Eo		0040
	E8. S8.	On angle of virtual "TM" On start angle of virtual "TM"	0048
	SNM.	Setting sensor "SEN" input function	0049
			0050
	KD.	Virtual down setting	0051
	KDU.	Virtual width of up and down signal	0052
	PSJ.	Not used.	0053
	D8.	Needle DOWN position stop angle	0054
	U8.	Needle UP position stop angle	0055

	name	Function	No.
	GA.	Gain high/low selection	0100
	PDC.	Pedal curve	0101
_	AC.	Acceleration time simple setting	0102
A mode (For servo motor) : [↓]+[A] key	ACT.	Acceleration time	0103
<u> </u>	DC.	Deceleration time simple setting	0104
⊻	DCT.	Deceleration time	0105
<u>+</u>	SC.	S-character cushion	0106
\rightarrow	SCT.	S-character cushion time setting	0107
	0014	Full heeling S2 signal operation mode when	
or)	S2M.	power is turned on or after thread trimming	0108
St	D.	Sewing machine shaft/motor shaft speed	0400
Ĕ	PL.	setting selection	0109
0	MR.	Setting motor pulley diameter	0110
Š	SR.	Setting sewing machine pulley diameter	0111
ē		Random stop is available without thread	
5	NOS.	trimming.	0112
٠.	STM.	First priority stop => speed control	0114
F)	BKT.	Brake time	0115
<u>e</u>	B8.	Weak brake angle	0116
рс	BNR.	Reduction of weak brake sound	0117
ĭ	BKS.	Weak brake force	
4	BKM.	Weak brake mode	0118
_			0119
_	BK.	Weak brake	0120
mode (For counter/speed display) : $[\![]\!]+[B]$ key	S.	Display sewing speed	0200
ᅕ	N.	Down counter setting count amount	0201
3]	D.	Down counter display count amount	0202
쁫	P.	Up counter setting count amount	0203
+	U.	Up counter display count amount	0204
二	CUP.	Up counter the selection of setting mode	0205
: (USC.	Up counter the selection of counter operation	0206
lay	UCM.	Up counter changing sewing pattern	0207
spl	UPC.	Up counter valid / invalid	0208
Ġ	NXU.	Up counter operation after counting over	0209
ed	CDN.		
be	CDN.	Down counter the selection of setting mode	0210
r/s	DSC.	Down counter the selection of counter	0211
nte	DOM	operation	2212
ınc	DCM.	Down counter changing sewing pattern	0212
c	DNC.	Down counter valid / invalid	0213
Б.	NXD.	Down counter operation after counting over	0214
0	PCM.	Counter condition turning on power switch	0215
ď	PRN.	Setting Thread trimming times "N"	0216
Q	CNU.	Setting Number of stitches "N"	0217
⊔	CCI.	Count modification (to use IO1, IO2)	0218
В	PMD.	Display condition turning on power switch	0219
	CCM.	Reset for Up / Down counter during operation	0220
Pro	aram mod	e [I] (Save mode of the setting data): [↓]+[↑]+[B]-	
1 10		E [i] (Save mode of the setting data). [↓]+[□]+[□]• Function	
	name		No.
	SAVE1	Save mode of the setting data 1	-
	SAVE2	Save mode of the setting data 2	-
	CCR	Copy of the current data	-
	CU1	Copy of user's 1 data	-
	CU2	Copy of user's 2 data	-
Pro	gram mode	e [R] (Reset): [↓]+[B]+[C] key	
	name	Function	No.
	RESET.	Reset	140.
Pro	gram mode	e [1] (Mitsubishi sewing machine): [↓]+[A]+[B] ke	/
	name	Function	No.
	280M	LS2-1280-M1T(W)	-
	:	:	-
	LOAD1	Load of the saved setting data1	-
Dre			
LLO.	Ť – – –	e [2] (Chain stitch sewing machine): [↓]+[C]+[D] I	
	name	Function	No.
	YU2	YAMATO VC2600,VC2700 class	-
	:	:	-
	JMH	JUKI	-
Pro	gram mode	e [3] (other lock stitch sewing machine): [1]+[A]+[Dl kev
. 10	Ť	Function	No.
 	name		
	D697	DÜRKOPP ADLER 697-15000 class	-
i	:		-

750

SINGER

	name	Function	No.
	IA.	IA input function selection	0300
	IAL.	IA input logic changeover	0301
	IAA.	IA input alternating operation	0302
	IB.	IB input function selection	0303
	IBL.	IB input logic changeover	0304
	IBA.	IB input alternating operation	0305
	ICL.	IC input function selection IC input logic changeover	0306 0307
	ICA.	IC input alternating operation	0307
	ID.	ID input function selection	0309
	IDL.	ID input logic changeover	0310
	IDA.	ID input alternating operation	0311
	IE.	IE input function selection	0312
	IEL.	IE input logic changeover	0313
	IEA.	IE input function colorion	0314
	IF.	IF input function selection IF input logic changeover	0315 0316
	IFM.	Setting the function for IF	0317
	RFS.	Set condition of RS F/F for IF	0318
	RFR.	Reset condition of RS F/F for IF	0319
	RFN.	RS F/F reset stitch amount for IF	0320
e l	IG.	IG input function selection	0321
드 기	IGL.	IG input logic changeover	0322
\Box	IGA.	IG input alternating operation	0323
tting input/output signal to function): [J]+[C] key	IH.	IH input function selection IH input logic changeover	0324
\rightarrow	IHA.	IH input logic changeover IH input alternating operation	0325 0326
<u>اث</u>	II.	Il input function selection	0327
.⊡	IIL.	II input logic changeover	0328
덛	IIA.	Il input alternating operation	0329
اج.[IJ.	Not used.	0330
0	IJL.	Not used.	0331
=	IJA.	Not used.	0332
пa	IK.	Not used.	0333
١ÿ	IKL. IKA.	Not used.	0334
=	IL.	Not used. Not used.	0335
þ	ILL.	Not used.	0336 0337
ΙĦ	ILA.	Not used.	0338
1	IM.	IM input function selection	0339
nd	IML.	IM input logic changeover	0340
.⊑	IMA.	IM input alternating operation	0341
g	IN.	IN input function selection	0342
I≢	INL.	IN input logic changeover	0343
se	INA. IO.	IN input alternating operation IO input function selection	0344
Z	IOL.	IO input logic changeover	0345 0346
ĬĔ.	IOA.	IO input alternating operation	0347
e e	IP.	IP input function selection	0348
ğ	IPL.	IP input logic changeover	0349
ΙĔ	IPA.	IP input alternating operation	0350
C mode (For set	IQ.	IQ input function selection	0351
	IQL.	IQ input logic changeover	0352
	IQA.	IQ input alternating operation	0353
	IR. IRL.	IR input function selection IR input logic changeover	0354 0355
	IRA.	IR input logic changeover IR input alternating operation	0355
	11.	I1 input function selection	0357
	IIL.	I1 input logic changeover	0358
	I1M.	Setting the function for I1	0359
	110	Special setting for input signal "I1"	0360
	I1F	Special setting for input signal "I1" is ON	0361
	I1C	RS F/F clear setting	0362
	1CT	RS F/F delay time setting	0363
	F1P F1C	Input signal I1 virtual F/F circuit operation 1 Input signal I1 virtual F/F circuit operation 2	0364 0365
	F1S	Input signal I1 virtual F/F circuit operation 3	0366
	R1S	Set condition of RS F/F for I1	0367
	R1R	Reset condition of RS F/F for I1	0368
	R1N	RS F/F reset stitch amount for I1	0369
	I2.	I2 input function selection	0370
	I2L.	I2 input logic changeover	0371
	I2M.	Setting the function for I2	0372
	I2C	RS F/F clear setting	0373
	2CT	RS F/F delay time setting	0374
		Set condition of DS E/E for I2	U07E
	R2S R2R	Set condition of RS F/F for I2 Reset condition of RS F/F for I2	0375 0376

	name	Function	No.
	14.	I4 input function selection	0378
	I4L.	I4 input logic changeover	0379
	I4A.	I4 input alternating operation	0380
	15.	I5 input function selection	0381
	I5L.	I5 input logic changeover	0382
	I5A.	I5 input alternating operation	0383
	16.	I6 input function selection	0384
	I6L.	I6 input logic changeover	0385
	I6A.	I6 input alternating operation	0386
ĺ	17.	17 input function selection	0387
ĺ	I7L.	I7 input logic changeover	0388
ĺ	17A.	17 input alternating operation	0389
İ	OA.	OA output function selection	0390
İ	OAL.	OA output logic changeover	0391
i	OAC.	OA output chopping operation	0392
i	OAT.	OA output forced OFF	0393
	DA.	OA output delay time	0394
	OB.	OB output function selection	0395
	OBL.	OB output logic changeover	0396
	OBC.	OB output chopping operation	0397
	OBT.	OB output forced OFF	0398
>	DB.	OB output delay time	0399
황	OC.	OC output function selection	0400
$\overline{}$	OCL.	OC output logic changeover	0401
의	OCC.	OC output chopping operation	0402
اج	OCT.	OC output chopping operation OC output forced OFF	0402
ے ا	DC.	OC output forced OFF OC output delay time	0403
C mode (For setting input/output signal to function): [√]+[C] key	OD.	OD output delay time OD output function selection	0404
ō	ODL.	OD output logic changeover	0405
귱	ODC.		0400
Ĕ	ODC.	OD output chopping operation	_
₽	DD.	OD output forced OFF OD output delay time	0408
<u></u>	OF.		0409
_		OF output function selection	0410
≌	OFL.	OF output logic changeover	0411
ဒ္ဌာ	FUD.	Presser foot lifter output chopping duty	0412
ţ	FO.	Presser foot lifter FU full wave output time	0413
\sim	FU.	Presser foot lifter FU momentary mode	0414
¥∣	DF.	OF output delay time	0415
ō	01.	O1 output function selection	0416
₹∣	01L.	O1 output logic changeover	0417
ᅙ	01C.	O1 output chopping function	0418
.⊨	O1T.	O1 output forced OFF	0419
g	D1.	O1 output delay time	0420
≒ ∣	O2.	O2 output function selection	0421
ਰੂ	O2L.	O2 output logic changeover	0422
S	O2C.	O2 output chopping function	0423
Ö	O2T.	O2 output forced OFF	0424
۳)	D2.	O2 output delay time	0425
e e	O3.	O3 output function selection	0426
8	O3L.	O3 output logic changeover	0427
Ξ	O3C.	O3 output chopping function	0428
\circ	O3T.	O3 output forced OFF	0429
_	D3.	O3 output delay time	0430
	04.	O4 output function selection	0431
	O4L.	O4 output logic changeover	0432
ļ	O4T.	O4 output forced OFF	0433
ļ	D4.	O4 output delay time	0434
	O5.	O5 output function selection	0435
	O5L.	O5 output logic changeover	0436
	O5T.	O5 output forced OFF	0437
	D5.	O5 output delay time	0438
	O6.	O6 output function selection	0439
	O6L.	O6 output logic changeover	0440
	O6C.	O6 output chopping function	0441
	O6T.	O6 output forced OFF	0442
	D6.	O6 output delay time	0443
ļ	07.	O7 output function selection	0444
ļ	07L.	O7 output logic changeover	0445
ļ	07C.	O7 output chopping function	0446
ļ	07T.	O7 output forced OFF	0447
	D7.	O7 output delay time	0448
	OM.	OM output function selection	0449
	OML.	OM output logic changeover	0450
ļ	OMT.	OM output forced OFF	0451
	DM.	OM output delay time	0452
	ON.	ON output function selection	0453
	ONL.	ON output logic changeover	0454
	ONT.	ON output forced OFF	0455

ı	nomo	Function	No							
	name DN .	Function ON output delay time	No. 0456							
	00.	OO output function selection	0457							
	OOL.	OO output logic changeover	0458							
	OOT.	OO output forced OFF	0459							
	DO.	OO output delay time	0460							
	OP.	OP output function selection								
	OPL.	OP output logic changeover	0462							
	OPT.	OP output forced OFF								
	DP.	OP output delay time								
	OQ.	OQ output function selection								
	OQL. OQT.	OQ output logic changeover	0466							
	DQ.	OQ output forced OFF OQ output delay time	0467 0468							
	O.R.	OR output delay time OR output function selection	0469							
	O.RL.	OR output logic changeover	0470							
	O.RT.	OR output forced OFF	0471							
	DR.	OR output delay time	0472							
	PO.	Full wave output time for each output	0473							
	POD.	Output chopping duty except of FU output								
	OTT.	Forced OFF timer setting function for each	0475							
		output								
	FCT.	Time setting for FUM operation mode	0476							
_	A1.	Logic [AND] module input function selection	0477							
e	A1L.	Logic [AND] module setting of Hi/Low logic Logic [AND] module Alternate	0478							
X			0479 0480							
\mathcal{O}	N1.	Logic [AND] module output function selection								
王	N1L.	Logic [AND] module setting of Hi/Low logic Logic [AND] module output function selection								
<u>→</u>										
<u></u>	N2.									
input/output signal to function): [↓]+[C] key	N2L.	Logic [AND] module setting of Hi/Low logic	0483							
ct	A2.	Logic [AND] module input function selection	0484							
In	A2L.	Logic [AND] module setting of Hi/Low logic	0485							
) t	A2A.	Logic [AND] module Alternate	0486							
ĭ	N3.	Logic [AND] module output function selection	0487							
Э	N3L.	Logic [AND] module setting of Hi/Low logic	0488							
igi		Logic [AND] module								
s 1	N4.	output function selection	0489							
n	N4L.	Logic [AND] module setting of Hi/Low logic	0490							
l∓	A3.	Logic [AND] module input function selection	0491							
10/	A3L.	Logic [AND] module setting of Hi/Low logic	0492							
Ę	A3A.	Logic [AND] module Alternate	0493							
du	N5.	Logic [AND] module	0494							
	N5L.	output function selection Logic [AND] module setting of Hi/Low logic	0405							
ij		Logic [AND] module Setting of Hi/Low logic	0495							
ett	N6.	output function selection	0496							
Ś	N6L.	Logic [AND] module setting of Hi/Low logic	0497							
C mode (For setting	OR.	Logic [OR] module input function selection	0498							
F)	ORL.	Logic [OR] module setting of Hi/Low logic	0499							
Эę	ORA.	Logic [OR] module Alternate	0500							
ĭĕ	R1.	Logic [OR] module output function selection	0501							
_	R1L.	Logic [OR] module setting of Hi/Low logic	0502							
O	R2.	Logic [OR] module output function selection	0503							
	R2L. CSP.	Logic [OR] module setting of Hi/Low logic	0504							
		Variable speed command for digital input Variable speed command for digital input	0505							
	CSG.	(Gray code)	0506							
	LB.	Thread release + backstitch output	0507							
	T1C.	Virtual output OT1 forced OFF function	0508							
		Forced OFF timer setting function for virtual								
	T1T		0500							
	T1T.	output OT1	0509							
	T1T.	output OT1 Virtual output OT2 forced OFF function	0509 0510							
		output OT1 Virtual output OT2 forced OFF function Forced OFF timer setting function for virtual								
	T2C. T2T.	output OT1 Virtual output OT2 forced OFF function Forced OFF timer setting function for virtual output OT2	0510 0511							
	T2C. T2T. T3C.	output OT1 Virtual output OT2 forced OFF function Forced OFF timer setting function for virtual output OT2 Virtual output OT3 forced OFF function	0510 0511 0512							
	T2C. T2T.	output OT1 Virtual output OT2 forced OFF function Forced OFF timer setting function for virtual output OT2 Virtual output OT3 forced OFF function Forced OFF timer setting function for virtual	0510 0511							
	T2C. T2T. T3C. T3T.	output OT1 Virtual output OT2 forced OFF function Forced OFF timer setting function for virtual output OT2 Virtual output OT3 forced OFF function	0510 0511 0512 0513							
	T2C. T2T. T3C.	output OT1 Virtual output OT2 forced OFF function Forced OFF timer setting function for virtual output OT2 Virtual output OT3 forced OFF function Forced OFF timer setting function for virtual output OT3 ON delay time setting function for virtual output OT1	0510 0511 0512							
	T2C. T2T. T3C. T3T. D11.	output OT1 Virtual output OT2 forced OFF function Forced OFF timer setting function for virtual output OT2 Virtual output OT3 forced OFF function Forced OFF timer setting function for virtual output OT3 ON delay time setting function for virtual output OT1 OFF delay time setting function for virtual	0510 0511 0512 0513 0514							
	T2C. T2T. T3C. T3T.	output OT1 Virtual output OT2 forced OFF function Forced OFF timer setting function for virtual output OT2 Virtual output OT3 forced OFF function Forced OFF timer setting function for virtual output OT3 ON delay time setting function for virtual output OT1 OFF delay time setting function for virtual output OT1	0510 0511 0512 0513							
	T2C. T2T. T3C. T3T. D11.	output OT1 Virtual output OT2 forced OFF function Forced OFF timer setting function for virtual output OT2 Virtual output OT3 forced OFF function Forced OFF timer setting function for virtual output OT3 ON delay time setting function for virtual output OT1 OFF delay time setting function for virtual output OT1 ON delay time setting function for virtual output OT1 ON delay time setting function for virtual	0510 0511 0512 0513 0514							
	T2C. T2T. T3C. T3T. D11. D12.	output OT1 Virtual output OT2 forced OFF function Forced OFF timer setting function for virtual output OT2 Virtual output OT3 forced OFF function Forced OFF timer setting function for virtual output OT3 ON delay time setting function for virtual output OT1 OFF delay time setting function for virtual output OT1 ON delay time setting function for virtual output OT1 ON delay time setting function for virtual output OT2	0510 0511 0512 0513 0514 0515							
	T2C. T2T. T3C. T3T. D11.	output OT1 Virtual output OT2 forced OFF function Forced OFF timer setting function for virtual output OT2 Virtual output OT3 forced OFF function Forced OFF timer setting function for virtual output OT3 ON delay time setting function for virtual output OT1 OFF delay time setting function for virtual output OT1 ON delay time setting function for virtual output OT1 ON delay time setting function for virtual output OT2 OFF delay time setting function for virtual	0510 0511 0512 0513 0514 0515							
	T2C. T2T. T3C. T3T. D11. D12.	output OT1 Virtual output OT2 forced OFF function Forced OFF timer setting function for virtual output OT2 Virtual output OT3 forced OFF function Forced OFF timer setting function for virtual output OT3 ON delay time setting function for virtual output OT1 OFF delay time setting function for virtual output OT1 ON delay time setting function for virtual output OT1 ON delay time setting function for virtual output OT2	0510 0511 0512 0513 0514 0515							

	name	Function	No.
	D32.	OFF delay time setting function for virtual output OT3	0519
	CPK.	Feed pulse output (CP) cancel function	0520
	CP.	Setting CP pulse amount	0521
	CPC.	Prohibited angle of output CP pulse	0522
>	PSW.	Panel switch operation prohibit	0523
l 8	CKB.	O4, O5 output cancel during backtack term	0524
[↓]+[C] key	CPB.	CP output cancel during backtack term	0525
으	C.	Speed setting for the [SPC] output	0526
‡	D.	Speed setting for the [SPD] output	0527
→	E.	Speed setting for the [SPE] output	0528
mode :	CNF.	F key function on control panel	0529
ğ	PDS.	Variable speed pedal changeover setting	0530
18	V2C.	Speed instruction VC2 cancellation	0531
\Box			

	name	Function	No.
	D1.	Operation mode during tacking	0600
	D2.	Operation mode during start tack completion	0601
_	CT.	Stop time at each corner during start and backtacking	0602
(e	BM.	Tack alignment	0603
	BT1.	No. of stitch compensation for start tacking alignment	0604
]+[↑]	BT2.	No. of stitch compensation for start tacking alignment	0605
(e):	BT3.	No. of stitch compensation for end tacking alignment	0606
шос	BT4.	No. of stitch compensation for end tacking alignment	0607
б	BTP.	No. of tacking stitches (+) 15 stitches function	0608
ettin	вто.	No. of tacking stitches addition stitches function	0609
D mode (For tacking setting mode): [₹]+[D] key	ВТТ.	Full heeling function immediately after start tacking stop	0610
Ϋ́	CSJ.	Not used.	0611
tac	SPN.	The speed operation mode when both the medium speed signal and S5V signal is ON	0612
or	BTM.	Set table types of tacking	0613
e (F	S7M.	Input signal S7 operation mode during preset stitching	0614
ğ	S7U.	Manual backstitch ON timing 1	0615
μ	S7D.	Manual backstitch ON timing 2	0616
Dr	7BD.	The OFF timing setting of output B when the backstitching signal (S7) is OFF setting.	0617
	BTN.	The maximum tacking stitches (maximum stitches is 99 stitches)	0618
	BCC.	No. of end tacking stitches during direct heeling	0619
	TLS.	Operation mode during thread trimmer cancel signal [TL] setting	0620
	BTS.	Input signal BTL quick pressing operation	0621
	BS.	Input signal SB and EB quick pressing operation	0622
	BTD.	Operation when input signal BTL is ON	0623
	BD.	Operation when input signal SB and EB tacking OFF are set	0624
	PNE.	End tacking cancel mode with input signal PSU	0625
	BZ.	The buzzer of control panel validity	0626

	name	Function	No.
	1.	Error code (The last error code)	0700
	2. 3.	Error code (The second to last code)	0701
	3. 4.	Error code (The third to last code) Error code (The fourth to last code)	0702 0703
	P.	Total integration time of power on	0703
	М.	Total integration time of power on	0704
	IA.	Input display	0706
	IB.	Input display	0707
	IC.	Input display	0708
	ID.	Input display	0709
	IE.	Input display	0710
	IF.	Input display	0711
	IG.	Input display	0712
>	IH.	Input display	0713
é	II.	Input display	0714
1	IJ.	Input display	0715
₹	IK.	Input display	0716
+	IL.	Input display	0717
¥	IP.	Input display	0718
→	IQ.	Input display	0719
] :	IR.	Input display	0720
E mode (For H/W checking mode): [↓]+[↑]+[A] key	I1.	Input display	0721
po	12. 14.	Input display	0722
Ĕ	15.	Input display Input display	0723
g	ECA.	Encoder signal display (A phase)	0724 0725
Ġ	ECB.	Encoder signal display (A phase)	0726
Š	UP.	Detector signal display (UP signal)	0720
he	DN.	Detector signal display (ON signal)	0732
C	DR.	Display the angle from down position	0733
>	VC.	Display the voltage of VC	0734
Ì	V2.	Display the voltage of VC2	0736
٦c	OAD.	Output signal display	0737
E	OBD.	Output signal display	0738
) e	OCD.	Output signal display	0739
þ	ODD.	Output signal display	0740
υ	OFD.	Output signal display	0741
111	O1D.	Output signal display	0742
	O2D.	Output signal display	0743
	O3D.	Output signal display	0744
	O4D.	Output signal display	0745
	O5D. O6D.	Output signal display	0746
	O7D.	Output signal display	0747
	OPD.	Output signal display Output signal display	0748 0749
	OPD.	Output signal display Output signal display	0749
	ORD.	Output signal display Output signal display	0750
	OAO.	Solenoid output	0751
	OBO.	Solenoid output	0753
	OCO.	Solenoid output	0754
	ODO.	Solenoid output	0755
	OFO.	Solenoid output	0756
	010.	Solenoid output	0757
	020.	Solenoid output	0758
	O3O.	Solenoid output	0759
	040.	Solenoid output	0760
	050.	Solenoid output	0761
	060.	Solenoid output	0762
	070.	Solenoid output	0763
	OPO.	LED output for G500 type control panel	0764
	OQO. ORO.	LED output for G500 type control panel	0765
	WT.	LED output for G500 type control panel Rated output display	0766 0767
	VL.	Voltage display	0767
	TP.	Model display	0769
	DV.	Data version No.	0770
	RV.	Software version No.	0771
	T.	Display previous simple setting selected.	0772

	name	Function	No.
ļ	COA.	Set No. of stitches A for cutter output (Setting the delay time during chain-off output ON)	0800
	сов.	Set No. of stitches B for cutter output (Setting the delay time during chain-off output OFF)	0801
	COC.	Set No. of stitches C for cutter output	0802
	Χ.	No. of stitches for BT output ON after sensor OFF setting	0803
	Υ.	No. of stitches for sewing machine stop after BT output ON setting	0804
	Z .	No. of stitches for BT output OFF after start of stitching setting	0805
	SD.	Delay time to when SL output turns from OFF to ON	0806
	ED.	Delay time to when SL output turns from ON to OFF	0807
	SLH.	No. of set stitches during SL output ON selection mode	0808
۶y	SLK.	SL output start position setting	0809
3] Ke	SLT.	SL output start position during SLS function ON setting	0810
-	SLL.	Speed limit M except tacking and SL on	0811
<u>.</u>	SLS.	SL output operation during motor stop	0812
<u>+</u> [01B.	OT1 output blower output setting	0813
÷	O2M.	OT2 output chain-off output setting	0814
<u> </u>	O3M.	OT3 output cutter output setting	0815
e)	I2M.	Mesh judgment control with I*2 input	0816
g	CTY.	Setting I*3 signal for manual cutter output	0817
Cutter setting mode): [⊍]+[↑]+[B] key	СТМ.	Status of cutter output photo switch (I*2) signal according to OT3 output	0818
ettinį	CTR.	Turn OT3 output ON/OFF per set No. of stitches when I*3 signal is ON	0819
er se	CSC.	Automatic cutter output prohibit during sensor ON	0820
Sutte	CEC.	Automatic cutter output prohibit during sensor OFF	0821
mode ((CTS.	Cutter output prohibit when sensor is ON while stopped	0822
moc	CAT.	Automatic thread trim setting after cutter sensor is turned off	0823
Щ	CTL.	Set I*1 input, OP1 output to cutter BT specifications input/output	0824
ļ	NMD.	Preset stitching operation after operation signal OFF	0825
	RLM.	ROL output mode	0826
	RLN.	No. of stitches setting for auxiliary feeding rear roller	0827
	CTG.	Not used.	0828
	CGD.	Not used.	0829
	EDT.	Not used.	0830
	EDS.	Not used.	0831
Ì	CAS.	Not used.	0832
	ESC.	Not used.	0833
		1	

	name	Function	No.
	TR.	Thread trimming mode	0900
	TRM.	Motor operation mode during thread trimming	0901
	LTM.	Thread trimming output (T) output mode	0902
	LLM.	Thread release output (L) output mode	0903
	TS.	Thread trimming output start angle	0904
	TE.	Thread trimming output angle	0905
	LS.	Thread release output start angle	0906
	LE.	Thread release output angle	0907
	T1.	Thread trimming output start time	0908
	T2. L1.	Thread trimming output time Thread release output start time	0909
	L1.	Thread release output time Thread release output time	0910 0911
λ		Thread release output start time (Output TF	
ke	R1.	start time)	0912
\overline{C}	R2.	Thread release output time (TF output time)	0913
ᅪ	R3.	Condensed stiching start time (Stop time	0914
-		before thread trimming)	
]+	W1.	Wiper output start time	0915
\supseteq	W2. WMD.	Wiper output time	0916
.;	F1.	Wiper output operation mode Presser foot lifting output start time	0917 0918
qe		Time to motor drive after presser foot lifter	0916
00	FD.	bring down	0919
J n	IL.	Interlock time during thread trimming	0920
ij	IT.	Interlock time during no thread trimming	0921
ətt	TDS.	Motor rotation after motor stop before thread	0922
S	150.	trimming	0922
βL	TD.	Motor stop time during lockstitch and R	0923
π		output time during chain stitch Delay setting before reverse run during RU	
tir	RUS.	setting	0924
βL		Delay time before reverse run during RU	
π	RT.	setting	0925
m	RUM.	Reverse run needle lifting [RU] after output T,	0926
tri		L and W	0920
p	WS1.	Wiper output OFF trimming with (S1) signal	0927
G mode (Thread trimming timing setting mode): [↓]+[↑]+[C] key		Operation mode with thread trimming signal	
	S2T.	to shift the needle stop position and return to the original needle stop position before the	0928
		thread trimming signal	
ge		Operation mode with thread trimming signal	
ŏ	S2P.	when shifting the needle stop position before	0929
∟		the thread trimming signal	
G	MAN.	Solenoid output OT1 manual/automatic	0930
		change	
	HOF.	Setting of no. of stitches during MAN [OFF] setting	0931
	14/5	Weak brake ON simultaneously with wiper	
	WB.	output (W)	0932
	TDT.	Motor rotation operation when LTM function	0933
		is set to T1, T2 or T3	
	C1.	Not used	0934
	C2 .	Not used	0935
	C3 . T3.	Not used Not used	0936
	T4.	Not used	0937 0938
	T5.	Not used	0939
	PET.	Not used	0940
	P9U.	Not used	0941
	HHC.	Not used	0942
	PAA.	Not used	0943
	STL.	Not used	0944
	L8.	Not used	0945
	PEK.	Not used	0946
	PPA. PPB.	Setting A which can be used by step sequence Setting B which can be used by step sequence	0947 0948
	PPC.	Setting B which can be used by step sequence Setting C which can be used by step sequence	0948
	PPD.	Setting D which can be used by step sequence	0949
	PPE.	Setting E which can be used by step sequence	0951
	PPF.	Setting F which can be used by step sequence	0952
	PPG.	Setting G which can be used by step sequence	0953
	PPH.	Setting H which can be used by step sequence	0954

	name	Function	No.
	LHH.	Upper limit of maximum speed [H]	1000
ř ķ	LHL.	Lower limit of maximum speed [H]	1001
speed limit +[↑]+[D] k	LLH.	Upper limit of low speed [L]	1002
厥부	LLL.	Lower limit of low speed [L]	1003
ĕĘ	LTH.	Upper limit of thread trimming speed [T]	1004
	LTL.	Lower limit of thread trimming speed [T]	1005
(Setting ode): [↓]	LNH.	Upper limit of start/end tacking (condensed stitching) speed	1006
H mode (setting mo	LNL.	Lower limit of start/end tacking (condensed stitching) speed	1007
1π etti	LMH.	Upper limit of medium speed [M]	1008
۳ %	LML.	Lower limit of medium speed [M]	1009
	LSH.	Upper limit of slow start speed [S]	1010
	LSL.	Lower limit of slow start speed [S]	1011

MAC. Simple setting mode for [1],[2],[3] prohibit 1100		name	Function	No.
TRC. prohibit CWC. Rotation direction changeover prohibit 1102 12C. 1-2 position changeover prohibit SLC. Slow start changeover prohibit 1104 SPC. Speed setting key changeover prohibit 1105 JKC. Not used SBC. Start tacking validity changeover prohibit 1107 SNC. No. of start tacking stitches changeover prohibit EBC. End tacking validity changeover prohibit EBC. End tacking validity changeover prohibit EKC. Start tacking stitches changeover prohibit SKC. Start tacking type changeover prohibit TSC. Pattern stitching validity changeover prohibit TNC. Pattern stitching validity changeover prohibit TNC. Pattern stitching validity changeover prohibit TNC. Pattern stitching validity changeover prohibit BAC. Switch panel BPC. Prohibit the all of key switches and times changeover prohibit the all of key switches on control switch panel BPC. Prohibit the teaching mode key switches on control switch panel BPC. Prohibit the following key switches on control switch panel BKC. Switch panel before thread trimming NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. CMS. At the comparison when it compares and it blinks destination. PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. NTM. Not used		MAC.	Simple setting mode for [1],[2],[3] prohibit	1100
12C. 1-2 position changeover prohibit 1103		TRC.	L 3/L 3	1101
SLC. Slow start changeover prohibit 1104 SPC. Speed setting key changeover prohibit 1105 JKC. Not used 1106 SBC. Start tacking validity changeover prohibit 1107 SNC. No. of start tacking stitches changeover prohibit 1109 EBC. End tacking validity changeover prohibit 1109 ENC. No. of end tacking stitches changeover prohibit 1110 SKC. Start tacking type changeover prohibit 1111 EKC. End tacking type changeover prohibit 1112 TSC. Pattern stitching validity changeover prohibit 1113 TNC. Pattern stitching No. of stitches and times changeover prohibit 1114 MDC. Pattern mode pattern changeover prohibit 1115 BAC. Prohibit the all of key switches on control switch panel BPC. Prohibit the following key switches on control switch panel BSC. Prohibit the following key switches on control switch panel PSW. Operation prohibition of set value change key 1119 BKC. Prohibit the key switches on the control switch panel before thread trimming 1120 NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1125		CWC.	Rotation direction changeover prohibit	1102
NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1124 NTM. Not used 1125	<i>></i>	12C.	1-2 position changeover prohibit	1103
NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1125 NTM. Not used 1125	ķ	SLC.	Slow start changeover prohibit	1104
NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1124 NTM. Not used 1125	3	SPC.	Speed setting key changeover prohibit	1105
NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1124 NTM. Not used 1125	二二	JKC.	Not used	1106
NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1124 NTM. Not used 1125	Ą	SBC.	Start tacking validity changeover prohibit	1107
NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1125 NTM. Not used 1125]+[↓	SNC.		1108
NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1125 NTM. Not used 1125	王	EBC.		1109
NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1125 NTM. Not used 1125	.́↑] :(a		prohibit	1110
NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1125 NTM. Not used 1125	ge	SKC.	Start tacking type changeover prohibit	1111
NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1125 NTM. Not used 1125	υ			1112
NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1125 NTM. Not used 1125	-	TSC.		1113
NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1125 NTM. Not used 1125	cance			1114
NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1125 NTM. Not used 1125	<u>ب</u>	MDC.	Pattern mode pattern changeover prohibit	1115
NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1125 NTM. Not used 1125	switc	BAC.		1116
NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1125 NTM. Not used 1125	anel :	BPC.		1117
NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1125 NTM. Not used 1125	e (P		3 - 3 - 3 - 3 - 3 - 3 - 3 - 3 - 3 - 3 -	1118
NSV. The use number is preserved by the number call. CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1125 NTM. Not used 1125	Ď	PSW.		1119
CMP. It blinks compared with a set value. 1122 CMS. At the comparison when it compares and it blinks destination. 1123 PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. 1124 NTM. Not used 1125	J mc	вкс.		1120
CMS. At the comparison when it compares and it blinks destination. PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. NTM. Not used 1125		NSV.		1121
blinks destination. PKC. Prohibit "parameter setup (ABCD) key" during the normal mode. NTM. Not used 1125		CMP.	It blinks compared with a set value.	1122
during the normal mode. NTM. Not used 1125		CMS.	blinks destination.	1123
		PKC.		1124
UDC. Not used 1126			Not used	1125
		UDC.	Not used	1126

		_	
	name	Function	No.
	P21.	Operation during 2 - 1 position changeover	1200
		Sewing machine speed during solenoid input	
	IO1.		1201
	000	signal [IO1] setting	1000
	COR.	Speed specification when COR input is ON	1202
	RND.	Speed specification when RND input is ON	1203
		Setting the thread trimming key of control	
	NTL.	switch panel (mark of scissors) valid or	1204
		invalid, when the preset stitching is active.	
		Decelerate per step when Continuous is set	
	CNM.	with control panel XC-G500-Y	1205
		DN signal is valid during the virtual DOWN	
	KD2.	control	1206
		Validity of operation delay when IO1 signal is	
	IOD.		1207
		input	
	S7B.	Delay to motor drive after B output ON	1208
	UFD.	Delay when S2 signal is U or UF	1209
	E8R.	Not used	1210
	MRA.	Not used	1211
		UP position needle lifting at the power is	
	PAP.	turned ON	1212
		One stitch operation mode during UCR	
	ST1.	setting	1213
		Setting one stitch operation, when "S01"	
	IT1.		1214
		signal is set	
	S6M.	Operation mode during thread trimming	1215
		protection signal (S6) input/release	•
	S6A.	Thread trimming protection signal (S6)	1216
	оод.	operation mode	1210
_	VTM	End tacking mode when TR function is set to	4047
ey	KTM.	chain stitch	1217
ž	KDM.	Lock stitch tacking menu display	1218
setting mode): [\dagger]+[A]+[C] key		U, UF signal needle lift prohibit at position	1210
)	UFP.	other than set position	1219
7	LIDD	•	4000
₹.	UPB.	Weak brake validity when UP signal is ON	1220
+	ESB.	Weak brake forced OFF when stopped with	1221
-		ES signal	
+	UPS.	UP position detection stop	1222
ጏ	UP2.	Stop status after low speed detection	1223
.(K.	Low speed detection speed	1224
qe	NAN.	Deceleration mode	1225
Ŏ		Presser foot lifter operation during	
П	ESF.	emergency stop	1226
βı	PRC.	OP output and OP1 output prohibit at restart	1227
tir	TS6.		
et	130.	S2 signal validity when S6 signal is ON.	1228
	PNC.	Speed loop stopping control when the	1229
ns		machine is overrun with the preset stitching	
<u>i</u>	MFN.	Input port IL, I1 and I2 software noise filter	1230
ar		validity	
Š	PFN.	All input port software noise filter validity	1231
συ	SEF.	No. of stitches fornoise removal during	1232
ğ	OLI.	sensor input setting	1232
2	DeM	Deceleration state during PSU, PSD signal	1000
K mode (Various	PSM.	ON	1233
ㅗ	007	Low stitching speed validity when the preset	4
	2ST.	stitching is two stitches	1234
	DC-	No. of set stitch stitching speed when PSU,	
	PSS.	PSD, SEN signal is ON	1235
	PSK.	Speed at PSU, PSD, SEN signal is ON	1236
	. 511.	No. of stitches for removing noise when PSU	1230
	PUF.		1237
		signal is ON	
	PDF.	No. of stitches for removing noise when PSD	1238
		signal is ON	
	CDR.	Zigzag during continuous tacking	1239
	ZNC.	No. of stitches of zigzag stitch (sway width)	1240
		setting	
	BRC.	BCR operation after thread trimming	1241
	USN.	Actual No. of USR operations	1242
	2RW.	W output mode during S2R=OFF setting	1243
		O1 output prohibit during tacking and thread	
	BTC.	trimming	1244
		OP output prohibit/permit changeover with	
	PR.	input I1 during operation	1245
		OP1 output prohibit/permit changeover with	
	P1R.	input I1 during operation	1246
	TBC.	B output OFF prohibit mode during thread	1247
	-	trimming	•
	KTL.	KS3 output and TF output prohibit during TL	1248
		input ON	1470

	name	Function	No.
		Presser foot operation of F, S2, S3 signal is	
	FLC.	OFF when FUM function is ON, FU function	1249
		is M or C.	
6	SPT.	T output, L output protection function	1250
호	FW.	Wiper output W ON simultaneously with	1251
\Box	. ** .	presser foot lifting output FU	1231
 	PS1.	Input signal check function when power is	1252
[₹		turned on	1202
Ŧ	B2O.	Setting program stitch of the control switch	1253
\equiv		panel	
<u>+</u>	TOB.	Setting "OT1" output while "B" output is ON	1254
→	2SL.	Special specification setting of limit contorol	1255
(c)	NCK.	Setting output at FWD input ON	1256
ğ	UDN.	Needle lift function is invalidated, excluding	1257
2		the needle down position.	
7	FSL.	The set value of full speed	1258
Ľ	UPR.	Not used	1259
Ħ	HWG.	Operation gain for the big inertia sewing	1260
Se	PPS.	machine	
K mode (Various setting mode): [↓]+[↑]+[A]+[C] key		Stop by pedal neutrality under operation PSU, PSD, PS1, PS2	1261
<u>.</u> <u>ō</u>	PCB.	Not used	1262
a,	TQT.	Not used	1263
2	E8T.	Not used	1264
<u>e</u>	WBO.	Not used	1265
8	R3D.	Not used	1266
Ε	MEA.	Not used	1267
\mathbf{x}	OCS.	Not used	1268
	STP.	Step ON/OFF	1269
	STS.	Number of step execution lines.	1270
	HDS.	Not used	1271
	1ST.	Not used	12/1
		1	1

	name	Function	No.
		Function selection of making IA two input	
	IA.	signal functions	1300
	IAL.	Logical conversion function to make IA two	1301
	IAA.	input signal functions	
	IAA.	Not used Function selection of making IB two input	1302
	IB.	signal functions	1303
	ID.	Logical conversion function to make IB two	
	IBL.	input signal functions	1304
	IBA.	Not used	1305
_	IC.	Function selection of making IC two input	1306
<u>6</u>		signal functions Logical conversion function to make IC two	
<u> </u>	ICL.	input signal functions	1307
무	ICA.	Not used	1308
Bj	ID.	Function selection of making ID two input	1309
구	iD.	signal functions	1309
Ξ	IDL.	Logical conversion function to make ID two	1310
 	IDA.	input signal functions Not used	1311
<u>ث</u>		Function selection of making IE two input	
Й.	IE.	signal functions	1312
뜢	IEL.	Logical conversion function to make IE two	1313
ŭ		input signal functions	
) f	IEA.	Not used	1314
O mode (Extended I/O function): [↓]+[↑]+[B]+[D] key	IF.	Function selection of making IF two input signal functions	1315
Ö		Logical conversion function to make IF two	
ge	IFL.	input signal functions	1316
en	IFM.	Operation selection of making IF two input	1317
∺		signal functions	
(E	RFS. RFR.	Not used Not used	1318 1319
ğ	RFN.	Not used	1320
Ĕ	IG.	Function selection of making IG two input	1321
0	10.	signal functions	1321
	IGL.	Logical conversion function to make IG two	1322
	IGA.	input signal functions Not used	1323
		Function selection of making IH two input	
	IH.	signal functions	1324
	IHL.	Logical conversion function to make IH two	1325
	IHA.	input signal functions Not used	1326
		Function selection of making II two input	
	II.	signal functions	1327
	IIL.	Logical conversion function to make II two	1328
		input signal functions Not used	
	IIA. IJ.	Not used	1329 1330
	IJL.	Not used	1331
	IJA.	Not used	1332
	IK.	Not used	1333
	IKL.	Not used	1334
	IKA.	Not used	1335
	IL. ILL.	Not used Not used	1336
	ILL. ILA.	Not used	1337 1338
		Function selection of making I1 two input	
	I1.	signal functions	1339
	I1L.	Logical conversion function to make I1 two	1340
		input signal functions Operation selection of making I1 two input	
	I1M.	signal functions	1341
ĺ	I10.	Not used	1342
	I1F.	Not used	1343
	I1C.	Not used	1344
	1CT. F1P.	Not used	1345
	F1P.	Not used Not used	1346 1347
	F1S.	Not used	1348
	R1S.	Not used	1349
	R1R.	Not used	1350
	R1N.	Not used	1351
	I2.	Function selection of making I2 two input signal functions	1352
	121	Logical conversion function to make I2 two	1050
	I2L.	input signal functions	1353

	name	Function	No.
	I2M.	Operation selection of making I2 two input signal functions	1354
_	I2C.	Not used	1355
(e)	2CT.	Not used	1356
<u> </u>	R2S.	Not used	1357
	R2R.	Not used	1358
L±	R2N.	Not used	1359
]±[14.	Function selection of making I4 two input signal functions	1360
 - - -	I4L.	Logical conversion function to make I4 two input signal functions	1361
	I4A.	Not used	1362
mode: [\]+[\]+[B]+[D] key	15.	Function selection of making I5 two input signal functions	1363
0	I5L.	Logical conversion function to make I5 two input signal functions	1364
	I5A.	Not used	1365

	name	Function	No.
	VCS.	Virtual S1 operation with VC levels	1400
		Setting of VC1 and VC2 where virtual S1	1400
	VCL.	turns ON	1401
		Input voltage hysteresis during virtual S1	
è	VCD.	signal ON/OFF by VC and VC2 level	1402
본	V1R.	VC curve reversal mode	1403
<u> </u>	V15.	VC input 5V/12V changeover mode	1404
l ‡	VC2.	VC2 operation mode	1405
🌣	V2R.	VC2 curve reversal mode	1406
\equiv	V25.	VC2 input 5V/12V changeover mode	1407
<i>∷</i> :	VL1.	Speed limiter curve inflection point 1	1408
g		percentage	1400
٤ ا	VP1.	Speed limiter curve inflection point 1 point	1409
g	VP2.	Speed limiter curve inflection point 2 point	1410
Ϊ́Ξ	FLM.	Operation speed limit specification mode 1	1411
sel	2LM.	Operation speed limit specification mode 2	1412
5	LMD.	Speed command value correctly by middle	1413
헔		speed digital during speed limit process	
ete	HMD.	Speed limit with digital speed setting on	1414
ŏ		control switch panel	4445
ğ	E8C.	Ignore detector error	1415
) Le	TH.	Thread break sensor valid	1416
Q mode (Speed command, Speed limit, Thread break detector setting mode): [↓]+[A]+[C] key	TST.	Operation after thread break sensor detection	1417
ျှိ	B.	Speed to ignore thread break sensor	1418
모		No. of stitches to ignore thread break sensor	
'±:	THS.	after starting stitching	1419
<u>=</u>	THF.	Number of stitches for judgment of thread	4.400
ᇢ	INF.	break.	1420
ee	RFU.	Operation mode with F input during sewing	1421
S	RFU.	machine operation	1421
ď,	S7C.	Output of backtacking output (B) during OT1	1422
au	070.	output ON inhibited	1722
<u> </u>	LIM.	Medium speed (M) limit mode during OT1	1423
o o		output ON	
၁	O1P.	Simultaneously ON of OP1 output during	1424
l ĕ	LVD	OT1 output ON	4.40=
မွ	LVB.	Disregard of S3 signal of Lever Unit	1425
9)	PD1.	1 step heeling setting for the internal lever unit	1426
ğ	VCSET	Adjustment mode for the internal lever unit	1427
Ĭ	MTJ.	Not used.	1428
Ø	MOA.	Not used.	1429
1	MOB.	Not used.	1430
	MOC.	Not used.	1431
	VCA.	VC assistance ON/OFF	1432
	VCP.	Strength of VC assistance	1433
<u> </u>	,	55gii 01 10 00010101100	. 100


	name	Function	No.
	KSM.	KS1, KS2 output run mode	1500
Ì	SQS.	Simple sequence start conditions	1501
Ì	SQE.	Simple sequence forced end conditions	1502
	NS1.	Simple sequence output KS1 output beginning is time or the number of stitch is selected	1503
	NE1.	Simple sequence output KS1 output is time or the number of stitch is selected	1504
key	S1S.	Output beginning standard of simple sequence output KS1	1505
+[U]	S1E.	Output end standard of simple sequence output KS1	1506
mode (Simple sequence mode): [↓]+[B]+[D] Key	NS2.	Simple sequence output KS2 output beginning is time or the number of stitch is selected	1507
Je): [NE2.	Simple sequence output KS2 output is time or the number of stitch is selected	1508
moc	S2S.	Output beginning standard of simple sequence output KS2	1509
rence	S2E.	Output end standard of simple sequence output KS2	1510
le sedı	NS3.	Simple sequence output KS3 output beginning is time or the number of stitch is selected	1511
simp	NE3.	Simple sequence output KS3 output is time or the number of stitch is selected	1512
ge (S	S3S.	Output beginning standard of simple sequence output KS3	1513
	S3E.	Output end standard of simple sequence output KS3	1514
S	NS4.	Simple sequence output KS4 output beginning is time or the number of stitch is selected	1515
	NE4.	Simple sequence output KS4 output is time or the number of stitch is selected	1516
	S4S.	Output beginning standard of simple sequence output KS4	1517
	S4E.	Output end standard of simple sequence output KS4	1518
	K11.	KS1 output start [Time]/[No. of Stitches] setting	1519
	K12.	KS1 output [Time]/[No. of Stitches] setting	1520
	K21.	KS2 output start [Time]/[No. of Stitches] setting	1521
	K22.	KS2 output [Time]/[No. of Stitches] setting	1522
	K31.	KS3 output start [Time]/[No. of Stitches] setting	1523
	K32.	KS3 output [Time]/[No. of Stitches] setting	1524
	K41.	KS4 output start [Time]/[No. of Stitches] setting	1525
ļ	K42.	KS4 output [Time]/[No. of Stitches] setting	1526
	K1M.	KS1 output run mode	1527
ļ	K1D.	Run prohibit during KS1 output ON	1528
ļ	K1C.	K11, K12 time clear during KS1 output ON	1529
ļ	K2C.	K21, K22 time clear during KS2 output ON	1530
ļ	K3C.	K31, K32 time clear during KS3 output ON Increase the number of K11 through K42 by	1531
	KSL.	ten	1532
	KL1.	Sequence output time setting/No. of stitch setting each by ten times setting	1533
	KL2.	Sequence output time setting/No. of stitch setting each by ten times setting	1534
	KL3.	Sequence output time setting/No. of stitch setting each by ten times setting	1535
	KL4.	Sequence output time setting/No. of stitch setting each by ten times setting	1536

24 Ta	able of Program Mode Function				0	mark: The		ne cannot be o	perated in t	he function	setting state.
Moc			Dir	V Op	Factory			Function name	Set	tting	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	display		Specification
ō					GMFY						
	Maximum speed	H.	0000	0	4000	rpm	0~8999	H.	****	****	The maximum speed can be set.
	Low speed	L.	0001	0	250	rpm	0~499	L.	***	***	The low speed can be set.
	Thread trimming speed	T.	0002	0	200	rpm	0~499	Γ.	***	***	The thread trimming speed to reach the needle UP position stop from the needle DOWN position during full heeling or when thread trimmer signal (S2) is turned ON can be set.
	Start tacking speed	N.	0003	0	1700	rpm	0 ~ 2999	n.	****	****	The speed of start tacking can be set.
	End tacking speed	V.	0004	0	1700	rpm	0 ~ 2999	U.	****	****	The speed of end tacking can be set.
	Medium speed	M.	0005	0	1700	rpm	0~8999	Ñ.	****	****	The medium speed can be set.
	Slow start speed	<mark>S.</mark>	0006	0	<mark>250</mark>	<mark>rpm</mark>	0 ~ 2999	5.	****	****	The slow start speed can be set.
	No. of slow start stitches	SLN.	0007	0	2	stitche s	1~5	SLn.	*	*	The No. of slow start stitches can be set. This is valid when the [B, SL] key is ON in the normal mode.
	Slow start operation mode	SLM.	8000	0	Т	-	-	SLN.			The slow start operation mode is selected. This is valid when the [B, SL] key is ON in the normal mode.
P mode									Γ	Т	Slow start operation will begin when the power is turned ON or when the first toe down after thread trimming, or the first external run signal (S0, S1) is turned ON.
1									R	Α	Slow start operation will begin when the pedal is toed down or when the external run signal (S0, S1) is turned ON.
+	Slow start when power is turned ON	SLP.	0009	0	OF	-	-	SLP.	or of	ON OF	Slow start operation will begin when the pedal is toed down for the first time after turning the power ON, or when the first external run signal (S0, S1) is turned ON even if the [B, SL] key is turned OFF in the normal mode.
	One shot	SH.	0010	0	OF	-	-	5 <i>H</i> .	or of	ON OF	The one shot function can be selected. One shot operation (automatic operation) will begin when the external run signals (S0, S1, S4) is turned ON.
	One shot operation mode	SHM.	0011	0	SH	-	-	SHN.			The one shot SH operation mode is selected. This is valid when one shot SH is [ON].
									SH	SH	When one of the external run signals (S0, S1, S4) is turned ON the sewing machine will rotate at the commanded speed while ON, and will continue operating even when the signal is turned OFF. However, the speed will be that commanded with the speed setting key ([C, <==], [D, ==>] key) while OFF. Stops with PSD, PSU, ES or SEN signal.
									55	SS	When one of the external run signals (S0, S1, S4) is turned ON, the sewing machine will rotate at the speed commanded with each signal even if the signal is turned OFF.
	CONTINUED ON THE NEXT PAGE								SA	SA	The same operation as when [SS] is set is included. When one of the external run signals (S0, S1, S4) is turned (1)OFF=>ON=> (2)OFF=>ON, the sewing machine will stop at (1) and will restart at (2). (Alternate operation).

Caution

Mc				<u>o</u>	Factory			Function name	Sett	ing	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range		4:1		Specification
ame			ᄣ	ility	GMFY			Digital	display		
	Sensor input signal PS2 operation mode	PS2.	0016	0	D	-	-	P52.			The operation of the sensor input signal PS2 can be set.
	·								U	U	The needle will stop at the UP position. The thread trimming operation is not done. However, after stopping, the thread trimming operation is done when the pedal is heeling or when the therad trimming signal (S2) is turned ON.
									8	D	After thread trimming, the needle will stop at the DOWN position. This setting is the same operation as the DOWN position priority stop signal PSD.
									٢	Т	After thread trimming, the needle will stop at the UP position. This setting is the same operation as the UP position priority stop signal PSU.
	No. of stitches after PS2 input	2.	0017	0	0	stitche s	0 ~ 9999	₽.	***	****	After the sensor input signal PS2 is input, the no. of stitches until stopping can be set.
P mode	Restart after PSD,SEN input PSN	PSN.	0018	0	OF	-	-	PSn.	er er	ON OF	After detecting the end of the fabric by a sensor with the PSU, PSD and SEN signals and stopping, restarting is possible with the pedal toe down or external run signal (S0, S1) even if the sensor does not detect the fabric (even if PSU, PSD signals are ON).
<u>+</u>	Input sensor function valid / invalid	SEN.	0019	0	OF	-	-	SEn.	op of	ON OF	Sensor input function "SEN" is valid. [SEN] have to be set on C mode. (as same as the sensor key on control panel)
1	Setting stitch amount to stop by "SEN"	SE.	0020	0	0	stitche s	0 ~ 99	5 <i>E</i> .	**	**	The number of stitch to stop, after the input function "SEN" ON. ("SEN" have to be set "ON")
	Presser foot lift momentary	FUM.	0021	0	OF	-	-	FUN.	or or	ON OF	This is the momentary function of the presser foot lifting.
	FUM operation mode	FU.	0022	0	M	-	-	FU.			The operation mode of the presser foot lift momentary mode is selected. This is valid when the presser foot lift momentary FUM is set to [ON].
									U	M	After thread trimming with full heeling or the external thread trimmer signal S2, the presser foot lifting operation is continued.
									Ε	C	After thread trimming with full heeling or the external thread trimmer signal S2, the presser foot lifting operation is continued while the timer is on, and then the presser foot will lower. The timer time is set with the timer setting FCT.
									R	A	The presser foot lifting operation is activated with full heeling, light heeling, or the external control signal (S2, F) ON. Then, when the full heeling, light heeling or external control signal (S2, F) is turned ON, the presser foot will bring down, and when turned ON again, the presser foot will lift. (Alternate operation.)
	The section for First								Γ	Т	The timer operates in the same manner as the [C] setting. However, after the presser foot bring down, the same alternate operation as the [A] setting will occur.
	Time setting for FUM operation mode (FU is set to [C], [T])	FCT.	0023	0	12	sec	1~99	FET.	**	**	The timer time for the presser foot output to turn ON and then turn OFF when the mode P FUM operation mode FU is set to [C], [T] can be set.
	Time to motor drive after presser foot lifter bring down	FD.	0024	0	176	msec	0 ~ 998	Fd.	***	***	The time for the motor to start driving after the presser foot output FU is turned OFF when pedal toe down or external run signal (S0, S1) ON during presser foot lifting can be set in 2 millisecond units.

<				0	Factory			Function	Set	ting	
Mode r	Function name		Direct cal number	Operability	Factory setting	Unit	Setting	name		Ī	Specification
name			call	bility	GMFY	-	range	Digital	display		·
	Thread trimming protection signal (S6) logical changeover	S6L.	0032	Х	LO	-	-	56L.			The operation can be changed when the thread trimming protection signal (S6) is turned Short/Open.
	Changeover								H, Lo	HI	The sewing machine will stop when the input signal (S6) is Open. The sewing machine will stop when the input signal (S6) is Short.
	Automatic operation	AT.	0033	0	OF	-	-	Rr.	or of	ON OF	Automatic operation (standing operation) can be set.
	Thread trimmer cancel	TL.	0034	0	OF	-	-	ΓL.	or of	ON OF	The thread trimming operation with full heeling of the pedal or with the thread trimming signal S2 is not performed, and instead needle UP position stop will occur.
	Auto-stop of preset stitch sewing before trim	TLS.	0035	0	OF	-	-	ΓL 5.	or of	ON OF	Auto-stop of preset stitch sewing before thread trimming. And then it is free sewing till thread trimming.
P mode	Reverse run needle lifting after thread trimming	RU.	0036	0	OF	-	-	r U.	or of	ON OF	The motor is reverse run after thread trimming, and the needle will stop near the needle bar top dead point.
↓	RU reverse run angle	R8.	0037	0	30	degree	0 ~ 500	r 8.	***	***	The reverse run angle from the UP position after thread trimming can be set for when the reverse run needle lifting after thread trimming RU is set to ON. The setting angle is in two degrees intervals.
1	Thread trimming with reverse feed	TB.	0038	0	OF	-	-	ΓЬ.	or of	ON OF	The thread is trimmed with reverse feed by driving the backstitch solenoid simultaneously with the thread trimmer solenoid.
	Not used	TBJ.	0039	0	OF	-	-	ГЬJ.			Not used.
	Full heeling, S2 signal operation mode	S2R.	0040	0	ON	-	-	5 <i>2</i> r.			The operation mode of full heeling or external thread trimmer signal S2 is selected. This is valid when cancel of thread trimming operation S2L is set to [OF].
									on	ON	With full heeling or the external thread trimmer signal S2 after the needle UP position stop, the motor will rotate once to trim the thread. Then the presser foot will lift. When stopped at the needle DOWN position, the motor will make a half-rotation and then the presser foot will lift.
									оF	OF	The needle will remain at the UP position even when full heeling or external thread trimmer signal S2 is turned ON after stopping at the UP position. Only the presser foot lifting operation will operate after this. When full heeling or external thread trimming signal S2 is input after the needle DOWN position stop, motor will make a half-rotation and trim the thread. Only the presser foot lifting operation will operate after this.
	Cancel of interlock after full pedal heeling	IL.	0041	0	OF	-	-	ıL.	on of	ON OF	This releases the restart operation prohibit command during thread trimming. [ON]:Restart is possible for a designated time after the pedal toe down or external operation signal (S0, S1) is turned ON immediately after full pedal heeling. This is used with a sewing machine that does not have thread trimming. [OF]:Restart is not possible. Restart is possible if the pedal toe down or external run signal (S0, S1) is turned ON again after a set time is passed.

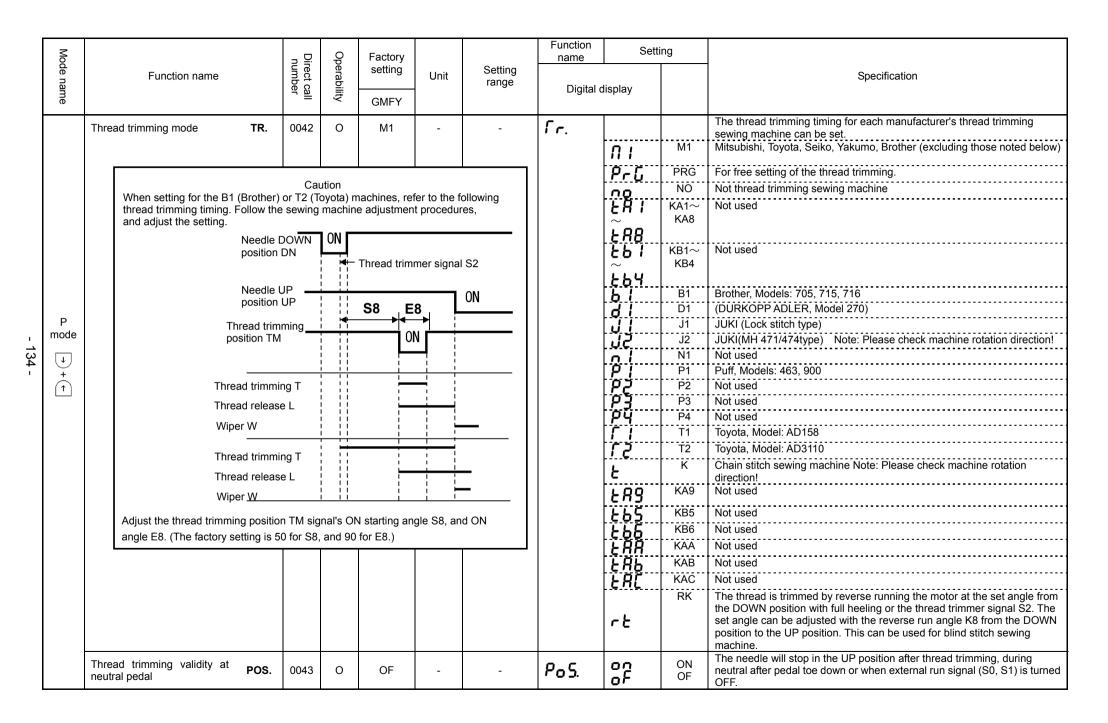

Mode			r Di	<u>o</u>	Factory			Function name	Sett	ing	
de na	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	dieplay		Specification
name			all	lity	GMFY			Digital	uispiay		
	Operation when power is turned ON during 1 position setting.	P1P.	0044	0	OF	-	-	P IP.	0 O C F	ON OF	When 1 position is set with the [A, 1-2] key in the normal mode, the needle will left to the UP position if not in the UP position when the power is turned ON.
	Operation when power is turned ON during 2 position setting.	P2P.	0045	0	OF	-	-	P2P.	0 O CF	ON OF	When 2 position is set with the [A, 1-2] key in the normal mode, the needle will lift to the UP position if not in the UP position when the power is turned ON.
	Needle stop position before fabric	C8.	0046	0	60	degree	0 ~ 360	E 8.	***	***	The needle stop position angle can be set just above the fabric looking from the UP position when the input signal is set the [BC] or [BCR]. (The setting angle is in 2 degrees intervals.)
P mode	Reverse run angle from DOWN position to UP position	K8.	0047	0	180	degree	0 ~ 360	£ 8.	***	***	The reverse run angle from the DOWN position to the UP position can be set when the S0 operation mode [USR] or reverse thread trimming mode operation mode TR[RK] is set in mode P.
+	ON angle of virtual TM	E8.	0048	0	90	degree	0 ~ 360	E8.	***	***	The width of virtual signal "TM". N79 :When [TR] = [B1] or [T2], it is possible to use this function.
\uparrow	ON start angle of virtual TM	S8.	0049	0	50	degree	0 ~ 360	58.	***	***	The start angle of virtual signal "TM". :When [TR] = [B1] or [T2], it is possible to use this function.
	Setting sensor "SEN" input function	SNM.	0050	0	ON	-	-	Snft.	or of	ON OF	[ON]:Input "SEN" is always valid. [OF]:Input "SEN" is only valid, when setting pattern is free sewing
	Virtual down Setting	KD.	0051	0	OF	-	-	Ł d.	o c F	ON OF	Sewing machine run without down signal. The angle between up and down position is set to "K8". The width is set at 60 degree automatically.
	Virtual width of up and down signal	KDU.	0052	0	OF	-	-	E & U.	or of	ON OF	It set the up and down signal width to 60 degree automatically.
	Not used	PSJ.	0053	0	OF	-	-	PSJ.	or of	ON OF	Not used.
	Needle DOWN position stop angle	D8.	0054	0	28	degree	10 ~ 180	д8 .	***	***	The coasting angle at the needle DOWN position stop can be set. (The setting angle is in 2 degrees intervals.)
	Needle UP position stop angle	U8.	0055	0	14	degree	10 ~ 180	U8.	***	***	The coasting angle at the needle UP position stop can be set. (The setting angle is in 2 degrees intervals.)

<u> </u>			_ 0	0	Factory			Function name	Sett	ing	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range		-1:1		Specification
ime			e all	lity	GMFY			Digital	uispiay		
	Gain high/low selection	GA.	0100	0	L	-	-	GR.			The high/low gain can be set. Set with the following
									H	H	Sewing machine with large inertia.
									Ĺ	L	Sewing machine with small inertia.
									LL	LL	This is used when there is a slight vibration when stopping even when the gain is set to [L].
	Pedal curve	PDC.	0101	0	30	-	10 ~ 99	PdC.	**	**	The size of the curve of the speed changes for the pedal toe down amount can be set. The speed change curve will change from small to large according to the small => large of the set value. Speed Speed Factory Setting [30] Set value-Large Factory Setting [30] Pedal toe down
A mode	Acceleration time simple setting	AC.	0102	0	М	-	-	AC.	H U L	H M L	The time for the sewing machine to reach the high speed after the pedal toe down or external run signal (S1) is input can be set easily. 100mS 140mS 240mS The time set in the next acceleration time ACT is used.
	Acceleration time	ACT.	0103	0	14	X10 msec	6 ~ 99	ACT.	**	**	The acceleration time for the sewing machine to reach the high speed after pedal toe down or external run signal (S1) ON can be set. This is valid when the acceleration time simple setting AC is set to [-].
	Deceleration time simple setting	DC.	0104	0	М	-	-	dC.	H	Н М	The deceleration time for the sewing machine to stop after returning to neutral from pedal toe down or when the external run signal (S1) is turned OFF can be set easily. 90mS 160mS
									<u>'</u>	L -	230mS The time set in the next deceleration time DCT is used.
	Deceleration time	DCT.	0105	0	16	X10 msec	$6\sim99$	acr.	**	**	The deceleration time for the sewing machine to stop after returning to neutral from pedal toe down or when the external run signal (S1) is turned OFF can be set. This is valid when the deceleration time simple setting DC is set to [-]. Normally use this at 350 milliseconds or less.

Mode			Dire nur	Ор	Factory		_	Function name	Setti	ing	
	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital o	lisnlav		Specification
name			r all	ity	GMFY			Digital	лоріаў		
	Reduction of weak brake sound	BNR.	0117	0	ON	-	-	bor.	or of	ON OF	Reducing the sound (noise) of weak brake.
A	Weak brake force	BKS.	0118	0	99	%	1 ~ 99	6£ S.	**	**	The weak brake force can be set.
mode	Weak brake mode	BKM.	0119	0	E	-	-	PFU.			The weak brake force can be set for when stopping the sewing machine when the weak brake [BK] is set to [ON].
+									Ε	E	Brake that allows manual rotation.
1-2 1-2									Н	H	Strong brake.
	Weak brake	BK.	0120	0	OF	-	-	Ь Ł.	or of	ON OF	The weak brake validity can be set.

<u> </u>				0	Factory			Function	Set	ting	
Mode n	Function name		Direct call number	Operability	setting	Unit	Setting range	name			Specification
name			call	oility	GMFY			Digital	display		
	Display sewing speed	S.	0200	0	0	rpm	0 ~ 9999	5.	****	****	Display the round per minute of running sewing machine.
	Down counter setting count amount	N.	0201	0	99	-	0 ~ 9999	C.	****	****	Setting the number of down counter.
	Down counter display count amount	D.	0202	0	99	-	0 ~ 9999	d.	****	****	Display the number of current down counter.
	Up counter setting count amount	P.	0203	0	99	-	0 ~ 9999	Р.	****	****	Setting the number of up counter.
	Up counter display count amount	U.	0204	0	0	-	0 ~ 9999	U.	****	****	Display the number of current up counter.
	Up counter the selection of setting mode	CUP.	0205	0	CU	-	-	EUP.			Selection of count up condition.
										CU	After thread trimming is finished
									55	ST	After thread trimming is finished
									Pr	PR	The number of trimming times become "N" ("N" have to be set at "PRN")
B mode									in	IN	When input function "IO1"become ON. ("IO1"have to be set to input signal on the program mode C.)
1									اناه	OU	When output signal "O1"become ON. ("O1"have to be set to output function on "O1" of the program mode C.)
+ B [±]	Up counter the selection of counter operation	USC.	0206	0	ST	-	-	USC.			Selection of operation count over. (Up counter)
s L									Sr	ST	Control panel buzzes and running is prohibited after trimming with buzzer sound. And then when Up counter clear key "CCU" is pressed, sewing become possible. (Buzzer will stop after a while.) (Factory setting of Up counter clear key is "P" key on control panel.)
									oF	OF	Sewing is possible to continue without buzzer sound.
									ьΞ	BZ	Sewing is possible to continue with buzzer sound. (Buzzer will stop after a while.)
	Up counter changing sewing pattern	UCM.	0207	0	OF	-	-	UCN.	or of	ON OF	[ON]:When sewing pattern is changed, it clear "up counter".
	Up counter valid / invalid	UPC.	0208	0	OF	-	-	UPC.	or of	ON OF	[ON]:The up counter is valid.
	Up counter operation after counting over	NXU.	0209	0	OF	-	-	nIIU.			The Up counter operation, after counting over.
									٥٥	ON	The display shows the setting number and the counting is stopped.
									οF	OF	The display shows the setting number and the counting is continued.

Mode			¬ D	Q.	Factory			Function name	Sett	ting	
ide na	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	dianlay		Specification
name			all er	lity	GMFY			Digital	uispiay		
	Down counter the selection of setting mode	DN.	0210	0	CU	-	-	Edn.			Selection of count down condition.
									EU	CU	After thread trimming is finished
									51	ST	The number of sewing stitch become "N" ("N" have to be set at "CNU")
									Pr	PR	The number of trimming times become "N" ("N" have to be set at "PRN")
									'n	IN	When input function "IO1"become ON. ("IO1"have to be set to input signal on the program mode C.)
									اناه	OU	When output signal "O1"become ON. ("O1"have to be set to output function on "O1" of the program mode C.)
	Down counter the selection of counter operation	SC.	0211	0	ST		-	d5E.			Selection of operation at count over. (Down counter)
В	or coarror operation								Sr	ST	Control panel buzzes and running is prohibited after thread trimming with buzzer sound. And then when Down counter clear key "CCD" is pressed, buzzer and sewing become possible. (Buzzer will stop after a while.) (Factory setting of Up counter clear key is "P" key on control panel.)
mode									οF	OF	Sewing is possible to continue without buzzer sound.
+									ЬΞ	BZ	Sewing is possible to continue with buzzer sound. (Buzzer will stop after a while.)
B +	Down counter changing potential potential counter changing counter changing cou	СМ.	0212	0	OF	-	-	acn.	or of	ON OF	[ON]:When sewing pattern is changed, it clear "down counter".
	Down counter valid / invalid DI	NC.	0213	0	OF	-	-	dn[.	or of	ON OF	[ON]:The down counter is valid.
	Down counter operation after counting over	XD.	0214	0	OF			niid.			The down counter action, after counting over. (It is valid, when [DSC] is set to "OF", "BZ".
									٥٥	ON	The display shows "0" and the counting is stopped.
									oF	OF	The display shows "-" and the counting is continued.
	Counter condition turning on power switch	CM.	0215	0	OF	-	-	PCN.			When power switch is turned on.
									on	ON	Up counter is clear (zero) and down counter is set the setting number.
									οF	OF	Both counter keep previous amount.
	Setting Thread trimming times "N"	RN.	0216	0	0	times	$0\sim99$	Prn.	**	**	When "CUP" and "CDN" are PR, trimming times "N" is set.
	Setting Number of stitches CI	NU.	0217	0	1	stitche s	1 ~ 99	EnU.	**	**	When "CUP" and "CDN" are ST, number of stitch "N" is set.

Mode		Dir Dir	Ор	Factory			Function name	Setti	ing	
le name	Function name	Direct call number	Operability	setting	Unit	Setting range	Digital o	display		Specification
ne		_ <u> </u>	ty	GMFY			2.9			
	Count modification (to use CCI.	0218	0	OF	-	-	EE			Modification of count amount.
	. ,							on	ON	When input function "IO1"is turned on, it becomes count up. When input function "IO2"is turned on, it becomes count down. (Input function can set input signal on program mode "C".)
B mode								oF	OF	Modification is prohibited.
1	Display condition turning on power switch PMD.	0219	0	OF	-	-	PNd.			Selection display mode, when power switch is turned on.
+ B + s s L								٥٥	ON	When power switch turned on, display shows previous condition. (Keep previous condition)
■ SL								oF	OF	When power switch turned on, display shows normal mode.
	Reset for Up / Down counter during operation CCM.	0220	0	OF	-	-	EEN.			Reset for Up / Down counter during operation.
								00	ON	Reset for Up / Down counter is valid.
								oF	OF	Reset for Up / Down counter is invalid.

Mo		n Di	ဝှ	Factory			Function name	Set	tting	
Mode name	Function name	Direct call number	Operability	setting	Unit	Setting range	Digital	display		Specification
	Function selection of input IA.	0300	X	PSU	_	_	ıR.	***	***	The input functions of each input signal IA can be selected from 80 types of functions. (*1)
	Logical conversion function of input signal IA	0301	X	OF	-	-	ıRL.	or of	ON OF	The input logic of each Input signal IA is reversed.
	Alternating operation of input signal IA	0302	x	OF	-	-	ıRR.	or of	ON OF	If each input signal IA performs OFF => (1)ON => OFF => (2)ON => OFF => (3)ON => OFF the signal will stay ON at (1) ,stops (turn OFF) at (2) , and will turn ON again at (3). (This is hereafter referred to alternate operation.) (*2)
	Function selection of input signal IB	0303	Х	PSD	-	-	ıЬ.	***	***	The input functions of each input signal IB can be selected from 80 types of functions. (*1)
	Logical conversion function of input signal IB	0304	Х	OF	-	-	ъL.	on of	ON OF	The input logic of each Input signal IB is reversed.
	Alternating operation of input signal IB	0305	х	OF	-	-	ъR.	8F	ON OF	If each input signal IB performs OFF => (1)ON => OFF => (2)ON => OFF => (3)ON => OFF the signal will stay ON at (1) ,stops (turn OFF) at (2) , and will turn ON again at (3). (This is hereafter referred to alternate operation.) (*2)
	Function selection of input signal IC	0306	Х	S0	-	-	ıĽ.	***	***	The input functions of each input signal IC can be selected from 80 types of functions. (*1)
C	Logical conversion function of input signal IC	0307	X	OF	-	-	ıEL.	on of	ON OF	The input logic of each Input signal IC is reversed.
mode	Alternating operation of input signal IC	0308	х	OF	-	-	ıC A.	of of	ON OF	If each input signal IC performs OFF => (1)ON => OFF => (2)ON => OFF => (3)ON => OFF the signal will stay ON at (1) ,stops (turn OFF) at (2) , and will turn ON again at (3). (This is hereafter referred to alternate operation.) (*2)
C +	Function selection of input signal ID.	0309	Х	TL	-	-	ıd.	***	***	The input functions of each input signal ID can be selected from 80 types of functions. (*1)
	Logical conversion function of input signal ID	0310	х	OF	-	-	ıdL.	or of	ON OF	The input logic of each Input signal ID is reversed.
	Alternating operation of input signal ID	0311	х	OF	-	-	ıdR.	or of	ON OF	If each input signal ID performs OFF => (1)ON => OFF => (2)ON => OFF => (3)ON => OFF the signal will stay ON at (1) ,stops (turn OFF) at (2) , and will turn ON again at (3). (This is hereafter referred to alternate operation.) (*2)
	Function selection of input signal IE.	0312	Х	S7	-	-	ıE.	***	***	The input functions of each input signal IE can be selected from 80 types of functions. (*1)
	Logical conversion function of input signal IE	0313	Х	OF	-	-	ıEL.	on of	ON OF	The input logic of each Input signal IE is reversed.
	Alternating operation of input signal IE	0314	x	OF	-	-	ıER.	of F	ON OF	If each input signal IE performs OFF => (1)ON => OFF => (2)ON => OFF => (3)ON => OFF the signal will stay ON at (1) ,stops (turn OFF) at (2) , and will turn ON again at (3). (This is hereafter referred to alternate operation.) (*2)
	Function selection of input signal IF.	0315	Х	F	-	-	ıF.	***	***	The input functions of each input signal IF can be selected from 80 types of functions. (*1)

Mode			n ⊒:	မွ	Factory			Function name	Set	ting	
de name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital o	dienlay		Specification
me			all	lity	GMFY			Digital	uispiay		
	Logical conversion function of input signal IF	FL.	0316	X	OF	-	-	ıFL.	or of	ON OF	The input logic of each Input signal IF is reversed.
	Operation selection of input signal IF	FM.	0317	Х	NO	-	-	ıF N.			The operation mode of each input signal IF can be selected.
	o.ga								00	NO	Normal operation.
									ÄL	AL	Alternating operation.
									r Š	RS	RS F/F (Flip-Flop) operation.
	Set condition of RS F/F operation of input signal IF	RFS.	0318	Х	IN	-	-	rF5.			Set condition RS F/F of IF When [IFM] is set to [RS], it is valid.
									in	IN	RS F/F of IF is set by IF
									1	Т	After thread trimming operation (stop to up position.)
									r	R	When motor start, RS F/F will be set.
C mode									5	S	When motor stops, RS F/F will be set.
mode									<u>[</u> r	TR	When sewing start, after thread trimming.
4									56	SB	When start tacking or condensed stitch was finished.
+ C +	Reset condition of RS F/F operation of input signal IF	RFR.	0319	X	IN	-	-	rFr.			Reset condition RS F/F of IF When [IFM] is set to [RS], it is valid.
									<u></u>	IN	RS F/F of IF is reset by IOG.
									Γ	Т	When thread trimming is done (stop to up position.)
									<u></u>	R	When motor start, RS F/F will be reset.
										S	When motor stops, RS F/F will be reset.
									<u> </u>	TR	When sewing start, after trimming.
									56	SB	When start condensed stitch was finished.
									nΕ	NC	When sewing machine sew the setting stitch after set RS F/F, it will be reset. (R1N, R2N)
	RS F/F operation of input IF	RFN.	0320	Х	3	stitche s	$0\sim99$	r£n.	**	**	When [RFR] set [NC], the number of stitch is set by this counter.
	Function selection of input signal IG	G.	0321	Χ	S1	-	-	<i>،</i> ۵.	***	***	The input functions of each input signal IG can be selected from 80 types of functions. (*1)
	Logical conversion function of input signal IG	GL.	0322	Х	OF	-	-	،GL.	0 P	ON OF	The input logic of each Input signal IG is reversed.
	Alternating operation of input signal IG	GA.	0323	Х	OF	-	-	ıGR.	8F	ON OF	If each input signal IG performs OFF => (1)ON => OFF => (2)ON => OFF => (3)ON => OFF the signal will stay ON at (1) ,stops (turn OFF) at (2) , and will turn ON again at (3). (This is hereafter referred to alternate operation.) (*2)
	Function selection of input signal IH	Н.	0324	Х	S2	-	-	ıH.	***	***	The input functions of each input signal IH can be selected from 80 types of functions. (*1)

Mode			Dit	ව	Factory			Function name	Sett	ting	
de name	Function name		Direct call	Operability	setting	Unit	Setting range	Digital	dianlay		Specification
me			all	lity	GMFY			Digital	uispiay		
	Logical conversion function of input signal IH	IHL.	0325	Х	OF	-	-	ıHL.	or of	ON OF	The input logic of each Input signal IH is reversed.
	Alternating operation of input signal IH	IHA.	0326	х	OF	-	-	ıHR.	8F	ON OF	If each input signal IH performs OFF => (1)ON => OFF => (2)ON => OFF => (3)ON => OFF the signal will stay ON at (1) ,stops (turn OFF) at (2) , and will turn ON again at (3). (This is hereafter referred to alternate operation.) (*2)
	Function selection of input signal II	II.	0327	Х	S3	-	-	1 1.	***	***	The input functions of each input signal II can be selected from 80 types of functions. (*1)
	Logical conversion function of input signal II	IIL.	0328	Х	OF	-	-	ııL.	or or	ON OF	The input logic of each Input signal II is reversed.
С	Alternating operation of input signal II	IIA.	0329	x	OF	-	-	, ,R.	8F	ON OF	If each input signal II performs OFF => (1)ON => OFF => (2)ON => OFF => (3)ON => OFF the signal will stay ON at (1) ,stops (turn OFF) at (2) , and will turn ON again at (3). (This is hereafter referred to alternate operation.) (*2)
mode	Not used	IJ.	0330	Х	NO	-	-	ıd.	***	***	Not used.
+	Not used	IJL.	0331	Х	OF	-	-	ıJL.	8F	ON OF	Not used.
C +	Not used	IJA.	0332	Х	OF	-	-	.A.L	or of	ON OF	Not used.
	Not used	IK.	0333	Х	NO	-	-	ıŁ.	***	***	Not used.
	Not used	IKL.	0334	Х	OF	-	-	ıŁL.	8F	ON OF	Not used.
	Not used	IKA.	0335	Х	OF	-	-	ıŁR.	or of	ON OF	Not used.
	Not used	IL.	0336	Х	NO	-	-	ıL.	***	***	Not used.
	Not used	ILL.	0337	Х	OF	-	-	ıLL.	or or	ON OF	Not used.
	Not used	ILA.	0338	Х	OF	-	-	ıL R.	or or	ON OF	Not used.
	Function selection of input signal IM	IM.	0339	Х	NO	-	-	ıN.	***	***	The input functions of each input signal IM can be selected from 80 types of functions. (*1)
	Logical conversion function of input signal IM	IML.	0340	Х	OF	-	-	ını.	er er	ON OF	The input logic of each Input signal IM is reversed.
	Alternating operation of input signal IM	IMA.	0341	Х	OF	-	-	ına.	er er	ON OF	If each input signal IM performs OFF => (1)ON => OFF => (2)ON => OFF => (3)ON => OFF the signal will stay ON at (1) ,stops (turn OFF) at (2) , and will turn ON again at (3). (This is hereafter referred to alternate operation.) (*2)
	Function selection of input signal IN	IN.	0342	Х	NO	-	-	ın.	***	***	The input functions of each input signal IN can be selected from 76 types of functions. (*1)

Mo			n Di	ဝွ	Factory			Function name	Set	ting	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	display		Specification
	Logical conversion function				GIVIFY				00	ON	
	of input signal IN	INL.	0343	Х	OF	-	-	int.	ōF	OF	The input logic of each Input signal IN is reversed.
	Alternating operation of input signal IN	INA.	0344	Х	OF	-	-	ın A.	or of	ON OF	If each input signal IN performs OFF => (1)ON => OFF => (2)ON => OFF => (3)ON => OFF the signal will stay ON at (1) ,stops (turn OFF) at (2) , and will turn ON again at (3). (This is hereafter referred to alternate operation.) (*2)
	Function selection of input signal IO	IO.	0345	Х	NO	-	-	10.	***	***	The input functions of each input signal IO can be selected from 80 types of functions. (*1)
	Logical conversion function of input signal IO	IOL.	0346	Х	OF	-	-	ıoL.	0.F	ON OF	The input logic of each Input signal IO is reversed.
	Alternating operation of input signal IO	IOA.	0347	x	OF	-	-	юR.	or of	ON OF	If each input signal IO performs OFF => (1)ON => OFF => (2)ON => OFF => (3)ON => OFF the signal will stay ON at (1) ,stops (turn OFF) at (2) , and will turn ON again at (3). (This is hereafter referred to alternate operation.) (*2)
	Function selection of input signal IP	IP.	0348	Х	CCU	-	-	ıP.	***	***	The input functions of each input signal IP can be selected from 80 types of functions. (*1)
	Logical conversion function of input signal IP	IPL.	0349	Х	OF	-	1	PL.	0F	ON OF	The input logic of each Input signal IP is reversed.
C mode	Alternating operation of input signal IP	IPA.	0350	Х	OF	-	-	ıPR.	or of	ON OF	If each input signal IP performs OFF => (1)ON => OFF => (2)ON => OFF => (3)ON => OFF the signal will stay ON at (1) ,stops (turn OFF) at (2) , and will turn ON again at (3). (This is hereafter referred to alternate operation.) (*2)
+ C +	Function selection of input signal IQ	IQ.	0351	Х	NO	-	-	,9.	***	***	The input functions of each input signal IQ can be selected from 80 types of functions. (*1)
	Logical conversion function of input signal IQ	IQL.	0352	Х	OF	-	-	,9L.	0.F	ON OF	The input logic of each Input signal IQ is reversed.
	Alternating operation of input signal IQ	IQA.	0353	Х	OF	-	-	,9R.	or of	ON OF	If each input signal IQ performs OFF => (1)ON => OFF => (2)ON => OFF => (3)ON => OFF the signal will stay ON at (1) ,stops (turn OFF) at (2) , and will turn ON again at (3). (This is hereafter referred to alternate operation.) (*2)
	Function selection of input signal IR	IR.	0354	Х	NO	-	-	ır.	***	***	The input functions of each input signal IR can be selected from 80 types of functions. (*1)
	Logical conversion function of input signal IR	IRL.	0355	Х	OF	-	-	ırL.	0.F	ON OF	The input logic of each Input signal IR is reversed.
	Alternating operation of input signal IR	IRA.	0356	Х	OF	-	-	ır A.	8F	ON OF	If each input signal IR performs OFF => (1)ON => OFF => (2)ON => OFF => (3)ON => OFF the signal will stay ON at (1) ,stops (turn OFF) at (2) , and will turn ON again at (3). (This is hereafter referred to alternate operation.) (*2)
	Function selection of input signal I1	l1.	0357	Х	IO1	-		, l.	***	***	The input functions of each input signal I1 can be selected from 80 types of functions. (*1)
	Logical conversion function of input signal I1	I1L.	0358	х	OF	-	-	ı IL.	er er	ON OF	The input logic of each Input signal I1 is reversed.

Mode			n Di	ဝ	Factory			Function name	Sett	ing	
de na	Function name		Direct call number	Operability	setting	Unit	Setting range	D: ". I			Specification
name			all all	ility	GMFY			Digital	display		
	Operation selection of input signal I1	I1M.	0359	Х	NO	-	-	· III.			The operation mode of each input signal I1 can be selected.
									no	NO	Normal operation.
									Rί	AL	Alternating operation.
									r5	RS	RS F/F (Flip-Flop) operation.
	Special setting for input signal " I1" (Neglecting of signal)	I1O.	0360	0	OF	-	-	ı lo.	0.E	ON OF	When sewing machine is running, input signal [I1] is not accepted This function is valid, only [I1M] set [AL] or [RS].
	Special setting for input signal " I1" is ON	11F.	0361	Х	OF	-	-	ı IF.	or of	ON OF	When [I1M] set [AL] on program mode "C", the alternate operation of input[I1] sets virtual output [OT3] to alternative output.
	AL operation clearness of input signal I1	I1C.	0362	Х	OF	-	-	· IC.	or of	ON OF	AL operation of input signal [I1] is cleared by thread trimming operation.
	Delay time of AL operation of input signal I1	1CT.	0363	0	0	X100 msec	0 ~ 99	IET.	**	**	When above setting I1C is valid, these delay timer is set.
	Input signal I1 virtual F/F circuit operation 1	F1P.	0364	Х	OF	-	-	F IP.	8F	ON OF	The input signal I1 virtual F/F (flip-flop) operation is turned ON when power is turned ON. It is only valid, when [I1M] function is set to "AL" or "RS"
C mode	Input signal I1 virtual F/F circuit operation 2	F1C.	0365	Х	OF	-	-	F IC.	0F	ON OF	The input signal I1 virtual F/F (flip-flop) operation is turned OFF when the sewing start No. of stitches RLN setting is completed.
1	Input signal I1 virtual F/F circuit operation 3	F1S.	0366	Х	OF	-	-	F 15.	or of	ON OF	The input signal I1 virtual F/F (flip-flop) operation is turned ON when the tacking starts or after thread trimming.
C +	Set condition of RS F/F for I1	R1S.	0367	Χ	IN	-	-	r 15.			Set condition RS F/F of I1 When [I1M] is set to [RS], it is valid.
									יח	IN	RS F/F of I1 is set by I1
									1	Т	After thread trimming operation (stop to up position.)
									<u></u>	R	When motor start, RS F/F will be set.
										S	When motor stops, RS F/F will be set.
									56	TR	When sewing start, after thread trimming.
	Reset condition of RS F/F for	R1R.	0368	Х	IN	-	-	r ir.	30	SB	When start tacking or condensed stitch was finished. Reset condition RS F/F of IF When [I1M] is set to [RS], it is valid.
									in	IN	RS F/F of I1 is reset by IOE.
									<i>'</i>	T	When thread trimming is done (stop to up position.)
									<u>'</u>	R	When motor start, RS F/F will be reset.
									ς	S	When motor stops, RS F/F will be reset.
									Ĩr	TR	When sewing start, after trimming.
									56	SB	When start condensed stitch was finished.
									n[NC	When sewing machine sew the setting stitch after set RS F/F, it will be reset. (R1N, R2N)

Mode name	Function name		Direct call number	Operability	Factory setting GMFY	Unit	Setting range	Function name Digital o	Setti	ing	Specification
	RS F/F reset stitch amount for I1	R1N.	0369	0	3	stitche	0 ~ 99	r in.	**	**	When [R1R] set [NC], the number of stitch is set by this counter.
	Function selection of input signal I2	12.	0370	Х	U	S -	-	۰2.	***	***	The input functions of each input signal I2 can be selected from 80 types of functions. (*1)
	I2 input logic changeover	I2L.	0371	Х	OF	-	-	12L.	or of	ON OF	The input logic of each Input signal I2 is reversed.
	Operation selection of input signal I2	I2M.	0372	Х	NO	-	-	15U			The operation mode of each input signal I2 can be selected.
									00	NO	Normal operation.
C mode									RL	AL	Alternating operation.
									r 5	RS	RS F/F (Flip-Flop) operation.
C → +	AL operation clearness of input signal I2	I2C.	0373	Х	OF	-	-	,2E.	on of	ON OF	AL operation of input signal [I2] is cleared by thread trimming operation.
	Delay time of AL operation of input signal I2	2CT.	0374	0	0	X100 msec	0 ~ 99	201.	**	**	When above setting I2C is valid, these delay timer is set.
	Set condition of RS F/F for I2	R2S.	0375	Х	IN	-	-	r25.			Set condition RS F/F of I2 When [I2M] is set to [RS], it is valid.
									'n	IN	RS F/F of I1 is set by I2
									Γ	Т	After thread trimming operation (stop to up position.)
									۲	R	When motor start, RS F/F will be set.
									5	S	When motor stops, RS F/F will be set.
									Γr	TR	When sewing start, after thread trimming.
									56	SB	When start tacking or condensed stitch was finished.

3					Footony			Function	Sett	ing	
Mode n	Function name		Direct call number	Operability	Factory setting	Unit	Setting range	name			Specification
name			call	oility	GMFY	-	range	Digital	display		
	Reset condition of RS F/F for	R2R.	0376	Х	IN	_	-	r2r.			Reset condition RS F/F of IF When [I2M] is set to [RS], it is valid.
	-								יח	IN	RS F/F of I2 is reset by IOF.
									r	Т	When thread trimming is done (stop to up position.)
									_	R	When motor start, RS F/F will be reset.
									5	S	When motor stops, RS F/F will be reset.
									۲-	TR	When sewing start, after trimming.
									56	SB	When start condensed stitch was finished.
									nΕ	NC	When sewing machine sew the setting stitch after set RS F/F, it will be reset. (R2N)
	RS F/F reset stitch amount for I2	R2N.	0377	0	3	stitche s	0 ~ 99	r2n.	**	**	When [R2R] set [NC], the number of stitch is set by this counter.
C mode	Function selection of input signal I4	14.	0378	Х	NO	-	-	, 4.	***	***	The input functions of each input signal I4 can be selected from 80 types of functions. (*1)
1	Logical conversion function of input signal I2	14L.	0379	Х	OF	-	-	,4L.	on of	ON OF	The input logic of each Input signal I4 is reversed.
+ C +	I4 input alternating operation	I4A.	0380	х	OF	-	-	,4R.	8F	ON OF	If each input signal I4 performs OFF => (1)ON => OFF => (2)ON => OFF => (3)ON => OFF the signal will stay ON at (1) ,stops (turn OFF) at (2) , and will turn ON again at (3). (This is hereafter referred to alternate operation.) (*2)
	Function selection of input signal I5	15.	0381	Х	NO	-	-	، 5.	***	***	The input functions of each input signal I5 can be selected from 80 types of functions. (*1)
	Logical conversion function of input signal I5	15L.	0382	Х	OF	-	-	،SL.	or of	ON OF	The input logic of each Input signal I5 is reversed.
	Alternating operation of input signal I5	I5A.	0383	х	OF	-	-	,SR.	8F	ON OF	If each input signal I5 performs OFF => (1)ON => OFF => (2)ON => OFF => (3)ON => OFF the signal will stay ON at (1) ,stops (turn OFF) at (2) , and will turn ON again at (3). (This is hereafter referred to alternate operation.) (*2)
	Function selection of input signal I6	16.	0384	Х	NO	-	-	<i>1</i> 5.	***	***	The input functions of each input signal I6 can be selected from 80 types of functions. (*1)
	Logical conversion function of input signal I6	I6L.	0385	Х	OF	-	-	،5L.	or or	ON OF	The input logic of each Input signal I6 is reversed.
	Alternating operation of input signal I6	I6A.	0386	х	OF	-	-	,6A.	0F	ON OF	If each input signal I6 performs OFF => (1)ON => OFF => (2)ON => OFF => (3)ON => OFF the signal will stay ON at (1) ,stops (turn OFF) at (2) , and will turn ON again at (3). (This is hereafter referred to alternate operation.) (*2)
	Function selection of input signal I7	17.	0387	Х	NO	-	-	, 7 .	***	***	The input functions of each input signal I7 can be selected from 80 types of functions. (*1)

Mo			¬ □	QQ QO	Factory			Function name	Sett	ing	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	display		Specification
me			r a <u>a</u>	lity	GMFY			Digital	uispiay		
	Chopping operation of output signal OA	OAC.	0392	х	OF	-	-	oRE.	8F	ON OF	Each output is output with full wave immediately after output starts, and then is reduced to half-wave output for each output signal OA.(Chopping control) The full wave output time can be set with the full wave time [PO] function for each output.
	Output signal OA compulsion OFF	OAT.	0393	х	OF	-	-	οRΓ.	or of	ON OF	In each output signal OA, each output is forcibly turned OFF after the time set in the OFF timer is passed. The OFF timer set time can be set with each output's forced OFF timer [OTT] function.
	Delay time of output signal OA	DA.	0394	Х	0	msec.	0 ~ 510	dR.	***	***	In each output signal OA the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.
	Function selection of output signal OB	OB.	0395	Х	W	-	-	оЬ.	***	***	The output functions of each output signal OB can be selected from 58 types of functions. (*3)
	Logical conversion function of output signal OB	OBL.	0396	Х	OF	-	-	obl.	or of	ON OF	The output logic of each output signal OB is reversed.
	Chopping operation of output signal OB	OBC.	0397	х	OF	-	-	оЬС.	8F	ON OF	Each output is output with full wave immediately after output starts, and then is reduced to half-wave output for each output signal OB. (Chopping control) The full wave output time can be set with the full wave time [PO] function for each output.
	Output signal OB compulsion OFF	ОВТ.	0398	X	OF	-	-	оЬГ.	er er	ON OF	In each output signal OB, each output is forcibly turned OFF after the time set in the OFF timer is passed. The OFF timer set time can be set with each output's forced OFF timer [OTT] function.
	OB	DB.	0399	Х	0	msec.	0 ~ 510	dЬ.	***	***	In each output signal OB the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.
C mode	Function selection of output signal OC	OC.	0400	Х	В	-	-	٥ξ.	***	***	The output functions of each output signal OC can be selected from 58 types of functions. (*3)
+	Logical conversion function of output signal OC	OCL.	0401	Х	OF	-	-	οCL.	or or	ON OF	The output logic of each output signal OC is reversed.
C +	Chopping operation of output signal OC	occ.	0402	X	OF	-	1	ο[[.	0F	ON OF	Each output is output with full wave immediately after output starts, and then is reduced to half-wave output for each output signal OC. (Chopping control) The full wave output time can be set with the full wave time [PO] function for each output.
	Output signal OC compulsion OFF	ост.	0403	X	OF	-	-	ο[Γ.	er er	ON OF	In each output signal OC, each output is forcibly turned OFF after the time set in the OFF timer is passed. The OFF timer set time can be set with each output's forced OFF timer [OTT] function.
	Delay time of output signal OC	DC.	0404	Х	0	msec.	0 ~ 510	dE.	***	***	In each output signal OC the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.
	Function selection of output signal OD	OD.	0405	Х	L	-	-	od.	***	***	The output functions of each output signal OD can be selected from 58 types of functions. (*3)
	Logical conversion function of output signal OD	ODL.	0406	Х	OF	-	1	odl.	or or	ON OF	The output logic of each output signal OD is reversed.
	Chopping operation of output signal OD	ODC.	0407	Х	OF	-	-	odE.	eç.	ON OF	Each output is output with full wave immediately after output starts, and then is reduced to half-wave output for each output signal OD. (Chopping control) The full wave output time can be set with the full wave time [PO] function for each output.


Mo			_⊐ ⊡	ဝ	Factory			Function name	Sett	ing	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital o	display		Specification
Ф				/	GMFY						
	Output signal OD compulsion OFF	ODT.	0408	Х	OF	-	-	odľ.	or of	ON OF	In each output signal OD, each output is forcibly turned OFF after the time set in the OFF timer is passed. The OFF timer set time can be set with each output's forced OFF timer [OTT] function.
	Delay time of output signal OD	DD.	0409	Х	0	msec.	0 ~ 510	ರ ರ.	***	***	In each output signal OD the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.
	Function selection of output signal OF	OF.	0410	Х	FU	-	-	oF.	***	***	The output functions of each output signal OF can be selected from 58 types of functions. (*3)
	Logical conversion function of output signal OF	OFL.	0411	Х	OF	-	-	oFL.	0 O	ON OF	The output logic of each output signal OF is reversed.
	Presser foot lifter output chopping duty	FUD.	0412	Х	MF	-	-	FUd.			The chopping output duty during holding after the presser foot lifter output FU lifting operation can be set.
									NS	MS	4ms ON/OFF 50% duty
									NF	MF	2ms ON/OFF 50% duty
									Н.	HI	4ms ON, 2ms OFF, 66% duty
									FL	FL	100% (full wave)
С									Lo	LO	2ms ON, 4ms OFF 33% duty
mode	Presser foot lifter FU full wave output time	FO.	0413	Х	50	X10	-	Fo.			The full wave output time of the presser foot lifter output FU can be set.
1						msec			50	20	200ms
+									<u>. 45</u>	25	250ms
C +									<u> </u>	30	300ms
									<u> 40</u>	40	400ms
									50	50	500ms
									50	60	600ms
									80 100	80	800ms
									[100 T	100	1000ms
	Presser foot lifter FU momentary mode	FU.	0414	Х	М	-	-	FU.			The operation mode of presser foot lifter momentary FUM is set. This is valid when presser foot lifter momentary FUM is set to [ON] in the P mode.
									U	М	The presser foot lifter operation is continued after full heeling or after thread trimmer with external thread trimmer signal S2.
									ε	С	The presser foot lifter operation is continued during the timer time after full heeling or after thread trimming with external thread trimmer signal S2. Then the presser foot lifter is lowered.
									R	Α	The timer can be adjusted with timer setting FCT in the P mode. The presser foot lifting operation is activated with full heeling, light heeling, or the external control signal (S2, F) ON. Then, when the full heeling, light heeling or external control signal (S2, F) is turned ON, the presser foot will bring down, and when turned ON again, the presser foot will lift. (Alternate operation.)

Mo			_⊐ ⊡	ဝွ	Factory			Function name	Sett	ting	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	dienlay		Specification
me			al al	lity	GMFY			Digital	uispiay		
									Γ	Т	The timer operates in the same manner as the [C] setting. However, after the presser foot bring down, the same alternate operation as the [A] setting will occur.
	Delay time of output signal OF	DF.	0415	Х	0	msec.	0 ~ 510	dF.	***	***	In each output signal OF the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.
	Function selection of output signal O1	01.	0416	Х	OT1	-	-	o l	***	***	The output functions of each output signal O1 can be selected from 58 types of functions. (*3)
	Logical conversion function of output signal O1	01L.	0417	Х	OF	-	-	o IL.	oF oF	ON OF	The output logic of each output signal O1 is reversed.
	Chopping operation of output signal O1	01C.	0418	х	OF	-	-	o IC.	8F	ON OF	Each output is output with full wave immediately after output starts, and then is reduced to half-wave output for each output signal O1. (Chopping control) The full wave output time can be set with the full wave time [PO] function for each output.
	Output signal O1 compulsion OFF	O1T.	0419	Х	OF	-	-	o 1F.	or or	ON OF	In each output signal O1, each output is forcibly turned OFF after the time set in the OFF timer is passed. The OFF timer set time can be set with each output's forced OFF timer [OTT] function.
	Delay time of output signal O1	D1.	0420	Х	0	msec.	$0\sim510$	d !.	***	***	In each output signal O1 the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.
	Function selection of output signal O2	O2.	0421	Х	NCL	-	-	o 2.	***	***	The output functions of each output signal O2 can be selected from 58 types of functions. (*3)
C mode	Logical conversion function of output signal O2	O2L.	0422	Х	OF	-	-	o2L.	8F	ON OF	The output logic of each output signal O2 is reversed.
+ C *	Chopping operation of output signal O2	O2C.	0423	x	OF	,	-	o2C.	er er	ON OF	Each output is output with full wave immediately after output starts, and then is reduced to half-wave output for each output signal O2. (Chopping control) The full wave output time can be set with the full wave time [PO] function for each output.
	Output signal O2 compulsion OFF	О2Т.	0424	Х	OF	1	1	٥2٢.	or or	ON OF	In each output signal O2, each output is forcibly turned OFF after the time set in the OFF timer is passed. The OFF timer set time can be set with each output's forced OFF timer [OTT] function.
	Delay time of output signal O2	D2.	0425	Х	0	msec.	$0\sim 510$	d2.	***	***	In each output signal O2 the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.
	Function selection of output signal O3	О3.	0426	Х	TF	1	ı	o 3.	***	***	The output functions of each output signal O3 can be selected from 58 types of functions. (*3)
	Logical conversion function of output signal O3	O3L.	0427	Х	OF	-	-	o 3L.	or of	ON OF	The output logic of each output signal O3 is reversed.
	Chopping operation of output signal O3	O3C.	0428	Х	OF	1	-	o 3C.	8F	ON OF	Each output is output with full wave immediately after output starts, and then is reduced to half-wave output for each output signal O3. (Chopping control) The full wave output time can be set with the full wave time [PO] function for each output.
	Output signal O3 compulsion OFF	О3Т.	0429	Х	OF	-	-	o 3F.	SF	ON OF	In each output signal O3, each output is forcibly turned OFF after the time set in the OFF timer is passed. The OFF timer set time can be set with each output's forced OFF timer [OTT] function.
	Delay time of output signal O3	D3.	0430	Х	0	msec.	$0\sim 510$	d3.	***	***	In each output signal O3 the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.

Mo			_a D	ဝွ	Factory			Function name	Set	ting	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	display		Specification
ĕ			_	У	GMFY						
	Function selection of output signal O4	04.	0431	Х	UPW	-	-	o 4.	***	***	The output functions of each output signal O4 can be selected from 58 types of functions. (*3)
	Logical conversion function of output signal O4	04L.	0432	Х	OF	-	-	o4L.	or of	ON OF	The output logic of each output signal O4 is reversed.
	Output signal O4 compulsion OFF	O4T.	0433	Х	OF	-	-	٥4Γ.	o.c.	ON OF	In each output signal O4, each output is forcibly turned OFF after the time set in the OFF timer is passed. The OFF timer set time can be set with each output's forced OFF timer [OTT] function.
	Delay time of output signal O4	D4.	0434	Х	0	msec.	0 ~ 510	84.	***	***	In each output signal O4 the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.
	Function selection of output signal O5	O5.	0435	Х	DNW	-	-	o S.	***	***	The output functions of each output signal O5 can be selected from 58 types of functions. (*3)
	Logical conversion function of output signal O5	O5L.	0436	Х	OF	-	-	o5L.	or or	ON OF	The output logic of each output signal O5 is reversed.
	Output signal O5 compulsion OFF	O5T.	0437	Х	OF	-	-	٥5٢.	or or	ON OF	In each output signal O5, each output is forcibly turned OFF after the time set in the OFF timer is passed. The OFF timer set time can be set with each output's forced OFF timer [OTT] function.
	Delay time of output signal O5	D5.	0438	Х	0	msec.	0 ~ 510	d5.	***	***	In each output signal O5 the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.
C	Function selection of output signal O6	O6.	0439	Х	NO	-	-	o 6.	***	***	The output functions of each output signal O6 can be selected from 58 types of functions. (*3)
mode	Logical conversion function of output signal O6	O6L.	0440	Х	OF	-	-	o6L.	0.F	ON OF	The output logic of each output signal O6 is reversed.
+ (0.1)	Chopping operation of output signal O6	O6C.	0441	Х	OF	-	-	οδC.	8F	ON OF	Each output is output with full wave immediately after output starts, and then is reduced to half-wave output for each output signal O6. (Chopping control) The full wave output time can be set with the full wave time [PO] function for each output.
	Output signal O6 compulsion OFF	O6T.	0442	x	OF	-	-	οБΓ.	or or	ON OF	In each output signal O6, each output is forcibly turned OFF after the time set in the OFF timer is passed. The OFF timer set time can be set with each output's forced OFF timer [OTT] function.
	Delay time of output signal O6	D6.	0443	Х	0	msec.	0 ~ 510	d5.	***	***	In each output signal O6 the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.
	Function selection of output signal O7	07.	0444	Х	NO	-	-	o 7.	***	***	The output functions of each output signal O7 can be selected from 58 types of functions. (*3)
	Logical conversion function of output signal O7	07L.	0445	Х	OF	-	-	o7L.	0.F	ON OF	The output logic of each output signal O7 is reversed.
	Chopping operation of output signal O7	07C.	0446	Х	OF	-	-	o 7€.	8F	ON OF	Each output is output with full wave immediately after output starts, and then is reduced to half-wave output for each output signal O7. (Chopping control) The full wave output time can be set with the full wave time [PO] function for each output.
	Output signal O7 compulsion OFF	07Т.	0447	Х	OF	-	-	oηΓ.	or C	ON OF	In each output signal O7, each output is forcibly turned OFF after the time set in the OFF timer is passed. The OFF timer set time can be set with each output's forced OFF timer [OTT] function.
	Delay time of output signal O7	D7.	0448	Х	0	msec.	0 ~ 510	47.	***	***	In each output signal O7 the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.

Mode			- Di	g g	Factory			Function name	Set	tting	
de name	Function name		Direct call number	Operability	setting	Unit	Setting range		display		Specification
ne			_ =	₹	GMFY			J	. ,		
	Function selection of output signal OM	OM.	0449	Х	NO	-	-	οП.	***	***	The output functions of each output signal OM can be selected from 58 types of functions. (*3)
	Logical conversion function of output signal OM	OML.	0450	Х	OF	-	-	oNL.	8P	ON OF	The output logic of each output signal OM is reversed.
	Output signal OM compulsion OFF	ОМТ.	0451	Х	OF	-	-	οПΓ.	or of	ON OF	In each output signal OM, each output is forcibly turned OFF after the time set in the OFF timer is passed. The OFF timer set time can be set with each output's forced OFF timer [OTT] function.
	Delay time of output signal OM	DM.	0452	Х	0	msec.	0 ~ 510	dП.	***	***	In each output signal OM the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.
	Function selection of output signal ON	ON.	0453	Х	NO	-	-	on.	***	***	The output functions of each output signal ON can be selected from 58 types of functions. (*3)
	Logical conversion function of output signal ON	ONL.	0454	Х	OF	-	-	onL.	op F	ON OF	The output logic of each output signal ON is reversed.
	Output signal ON compulsion OFF	ONT.	0455	Х	OF	-	-	onf.	er er	ON OF	In each output signal ON, each output is forcibly turned OFF after the time set in the OFF timer is passed. The OFF timer set time can be set with each output's forced OFF timer [OTT] function.
С	Delay time of output signal ON	DN.	0456	Х	0	msec.	0 ~ 510	dn.	***	***	In each output signal ON the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.
mode	Function selection of output signal OO	00.	0457	Х	NO	-	-	00.	***	***	The output functions of each output signal OO can be selected from 58 types of functions. (*3)
+	Logical conversion function of output signal OO	OOL.	0458	Х	OF	-	-	ool.	or oF	ON OF	The output logic of each output signal OO is reversed.
C +	Output signal OO compulsion OFF	оот.	0459	x	OF	-	-	٥٥٢.	or oF	ON OF	In each output signal OO, each output is forcibly turned OFF after the time set in the OFF timer is passed. The OFF timer set time can be set with each output's forced OFF timer [OTT] function.
	Delay time of output signal OO	DO.	0460	Х	0	msec.	0 ~ 510	do.	***	***	In each output signal OO the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.
	Function selection of output signal OP	OP.	0461	Х	NO	-	-	οР.	***	***	The output functions of each output signal OP can be selected from 58 types of functions. (*3)
	Logical conversion function of output signal OP	OPL.	0462	Х	OF	-	-	oPL.	on oF	ON OF	The output logic of each output signal OP is reversed.
	Output signal OP compulsion OFF	ОРТ.	0463	х	OF	-	-	oPF.	er er	ON OF	In each output signal OP, each output is forcibly turned OFF after the time set in the OFF timer is passed. The OFF timer set time can be set with each output's forced OFF timer [OTT] function.
	Delay time of output signal OP	DP.	0464	Х	0	msec.	0 ~ 510	dP.	***	***	In each output signal OP the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.
	Function selection of output signal OQ	OQ.	0465	Х	NO	-	-	09.	***	***	In each output signal OP the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals. (*3)
	Logical conversion function of output signal OQ	OQL.	0466	Х	OF	-	-	09L.	op oF	ON OF	The output logic of each output signal OQ is reversed.
	Output signal OQ compulsion OFF	OQT.	0467	Х	OF	-	-	٥٩٢.	or of	ON OF	In each output signal OQ, each output is forcibly turned OFF after the time set in the OFF timer is passed. The OFF timer set time can be set with each output's forced OFF timer [OTT] function.

Mo			_ D	Q	Factory			Function name	Sett	ing	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	display		Specification
me			l all	ity	GMFY			Digital	alopiay		
	Delay time of output signal OQ	DQ.	0468	Х	0	msec.	0 ~ 510	d9.	***	***	In each output signal OQ the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.
	Function selection of output signal OR	O.R.	0469	Х	NO	-	-	o.c.	***	***	The output functions of each output signal OR can be selected from 58 types of functions. (*3)
	Logical conversion function of output signal OR	O.RL.	0470	Х	OF	-	-	ort.	or of	ON OF	The output logic of each output signal OR is reversed.
	Output signal OR compulsion OFF	O.RT.	0471	Х	OF	-	-	o.r.F.	o.c.	ON OF	In each output signal OR, each output is forcibly turned OFF after the time set in the OFF timer is passed. The OFF timer set time can be set with each output's forced OFF timer [OTT] function.
	Delay time of output signal OR	DR.	0472	Х	0	msec.	0 ~ 510	dr.	***	***	In each output signal OR the delay time to when each output is started can be set. Each delay time can be set in 2msec intervals.
	Full wave output time for each output	PO.	0473	0	50	X10	-	Po.			The full wave output time of each output signal OA~OD, O1~O7 can be set.
						msec			20	20	Set to [20] : 200ms
C mode									25	25	Set to [25] : 250ms
1									30	30	Set to [30] : 300ms
+									40	40	Set to [40] : 400ms
C +									50	50	Set to [50] : 500ms
									60	60	Set to [60] : 600ms
									80	80	Set to [80] : 800ms
									100	100	Set to [100] : 1000ms
	Output chopping duty except of FU output	POD.	0474	0	MF	-	-	Pod.			Setting output chopping duty, except FU output
									NS	MS	Set to [MS] : 2ms ON/OFF 50% duty
									ΠF	MF	Set to [MF] : 4ms ON/OFF 50% duty
									Н.	HI	Set to [HI] : 4ms ON, 2ms OFF, 66% duty
									Lo	LO	Set to [LO]: 2ms ON, 4ms OFF 33% duty
	Forced OFF timer setting function for each output	OTT.	0475	0	12	sec	1 ~ 24	oΓΓ.	**	**	The timer that forcibly turns off output signals OA to OD, O1 to O7 and OM to OR can be set.
	FUM operation mode timer setting function	FCT.	0476	0	12	sec	1 ~ 99	FET.	**	**	The timer from the time when the presser foot lifter output is turned ON to the time when it is turned OFF. (When FUM operation mode FU [C] or [T] is set can be set.)

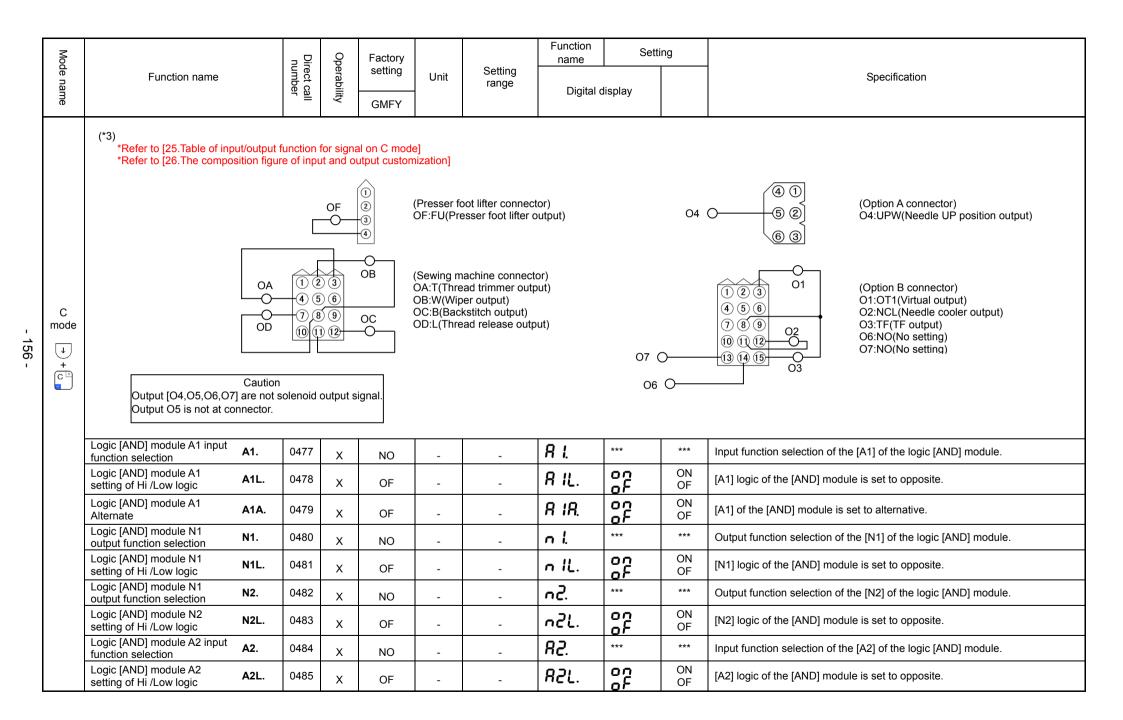

Mo			¬ D:	Q	Factory			Function name	Sett	ing	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital o	display		Specification
me			ີ ≝	ity	GMFY			2.9			
	Logic [AND] module A2 Alternate	A2A.	0486	Х	OF	-	-	A58.	op of	ON OF	[A2] of the [AND] module is set to alternative.
	Logic [AND] module N3 output function selection	N3.	0487	Х	NO	-	-	n 3.	***	***	Output function selection of the [N3] of the logic [AND] module.
	Logic [AND] module N3 setting of Hi /Low logic	N3L.	0488	Х	OF	-	-	n3L.	on oF	ON OF	[N3] logic of the [AND] module is set to opposite.
	Logic [AND] module N4 output function selection	N4.	0489	Х	NO	-	-	n 4.	***	***	Output function selection of the [N4] of the logic [AND] module.
	Logic [AND] module N4 setting of Hi /Low logic	N4L.	0490	Х	OF	-	-	n4Ľ.	or of	ON OF	[N4] logic of the [AND] module is set to opposite.
	Logic [AND] module A3 input function selection	A3.	0491	Х	NO	-	-	A 3.	***	***	Input function selection of the [A3] of the logic [AND] module.
	Logic [AND] module A3 setting of Hi /Low logic	A3L.	0492	Х	OF	-	-	R3L.	on of	ON OF	[A3] logic of the [AND] module is set to opposite.
С	Logic [AND] module A3 Alternate	A3A.	0493	Х	OF	-	-	R3R.	on oF	ON OF	[A3] of the [AND] module is set to alternative.
mode	Logic [AND] module N5 output function selection	N5.	0494	Х	NO	-	-	n 5.	***	***	Output function selection of the [N5] of the logic [AND] module.
+	Logic [AND] module N5 setting of Hi /Low logic	N5L.	0495	Х	OF	-	-	n5L.	on oF	ON OF	[N5] logic of the [AND] module is set to opposite.
C	Logic [AND] module N6 output function selection	N6.	0496	Х	NO	-	-	n 6 .	***	***	Output function selection of the [N6] of the logic [AND] module.
	Logic [AND] module N6 setting of Hi /Low logic	N6L.	0497	Х	OF	-	-	nBL.	on oF	ON OF	[N6] logic of the [AND] module is set to opposite.
	Logic [OR] module input function selection	OR.	0498	х	NO	-	-	or.	***	***	Input function selection of the [OR] of the logic [OR] module.
	Logic [OR] module setting of Hi /Low logic	ORL.	0499	Х	OF	-	-	orl.	on oF	ON OF	[OR] logic of the [OR] module is set to opposite.
	Logic [OR] module Alternate	ORA.	0500	Х	OF	-	-	orR.	on oF	ON OF	[OR] of the [OR] module is set to alternative.
	Logic [OR] module R1 output function selection	R1.	0501	Х	NO	-	-	r 1.	***	***	Output function selection of the [R1] of the logic [OR] module.
	Logic [OR] module R1 setting of Hi /Low logic	R1L.	0502	Х	OF	-	-	r IL.	or of	ON OF	[R1] logic of the [AND] module is set to opposite.
	Logic [OR] module R2 output function selection	R2.	0503	Х	NO	-	-	r 2.	***	***	Output function selection of the [R2] of the logic [OR] module.
	Logic [OR] module R2 setting of Hi /Low logic	R2L.	0504	Х	OF	-	-	r2L.	or of	ON OF	[R2] logic of the [AND] module is set to opposite.
	Variable speed command for digital input	CSP.	0505	Х	OF	-	-	£5P.	or oF	ON OF	Set variable speed command for digital input. (IOC, IOD, IOE, IOF) High speed is set to [H] on program mode "P". (CSP=ON, CSG=OFF)

Mode			n Di	Op	Factory			Function name	Set	ting	
de name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital o	display		Specification
ਜ ਜ			=	ÿ	GMFY						
	Thread release + backstitch output	LB.	0507	0	OF	-	-	L b.	on of	ON OF	Backstitch output B will turn ON even while thread release output L is ON.
	Virtual output OT1 forced OFF function	T1C.	0508	0	OF	-	-	Γ IE.	8F	ON OF	Virtual outputs OT1 will be turned OFF forcibly after the OFF timer set time has passed. The OFF timer set time can be set with the virtual output OFF timer setting function [T1T].
	Forced OFF timer setting function for virtual output OT1	T1T.	0509	0	99	X10 msec	0 ~ 99	Г ІГ.	**	**	The timer time for forcibly turning OFF virtual outputs OT1 can be set.
	Virtual output OT2 forced OFF function	T2C.	0510	0	OF	-	-	rec.	8F	ON OF	Virtual outputs OT2 will be turned OFF forcibly after the OFF timer set time has passed. The OFF timer set time can be set with the virtual output OFF timer setting function [T2T].
	Forced OFF timer setting function for virtual output OT2	T2T.	0511	0	99	X10 msec	0 ~ 99	r2r.	**	**	The timer time for forcibly turning OFF virtual outputs OT2 can be set.
	Virtual output OT3 forced OFF function	T3C.	0512	0	OF	-	-	Г 3С.	8F	ON OF	Virtual outputs OT3 will be turned OFF forcibly after the OFF timer set time has passed. The OFF timer set time can be set with the virtual output OFF timer setting function [T3T].
	Forced OFF timer setting function for virtual output OT3	Т3Т.	0513	0	99	X10 msec	0 ~ 99	гзг.	**	**	The timer time for forcibly turning OFF virtual outputs OT3 can be set.
C mode	ON delay time setting function for virtual output OT1	D11.	0514	х	0	X10 msec	0 ~ 99	d .	**	**	The delay time (ON delay) to when the virtual output OT1 is started can be set.
+	OFF delay time setting function for virtual output OT1	D12.	0515	х	0	X10 msec	0 ~ 99	d 12.	**	**	The delay time (OFF delay) to when the virtual output OT1 is OFF can be set.
C+	ON delay time setting function for virtual output OT2	D21.	0516	х	0	X10 msec	0 ~ 99	95 ľ	**	**	The delay time (ON delay) to when the virtual output OT2 is started can be set.
	OFF delay time setting function for virtual output OT2	D22.	0517	х	0	X10 msec	0 ~ 99	955.	**	**	The delay time (OFF delay) to when the virtual output OT2 is OFF can be set.
	ON delay time setting function for virtual output OT3	D31.	0518	х	0	X10 msec	0 ~ 99	d3 l.	**	**	The delay time (ON delay) to when the virtual output OT3 is started can be set.
	OFF delay time setting function for virtual output OT3	D32.	0519	х	0	X10 msec	0 ~ 99	432.	**	**	The delay time (OFF delay) to when the virtual output OT3 is OFF can be set.
	Feed pulse output (CP) cancel function	СРК.	0520	0	ON	-		EPŁ.	or of	ON OF	Feed pulse [CP] is invalid. When feed pulse will be used, set this function to "OF". This signal output is from the same pin of "O6".
	Setting CP pulse amount	CP.	0521	0	32	-	1 ~ 99	EP.	**	**	Setting the number of pulse [CP]. After changing this number, turns on power switch again.

Mode			n Di	Ор	Factory			Function name	Sett	ing	
de name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	diaplay		Specification
me			all sr	lity	GMFY			Digital	uispiay		
	Prohibited angle of output CP pulse	CPC.	0522	0	OF	-	-	CPC.	or of	ON OF	The prohibited angle section of pulse generated can be set from UP position. The start prohibited angle can be set with [TS] (G mode). The end prohibited angle can be set with [TE] (G mode).
	Panel switch operation prohibit	PSW.	0523	0	OF	-	-	PSB.	o c CF	ON OF	Panel switch operation ([M], [A,1-2], [B,SL], [C,<==], [D,==>] key operations) during the normal mode, tacking mode and pattern mode will not be possible. However, changeover into each mode will be possible.
	O4, O5 output cancel during back tack term	СКВ.	0524	0	OF	-	-	£ 6.	or of	ON OF	Output signal O4 and O5 are prohibited during back tack term.
	CP output cancel during back tack term	СРВ.	0525	0	OF	-	-	[РЬ.	or of	ON OF	Output signal "CP" is prohibited during back tack term.
	Speed setting for the [SPC] output	C.	0526	Х	1000	rpm	0 ~ 8999	€.	***	****	SPC output is turned ON when reached setting speed [C].
	Speed setting for the [SPD] output	D.	0527	Х	2000	rpm	0 ~ 8999	d.	****	****	SPD output is turned ON when reached setting speed [D].
С	Speed setting for the [SPE] output	E.	0528	Х	3000	rpm	0 ~ 8999	€.	***	****	SPE output is turned ON when reached setting speed [E].
mode	F key function on control	CNF.	0529	0	SE	-	-	EnF.			Selection F key function
↓	panel								UР	<mark>UP</mark>	Display Up counter amount
C +									dn	DN	Display Down counter amount
									58	SE	Display stitch amount of sensor
									SP	SP	Display routine speed of sewing machine
	Variable speed pedal changeover	PDS.	0530	0	OF	-	-	P&5.	on of	ON OF	When the changeable velocity pedal etc, are uesd by the standing sewing machine making, it sets it.
	Speed insrtuction VC2 cancellation	V2C.	0531	Х	OF	-	-	υ2C.	0.F	ON OF	Speed instruction VC2 is canceled.

<u>1</u>61

Mo	Node Function name		n Di	Q Q	Factory			Function name	Set	ting	
de na	Function name		Direct cal number	Operability	setting	Unit	Setting range				Specification
ame			call	ility	GMFY			Digital	display		
	Set table types of tacking	втм.	0613	0	6	-	1 ~ 7	PLU.			Determine the type of tacking that can be set with the front and end tacking type ([B], [D] keys) in the tacking setting mode with setting values 1 to 7.
									1	1	Once tacking (V tacking)
									5	2	Double tacking (N tacking)
									3	3	Triple tacking (M tacking)
									ч	4	4 repeat tacking (W tacking)
									5	5	5 repeat tacking
									8	6	6 repeat tacking
									7	7	7 repeat tacking
	Input signal S7 operation mode during preset stitching	S7M.	0614	0	OF	-	-	570.	or of	ON OF	If the backstitch related inputs are turned ON during preset stitching, the backstitch solenoid will turn ON.
	Manual backstitch ON timing	S7U.	0615	0	OF	-	-	57U.	or or	ON OF	The backstitch solenoid drive timing by the backstitch signal S7 is synchronized with the UP position. (When this function setting is [OF] setting, it will be synchronized with the random position.)
D	Manual backstitch ON timing 2	S7D.	0616	0	OF	-	-	578.	or or	ON OF	The backstitch solenoid drive timing by the backstitch signal S7 is synchronized with the DOWN position. (When this function setting is [OF] setting, it will be synchronized with the random position.)
mode	The OFF timing setting of output B when the backstitching signal (S7) is OFF setting.	7BD.	0617	0	OF	-	-	76d.	8F	ON OF	When the manual backstitching signal (S7) is OFF setting, the OFF timing of the backstitching output B will be synchronized with the UP position. (When this function setting is [OF] setting, it will be synchronized with the DOWN position.)
D +	The maximum tacking stitches (maximum stitches is 99 stitches)	BTN.	0618	0	OF	-	-	bľn.			The maximum tacking stitches can be set.
	oo onoreoy								on	ON	The No. of maximum tacking stitches will be 99 stitches. The No. of start and end tacking stitches will be the same stitches, the No. of start and end tacking stitches A and D can be set by the 2 figures of [A] and [B] of the operation panel, and the No. of start and end tacking stitches B and C can be set by the 2 figures of [C] and [D] of the operation panel.
									oF	OF	The No. of maximum tacking stitches is 15 stitches.
	No. of end tacking stitches during direct heeling	BCC.	0619	0	OF	-	-	Ь С €.	or or	ON OF	The No. of end tacking stitches with direct heeling will be the No. of stitches C + 1 stitch when operation mode D1 is set to [D][M] during tacking.
	Operation mode during thread trimmer cancel signal [TL] setting	TLS.	0620	0	OF	-	-	ΓL 5.	or or	ON OF	The operation mode for when the thread trimmer cancel signal (TL) is input will be set.
	Input signal BTL quick pressing operation	втѕ.	0621	0	ON	-	-	bf 5.	or or	ON OF	The tacking cancel signal [BTL] operation is set. [ON] The tacking operation is prohibited once after one pushing (OFF-ON-OFF) of the tacking cancel signal [BTL]. [OF] Tacking is prohibited while the tacking cancel signal [BTL] is ON.

Mode			n Dir	Q Q	Factory			Function name	Setti	ing	
de name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital o	display		Specification
ne			_ =	ty	GMFY			J	. ,		
	Input signal SB and EB quick pressing operation	BS.	0622	0	OF	-	-	65 .	SF	ON OF	The start and end tacking cancel signals SE and EB operations are set. [ON] The start tacking operation is prohibited once after one pushing (OFF-ON-OFF) of the start tacking signal SE. (Same for end tacking cancel signal EB.) [OF] The start tacking operation is prohibited while the start tacking cancel signal SE is ON. (Same for end tacking cancel signal EB.)
	Operation when input signal BTL is ON	BTD.	0623	0	OF	1	-	ьг <i>а</i> .	or of	ON OF	When the tacking is set to OFF, if tacking cancel signal (BTL) turns ON, the tacking will be permitted. (When this function is set to OFF, the tacking will be prohibited.)
	Operation when input signal SB and EB tacking OFF are set	BD.	0624	0	OF	1	-	Ьd.	or CF	ON OF	If the start tacking validity ([A] key) is set to OFF (-) in the tacking setting mode, start tacking can be validated by turning the start tacking cancel signal SE ON. (Same for end tacking cancel signal EB.)
D mode	End tacking cancel mode with input signal PSU	PNE.	0625	0	OF	-	-	PnE.	8F	ON OF	When end tacking is set, if the needle UP position priority stop signal PSU turns ON during operation, the end tacking will not be executed after stopping at the needle UP position. After thread trimming, the presser foot will lift.
+ D +	The buzzer of control panel validity	BZ.	0626	0	ON	-	-	b <u>Ξ</u> .	or of	ON OF	The buzzer of control panel will be validated.

Mo			n Di	ဝ	Factory			Function name	Setti	ng	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital o	displav		Specification
ne			· =	ty	GMFY			J **	_		
	Error code (The last error code)	1.	0700	0	E	-	-	1.	E	E	The last error code is displayed.
	Error code (The second to last code)	2.	0701	0	E	-	-	2.	E	E	The second to last code is displayed.
	Error code (The third to last code)	3.	0702	0	E	-	-	3.	E	E	The third to last code is displayed.
	Error code (The fourth to last code)	4.	0703	0	E	-	-	Ч.	E	E	The fourth to last code is displayed.
	Total integration time of power on	P.	0704	0	0	X10 hours	0~9999	Р.	****	****	Display total integration time of power on
	Total integration time of motor run	M.	0705	0	0	X10 hours	0~9999	Π.	****	****	Display total integration time of motor run
E	Input signal IA display	IA.	0706	0	-	-	-	ıR.	or or	ON OF	The input status (ON/OFF) of the input signal IA.
mode	Input signal IB display	IB.	0707	0	-	-	-	ιЪ.	on of	ON OF	The input status (ON/OFF) of the input signal IB.
+ + A + -	Input signal IC display	IC.	0708	0	-	-	-	ıE.	or of	ON OF	The input status (ON/OFF) of the input signal IC.
+	Input signal ID display	ID.	0709	0	-	-	-	ıd.	on of	ON OF	The input status (ON/OFF) of the input signal ID.
1-2	Input signal IE display	IE.	0710	0	-	-	-	ıE.	or of	ON OF	The input status (ON/OFF) of the input signal IE.
	Input signal IF display	IF.	0711	0	-	-	-	ıF.	on of	ON OF	The input status (ON/OFF) of the input signal IF.
	Input signal IG display	IG.	0712	0	-	-	-	, Б.	on oF	ON OF	The input status (ON/OFF) of the input signal IG.
	Input signal IH display	IH.	0713	0	-	-	-	ıH.	on of	ON OF	The input status (ON/OFF) of the input signal IH.
	Input signal II display	II.	0714	0	-	-	-	1 1.	on oF	ON OF	The input status (ON/OFF) of the input signal II.
	Input signal IJ display	IJ.	0715	0	-	-	-	ı U.	on oF	ON OF	The input status (ON/OFF) of the input signal IJ.
	Input signal IK display	IK.	0716	0	-	-	-	ıŁ.	on oF	ON OF	The input status (ON/OFF) of the input signal IK
	Input signal IL display	IL.	0717	0	-	-	-	ıL.	on of	ON OF	The input status (ON/OFF) of the input signal IL.
	Input signal IP display	IP.	0718	0	-	-	-	ıP.	on oF	ON OF	The input status (ON/OFF) of the input signal IP.

Mo			_n ⊒	Q Q	Factory			Function name	Sett	ing	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range		dienlay		Specification
me			r all	lity	GMFY			Digital o	льріау		
	Input signal IQ display	IQ.	0719	0	-	-	-	,9.	or of	ON OF	The input status (ON/OFF) of the input signal IQ.
	Input signal IR display	IR.	0720	0	-	-	-	ır.	or of	ON OF	The input status (ON/OFF) of the input signal IR.
	Input signal I1 display	I1.	0721	0	-	-	-	, <u>l</u> .	0 O F	ON OF	The input status (ON/OFF) of the input signal I1.
	Input signal I2 display	12.	0722	0	-	-	-	, 2 .	on of	ON OF	The input status (ON/OFF) of the input signal I2.
	Input signal I4 display	14.	0723	0	-	-	-	, 4.	on of	ON OF	The input status (ON/OFF) of the input signal I4.
E	Input signal I5 display	15.	0724	0	-	-	-	, 5.	on of	ON OF	The input status (ON/OFF) of the input signal 15
mode	Encoder signal display (A phase)	ECA.	0725	0	-	-	-	ECR.	or of	ON OF	The input status (ON/OFF) of the motor encoder A phase is displayed.
+	Encoder signal display (B phase)	ECB.	0726	0	-	-	-	ЕСЬ.	or of	ON OF	The input status (ON/OFF) of the motor encoder B phase is displayed.
† 	Detector signal display (UP signal)	UP.	0731	0	-	-	-	UP.	or of	ON OF	The input status (ON/OFF) of the detector UP signal is displayed.
1-2	Detector signal display (DN signal)	DN.	0732	0	-	-	-	dn.	or of	ON OF	The input status (ON/OFF) of the detector DN signal is displayed.
	Display the angle from down position	DR.	0733	0	-	X2 degree	0 ~ 180	dr.	***	***	Display the angle of current position from down position.
	Display the voltage of VC	VC.	0734	0	-	-	$0\sim 3FF$	υ٤.	***	***	The numerical value that is equivalent to the variable speed voltage VC with the option B connector is displayed. Display range: 000 ~ 3FF
	Display the voltage of VC2	V2.	0736	0	-	-	0 \sim 3FF	υ <i>2</i> .	***	***	The numerical value that is equivalent to the variable speed voltage VC2 with the option B connector is displayed. Display range: 000 ~ 3FF
	Output signal OA display	OAD.	0737	0	-	-	-	oRd.	or of	ON OF	The output status (ON/OFF) of the output signal OA.
	Output signal OB display	OBD.	0738	0				obd.	or of	ON OF	The output status (ON/OFF) of the output signal OB.
	Output signal OC display	OCD.	0739	0				oΣd.	on oF	ON OF	The output status (ON/OFF) of the output signal OC.
	Output signal OD display	ODD.	0740	0				೦ರರ.	on oF	ON OF	The output status (ON/OFF) of the output signal OD.
	Output signal OF display	OFD.	0741	0				oFd.	on of	ON OF	The output status (ON/OFF) of the output signal OF.
	Output signal O1 display	O1D.	0742	0				o ld.	or of	ON OF	The output status (ON/OFF) of the output signal O1.

Mod			n Dir	Q	Factory			Function name	Set	ting	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	display		Specification
me			7 월	ity	GMFY			Digital	uispiay		
	Output signal O2 display	O2D.	0743	0				o2d.	or of	ON OF	The output status (ON/OFF) of the output signal O2.
	Output signal O3 display	O3D.	0744	0				o 3d.	or or	ON OF	The output status (ON/OFF) of the output signal O3.
	Output signal O4 display	O4D.	0745	0				o4d.	or or	ON OF	The output status (ON/OFF) of the output signal O4.
	Output signal O5 display	O5D.	0746	0				o 5 d.	or or	ON OF	The output status (ON/OFF) of the output signal O5.
	Output signal O6 display	O6D.	0747	0				06d.	or of	ON OF	The output status (ON/OFF) of the output signal O6.
	Output signal O7 display	O7D.	0748	0				o 7 d.	or of	ON OF	The output status (ON/OFF) of the output signal O7.
	Output signal OP display	OPD.	0749	0				oPd.	or of	ON OF	The output status (ON/OFF) of the output signal OP.
	Output signal OQ display	OQD.	0750	0				o 9 d.	or of	ON OF	The output status (ON/OFF) of the output signal OQ.
E mode	Output signal OR display	ORD.	0751	0				ord.	or of	ON OF	The output status (ON/OFF) of the output signal OR.
+	Solenoid output of output signal OA	OAO.	0752	Х	-	-	-	oRo.	or of	ON OF	The output status (ON/OFF) of the solenoid output OA with the [D, ==>] key ON/OFF is changed. Do not turn the O4 to O7 outputs ON/OFF with the [D, ==>] key.
+ A + A -	Solenoid output of output signal OB	ОВО.	0753	Х	-			obo.	or or	ON OF	The output status (ON/OFF) of the solenoid output OB with the [D, ==>] key ON/OFF is changed. Do not turn the O4 to O7 outputs ON/OFF with the [D, ==>] key.
	Solenoid output of output signal OC	OCO.	0754	Х	-			ο ζ ο.	or or	ON OF	The output status (ON/OFF) of the solenoid output OC with the [D, ==>] key ON/OFF is changed. Do not turn the O4 to O7 outputs ON/OFF with the [D, ==>] key.
	Solenoid output of output signal OD	ODO.	0755	Х	-			odo.	er er	ON OF	The output status (ON/OFF) of the solenoid output OD with the [D, ==>] key ON/OFF is changed. Do not turn the O4 to O7 outputs ON/OFF with the [D, ==>] key.
	Solenoid output of output signal OF	OFO.	0756	Х	-			oFo.	or or	ON OF	The output status (ON/OFF) of the solenoid output OF with the [D, ==>] key ON/OFF is changed. Do not turn the O4 to O7 outputs ON/OFF with the [D, ==>] key.
	Solenoid output of output signal O1	010.	0757	Х	-			o lo.	of of	ON OF	The output status (ON/OFF) of the solenoid output O1 with the [D, ==>] key ON/OFF is changed. Do not turn the O4 to O7 outputs ON/OFF with the [D, ==>] key.
	Solenoid output of output signal O2	020.	0758	Х	-			020.	or or	ON OF	The output status (ON/OFF) of the solenoid output O2 with the [D, ==>] key ON/OFF is changed. Do not turn the O4 to O7 outputs ON/OFF with the [D, ==>] key.
	Solenoid output of output signal O3	030.	0759	Х	-			o 3o.	or or	ON OF	The output status (ON/OFF) of the solenoid output O3 with the [D, ==>] key ON/OFF is changed. Do not turn the O4 to O7 outputs ON/OFF with the [D, ==>] key.

Mode			, D	<u>o</u>	Factory			Function name	Sett	ing	
ide na	Function name		Direct call number	Operability	setting	Unit	Setting range				Specification
name			er all	ility	GMFY			Digital	display		
	Output for small signal of output signal O4	040.	0760	X	-			o4o.	or of	ON OF	The output status (ON/OFF) of the solenoid output O4 with the [D, ==>] key ON/OFF is changed. Do not turn the O4 to O7 outputs ON/OFF with the [D, ==>] key.
	Solenoid output of output signal O5	O5O.	0761	Х	-			o 5 o.	or of	ON OF	The output status (ON/OFF) of the solenoid output O5 with the [D, ==>] key ON/OFF is changed. Do not turn the O4 to O7 outputs ON/OFF with the [D, ==>] key.
	Electromagnetic value output of output signal O6	O6O.	0762	Х	-			060.	or of	ON OF	The output status (ON/OFF) of the solenoid output O6 with the [D, ==>] key ON/OFF is changed. Do not turn the O4 to O7 outputs ON/OFF with the [D, ==>] key.
	Electromagnetic value output of output signal O7	070.	0763	Х	-			o 7o.	or CF	ON OF	The output status (ON/OFF) of the solenoid output O7 with the [D, ==>] key ON/OFF is changed. Do not turn the O4 to O7 outputs ON/OFF with the [D, ==>] key.
	LED output for G500 type control panel	OPO.	0764	Х	-			oPo.	or of	ON OF	The output status (ON/OFF) of the solenoid output OP with the [D, ==>] key ON/OFF is changed. Do not turn the O4 to O7 outputs ON/OFF with the [D, ==>] key.
	LED output for G500 type control panel	OQO.	0765	Х	-			090.	or of	ON OF	The output status (ON/OFF) of the solenoid output OQ with the [D, ==>] key ON/OFF is changed. Do not turn the O4 to O7 outputs ON/OFF with the [D, ==>] key.
E mode	LED output for G500 type control panel	ORO.	0766	Х	-			oro.	or of	ON OF	The output status (ON/OFF) of the solenoid output OR with the [D, ==>] key ON/OFF is changed. Do not turn the O4 to O7 outputs ON/OFF with the [D, ==>] key.
+	Rated output display	WT.	0767	0	**	watt	-	BL.			The motor's rated output value is displayed.
<u>+</u>									75	75	Refers to 750W.
+ A +									55	55	Refers to 550W.
1-2	Voltage display	VL.	0768	0	***	volt	-	uL.			The rated input voltage value in the control box is displayed.
									100	100	Refers to 100V class.
									500	200	Refers to 200V class.
	Model display	TP.	0769	0	-	_	-	rP.			The control box model name is displayed.
									UEH	MFY	XC-GMFY
	Data version No.	DV.	0770	0	***	-	-	du.	***	***	The data version No. (3-digit alpha-numeral) of the EEPROM is displayed.
	Software version No.	RV.	0771	0	***			۲ س.	***	***	The version No. (3-digit alpha-numeral) of the software is displayed.
	Display previous simple setting selected.	T.	0772	0	-	-	-	Γ.	***	****	Display previous simple setting selected.

<u> </u>			_ 0	0	Factory			Function name	Sett	ting	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range		diamin.		Specification
ıme			er all	lity	GMFY			Digital	display		
	Set No. of stitches A for cutter output (Setting the delay time during chain-off output ON)	COA.	0800	0	0	stitche s	0~99	EoR.	**	**	The No. of stitches A (delay during chain-off output ON) for chain-off output operation can be set. When CTR = ON, the No. of stitches for cutter output OFF can be set.
	Set No. of stitches B for cutter output (Setting the delay time during chain-off output OFF)	СОВ.	0801	0	0	stitche	0~99	Соь.	**	**)	The No. of stitches B (delay during chain-off output OFF) for chain- off output operation can be set. When CTR = ON, the No. of stitches for cutter output ON can be set.
	Set No. of stitches C for cutter output	COC.	0802	0	0	stitche s	0 ~ 99	EoE.	**	**	The No. of stitches C (delay during cutter output ON) during cutter output operation can be set.
F mode	No. of stitches for BT output ON after sensor OFF setting	X.	0803	0	0	stitche s	0~99	11.	**	**	The No. of stitches to be stitched before the output BT for the in-tacking signal is turned ON after the sensor turns OFF can be set.
+	No. of stitches for sewing machine stops after BT output ON setting	Y.	0804	0	0	stitche s	0 ~ 99	Ρ.	**	**	The No. of stitches to be stitched before the sewing machine stops after the output BT for the in-tacking signal turns ON can be set.
1	No. of stitches for BT output OFF after start of stitching setting	Z.	0805	0	12	stitche s	1 ~ 99	Ξ	**	**	The No. of stitches to be stitched before the output BT for in-tacking signal is turned OFF after stitching is started can be set.
B +	Delay time to when SL output turns from OFF to ON	SD.	0806	0	0	msec	0 ~ 508	5 <i>d</i> .	***	***	The delay time for the output SL to turn from OFF to ON can be set in 2msec intervals. The cutter output time setting is also possible.
	Delay time to when SL output turns from ON to OFF	ED.	0807	0	0	msec	0 ~ 508	€d.	***	***	The delay time for the output SL to turn from ON to OFF can be set in 2msec intervals. The chain-off output mesh judgment time setting is also possible.
	No. of set stitches during SL output ON selection mode	SLH.	0808	0	OF	-	-	SLH.			The No. of set stitches for the output SL can be selected from HOF set No. of stitches (during ON setting) or SLN set No. of stitches (during OFF setting).
									ဝဂ္	ON	Setting HOF function in G mode.
	SL output start position setting	SLK.	0809	0	OF	-	-	SLŁ.	o F o C o F	OF ON OF	Setting SLN function in P mode. The output of SL for thread dislocation prevention starts when the needle lift operation (US, U, UF) is completed.
	SL output start position during SLS function ON setting	SLT.	0810	0	OF	-	-	SLT.	on of	ON OF	When the SL output operation mode SLS is ON while the motor is stopped, the output of SL for thread dislocation prevention will start after the thread is trimmed.
	Speed limit M except tacking and SL on	SLL.	0811	0	OF	-	-	SLL.	on of	ON OF	If the output SL turns ON during an operation other than tacking, the speed is limited to that set in the medium speed M.
	SL output operation during motor stopping	SLS.	0812	0	OF	-	-	SL 5.	on oF	ON OF	The output SL is ON even when the motor is stopped.

Moo			Dir	ဝှ	Factory			Function name	Sett	ing	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	display		Specification
ъ			=	y	GMFY				,		
	OT1 output blower output setting	O1B.	0813	0	OF	-	-	o 16.	on of	ON OF	Virtual output OT1 will be set to blower output of cutter function.
	OT2 output chain-off output setting	O2M.	0814	0	OF	-	-	o≥N.	0F	ON OF	Virtual output OT2 can be used as the chain-off output.
	OT3 output cutter output setting	ОЗМ.	0815	0	OF	-	-	o3N.	on of	ON OF	Virtual output OT3 can be used as the cutter output.
	Mesh judgment control with I*2 input	I2M.	0816	0	OF	-	-	'SU	or or	ON OF	The mesh judgment control of cutter specification is added to chain-off output. Refer to the section for details on the IO2, IR2 and IS2 signal function.
	Setting I*3 signal for manual cutter output	СТҮ.	0817	0	OF	-	-	EFP.	or or	ON OF	When the IO3, IR3 and IS3 signals are ON, the output is set to the manual cutter output. Refer to the section for details on the IO3, IR3 and IS3 signal function.
	Status of cutter output photo switch (I*2) signal according to OT3 output	СТМ.	0818	0	OF	-	-	ברח.			The change status of the IO2, IR2 signal photo switch that outputs the cutter output by the virtual output OT3 can be selected. Refer to the section for details on the IO2, IR2 signal function. The OT3 output time is SD. It is possible to set it by the function.
									٥٥	ON	The cutter output by the OT3 is output at both changes (OFF=>ON) (ON=>OFF) of the IO2, IR2 signal photo switch.
F mode									٥F	OF	The cutter output by the OT3 is output at only the (ON=>OFF) change of the IO2, IR2 signal photo switch.
+ + 1 B s s	Turn OT3 output ON/OFF per set No. of stitches when I*3 signal is ON	CTR.	0819	0	OF	-	-	[[r.	0¢	ON OF	When the IO3, IR3 and IS3 signals are ON, the virtual output OT3 is turned ON/OFF per set No. of stitches. (When this is turned ON, the cutter specifications by the sensor will be invalidated.) The set No. of stitches can be set with the cutter specifications No. of stitches A (non-stitching chain ON delay) setting COA function, cutter specifications No. of stitches B (non-stitching chain ON delay) setting COB function and the cutter specifications No. of stitches C (non-stitching chain ON delay) setting COC function. Refer to the section for details on the IO3, IR3 and IS3 signal function.
	Automatic cutter output prohibit during sensor ON	CSC.	0820	0	OF	-	-	ESE.	or of	ON OF	The output of the automatic cutter output is prohibited while the sensor is ON.
	Automatic cutter output prohibit during sensor OFF	CEC.	0821	0	OF	-	-	EEE.	or of	ON OF	The output of the automatic cutter output is prohibited while the sensor is OFF.
	Cutter output prohibit when sensor is ON while stopped	CTS.	0822	0	OF	-	-	EFS.	on oF	ON OF	The output of the automatic cutter output is prohibited when the sensor input is ON while the sewing machine is stopped.
	Automatic thread trim setting after cutter sensor is turned off	CAT.	0823	0	OF	-	-	ERF.	8F	ON OF	Automatic stops and trim setting, after the cutter sensor is turned off and then the number of stitch "C" set by "COC" function (is run.)

Mode			n Dir		Factory		_	Function name	Setti	ing	
de name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital (display		Specification
	Set I*1 input, OP1 output to cutter BT specifications	CTL.	0824	0	OF	_	_	EFL.	οū	ON	The IO1, IR1 and ISI signals and the run output OP1 are set to the cutter BT specifications input/output signals. Refer to the section for details on
	input/output	O1L.	0024		Oi	_		L 1 L.	or of	OF	the IO1, IR1 and IS1 signal function.
	Preset stitching operation after operation signal OFF	NMD.	0825	0	OF	-	-	ഹിർ.	or of	ON OF	Only the preset No. of stitches is stitched after the operation signal (S1) is turned OFF.
F mode	ROL output mode	RLM.	0826	0	OF	-	-	rLM.	er er	ON OF	The roller lift output ROL will turn ON when presser foot lifting output FU, back tacking output B, virtual output OT2 are ON, and during tacking and thread trimming.
1	No. of stitches setting for auxiliary feeding rear roller	RLN.	0827	0	0	stitche s	0 ~ 99	rln.	**	**	The roller lower No. of stitches is set for the auxiliary feeding rear roller.
1	Not used.	CTG.	0828		OF	-	-	EFG.	or or	ON OF	Not used.
B + sı	Not used.	CGD.	0829		OF	-	-	£64.	or of	ON OF	Not used.
	Not used.	EDT.	0830		OF	-	-	Edf.	or of	ON OF	Not used.
	Not used.	EDS.	0831		0	stitche s	$0\sim99$	E & 5.	**	**	Not used.
	Not used.	CAS.	0832		OF	-	-	ERS.	on of	ON OF	Not used.
	Not used.	ESC.	0833		OF	-	-	ESC.	oF F	ON OF	Not used.

Moo			n D <u>i</u>	မွ	Factory			Function name	Sett	ing	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	dienlay		Specification
me			all all	lity	GMFY			Digital	uispiay		
	Thread trimming mode	TR.	0900	0	M1	-	-	ſr.	***	***	The thread trimming timing for each manufacturer's thread trimming sewing machine can be set. Same function as the P mode thread trimming mode [TR]. When [PRG] is set, the sewing machine operation and thread trimming timing can be set when combined with the functions [TRM], [LTM] or [LLM].
	Motor operation mode during thread trimming	TRM.	0901	0	LK	-	-	L-U			The motor operation mode during thread trimming can be set when thread trimming mode TR is set to [PRG].
									LŁ	LK	The motor will run for the lockstitch thread trimming sewing machine.
									rt tR	RK	The motor will run for reverse thread trimming.
									ĻН	KA	Not used.
									Lb UP	KB	Not used.
										UP	Not used.
									dn	DN	Not used.
G mode	Thread trimming output (T) output mode	LTM.	0902	0	T1	-	-	LTN.	Г I Г2 Г3 Г4 Г5	T1 T2 T3 T4 TK TS	The output timing mode of the thread trimming output (T) can be set when thread trimming mode TR is set to [PRG]. The output timing of the thread trimming output [T] can be set. (Lock stitch setting) It becomes effective when the thread trimming mode [TR] sets [PRG]. Refer to "[15] 1. Thread trimming timing when thread trimming mode TR setting is PRG." for details of output timing. Please refer to the LTM setting of string swithing off output T which has been described to the technical information. Please refer to the LTM setting of string swithing off output T which has been described to the technical information. Please refer to the LTM setting of string swithing off output T which has been described to the technical information. Please refer to the LTM setting of string swithing off output T which has been described to the technical information. Not used. Not used. Please refer to the LTM setting of string swithing off output T which has
	Thread release output (L) output mode	LLM.	0903	0	L1	-	-	LLN.			been described to the technical information. The output timing mode of the thread release output (L) can be set when thread trimming mode TR is set to [PRG]. The output timing of the thread release output [L] can be set. (Lock stitch setting) It becomes effective when the thread trimming mode [TR] sets [PRG]. Refer to "[15] 1. Thread trimming timing when thread trimming mode TR setting is PRG." for details of output timing.
									F5	L1 L2	Please refer to the LLM setting of string loosening output L which has been described to the technical information. Please refer to the LLM setting of string loosening output L which has
	CONTINUED ON THE NEXT PAGE								13	L3	been described to the technical information. Please refer to the LLM setting of string loosening output L which has been described to the technical information.

S.			_ 0		Factory			Function name	Sett	ing	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital display			Specification
ıme			er all	lity	GMFY						
	CONTINUED FROM PREVIOUS PAGE								77	L4	Please refer to the LLM setting of string loosening output L which has been described to the technical information.
									Ļţ	LK	Not used.
									[7	LS L7	Not used. Please refer to the LLM setting of string loosening output L which has been described to the technical information.
	Thread trimming output start angle	TS.	0904	0	0	degree	0 ~ 360	r 5.	***	***	When the thread trimming mode TR is set to [PRG], the output start angle of the thread trimming output (T) can be set. Set according to the thread trimming output (T) timing chart.
	Thread trimming output angle	TE.	0905	0	90	degree	0 ~ 360	ΓE.	***	***	When the thread trimming mode TR is set to [PRG], the output end angle of the thread trimming output (T) can be set. Set according to the thread trimming output (T) timing chart.
G	Thread release output start angle	LS.	0906	0	0	degree	0 ~ 360	L 5.	***	***	When the thread trimming mode TR is set to [PRG], the output start angle of the thread release output (L) can be set. Set according to the thread release output (L) timing chart.
mode	Thread release output angle	LE.	0907	0	90	degree	0 ~ 360	LE.	***	***	When the thread trimming mode TR is set to [PRG], the output end angle of the thread release output (L) can be set. Set according to the thread release output (L) timing chart.
+ C+ C+	Thread trimming output start time	T1.	0908	0	20	msec	0 ~ 998	Γ L	***	***	The output start time of the thread trimming output (T) for chain stitch sewing machine can be set. When the thread trimming mode TR is set to [PRG], the output start time of the thread trimming output (T) for lock stitch sewing machine can be set. Set according to the thread trimming output (T) timing chart.
	Thread trimming output time	T2.	0909	0	90	msec	0 ~ 998	гг.	***	***	The output time of the thread trimming output (T) for chain stitch sewing machine can be set. When the thread trimming mode TR is set to [PRG], the output time of the thread trimming output (T) for lock stitch sewing machine can be set. Set according to the thread trimming output (T) timing chart.
	Thread release output start time	L1.	0910	0	150	msec	0 ~ 998	L I.	***	***	The output start time of the thread release output (L) for chain stitch sewing machine can be set. The output start time of the thread release output (L) during chain stitching thread trimming timing A can be set. The chain stitching thread trimming timing B is invalid at this time. When the thread trimming mode TR is set to [PRG], the output start time of the thread release output (L) for lock stitch sewing machine can be set. Set according to the thread release output (L) timing chart.
	Thread release output time	L2.	0911	0	70	msec	0 ~ 998	L2.	***	***	The output time of the thread release output (L) for chain stitch sewing machine can be set. The output time of the thread release output (L) during chain stitching thread trimming timing A can be set. The chain stitching thread trimming B is invalid at this time. Set according to the thread release output (L) timing chart. When the thread trimming mode TR is set to [PRG], the output time of the thread release output (L) for lock stitch sewing machine can be set. Set according to the thread release output (L) timing chart.

Mo			n Di	Q Q	Factory			Function name	Setti	ing	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital display			Specification
ne			, <u>=</u>	ty	GMFY			3	7		
	Thread release output start time (Output TF start time)	R1.	0912	0	40	msec	0 ~ 508	r l	***	***	The output start time of the thread release output (L) during chain stitching thread trimming timing B can be set. The chain stitching thread trimming timing A is invalid at this time. The output start time of the output (TF) can be set. Set according to teach output's timing chart.
	Thread release output time (TF output time)	R2.	0913	0	66	msec	0 ~ 508	r 2.	***	***	The output time of the thread release output (L) during chain stitching thread trimming timing B can be set. The chain stitching thread trimming timing A is invalid at this time. The output time of the output (TF) can be set. Set according to teach output's timing chart.
	Condensed stiching start time (Stop time before thread trimming)	R3.	0914	0	50	msec	0 ~ 508	r 3.	***	***	The time to when the sewing machine begins condensed stiching after the condensed stiching(CH) turn ON during start/end condensed stiching can be set. However, during the end condensed stiching in the chain stiching thread trimming timing B, this time [R3] will be the time for end condensed stiching after the thread release output (L) turns OFF. (If end condensed stiching is not set, the time will be that for the needle to rise from the DOWN to UP position after the thread release output (L) is turned OFF.)
	Wiper output start time	W1.	0915	0	10	msec	$0\sim 998$	8 1	***	***	When the thread trimming mode TR is set to [PRG], the output start time of the wiper output (W) can be set. Set according to the wiper output (W) timing chart.
	Wiper output time	W2.	0916	0	8	X10 msec	0 ~ 999	82.	***	***	When the thread trimming mode TR is set to [PRG], the output time of the wiper output (W) can be set. Set according to the wiper output (W) timing chart.
G mode	Wiper output operation mode	WMD.	0917	0	W	-	-	RU9.			The output timing mode of the wiper output (W) can be set. The timing that the wiper output W is turned OFF can be set with the thread trimming signal S2. Refer to "[15] 2. Wiper output timing." for details on setting the OFF timing.
+ + 0									R	W	If the S2 signal turns OFF within the wiper output W set time, the W output will turn OFF after the set time has passed. If the S2 signal turns OFF after the wiper output W set time has passed, the W output will turn OFF after the set time has passed.
									or	OR	If the S2 signal turns OFF within the wiper output W set time, the W output will turn OFF after the set time has passed. If the S2 signal turns OFF after the wiper output W set time has passed, the W output will turn OFF when the S2 signal turns OFF. If the S2 signal turns OFF within the wiper output W set time, the W output will turn OFF when the S2 signal turns OFF. If the S2 signal turns OFF after the wiper output W set time passes, the W output will turn OFF after the set time has passed.
									۸n	AN	
					rU	RU	This setting is valid when the reverse run needle setting after thread trimming RU is ON. When the reverse run needle lifting is completed after the thread is trimmed, the W output will turn ON. If the S2 signal turns OFF within the wiper output W set time, the W output will turn OFF after the set time has passed. If the S2 signal turns OFF after the wiper output W set time has passed, the W output will turn OFF after the set time has passed.				
									EH	СН	Not used.
									FR	FW	Not used.

Moc			Dir	Op	Factory			Function name	Sett	ting	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	igital display		Specification
Ф				~	GMFY						
	Presser foot lifting output start time	F1.	0918	0	140	msec	0 ~ 998	F I.	***	***	When the thread trimming mode TR is set to [PRG], the output start time for the presser foot lifting output (FU) is set. Set according to the presser foot lifting output (FU) timing chart.
	Time to motor drive after presser foot lifter bring down	FD.	0919	0	176	msec	0 ~ 998	Fd.	***	***	The time for the motor to start driving after the presser foot output FU is turned OFF when pedal toe down or external run signal (S0, S1) ON during presser foot lifting can be set in 2 millisecond units.
	Interlock time during thread trimming	IL.	0920	0	140	msec	0 ~ 998	،٤.	***	***	The interlock time that prohibits operation during thread trimming can be set. Manual calculation will be used during the [P] mode thread trimming (TR) timing [PRG], [KA3], [KA4], [KB3], [KB4], so the setting is valid. [KA1], [KA2], [KB1], [KB2] are for automatic calculation and cannot be set
	Interlock time during no thread trimming	IT.	0921	0	0	msec	0 ~ 510	ır.	***	***	The interlock time during the no thread trimming timing can be set. This is valid when the [P] mode thread trimming timing [NO] or thread trimming release signal (TL) is turned ON.
	Motor rotation after motor stop before thread trimming	TDS.	0922	0	OF	-	-	ras.	or or	ON OF	After the motor stops, it will start rotating after the thread trimming output T turns ON and the delay time has passed. The delay time can be set by the [TD] function.
G mode	Motor stop time during lockstitch and R output time during chain stitch	TD.	0923	0	50	msec	0 ~ 508	Г д .	***	***	The motor stop time before thread trimming during lock stitch can be set in 2msec intervals. The output R output time during chain stitch can be set in 2msec. When the chain stitch mode is set, it is possible to set to the delay time of the motor "R3".
<u>+</u>	Delay setting before reverse run during RU setting	RUS.	0924	0	OF	-	-	rU5.	or or	ON OF	Delay time before reverse run (RU operation) after thread trimming is completed can be set with RT when the thread trimming reverse needle lift RU is set to ON.
† C	Delay time before reverse run during RU setting	RT.	0925	0	76	msec	0 ~ 508	rſ.	er er	ON OF	When reverse needle lift after thread trimming RU is ON and RUS is ON, the delay time before the motor reverse run after thread trimming can be set in 2msec intervals.
	Reverse run needle lifting [RU] after output T, L and W	RUM.	0926	0	OF	-	-	rUN.	er er	ON OF	Change [RU] function for chain stich type. "OF" is factory setting for lock stich (Reverse run after T) "ON" is for chain stich (Reverse run after T, L and W)
	Wiper output OFF trimming with (S1) signal	WS1.	0927	0	OF	-	-	85 I.	0.£	ON OF	If the pedal is toed down or external output signal (S1) is turned ON during the wiper output time [W2] (after thread trimming interlock time), the wiper output time [W] will turn OFF. The presser foot lifting output (FU) will also turn OFF simultaneously, and the sewing machine will run after the [FD] time. Use this for the air type wiper. This is effective for standing operation (automatic machine operation).
	Operation mode with thread trimming signal to shift the needle stop position and return to the original needle stop position before the thread trimming signal	S2T.	0928	0	OF	-	-	ser.			If the sewing machine pulley is rotated by hand and set to 1 position while the sewing machine is stopped before thread trimming, if the needle UP position is 2 position, the needle DOWN position will shift. To return to the original stop position after that, fully heel the pedal, or set the operation mode by turning thread trimming signal (S2) ON. The same operation as then next [S2P] setting value ([NO], [TR], [PS]) is executed. The thread trimming operation is executed according to the thread trimming mode TR setting value ([KA1], [KA2], etc.).
									00	ON	1
									oF	OF	
									101	٥.	

Mo			л <u>D</u> .	ဝှ	Factory			Function name	Sett	ing	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital display			Specification
ame			call	ility	GMFY	-					
	Operation mode with thread trimming signal when shifting the needle stop position before the thread trimming	S2P.	0929	0	TR	-	-	5 <i>2P</i> .			The operation mode started with the full pedal heeling or thread trimming signal (S2) ON when rotating the sewing machine pulley, etc., manually, and leaving the UP position when in 1 position, and leaving the DOWN position when in 2 position.
	signal								۲۰	TR	When [KA1] to [KA4] of the thread trimming mode [TR] are set, the thread trimming operation will be performed according to the settings after the needle is lifted. When [KB1] to [KB4] are set, the thread trimming operation will be performed according to the settings after the needle is lowered.
									<i>P</i> 5	PS	The presser foot lifting operation will be executed after the needle is lifted. The thread trimming operation will not be executed.
									00	NO	The sewing machine does not rotate or perform thread trimming, and only the presser foot lifting operation is executed.
G mode	Solenoid output OT1 manual/automatic change	MAN.	0930	0	ON	-	-	NAn.	or or	ON OF	The change of the solenoid output [OT1] manual/automatic output is selected. The solenoid output [OT1] will be set to manual. The solenoid input signal IO1 is validated. The solenoid output [OT1] will be set to automatic. The solenoid input signal IO1 is invalidated.
1 1 1 1 1 1 1 1 1 1	Setting of no. of stitches during MAN [OFF] setting	ноғ.	0931	0	7	stitche s	0 ~ 99	HoF.	**	**	This is valid when the solenoid output [OT1] manual/automatic output change is set to automatic. If the pedal is toed down or the external run signal (S00, S1, SH) is turned ON while the solenoid output [OT1] is ON, the OT1 output will turn OFF after the set No. of stitches.
† + C +	Weak brake ON simultaneously with wiper output (W)	WB.	0932	0	OF	-	-	86.	0F	ON OF	The weak brake will turn ON when the wiper output (W) turns ON.
	Motor rotation operation when LTM function is set to T1, T2 or T3	TDT.	0933	0	OF	-	-	LAL.	8F	ON OF	When the thread trimming output T mode LTM for lockstitch is set to [T1], [T2] or [T3], after the motor stops, it will start again after the thread trimming output T turns ON and the delay time has passed. Set time can be set by the [TD] function.
	Not used	C1.	0934	0	0	-	0 ~ 99	E L	**	**	Not used.
	Not used	C2.	0935	0	0	-	0 ~ 99	£2.	**	**	Not used.
	Not used	C3.	0936	0	0	-	$0\sim99$	€ 3.	**	**	Not used.
	Not used	T3.	0937	0	0	-	0 ~ 998	Γ3.	***	***	Not used.
	Not used	T4.	0938	0	0	-	0 ~ 998	ru.	***	***	Not used.
	Not used	T5.	0939	0	0	-	0 ~ 998	ΓS.	***	***	Not used.
	Not used	PET.	0940	0	OF	-	-	PET.	or oF	ON OF	Not used.
	Not used	P9U.	0941	0	OF	-	-	PSU.	on oF	ON OF	Not used.
	Not used	ннс.	0942	0	OF	-	-	HHE.	0.F	ON OF	Not used.

Moc	Mode Function name		Dir	Q Q	Factory		Setting range	Function name	Sett	ing	
de nar			Direct call number	Operability	setting	Unit		Digital display			Specification
ne			· =	ty	GMFY			3			
	Not used	PAA.	0943	0	OF	-	-	PRR.	or of	ON OF	Not used.
	Not used	STL.	0944	0	OF	-	-	SFL.	or of	ON OF	Not used.
	Not used	L8.	0945	0	0	-	-98 ∼ 98	L 8.	***	***	Not used.
G	Not used	PEK.	0946	0	OF	-	-	PEŁ.	or of	ON OF	Not used.
mode	Setting A which can be used by step sequence	PPA.	0947	0	OF	-	-	PPR.	or of	ON OF	Setting A which can be used by step sequence
+	Setting B which can be used by step sequence	PPB.	0948	0	OF	-	-	РРЬ.	or or	ON OF	Setting B which can be used by step sequence
+ + + C+	Setting C which can be used by step sequence	PPC.	0949	0	OF	-	-	PPC.	or of	ON OF	Setting C which can be used by step sequence
	Setting D which can be used by step sequence	PPD.	0950	0	OF	-	-	PPd.	or or	ON OF	Setting D which can be used by step sequence
	Setting E which can be used by step sequence	PPE.	0951	0	OF	-	-	PPE.	or or	ON OF	Setting E which can be used by step sequence
	Setting F which can be used by step sequence	PPF.	0952	0	OF	-	-	PPF.	or of	ON OF	Setting F which can be used by step sequence
	Setting G which can be used by step sequence	PPG.	0953	0	OF	-	-	PPG.	or of	ON OF	Setting G which can be used by step sequence
	Setting H which can be used by step sequence	PPH.	0954	0	OF	-	-	PPH.	or of	ON OF	Setting H which can be used by step sequence

Mo			¬ D	Q Q	Factory			Function name	Sett	ting	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital display			Specification
me			all i	ity	GMFY			Digital	uispiay		
	Upper limit of maximum speed [H]	LHH.	1000	0	90	X100 rpm	0 ~ 99	L HH.	**	**	The upper limit value of the maximum speed [H] in P mode is set. A value that exceeds the value set in this limiter cannot be set for the maximum speed [H].
	Lower limit of maximum speed [H]	LHL.	1001	0	0	X100 rpm	$0\sim99$	LHL.	**	**	The lower limit value of the maximum speed [H] in P mode is set. A value that is lower than the value set in this limiter cannot be set for the maximum speed [H].
	Upper limit of low speed [L]	LLH.	1002	0	5	X100 rpm	$0\sim99$	LLH.	**	**	The upper limit value of the low speed [L] in P mode is set. A value that exceeds the value set in this limiter cannot be set for the low speed [L].
	Lower limit of low speed [L]	LLL.	1003	0	0	X100 rpm	0 ~ 99	LLL.	**	**	The lower limit value of the low speed [L] in P mode is set. A value that is lower than the value set in this limiter cannot be set for the low speed [L].
	Upper limit of thread trimming speed [T]	LTH.	1004	0	5	X100 rpm	0 ~ 99	LTH.	**	**	The upper limit value of the thread trimming speed [T] in P mode is set. A value that exceeds the value set in this limiter cannot be set for the thread trimming speed [T].
H mode	Lower limit of thread trimming speed [T]	LTL.	1005	0	0	X100 rpm	0 ~ 99	LFL.	**	**	The lower limit value of the thread trimming speed [T] in P mode is set. A value that is lower than the value set in this limiter cannot be set for the thread trimming speed [T].
† † †	Upper limit of start/end tacking (condensed stitching) speed	LNH.	1006	0	30	X100 rpm	0 ~ 99	LnH.	**	**	The upper limit value of the start/end tacking (condensed stitching) speed in P mode is set. A value that exceeds the value set in this limiter cannot be set for the start/end tacking (condensed stitching) speed.
+ D*	Lower limit of start/end tacking (condensed stitching) speed	LNL.	1007	0	0	X100 rpm	0 ~ 99	LnL.	**	**	The lower limit value of the start/end tacking (condensed stitching) speed in P mode is set. A value that is lower than the value set in this limiter cannot be set for the start/end tacking (condensed stitching) speed.
	Upper limit of medium speed [M]	LMH.	1008	0	90	X100 rpm	0 ~ 99	∟ПН.	**	**	The upper limit value of the medium speed [M] in P mode is set. A value that exceeds the value set in this limiter cannot be set for the medium speed [M].
	Lower limit of medium speed [M]	LML.	1009	0	0	X100 rpm	0 ~ 99	LNL.	**	**	The lower limit value of the medium speed [M] in P mode is set. A value that is lower than the value set in this limiter cannot be set for the medium speed [M].
	Upper limit of slow start speed [S]	LSH.	1010	0	30	X100 rpm	0 ~ 99	LSH.	**	**	The upper limit value of the slow start speed [S] in P mode is set. A value that exceeds the value set in this limiter cannot be set for the slow start speed [S].
	Lower limit of slow start speed [S]	LSL.	1011	0	0	X100 rpm	0 ~ 99	LSL.	**	**	The lower limit value of the slow start speed [S] in P mode is set. A value that is lower than the value set in this limiter cannot be set for the slow start speed [S].

Mo			n Di	Q Q	Factory			Function name	Sett	ing	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	display		Specification
ne			, =	ţ	GMFY			- 19.11.			
	Simple setting mode for [1],[2],[3] prohibit	MAC.	1100	0	OF	-	-	NRC.	on of	ON OF	The simple setting mode (program mode [1]) cannot be entered.
	[P],[G] mode thread trimmer mode TR prohibit	TRC.	1101	0	OF	-	-	ſr[.	0 F	ON OF	The [P] mode thread trimmer mode, TR cannot be entered program mode P will be possible.) The thread trimmer mode [G] cannot be entered.
	Rotation direction changeover prohibit	CWC.	1102	0	OF	-	-	CAC.	on of	ON OF	Rotation direction changeover during the normal mode will not be possible.
	1-2 position changeover prohibit	12C.	1103	0	OF	-	-	12C.	0 F	ON OF	1-2 position changeover ([A] key operation) during the normal mode will not be possible.
	Slow start changeover prohibit	SLC.	1104	0	OF	-	-	SL C.	or or	ON OF	Slow start validity changeover ([B] key operation) during the normal mode will not be possible.
	Speed setting key changeover prohibit	SPC.	1105	0	OF	-	-	SPC.	or or	ON OF	Speed setting operation of normal mode ([C] key and [D] key operation) will not be possible.
J	Not used	JKC.	1106	0	OF	-	-	JEC.	or or	ON OF	Not used.
mode	Start tacking validity changeover prohibit	SBC.	1107	0	OF	-	-	56C.	0 F	ON OF	Start tacking validity changeover ([A] key operation) during the tacking mode will not be possible.
+	No. of start tacking stitches changeover prohibit	SNC.	1108	0	OF	-	-	SnE.	or of	ON OF	The No. of start tacking stitches setting ([A], [B] key operations) during the tacking mode will not be possible.
+ A + 1-2	End tacking validity changeover prohibit	EBC.	1109	0	OF	-	-	£6£.	on of	ON OF	End tacking validity changeover ([C] key operation) during the tacking mode will not be possible.
+ B + s L	No. of end tacking stitches changeover prohibit	ENC.	1110	0	OF	-	-	EnE.	or of	ON OF	The No. of end tacking stitches setting ([C], [D] key operations) during the tacking mode will not be possible.
	Start tacking type changeover prohibit	SKC.	1111	0	OF	-	-	SEC.	on of	ON OF	Start tacking type setting ([B] key operation) during the tacking mode will not be possible.
	End tacking type changeover prohibit	EKC.	1112	0	OF	-	-	EEC.	or of	ON OF	End tacking type setting ([D] key operation) during the tacking mode will not be possible.
	Pattern stitching validity changeover prohibit	TSC.	1113	0	OF	-	-	Γ5 <i>C</i> .	or of	ON OF	Preset stitching validity and back tacking validity changeover operation ([M] key operation) in the pattern mode will not be possible.
	Pattern stitching No. of stitches and times changeover prohibit	TNC.	1114	0	OF	-	-	rnE.	٥ <u>٢</u>	ON OF	No. of preset stitching stitches and No. of back tacking times setting operation ([C], [D] key operations) in the pattern mode will not be possible.
	Pattern mode pattern changeover prohibit	MDC.	1115	0	OF	-	-	NdC.	or of	ON OF	Preset stitching, back tacking and control switch panel data play mode changeover ([D] key operation) in the pattern mode will not be possible.
	Prohibit the all of key switches on control switch panel	BAC.	1116	0	OF	-	-	BRC.	8F	ON OF	Prohibit the [Stop needlework, Learning input relation] key switches on control switch panel.
	Prohibit the teaching mode key switches on control switch panel	BPC.	1117	0	OF	-	-	ьРС.	9F	ON OF	Prohibit the teaching mode key switches on control switch panel (refer to following). OUTPUT STEP NANUAL NANUAL STEP DEL. CONT. SPEED SPE

Mode		Function name setting Light Setting		Setti	ing						
de name	Function name		Direct call number	Operability		Unit	Setting range	Digital o	display		Specification
ē			_	~	GMFY						
	Prohibit the following key switches on control switch panel	BSC.	1118	0	OF	-	1	65C.	6F	ON OF	Prohibit the following key switches on control switch panel. NON/OFF AUTO SLOW START SENSOR
	Operation prohibition of set value change key	PSW.	1119	0	OF	-	-	PSB.	oç of	ON OF	Control panel operation ([M], [A], [B], [C], [D] key operations) during the normal mode, tacking mode and pattern mode will not be possible. However, changeover into each mode will be possible.
J mode	Prohibit the key switches on the control switch panel before thread trimming	BKC.	1120	0	OF	-	-	PF C.	8F	ON OF	The key switch operation on the control switch panel will be possible before thread trimming.
1	Prohibit the key switches on the control switch panel before thread trimming	NSV.	1121	0	OF	-	-	n5u.	er er	ON OF	The display when the parameter setting key is pushed can be selected. [ON]:The number set last time is displayed. [OF]:The 0th is displayed.
1	It blinks compared with a set value.	CMP.	1122	0	ON	-	-	ENP.	or of	ON OF	[ON]:The dot is blinked when differing than the data set with CMS.
A + 1-2 +	At the comparison when it compares and it blinks destination.	CMS.	1123	0	вк	-	-	ENS.			It compares it with the shipment setting value.
B + sı									ЬŁ	BK	It compares it with the BACKUP setting value.
									5 1	S1	It compares it with the SAVE1 setting value.
									52	S2	It compares it with the SAVE2 setting value.
	Prohibit "parameter setup (ABCD) key" during the normal mode	PKC.	1124	0	OF	-	-	PEC.	on oF	ON OF	The parameter setup (ABCD) key is invalidated during the normal mode.
	Not used	NTM.	1125	0	OF			nΓΠ.	or or	ON OF	Not used
	Not used	UDC.	1126	0	OF			UdC.	or of	ON OF	Not used

Mode			_n Di	ဝွ	Factory			Function name	Sett	ing	
de name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital (display		Specification
me			_	ťγ	GMFY			2.9			
	Operation during 2 - 1 position changeover	P21.	1200	0	OF	-	-	P2 !.	eç e	ON OF	When changeover from the 2 position to the 1 position with the [A] key during the normal mode, the needle will rise to the UP position when not in the UP position, when turned ON.
	Sewing machine speed during solenoid input signal [IO1] setting	IO1.	1201	Х	NO	-	-	10 l.			The speed for when the signal IO1 output to the virtual output 1 can be selected.
	[0 0	NO 0	The speed designation when the IO1 signal is input is invalidated. The speed will be approximately proportional to the variable speed command VC or VC2 voltage of the lever connector.
									<u> </u>	L V	The speed will be at the speed set in low speed [L]. The speed will be at the speed set in condensed stitching speed [V].
١.,									Ŭ	М	The speed will be at the speed set in medium speed [M].
K mode									H -0	H R0	The speed will be at the speed set in high speed [H]. The sewing machine will run at the variable speed command VC or VC2 command of the lever connector. The sewing machine will stop when the IO1 signal turns OFF.
+ 1									rL	RL	The sewing machine will run at the speed set in low speed [L]. The sewing machine will stop when the IO1 signal turns OFF.
+ A +									rυ	RV	The sewing machine will run at the speed set in condensed stitching speed [V]. The sewing machine will stop when the IO1 signal turns OFF.
+									rΠ	RM	The sewing machine will run at the speed set in medium speed [M]. The sewing machine will stop when the IO1 signal turns OFF.
C+									rH	RH	The sewing machine will run at the speed set in high speed [H]. The sewing machine will stop when the IO1 signal turns OFF.
	Speed specification when COR input is ON	COR.	1202	0	L	-	-	Cor.			The sewing machine speed for when the correction stitching signal COR is ON.
									0	0	The speed will be approximately proportional to the variable speed command VC or VC2 voltage of the lever connector.
									Ĺ	L	The speed will be at the speed set in low speed [L].
									Ū	V	The speed will be at the speed set in condensed stitching speed [V].
									<u>'</u>	М	The speed will be at the speed set in medium speed [M].
									Н	Н	The speed will be at the speed set in high speed [H].

Mode			n Di	Q Q	Factory			Function name	Sett	ing	
de na	Function name		Direct call number	Operability	setting	Unit	Setting range	Dinital	diamin.		Specification
name			er all	lity	GMFY			Digital	aispiay		
	Speed specification when RND input is ON	RND.	1203	0	L	-	-	rnd.			The sewing machine speed for when the input signal RND is ON.
	,								0	0	The speed will be approximately proportional to the variable speed command VC or VC2 voltage of the lever connector.
									L	L	The speed will be at the speed set in low speed [L].
									u	V	The speed will be at the speed set in condensed stitching speed [V].
									ነ ሽ	М	The speed will be at the speed set in medium speed [M].
									H	Н	The speed will be at the speed set in high speed [H].
	Setting the thread trimming key of control switch panel (mark of scissors) valid or invalid, when the preset stitching is active.	NTL.	1204	0	OF	-	-	nſL.	8F	ON OF	The thread trimming by the control panel scissors switch when preset stitching is ON will be validated (enabled).
K mode	Decelerate per step when Continuous is set with control panel XC-G500-Y	CNM.	1205	0	OF	-	-	Enfl.	SF	ON OF	The speed will decelerate at each step when Continuous is set with the control panel XC-G500-Y.
+ + + A + A 1-2	DN signal is valid during the virtual DOWN control	KD2.	1206	0	OF	-	-	£62.	or of	ON OF	During operation control (virtual DOWN) by only the needle UP position signal UP, the DOWN position signal DN will also be valid. The value set for the reverse run angle K8 from the DOWN position to the UP position in the [B] mode, must be smaller than the angle at which the DN signal turns ON.
+ C+	Validity of operation delay when IO1 signal is input	IOD.	1207	0	OF	-	-	ıod.	on of	ON OF	When the signal IO1 (output to the virtual output OT1) is input, the operation delay [S7B.] is validated. This is valid when the function IO1 is [R0], [RL], [RV], [RM], [RH].
	Delay to motor drive after B output ON	S7B.	1208	0	5	X10 msec	1 ~ 99	576.	**	**	The delay time to motor drive after backstitching output (B) output starts can be set. The factory setting [5] refers to [$5 \times 10 = 50$] msec.
	Delay when S2 signal is U or UF	UFD.	1209	0	OF	-	-	UF d.	or of	ON OF	The delay time set in the P mode S3D will forcibly be added to the delay time when the A mode S2 signal operation mode S2M is set to U or UF.
	Not used	E8R.	1210	0	OF	-	-	E8r.	on oF	ON OF	Not used.
	Not used	MRA.	1211	0	OF	-	-	Nr A.	0 0 F	ON OF	Not used.
	UP position needle lifting at the power is turned ON	PAP.	1212	0	OF	-	-	PRP.	0.F	ON OF	If the needle UP position is applied at the power is turned ON when the P1P or P2P setting is [ON], the needle will be lifted. (Sewing machine rotates once again.)

Moo			Dii	ဝွ	Factory			Function name	Set	ting	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	D: :: 1			Specification
ame			er all	lity	GMFY			Digital	display		
	One stitch operation mode during UCR setting	ST1.	1213	0	OF	-	-	SF 1.			One stitch operation starts from the needle position when the input signal UCR is input during the sewing machine stopped.
									٥٥	ON	Regardless of the position switch (1-2), one stitch operation starts to the next UP position when stopped at the needle UP position, or to the next DOWN position when stopped at the needle DOWN position.
									oF	OF	The sewing machine will rotate to the next position designated with the position switch (1-2).
	Setting one stitch operation, when "S01" signal is set	IT1.	1214	0	OF	-	-	ıL I	or or	ON OF	The "I1" signal ON becomes one stitch operation from that position, when No. 6 pin of the option connector "B" (I1 input signal) is set to "S01" function.
	Operation mode during thread trimming protection signal (S6) input/release	S6M.	1215	0	РО	-	-	56N.			The sewing machine stopping state when the thread trimming protection signal (S6) is input during sewing machine operation, and restarting methods after turning (S6) OFF are selected.
K mode									Po	РО	The sewing machine stopping state will follow the settings of the [A] key in the normal mode, and will stop at the UP or DOWN position. If the thread trimming protection signal (S6) is released when the external operation signal (S0, S1, SH) is ON, operation can be resumed when released.
+ + + A + A -									£5	ES	The sewing machine stopping state will be random. When the thread trimming protection signal (S6) is released, operation will not be possible if the external operation signal (S0, S1, SH) is ON. Turn the operation signal (S0, S1, SH) OFF, and then turn the operation signal (S0, S1, SH) ON to resume operation.
+ C +	Thread trimming protection signal (S6) operation mode	S6A.	1216	0	OF	-	-	56 <i>R</i> .			If input S6 turns ON during sewing machine operation, all operation states will be canceled, including thread trimming operation, and the sewing machine will stop.
									٥٥	ON	If signal S6 turns ON in all cases, including thread trimming, all operations will be canceled and the sewing machine will stop.
									٥F	OF	If signal S6 turns ON during thread trimming, the thread trimming will be continued and the sewing machine will stop when completed.
	End tacking mode when TR function is set to chain stitch	KTM.	1217	0	OF	-	-	FLU.			End tacking operation when thread trimming mode TR in the mode [P] or the thread trimming mode TR in the mode [G] is set to chain stitch.
									٥٥	ON	The end tacking operation for the lock stitch system will be applied.
									οF	OF	The end tacking operation for the chain stitch system will be applied.
	Lock stitch tacking menu display	KDM.	1218	0	OF	-	-	FAN.	or of	ON OF	The lock stitch tacking menu is displayed if the end tacking mode KTM is ON when the thread trimming mode TR is set to chain stitch, and the TR function is set to chain stitch.
	U, UF signal needle lift prohibit at position other than set position	UFP.	1219	0	OF	-	-	UF P.	or or	ON OF	The needle lifting operation is prohibited when the set position is deviated from and the needle lift signal U, needle lift and presser foot lift signal UF are ON.
	Weak brake validity when UP signal is ON	UPB.	1220	0	OF	-	-	UPb.	or of	ON OF	The weak brakes are validated when the needle UP position signal UP is ON. This is valid when the function BK in A mode is [ON].
	Weak brake forced OFF when stopped with ES signal	ESB.	1221	0	OF	-	-	£5b.	or of	ON OF	The weak brakes are forcibly turned OFF when stopped with the emergency stop signal ES.

Mo			n Di	Q Q	Factory			Function name	Sett	ing	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	display		Specification
ਜ ਰ			_	4	GMFY						
	UP position detection stop	UPS.	1222	0	OF	-	-	UPS.	on	ON	Stop control when needle UP position is detected. The stop control of low speed detection control is applied. This is valid when the function NAN in K mode is [ON].
									οF	OF	The stop control of high speed positioning is applied.
	Stop status after low speed detection	UP2.	1223	0	OF	-	-	UP 2.	or of	ON OF	The sewing machine will always rotate once and then stop after the low speed is detected. This is valid when the function NAN is [ON] and UPS is [ON].
	Low speed detection speed	K.	1224	Х	280	rpm	$0\sim 2999$	Ł.	****	****	The low speed detection speed can be set.
V	Deceleration mode	NAN.	1225	0	OF	-	-	n8n.	oF oF	ON OF	Deceleration is not started when needle position is detected after the run signal is turned OFF, but starts immediately when the run signal turns Off.
K mode	Presser foot lifter operation during emergency stop	ESF.	1226	0	OF	-	-	ESF.	or of	ON OF	The presser foot lifter can be operated during emergency stop by the emergency stop signal (ES) is turned ON.
+ + +	OP output and OP1 output prohibit at restart	PRC.	1227	0	OF	-	-	Pr[.	or or	ON OF	The OP output and OP1 output is prohibited when the sewing machine restart. It is reset by the power switch is [ON] again. This is valid when the function PR is [ON] and P1R is [ON].
+ A + - 1-2	S2 signal validity when S6 signal is ON.	TS6.	1228	0	OF	-	-	£55.	or of	ON OF	The thread trimming signal S2 will be valid when the thread trimming safety signal S6 is ON. Note that the motor will not rotate.
+ C+	Speed loop stopping control when the machine is overrun with the preset stitching	PNC.	1229	0	OF	-	-	PnC.	or or	ON OF	When this function setting is [ON], the stopping control when the sewing machine is overrun with the preset stitching will be the No. of stitches priority stop. (The stop position is loose.) When this function setting is [OF], it will be the needle position priority stop. (It may be one rotation.)
	Input port IL, I1 and I2 software noise filter validity	MFN.	1230	0	OF	-	-	ΠF n.	8F	ON OF	The software noise filter for the input port IL (inside control box signal), input port I1 (option B connector No. 6 pin) and input port I2 (option B connector No. 9 pin) is invalidated.
	All input port software noise filter validity	PFN.	1231	0	OF	-	-	PF n.	or of	ON OF	The software noise filters for all input ports are invalidated.
	No. of stitches for noise removal during sensor input setting	SEF.	1232	0	0	stitche s	0 ~ 99	SEF.	**	**	The No. of stitches for removing the noise during sensor input can be set.
	Deceleration state during PSU, PSD signal ON	PSM.	1233	0	OF	-	-	PSN.	8F	ON OF	The sewing machine will decelerate immediately when the UP position priority stop signal PSU or DOWN position priority stop signal PSD turn ON. Note that during the preset stitching, the stitching will continue at a low speed.
	Low stitching speed validity when the preset stitching is two stitches	2ST.	1234	0	OF	-	-	251.	or or	ON OF	The stitching speed must not be set to the low speed L when tacking or preset stitching is two stitches or less.
	No. of set stitch stitching speed when PSU, PSD, SEN signal is ON	PSS.	1235	0	OF	-	-	P55.			This is the stitching speed for the set No. of stitches when the UP position priority stop signal PSU, DOWN position priority stop signal PSD or sensor signal SEN is ON.
									٥٥	ON	The stitching speed of the setting No. of stitches is set to the middle speed M.
]				l o F	OF	The speed when PSU, PSD, SEN signal turn ON is continued.

Mo	Mode Function name		n Di	ဝွ	Factory			Function name	Set	ting	
de nar	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	display		Specification
ne			_ ≡	ξ	GMFY			2.9	۵.۵۶.۵۶		
	Speed at PSU, PSD, SEN signal is ON	PSK.	1236	0	OF	-	-	PSŁ.			This is the speed for when the UP position priority stop signal PSU, DOWN position priority stop signal PSD or sensor signal SEN is ON.
									on	ON	The speed before the PSU, PSD, SEN signal was turned ON is maintained.
									oF	OF	The speed is set to the variable speed.
	No. of stitches for removing noise when PSU signal is ON	PUF.	1237	0	0	stitche s	0 ~ 99	PUF.	**	**	The No. of stitches for removing noise with the No. of stitches of UP position priority stop signal PSU can be set.
	No. of stitches for removing noise when PSD signal is ON	PDF.	1238	0	0	stitche s	0 ~ 99	PdF.	**	**	The No. of stitches for removing noise with the No. of stitches of DOWN position priority stop signal PSD can be set.
K mode	Zigzag during continuous tacking	CDR.	1239	0	OF	-	-	Edr.	or of	ON OF	When using continuous tacking, and the tacking operation mode D1 in the [D] mode is set to D, the speed will forcibly be set to the medium speed M when the run signal S1 turns OFF. And the thread trimming signal S2 will be validated only at the stitching angle in all continuous tacking modes.
1	No. of stitches of zigzag stitch (sway width) setting	ZNC.	1240	0	0	stitche s	0 ~ F	EnE.	*	*	The No. of stitches of zigzag stitching (sway width) can be set. (No. of stitches of thinning)
+	BCR operation after thread trimming	BRC.	1241	0	OF	-	-	br [.	on of	ON OF	The set angle (reverse run/forward run) signal BCR operation is validated only after thread trimming.
+ A + + +	Actual No. of USR operations	USN.	1242	0	OF	-	-	USn.			This is the actual No. of reverse run needle lifting operation USR up to the set angle.
1-2									on	ON	Can be executed any number of times.
C +									on oF	OF	Can be executed only once.
	W output mode during S2R=OFF setting	2RW.	1243	0	ON	-	-	2r B.	on oF	ON OF	If the P mode S2 signal operation mode S2R is set to OF, the wiper output (W) will be output even if the motor is not revolving with full heeling at the needle UP position stop.
	O1 output prohibit during tacking and thread trimming	втс.	1244	0	OF	-	-	ЬΓ (.	or of	ON OF	O1 output is prohibited during tacking and thread trimming.
	OP output prohibit/permit changeover with input I1 during operation	PR.	1245	0	OF	-	-	Pr.			The operation output OP prohibit/permit changeover is executed when input I1 turns ON during sewing machine operation.
	3 44 4 4 4								an	ON	OP output is prohibited during sewing machine operation.
									on oF	OF	OP output is permitted during sewing machine operation.
	OP1 output prohibit/permit changeover with input I1 during operation	P1R.	1246	0	OF	-	-	P Ir.			The operation output OP1 prohibit/permit changeover is executed when input I1 turns ON during sewing machine operation.
									on oF	ON OF	OP1 output is prohibited during sewing machine operation. OP1 output is permitted during sewing machine operation.
	B output OFF prohibit mode during thread trimming	TBC.	1247	0	OF	-	-	ΓЬ[.	or of	ON OF	Turning the backstitch output B OFF at the needle DOWN position during thread trimming is prohibited.
	KS3 output and TF output prohibit during TL input ON	KTL.	1248	0	OF	-	-	FLF.	or oF	ON OF	The KS3 output and TF output are invalidated when thread trimming cancel signal TL is ON.

								Function			
Mode name			Direct call number	Оре	Factory		Cotting	name	Set	ting	
e na	Function name		ect c	Operability	setting	Unit	Setting range	District	dia a la co		Specification
ame			er all	llity	GMFY			Digital	display		
	Presser foot operation of F, S2, S3 signal is OFF when FUM function is ON, FU function is M or C.	FLC.	1249	0	OF	-	-	FLC.			The presser foot operation mode when the presser foot output FU stays ON and the full heeling (presser foot lift signal F, thread trimming signal S2, presser foot lift signal S3) is OFF.
	Turicular is in or c.								٥٥	ON	The FU output turns OFF (lowers) when the full heeling (F, S2, S3 signals) is OFF.
									οF	OF	The FU output does not turn OFF when the full heeling (F, S2, S3 signals) is OFF.
	T output, L output protection function	SPT.	1250	0	ON	-	-	SPT.	or oF	ON OF	The thread trimming solenoid T and thread release solenoid L are protected. (Solenoid damage prevention)
	Wiper output W ON simultaneously with presser foot lifting output FU	FW.	1251	0	OF	-	-	FB.	0F	ON OF	The wiper output W will turn ON when the presser foot lifting output FU turns ON.
K mode	Input signal check function when power is turned on	PS1.	1252	0	OF	-	-	P5 !.			If the input signal is S01, BC, BCR or USR, etc., and is ON when the power is turned ON, the set function will be invalidated. Turn the input signal OFF once and turn ON again, and the set function will be validated.
† † †									00	ON	When main power is turned ON, the system of control box confirm the "ON" "OFF" condition related run signal, excluding one stitch operation signal. If the run signal is "ON", this run signal has to be turned off once to be run.
+ A + 1-2									oF	OF	It is not confirmed about the "S01", "BC", "BCR" and "USR", when main power switch is turned ON.
+ C+	Setting program stitch of the control switch panel	B2O.	1253	Χ	OF	-	-	b2o.			Setting the backstitch (reverse feed) output of control switch panel in each step of program stitching.
									00	ON	Backstitch (reverse feed) output of step set to virtual output "OT1" in program stitching.
									٥F	OF	Backstitch (reverse feed) output of step set to output. "B" in program stitching.
	Setting "OT1" output while "B" output is ON	тов.	1254	0	OF	-	-	ГоЬ.			Setting virtual output "OT1" when the backstitch (reverse feed) output "B" is turned ON.
									on oF	ON	"OT1" output is turned ON when "B" output is turned ON.
									oF	OF	"OT1" output is not turned ON even if "B" output is turned ON.
	Special specification setting of limit control.	2SL.	1255	0	OF	-	-	25L.	op of	ON OF	The speed limit which uses special specification of input signal "SPB" and "SPM". [ON]:The speed limit function by an external input signal is valid. [OF]:The speed limit function by an external input signal is invalidated.
	Setting output at FWD input ON	NCK.	1256	0	ON	-	-	nΕŁ.			Setting output action when non-stitch feed input "FWD" is turned ON. (Union Special correspondence specification)
									οņ	ON	Output "OT3" and "FU" are ON while "FWD" input is ON.
	Needle lift function is		-			-			oF	OF	Output "OT3", "FU" and "NCL" are ON while "FWD" input is ON.
	invalidated, excluding the needle down position.	UDN.	1257	0	OF	-	-	Udn.	or of	ON OF	Needle lift function is prohibited, excluding the needle down position.
	The set value of full speed	FSL.	1258	0	90	%	1 ~ 98	FSL.	**	**	The value of full speed (standard value) can be set by percentage.

Mo			n Di	ဝ္ပ	Factory			Function name	Sett	ing	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	dienlay		Specification
me			r all	Ϊţ	GMFY			Digital	шэргау		
	Not used	UPR.	1259	0	OF	-	-	UPr.	0 O Cr	ON OF	Not used.
	Operation gain for the big inertia sewing machine	HWG.	1260	0	OF	-	-	H86.	or F	ON OF	Operation gain for the big inertia sewing machine is valid.
K mode	Stop by pedal neutrality under operation PSU, PSD, PS1, PS2	PPS.	1261	X	OF	1	1	PPS.	SF.	ON OF	The sewing machine stops when the pedal is neutralized while counting the number of set stitches when the PSU, PSD, PS1, PS2 signal is turned on. When the pedal is toe down again, the number of stitches of the remainder is sewn. When the heeling or the trimming signal S2 is turned ON while stopping, the trimming operates, and the number of stitches of the remainder is cleared.
1	Not used	PCB.	1262	Х	OF	-	-	PC 6.	0 و تب	ON OF	Not used.
+	Not used	TQT.	1263	0	0	%	$0\sim99$	<i>.</i> 97.	**	**	Not used.
† + A*	Not used	E8T.	1264	0	0	X100 msec	$0\sim99$	E8F.	**	**	Not used.
+ C +	Not used	WBO.	1265	Х	OF	-	-	86 o.	or of	ON OF	Not used.
C	Not used	R3D.	1266	0	OF	-	-	r 3d.	on of	ON OF	Not used.
	Not used	MEA.	1267	0	OF	-	-	NER.	on oF	ON OF	Not used.
	Not used	ocs.	1268	0	OF	-	-	o E S.	on of	ON OF	Not used.
	Step ON/OFF	STP.	1269	0	OF	-	-	SFP.	op of	ON OF	The step sequence is started.
	Number of step execution lines.	STS.	1270	0	1	-	1 ~ 4	5 <i>r</i> 5.	*	*	The execution of the step a main number of lines can be specified.
	Not used	HDS.	1271	0	OF	-	-	H&5.	on oF	ON OF	Not used.
	Not used	1ST.	1272	0	OF	-	-	IST.	0F	ON OF	Not used.

Mode			, <u>D</u>	ဝွ	Factory			Function name	Set	ting	
de name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	display		Specification
ne			· =	ty	GMFY			3			
	Virtual S1 operation with VC levels	VCS.	1400	Х	OF	ı	-	υ ር 5.	or of	ON OF	The virtual operation signal S1 is turned ON when the variable speed voltage VC1 and VC2 exceeded the set voltage level.
	Setting of VC1 and VC2 where virtual S1 turns ON	VCL.	1401	Х	24	-	1 ~ 99	υCL.	**	**	The voltage level of the variable speed voltage VC1 and VC2 where virtual run signal S1 turns ON.
	Input voltage hysteresis during virtual S1 signal ON/OFF by VC and VC2 level	VCD.	1402	x	4	-	0 ~ 99	υ[d.	**	**	The voltage level hysteresis width for judging the ON/OFF of the virtual S1 signal when VCS turns ON can be set.
	VC curve reversal mode	V1R.	1403	Х	OF	-	-	u Ir.	or oF	ON OF	The voltage curve of the variable speed voltage VC1 is reversed.
	VC input 5V/12V changeover mode	V15.	1404	Х	OF	-	-	u 15.			The VC1 input range is set to 0~5V.
									on oF	ON OF	VC1 maximum input voltage is set to 5V VC1 maximum input voltage is set to 12V
Q mode	VC2 operation mode	VC2.	1405	Х	VC	-	_	υ <i>[: 2.</i>	or	OF .	The external analog input VC2 function is set.
1	·						-	000.		VC	Speed command input
+										VS	The virtual S1 signal turns on with the input voltage, and the sewing machine runs. This also acts as the speed command input.
A + + + + + + + + + + + + + + + + + + +										VR	The VC2 input acts as the variable resistor on the control box panel, and the variable resistor is invalidated.
C +										BC	During operation with the BC and BCR input, the speed set with the program P mode C8 is invalidated, and the speed is controlled with the
										ВС	VC2 input.
										LM	The speed control input for reciprocal stroke change.
										MD	The value set in the program P mode M is invalidated, and the middle speed is controlled with the VC2 input voltage.
										1	Virtual input IO1 is selected
	VC2 curve reversal mode	V2R.	1406	Х	OF	-	-	υ2r.	or of	ON OF	The external analog input VC2 curve is reversed.
	VC2 input 5V/12V changeover mode	V25.	1407	Х	ON	-	-	u25.	or of	ON OF	The VC2 input range is set to 0~5V. [ON]VC2 maximum input voltage is set to 5V [OF]VC2 maximum input voltage is set to 12V
	Speed limiter curve inflection point 1 percentage	VL1.	1408	0	67	-	1 ~ 99	uL I.	**	**	The inflection point is set when using the reciprocal stroke change specification speed limiter process (VC2 = LM).
	Speed limiter curve inflection point 1 point	VP1.	1409	0	40	-	1 ~ 99	υP I.	**	**	Setting inflection point 1
	Speed limiter curve inflection point 2 point	VP2.	1410	0	70	-	1 ~ 99	υP2.	**	**	Setting inflection point 2

Mo			n Di	Op	Factory			Function name	Sett	ting	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	display		Specification
ne			, <u>=</u>	₹	GMFY			9			
	Operation speed limit specification mode 1	FLM.	1411	0	OF	-	-	FLN.	or or	ON OF	Operation speed limit is valid when all the below condition are met. 1. "VC2" operation mode" is set to "LM or LIM, medium speed limit mode during OT1 output ON" is set to "ON". 2. "RFU, operation mode with F input during sewing machine operation is set to ""ON". 3. The presser foot lifting output is ON.
	Operation speed limit specification mode 2	2LM.	1412	0	OF	-	-	ST U	or of	ON OF	The speed limit is valid only if the virtual output OT2 is ON when the VC2 operation mode is set to LM or the medium speed limit function LIM is set to ON during OT1 output ON.
	Speed command value correctly by middle speed digital during speed limit process	LMD.	1413	0	OF	-	-	L Nd.	oc.	ON OF	The middle speed during the speed limit process is read into the speed command value (speed high speed signal SPH, speed end tacking signal SPB, speed medium speed signal SPM, high speed run signal S4, end tacking speed run signal S5V, medium speed run signal S5) other than the low speed from an external source by the digit.
	Speed limit with digital speed setting on operation panel	HMD.	1414	0	OF	-	-	HNd.	9F	ON OF	The speed during stitching other than tacking is limited by the digital speed setting (LED.C and D) on operation panel.
Q mode	Ignore detector error	E8C.	1415	0	OF	-	-	E8C.			The sewing machine detector error E8 will be ignored. If a signal is not received from the sewing machine detector within a set time during operation, the detector error E8 will not be displayed. If a signal is not received from the sewing machine detector within a set time during operation, the detector error E8 will be displayed and the sewing machine will stop.
+									0.0 0.F	ON OF	
A + 1-2 +	Thread break sensor valid	TH.	1416	0	OF	_	-	ГH.	on of	ON OF	The thread break detector is validated.
C +	Operation after thread break sensor detection	TST.	1417	0	TR	-	-	rsr.	<u> </u>		The operation after the thread break is detected (thread break sensor detection) is set.
	Sensor detection								00	NO	The operation continues, and the thread break sensor output THO turns ON.
									Γ _Γ	TR	The sewing machine stops after the thread trimming, and then the thread break sensor output THO turns ON.
									Sr	ST	The sewing machine stops normally, and then the thread break sensor output THO turns ON.
	Speed to ignore thread break sensor	В.	1418	0	600	rpm	0 ~ 8999	Ь.	****	****	The speed to ignore the thread break sensor can be set.
	No. of stitches to ignore thread break sensor after starting stitching	THS.	1419	0	7	stitche s	$0\sim F$	rhs.	*	*	Setting the number of stitch that the sensor of thread break detector becomes valid from first stitch.
	Number of stitches for judgment of thread break	THF.	1420	0	0	stitche s	0 ∼ F	ΓHF.	*	*	The No. of stitches to judge the thread break detection when the thread break sensor input continues for a certain number of stitches can be set.
	Operation mode with F input during sewing machine operation	RFU.	1421	0	OF	-	-	rFU.	8F	ON OF	The presser foot lifting output will turn ON by turning ON the presser foot lifting signal F during sewing machine operation. Note that the presser foot lifting signal S3 is invalid during sewing machine operation.

Mode			p Dir	ဝွ	Factory			Function name	Sett	ing	
de name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital o	displav		Specification
ne			· =	₹	GMFY			3	,		
	Output of back tacking output (B) during OT1 output ON inhibited	S7C.	1422	0	OF	-	-	57C.	or of	ON OF	The output of the backstitching output (B) with input S7 is inhibited while the virtual output (OT1) is ON.
	Medium speed (M) limit mode during OT1 output ON	LIM.	1423	0	OF	-	-	L iff.	or of	ON OF	The speed will be limited to that set in medium speed M while virtual output (OT1) is ON.
	Simultaneously ON of OP1 output during OT1 output ON	O1P.	1424	0	OF	-	-	o IP.	or of	ON OF	OP1 output will turn ON simultaneously when virtual output (OT1) is ON.
	Disregard of S3 signal of Lever Unit	LVB.	1425	0	ON	-	-	Lub.	or of	ON OF	When the lever unit run signal S1 is ON, the presser foot lift signal S3 will be ignored even when received.
Q	1 step heeling setting for the internal lever unit	PD1.	1426	0	OF	-	-	Pd l.	or of	ON OF	The heeling operation of the pedal will be 1 step heeling operation.
mode	Adjustment mode for the internal lever unit	VCSE T.	1427	X	-	-	-	υCSEΓ.			The neutral of the internal lever unit, toe down, and the heeling position can be adjusted.
+	Not used.	MTJ.	1428	0	OF	-	-	NF J.	or of	ON OF	Not used.
+ A +	Not used.	MOA.	1429	0	7	stitche s	$0\sim99$	NoR.	**	**	Not used.
+	Not used.	мов.	1430	0	7	stitche s	0 ~ 99	ПоЬ.	**	**	Not used.
C +	Not used.	MOC.	1431	0	7	stitche s	0 ~ 99	ΠοC.	**	**	Not used.
	VC assistance ON/OFF	VCA.	1432	0	OF	-	-	υ[A.	or of	ON OF	The speed curve to the amount of depressing changes depending on the pedal stepping speed.
	Strength of VC assistance	VCP.	1433	0	50	-	$0\sim99$	υ[P.	**	**	The amount of the changes by the depressing speed can be set.

Mode			, D	g g	Factory			Function name	Set	ting	
ide na	Function name	Function name		Setting range		dia a la c		Specification			
name			er all	ility	GMFY			Digital	display		
	KS1, KS2 output run mode	KSM.	1500	0	OF	-	-	F2U			This is the virtual output KS1 and KS2 run mode.
									on	ON	The KS1 and KS2 output swill turn ON only during normal operation.
									oF	OF	During the one needle stitching, half-stitching (one needle stitching signal S01, needle lift signal U, half-stitching signal UD, backstitching during run signal US, backstitching during run signal UDS, etc.), the outputs KS1 and KS2 will turn ON.
	Simple sequence start conditions	SQS.	1501	0	NO	-	-	595.			The simple sequence start conditions are set.
									nο	NO	The simple sequence will not start.
									Ωبر	IN	When the virtual input IO4 is ON.
									1	T	When the thread trimming is completed.
									<u>r</u>	R	When run starts. When the motor starts. (This includes while stopped during the one
									5	s	needle stitching run.)
S									ſr	TR	When stitching starts after thread trimming. When start tacking is completed. (If the start tacking setting is OFF, the
mode									56	SB	When start tacking is completed. (If the start tacking setting is OFF, the operation will be identical to [TR].)
1									Ũο	GO	Normal starting.
+ B +	Simple sequence forced end conditions	SQE.	1502	0	NO	-	-	598.			The simple sequence forced end conditions are set.
B + st									no	NO	The simple sequence will not forced end.
D +									Lu	LV	When the virtual input IO5 is ON level.
									<u></u> n	IN	When the virtual input IO5 is ON.
									<u> [</u>	Т	When the thread trimming is completed.
									<u>r</u>	R	When run starts.
									5	S	When the motor starts. (This includes while stopped during the one needle stitching run.)
									ſr	TR	When stitching starts after thread trimming.
									56	SB	When start tacking is completed. (If the start tacking setting is OFF, the operation will be identical to [TR].)
	Simple sequence output KS1 output beginning is time or the number of stitch is selected	NS1.	1503	0	OF	-	-	n5 l.			Selection stitch amount and time till ON for simple sequence output "KS1". (Amount have to be set at "K11")
	30,00,00								οn	ON	Stitch amount is counted till ON
									οF	OF	Time is counted till ON (10 mill-second per each)
	Simple sequence output KS1 output is time or the number of stitch is selected	NE1.	1504	0	OF	-	-	nE I.			Selection stitch amount and time till OFF for simple sequence output "KS1". (Amount have to be set at "K12")
									on	ON	Stitch amount is counted till OFF
									oF	OF	Time is counted till OFF (10 mill-second per each)

Mode			D <u>i</u>	Qp	Factory			Function name	Setti	ing	
	Function name		Direct cal	Operability	setting	Unit	Setting range	Digital o	lisplay		Specification
lame		= < GMFY		портау							
	Output beginning standard of simple sequence output KS1	S1S.	1505	0	KS	-	-	5 15.			The simple sequence output starting point setting [S1S] can be set.
									٤5	KS	Linked output. (ON edge of the front output)
									ın	IN	Virtual input ON point. (KS1:IO6, KS2:IO7, KS3:IO8, KS4:IO9)
									ſ	Т	When the thread trimming is completed.
									٦	R	When run starts.
									5	s	When the motor starts. (This includes while stopped during the one
									<u> </u>	TR	needle stitching run.)
											When stitching starts after thread trimming. When start tacking is completed. (If the start tacking setting is OFF, the
									56	SB	operation will be identical to [TR].)
	Output end standard of simple sequence output KS1	S1E.	1506	0	KS	-	-	5 IE.			The simple sequence output end point setting [S1E] can be set.
									٤5	KS	Linked output. (Each output starting point)
									οF	OF	Virtual input OFF point. (KS1:IO6, KS2:IO7, KS3:IO8, KS4:IO9)
									۲n	IN	Virtual input ON point. (KS1:IOA, KS2:IOB, KS3:IOC, KS4:IOD)
;									Γ	Т	When the thread trimming is completed.
•									<u></u>	R	When run starts.
									5	S	When the motor starts. (This includes while stopped during the one needle stitching run.)
									ſr	TR	When stitching starts after thread trimming.
									56	SB	When start tacking is completed. (If the start tacking setting is OFF, the operation will be identical to [TR].)
	Simple sequence output KS2 output beginning is time or the number of stitch is selected	NS2.	1507	0	OF	-	-	n5 <i>2</i> .			Selection stitch amount and time till ON for simple sequence output "KS2". (Amount have to be set at "K21")
	- Sciooled								90	ON	Stitch amount is counted till ON
									oF	OF	Time is counted till ON (10 mill-second per each)
	Simple sequence output KS2 output is time or the number	NE2.	1508	0	OF	-	-	nE 2.			Selection stitch amount and time till OFF for simple sequence output "KS2". (Amount have to be set at "K22")
	of stitch is selected									ON	Stitch amount is counted till OFF
									on oF	OF	Time is counted till OFF (10 mill-second per each)

Mode			n Dji	Ор	Factory			Function name	Setti	ng	
na	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	diantav		Specification
me			ell l	lity	GMFY			Digital C	Digital display		
	Output beginning standard of simple sequence output KS2	S2S.	1509	0	KS	-	-	525.			The simple sequence output starting point setting [S2S] can be set.
									٤5	KS	Linked output. (ON edge of the front output)
									in	IN	Virtual input ON point. (KS1:IO6, KS2:IO7, KS3:IO8, KS4:IO9)
									7	Т	When the thread trimming is completed.
									٦	R	When run starts.
									5	S	When the motor starts. (This includes while stopped during the one needle stitching run.)
									ſr	TR	When stitching starts after thread trimming.
									56	SB	When start tacking is completed. (If the start tacking setting is OFF, the operation will be identical to [TR].)
	Output end standard of simple sequence output KS2	S2E.	1510	0	KS	-	-	5 <i>2E</i> .			The simple sequence output end point setting [S2E] can be set.
S									٤5	KS	Linked output. (Each output starting point)
mode									οF	OF	Virtual input OFF point. (KS1:IO6, KS2:IO7, KS3:IO8, KS4:IO9)
4									<u></u>	IN	Virtual input ON point. (KS1:IOA, KS2:IOB, KS3:IOC, KS4:IOD)
+									<u> [</u>	Т	When the thread trimming is completed.
B +									<u></u>	R	When run starts.
+									5	S	When the motor starts. (This includes while stopped during the one needle stitching run.)
D +									1	TR	When stitching starts after thread trimming.
									56	SB	When start tacking is completed. (If the start tacking setting is OFF, the operation will be identical to [TR].)
	Simple sequence output KS3 output beginning is time or the number of stitch is selected	NS3.	1511	0	OF	-	-	n53.			Selection stitch amount and time till ON for simple sequence output "KS3". (Amount have to be set at "K31")
	SCICCIGA									ON	Stitch amount is counted till ON
									on oF	OF	Time is counted till ON (10 mill-second per each)
	Simple sequence output KS3 output is time or the number	NE3.	1512	0	OF	-	-	nE 3.	J.		Selection stitch amount and time till OFF for simple sequence output "KS3". (Amount have to be set at "K32")
	of stitch is selected									ON	l
									<u> </u>	ON	Stitch amount is counted till OFF
									oF	OF	Time is counted till OFF (10 mill-second per each)

Mode			n D <u>i</u>	ဝွ	Factory			Function name	Sett	ing	
na	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital o	display		Specification
ıme			all r	ity	GMFY			Digital	лоріцу		
	Output beginning standard of simple sequence output KS3	S3S.	1513	0	KS	-	-	535.			The simple sequence output starting point setting [S3S] can be set.
									٤5	KS	Linked output. (ON edge of the front output)
									ın	IN	Virtual input ON point. (KS1:IO6, KS2:IO7, KS3:IO8, KS4:IO9)
									1	Т	When the thread trimming is completed.
									٢	R	When run starts.
									5	S	When the motor starts. (This includes while stopped during the one needle stitching run.)
									[r	TR	When stitching starts after thread trimming.
									56	SB	When start tacking is completed. (If the start tacking setting is OFF, the operation will be identical to [TR].)
	Output end standard of simple sequence output KS3	S3E.	1514	0	KS	-	-	5 <i>3E</i> .			The simple sequence output end point setting [S3E] can be set.
S									٤5	KS	Linked output. (Each output starting point)
mode									oF	OF	Virtual input OFF point. (KS1:IO6, KS2:IO7, KS3:IO8, KS4:IO9)
1									ַוַת	IN	Virtual input ON point. (KS1:IOA, KS2:IOB, KS3:IOC, KS4:IOD)
+									<i>. I</i>	T	When the thread trimming is completed.
B + s L									<u> </u>	R	When run starts.
+									5	S	When the motor starts. (This includes while stopped during the one needle stitching run.)
D [±]									[r	TR	When stitching starts after thread trimming.
									56	SB	When start tacking is completed. (If the start tacking setting is OFF, the operation will be identical to [TR].)
	Simple sequence output KS4 output beginning is time or the number of stitch is selected	NS4.	1515	0	OF	-	-	n54.			Selection stitch amount and time till ON for simple sequence output "KS4". (Amount have to be set at "K21")
									on	ON	Stitch amount is counted till ON
									οF	OF	Time is counted till ON (10 mill-second per each)
	Simple sequence output KS4 output is time or the number of stitch is selected	NE4.	1516	0	OF	-	-	nE4.			Selection stitch amount and time till OFF for simple sequence output "KS4". (Amount have to be set at "K22")
	or suiton is selected									ON	Stitch amount is counted till OFF
									on nE	OF	Time is counted till OFF (10 mill-second per each)
									l Or	Oi	Time is counted till Of F (10 Hilli-second per each)

Mo			n D <u>i</u> r	မွ	Factory			Function name	Set	ting	
Mode name	Function name		Direct call number	Operability	setting	Unit	Setting range	Digital	dianlay		Specification
me			all all	lity	GMFY			Digital	Digital display		
	KS3 output [Time]/[No. of Stitches] setting	K32.	1524	0	7	X10 msec stitche s	0 ~ 99	£ 3 <i>2</i> .	**	**	The output time/output start No. of stitches for the simple sequence output KS3 can be set. When using time, the setting value will be (7) x 10 = 70 msec. When using No. of stitches, the setting value will be (7) x 1 = 7 stitches.
	KS4 output start [Time]/[No. of Stitches] setting	K41.	1525	0	7	X10 msec stitche s	0 ~ 99	E4 !	**	**	The output start time/output start No. of stitches for the simple sequence output KS4 can be set. When using time, the setting value will be (7) x 10 = 70 msec. When using No. of stitches, the setting value will be (7) x 1 = 7 stitches.
	KS4 output [Time]/[No. of Stitches] setting	K42.	1526	0	7	X10 msec stitche s	0 ~ 99	£42.	**	**	The output time/output start No. of stitches for the simple sequence output KS4 can be set. When using time, the setting value will be (7) x 10 = 70 msec. When using No. of stitches, the setting value will be (7) x 1 = 7 stitches.
	KS1 output run mode	K1M.	1527	Х	ON	-	-	E ITI.			This is the output KS1 run mode for when the simple sequence start conditions [SQS] are set to NO.
S mode									on of	ON OF	The KS1 output is output each time the start conditions are established. The KS1 output is output only when the start conditions are established after thread trimming.
. 1	Run prohibit during KS1 output ON	K1D.	1528	0	OF	-	-	E 1d.	or of	ON OF	Running is prohibited while the output KS1 is ON. (This is valid only when the simple sequence start conditions [SQS] are set to NO.)
+ B + B + D + D +	K11, K12 time clear during KS1 output ON	K1C.	1529	0	OF	-	-	E IE.	or of	ON OF	The K11 and K12 timers will be cleared and the KS1 output will be turned OFF when the sewing machine stops (motor turns OFF) even when the output KS1 timer is continuing. (This is valid only when the simple sequence start conditions [SQS] are set to NO.)
	K21, K22 time clear during KS2 output ON	K2C.	1530	0	OF	-	-	FSC.	8F	ON OF	The K21 and K22 timers will be cleared and the KS2 output will be turned OFF when the sewing machine stops (motor turns OFF) even when the output KS2 timer is continuing. (This is valid only when the simple sequence start conditions [SQS] are set to NO.)
	K31, K32 time clear during KS3 output ON	K3C.	1531	0	OF	-	-	£ 3C.	er er	ON OF	The K31 and K32 timers will be cleared and the KS3 output will be turned OFF when the sewing machine stops (motor turns OFF) even when the output KS3 timer is continuing. (This is valid only when the simple sequence start conditions [SQS] are set to NO.)
	Increase the number of K11 through K42 by ten	KSL.	1532	0	OF	-	-	ESL.	or of	ON OF	Increase the number of K11, K12, K21, K22, K31, K32, K41, K42 by ten. (ex. 10mS =>100mS, note: Stitch number is not changed.)
	Sequence output time setting/No. of stitch setting each by ten times setting	KL1.	1533	0	OF	-	-	EL I.	or of	ON OF	Sequence output [KS1] [KS2] [KS3] [KS4] time setting/No. of stitch setting each by ten times. [ON]Time setting/No. of stitch setting by ten times ([K11][K12]x10,) [OF]Time setting/No. of stitch setting ([K11][K12])
	Sequence output time setting/No. of stitch setting each by ten times setting	KL2.	1534	0	OF	-	-	FL 2.	or of	ON OF	Sequence output [KS1] [KS2] [KS3] [KS4] time setting/No. of stitch setting each by ten times. [ON]Time setting/No. of stitch setting by ten times ([K21][K22]x10,) [OF]Time setting/No. of stitch setting ([K21][K22])
	Sequence output time setting/No. of stitch setting each by ten times setting	KL3.	1535	0	OF	-	-	EL 3.	or of	ON OF	Sequence output [KS1] [KS2] [KS3] [KS4] time setting/No. of stitch setting each by ten times. [ON]Time setting/No. of stitch setting by ten times ([K31][K32]x10,) [OF]Time setting/No. of stitch setting ([K31][K32])
	Sequence output time setting/No. of stitch setting each by ten times setting	KL4.	1536	0	OF	-	-	EL4.	of of	ON OF	Sequence output [KS1] [KS2] [KS3] [KS4] time setting/No. of stitch setting each by ten times. [ON]Time setting/No. of stitch setting by ten times ([K41][K42]x10,) [OF]Time setting/No. of stitch setting ([K41][K42])

25 Table of input/output function for signal on C mode

	Input signal	Input signal setting table
(The item enclosed with can be used even by "O mode".)	. 7 R. P 5	H
<examp< td=""><td>ole></td><td></td></examp<>	ole>	

		signal setting table	Setti	ng value	
	No.	Setting name		Digital display	Specification
	1	Nothing signal	NO	00	The sewing machine will do nothing even if input NO is turned ON.
	2	Low speed run signal	S0	50	If input S0 is turned ON, the sewing machine will run at the speed set low speed L.
1	3	Variable speed run signal	S1	5 1	This signal is equivalent to full toe down when using the pedal. It is operated at the speed which was set with the [C] [D] key of control switch panel when the automatic operation AT is ON input S1 at the time of ON.
	4	Medium speed run signal	S5	55	If input S5 is turned ON, the sewing machine will run at the speed set medium speed M.
	5	High speed run signal	S4	54	If input S4 is turned ON, the sewing machine will run at the speed set high speed H.
	6	Stop position random run signal	RND	rnd	If input RND is turned ON, the sewing machine will run at the speed so in low speed L, and when stopping the sewing machine will stop at random regardless of the needle position.
	7	Correction stitching signal	COR	[or	If input COR is turned ON, correction stitching will be performed at the speed set in low speed L.
	8	Thread trimmer signal	S2	52	This signal is equivalent to full heeling when using the pedal. When S is ON and thread trimming or needle UP position stop has been completed, the wiper will operate. After that, the automatic presser for lifting will function while the signal is ON.
	9	1 stitch signal	S01	50 I	If input S01 is turned ON, 1 stitch operation will start.
	10	Needle lift signal	U	l l	If input U is turned ON, the needle lift operation will start.
	11	Half-stitch signal	UD	Ud	If input UD is turned ON, half-stitch operation will start.
	12	Constant angle [reverse run/forward run] signal	BC	ЬC	The needle is stopped just above the fabric to confirm the fabric puncture position. Each time the signal turns ON, the operation will alternate between forward - reverse - forward run. If the pedal is toed down or the external run signal (S1) turns ON after that, forward run w start from that position. The needle position stop angle can be set wit needle position stop angle C8 in the [B] mode.
	13	Constant angle [reverse run/forward run] signal	BCR	b[r	The needle is stopped just above the fabric to confirm the fabric puncture position. Each time the signal is turned ON, the operation w alternate between forward - reverse - forward run. If the pedal is toed down or the external run signal (S1) turns ON after stopping at a external run signal (S1) turns ON after stopping at a forward run position, forward run will start after reverse run. If stopped at a revers run position, the sewing machine will forward run from that position. The needle position stop angle can be set with needle position stop angle C8 in the [P] mode.
	14	Constant angle reverse run signal	USR	USr	Reverse run needle lift will be performed to the set angle. The set angle can be adjusted from the DOWN position to UP position with reverse run angle K8 in the [P] mode. This is effective for blind stitch sewing machine.
	15	Needle lift, presser foot lift signal	UF	UF	If input UF is turned ON, the presser foot will lift after needle lifting.
	16	Presser foot lifter signal	S3	53	If input S3 is turned ON after trimming, the presser foot will lift. If inpu S3 is turned ON before trimming, the presser foot will lift, after delay time. The delay time is set by S3D the [P] mode of the 132 page.
	17	Presser foot lifter signal	F	F	If input F is turned ON, the presser foot lifter operation will start.
2	18	Needle UP position priority stop signal	PSU	PSU	If input PSU is turned ON while the sewing machine is running, the needle will stop at the UP position after swing PSU stitches and threatrimming. The no. of stitches after PSU input is set by PSU the [P] mode of 130 page.

^{2.} The setting name will display in the ascending order with each press of the [C] key.

Ī			Setti	ng value	
_	No.	Setting name		Digital display	Specification
	19	Needle DOWN position priority stop signal	PSD	PSd	If input PSD is turned ON while the sewing machine is running, the needle will stop at the DOWN position after swing PSD stitches. The no. of stitches after PSD input is set by PSU the [P] mode of 130 page.
	20	Emergency stop signal	ES	85	If input ES is turned ON while the sewing machine is running, all running states will be canceled, and the sewing machine will stop with the brakes.
	21	One shot signal	SH	SH	If input SH is turned ON, one shot operation will start. The operation mode set in [P] mode SHM function will be entered .
Note1	22	Reverse run signal	CW	ER	If input CW is turned ON while running with pedal toe down or external run signal, reverse run will be enabled while the signal is ON.
Note i	23	Thread trimmer protection signal	S6	58	If input S6 is turned ON while the sewing machine is running, the sewing machine will stop. If input S6 is turned ON during thread trimming, the operation will be completed, and operation will not be possible until input S6 is turned OFF.
	24	Thread trimmer cancel signal	TL	۲۲	If pedal full heeling or thread trimmer signal S2 is turned ON while input TL is ON, the thread will not be trimmed. After the thread trimmer interlock time passes, the presser foot lifting operation will start. When TLS of [D] mode is ON, and TL signal is turned ON a little time, next thread trimming is prohibited only once.
	25	Low speed signal	SPL	SPL	If input SPL is turned ON while the sewing machine is running, the sewing machine will run at the speed set in low speed setting L while the signal is ON.
	26	Medium speed signal	SPM	SPN	If input SPM is turned ON while the sewing machine is running, the sewing machine will run at the speed set in medium speed setting M while the signal is ON.
	27	End tacking speed signal	SPB	5Pb	If input SPB is turned ON while the sewing machine is running, the sewing machine will run at the speed set in end tacking speed V while the signal is ON.
	28	High speed signal	SPH	SPH	If input SPH is turned ON while the sewing machine is running, the sewing machine will run at the speed set in high speed setting H while the signal is ON.
_	29	Variable speed signal	SPV	SPu	If input SPV is turned ON while the sewing machine is running, the sewing machine will run at a speed proportional to the variable speed voltage VC while the signal is ON.
	30	Tacking cancel signal	BTL	PLT	If input BTL is turned ON, start and end tacking will be prohibited while the signal is ON. When BTS of [D] mode is ON, and BTL signal is turned ON a little time, next tacking is prohibited only once.
	31	Start tacking cancel signal	SB	56	If input SB is turned ON, start tacking will be prohibited while the signal is ON. When BS of [D] mode is ON, and SB signal is turned ON a little time, next start tacking is prohibited only once.
lack	32	End tacking cancel signal	EB	ЕР	If input EB is turned ON, end tacking will be prohibited while the signal is ON. When BS of [D] mode is ON, and EB signal is turned ON a little time, next end tacking is prohibited only once.
	33	Backstitching during run signal	S7	57	If input S7 is turned ON while the sewing machine is running, backstitching (reverse feed) will start. Nothing will happen if input S7 is turned ON while the sewing machine is stopped.
	34	Backstitching during run signal	UDS	UdS	If input UDS is turned ON while the sewing machine is running, backstitching (reverse feed) will start. Half-stitch operation will start if input UDS is turned ON while the sewing machine is stopped.
Note2	35	Backstitching during run signal	US	US	If input US is turned ON while the sewing machine is running, backstitching (reverse feed) will start. Needle lift operation will start if input US is turned ON while the sewing machine is stopped.
	36	Backstitching signal [when running when stopped]	BSL	65L	If input BSL is turned ON when the sewing machine is running or stopped, backstitching (reverse feed) will start.
	37	Backstitching signal when running	UCR	UCr	If input UCR is turned ON while the sewing machine is running, backstitching (reverse feed) will start. 1 stitch operation will start if input UCR is turned ON while the sewing machine is stopped.

^{2.} The setting name will display in the ascending order with each press of the [C] key.


			Setti	ng value	
	No.	Setting name		Digital	Specification
		5		display	
	38	Backstitching signal when running	UBR	Ubr	If input UBR is turned ON while the sewing machine is running, backstitching (reverse feed) will start. 1 stitch operation with backstitching (reverse feed) will start if input UBR is turned ON while the sewing machine is stopped.
	39	Thread trimmer output confirmation signal	TON	lon	The thread trimmer output T can be turned ON or OFF only when the sewing machine is stopped. (Thread trimmer solenoid confirmation signal)
	40	Needle cooler output during rotation forced [OFF] signal	NCL	nEL	If input NCL is turned ON, the needle cooler output NCL during sewing machine rotation will forcibly be turned OFF.
	41	1 position priority signal	P12	P 15	1 position will be set forcibly.
	42	Weak brake [ON] signal	BK	ЬŁ	If input BK is turned ON, the weak brake will turn ON. Use this with the BK of the [D] mode set to [OF].
Note1	43	Sensor input signal	SEN	SEn	This is the cloth edge sensor input.
	44	Wiper output cancel signal	WL	RL	If input WL is turned ON, the wiper output W will not be output.
	45	Slow start signal	SL	5L	If the SL signal is ON, the slow start operation will be valid. Use this with the normal mode [B,SL] key set to [OF].
	46	Preset stitching forced [ON] signal	N	C	If input N is turned ON, preset stitching will start forcibly from that point.
\bigvee	47	Continuous tack stitching forced [ON] signal	CBT	ЕРС	If input CBT is turned ON, continuous backstitching will start forcibly from that point.
	48	Non-stitching feed input	FWD	FA9	If input FWD is turned ON, output OT3, output NCL and output FU will be turned ON forcibly. Output ROL and output PUL will be turned OFF forcibly.
	49	Up counter clear signal	CCU	EEU	If input CCU is turned ON, it clears an up counter in [0].
	50	Down counter clear signal	CCD	[[d	If input CCD is turned ON, it clears an down counter in [the setting value].
	51	Signal output to virtual output 1 during operation	IR1	ir 1	If input IR1 is turned ON, output OT1 turns ON only when the sewing machine is running.
	52	Signal output to virtual output 2 during operation	IR2	1. S	If input IR2 is turned ON, output OT2 turns ON only when the sewing machine is running.
	53	Signal output to virtual output 3 during operation	IR3	ir 3	If input IR3 is turned ON, output OT3 turns ON only when the sewing machine is running.
	54	Signal output to virtual output 1 when stopped	IS1	ıS I	If input IR1 is turned ON, output OT1 turns ON only when the sewing machine is stopped.
^	55	Signal output to virtual output 2 when stopped	IS2	·5 <i>2</i>	If input IR2 is turned ON, output OT2 turns ON only when the sewing machine is stopped.
	56	Signal output to virtual output 3 when stopped	IS3	,53	If input IR3 is turned ON, output OT3 turns ON only when the sewing machine is stopped.
	57	Signal output to virtual output 1	IO1	10 1	If input IO1 is turned ON, output OT1 will always be turned ON.
Note2	58	Signal output to virtual output 2	IO2	105	If input IO2 is turned ON, output OT2 will always be turned ON.
	59	Signal output to virtual output 3	IO3	103	If input IO3 is turned ON, output OT3 will always be turned ON.
	60	Signal output to virtual output 4	104	104	If input IO4 is turned ON, output OT4 will always be turned ON.
	61	Signal output to virtual output 5	IO5	105	If input IO5 is turned ON, output OT5 will always be turned ON.

Note1. The setting name will display in the descending order with each press of the [D] key.

^{2.} The setting name will display in the ascending order with each press of the [C] key.

			Settir	ng value	
	No.	Setting name		Digital	Specification
				display	
	62	Signal output to virtual output 6	IO6	108	If input IO6 is turned ON, output OT6 will always be turned ON.
Note1	63	Signal output to virtual output 7	107	٦٥،	If input IO7 is turned ON, output OT7 will always be turned ON.
	64	Signal output to virtual output 8	IO8	.08	If input IO8 is turned ON, output OT8 will always be turned ON.
	65	Signal output to virtual output 9	IO9	,o9	If input IO9 is turned ON, output OT9 will always be turned ON.
	66	Signal output to virtual output A	IOA	,oR	If input IOA is turned ON, output OTA will always be turned ON.
\	67	Signal output to virtual output B	IOB	юb	If input IOB is turned ON, output OTB will always be turned ON.
	68	Signal output to virtual output C	IOC	,o[If input IOC is turned ON, output OTC will always be turned ON.
	69	Signal output to virtual output D	IOD	ıod	If input IOD is turned ON, output OTD will always be turned ON.
	70	Signal output to virtual output E	IOE	·oE	If input IOE is turned ON, output OTE will always be turned ON.
	71	Signal output to virtual output F	IOF	ıoF	If input IOF is turned ON, output OTF will always be turned ON.
	72	Signal output to virtual output G	IOG	00،	If input IOG is turned ON, output OTG will always be turned ON.
	73	End tacking speed run signal	S5V	550	If input S5V is turned ON, the sewing machine will run at the speed set in end tacking speed V.
	74	Thread break detector input signal	THI	ſΗ,	It is possible to use as the input signal of thread break detector.
	75	Sensor stop input signal 1	PS1	P5 !	If input PS1 is turned ON while the sewing machine is running, the needle will stop after swing set stitches. The operation mode at stopping is set by PS1 in the P mode. The no. of stitches after PS1 input is set by [1.] in the P mode.
\uparrow	76	Sensor stop input signal 2	PS2	P52	If input PS2 is turned ON while the sewing machine is running, the needle will stop after swing set stitches. The operation mode at stopping is set by PS2 in the P mode. The no. of stitches after PS2 input is set by [2.] in the P mode.
	77	Thread trimmer and tacking cancel signal	TLB	LLP	If input TLB is turned ON, end tacking and thread trimming will be prohibited
	78	Variable speed run signal set to medium speed setting	SVM	Sun	The sewing machine can be operated at the variable speed set to medium speed M when this signal SVM is turned ON and during ON while machine operates.
Note2	79	Needle down signal	D	4	When needle down signal D is turned ON, needle down operation will start.
140162	80	Thread trimmer signal after reverse needle lift	URT	Urſ	Not used.

^{2.} The setting name will display in the ascending order with each press of the [C] key.

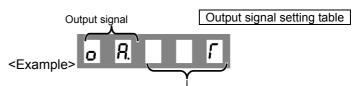

)utpu	t signal setting table			
		Setti	ng value	
No.	Setting name		Digital	Specification
1	Output for slow start	SL	ŠĹ	During the no. of the setting stitches, SL output is turned ON. The setting no. of stitches can select SLN on [P] mode or HOF on [G] mode by setting SLH on [F] mode
2	Run output 1	OP	٥	OP output is turned ON while the sewing machine is running (not including needle lifting during thread trimming) .
3	Run output 2	OP1	oP :	OP1 output is turned ON while the sewing machine is running. (not including needle lifting during thread trimming) OP1 output will turn ON during needle lifting when directly heeling.
4	Run output 3	OP2	oP2	OP1 output is turned ON while the pedal is toed down, the external operation signal (S0, S1, SH), full pedal heeling or thread trimming signal (S2) is ON.
5	Output for run signal	S1	5 !	S1 output is turned ON when the run signal is ON except during on 1 stitch sewing.
6	Output for blower	VAC		VAC output is turned ON during pedal full heeling or while thread trimmer signal S2 is ON.
7	Output for needle cooler	NCL	J	NCL output is turned ON while the sewing machine is running (including needle lifting).
8	Output for vacuum	VCM	υEΠ	VCM output is turned ON during pedal full heeling or while thread trimmer signal S2 is ON while the sewing machine is stopped.
9	Output for signal during tacking	ВТ	РL	BT output is turned ON during tacking.
10	Roller lift output	ROL	rol	ROL output is turned ON when presser foot lifter output FU is ON, backstitching output B is ON, or when input IO2 signal is ON. ROL output is turned ON while tacking and while thread trimming if RLM of [F] mode is ON.
11	Thread trimmer output	Т	١.	Thread trimming starts.
12	Thread release output	L	L	Thread release operation starts.
13	Wiper output	W	X	Wiper operation starts.
14	Backstitch output (Condensed stitch)	В	Ь	Backstitching (reverse feed) starts. (Condensed stitch)
15	[CH2] output	СН	ſΗ	CH2 output for chain stitches.
16	[TF] output	TF	ΓF	TF output for chain stitches. Refer to pages 93 and 94 for the output timing.
17	[KS1] output	KS1	£5 !	Behind operation signal ON, KS1 output is turned ON after the setting delay time. Refer to pages 95~97 for the output timing.
18	[KS2] output	KS2	F25	After the motor stopped, KS2 output is turned ON after the setting delay time. Refer to pages 95~97 for the output timing.
19	[KS3] output	KS3	٤53	After trimming and stopped up position, KS3 output is turned ON after setting delay time. Refer to pages 95~97 for the output timing.
20	[KS4] output	KS4	£54	Simple sequence output 4. Refer to pages 95~97 for the output timing.
21	[TB] output	ТВ	ГЬ	TB output for chain stitches. Refer to pages 93 and 94 for the output timing.
22	Presser foot lifter output	FU	FU	Presser foot lifter operation starts. The operation mode set in the [P] mode FUM function and FU function will be entered.
23	Output for UP position when stopped	UC	UE	UC output is turned ON if at the needle UP position when the sewing machine is stopped.
24	Needle UP position output	UPW	UPB	UPW output is turned ON if at the UP position when the, sewing machine is stopped, and while moving from the UP position to the DOWN position when the sewing machine is running.
	No. 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23	No. Setting name 1 Output for slow start 2 Run output 1 3 Run output 2 4 Run output 3 5 Output for run signal 6 Output for blower 7 Output for needle cooler 8 Output for vacuum signal 9 Output for signal during tacking 10 Roller lift output 11 Thread trimmer output 12 Thread release output 13 Wiper output 14 Backstitch output (Condensed stitch) 15 [CH2] output 16 [TF] output 17 [KS1] output 18 [KS2] output 19 [KS3] output 20 [KS4] output 21 [TB] output 22 Presser foot lifter output 23 Output for UP position when stopped 24 Needle UP position	No. Setting name 1 Output for slow start 2 Run output 1 OP 3 Run output 2 OP1 4 Run output 3 OP2 5 Output for run signal 6 Output for needle cooler 8 Output for vacuum signal 9 Output for vacuum signal 10 Roller lift output 11 Thread trimmer output 12 Thread release output 13 Wiper output 14 Backstitch output (Condensed stitch) 15 [CH2] output 16 [TF] output 17 [KS1] output 18 [KS2] output 19 [KS3] output 19 [KS3] output 20 [KS4] output 21 Presser foot lifter output 22 Presser foot lifter output 34 Needle UP position 36 UP1 36 UP1 37 UPW	Setting name Setting value Digital display Digital display Digital display Digital display Digital display Setting name Digital display Setting value Digital display Setting value Digital display Digital digplas Digital digplas Digital digplas Digital digplas Digital digital digital digital digital digital digital digital digital digital digital digital digital digital digital

^{2.} The setting name will display in the ascending order with each press of the [C] key.


			Setti	ing value	
	No.	Setting name		Digital	Specification
-	25	Needle DOWN	DNW	display	DNW output is turned ON if at the DOWN position when the, sewing
		position output		00	machine is stopped, and while moving from the DOWN position to the UP position when the sewing machine is running.
	26	Output for error occurrence confirmation	ERR	Err	This is output when an error occurs. (Note that this is not output when error code E9 occurs.)
Note1	27	Output for power [OFF] confirmation	IPF	'bt	Not used.
	28	Puller output	PUL	PUL	PUL output is turned ON during the presser foot lifter operation, during the IO2 output is ON.
	29	Count up output	CUP	[UP	When +1 up counter does, the [CUP] output is turned on.
	30	Thread break detector output	THO	ΓHo	When detecting thread break detector, THO output is turned ON. (When re-operation, the signal is turned off)
\downarrow	31	Vacuum output for holding thread	FUW	FUB	FUW output is turned ON during the presser foot lifter operation or during wiper operation.
	32	[NO] output	NO	0	Nothing is output.
	33	Virtual output 1	OT1	of I	OT1 output is turned ON according to each input specifications while inputs IO1, IR1 and IS1 are ON.
_	34	Virtual output 2	OT2	ol 5	OT2 output is turned ON according to each input specifications while inputs IO2, IR2 and IS2 are ON.
	35	Virtual output 3	OT3	of 3	OT3 output is turned ON according to each input specifications while inputs IO3, IR3 and IS3 are ON.
	36	[OT4]output	OT4	٥٢٧	OT4 output is turned ON according to each input specification while input IO4 is ON.
	37	[OT5]output	OT5	of 5	OT5 output is turned ON according to each input specification while input IO5 is ON.
	38	[OT6]output	OT6	of 6	OT6 output is turned ON according to each input specification while input IO6 is ON.
	39	[OT7]output	OT7	٥٢٦	OT7 output is turned ON according to each input specification while input IO7 is ON.
	40	[OT8]output	OT8	or 8	OT8 output is turned ON according to each input specification while input IO8 is ON.
	41	[OT9]output	ОТ9	org	OT9 output is turned ON according to each input specification while input IO9 is ON.
	42	[OTA]output	OTA	οſR	OTA output is turned ON according to each input specification while input IOA is ON.
	43	[OTB]output	ОТВ	οſЬ	OTB output is turned ON according to each input specification while input IOB is ON.
	44	[OTC]output	ОТС	of [OTC output is turned ON according to each input specification while input IOC is ON.
	45	[OTD]output	OTD	olq	OTD output is turned ON according to each input specification while input IOD is ON.
	46	[OTE]output	OTE	οΓE	OTE output is turned ON according to each input specification while input IOE is ON.
Note2	47	[OTF]output	OTF	οΓF	OTF output is turned ON according to each input specification while input IOF is ON.
	48	[OTG]output	OTG	٥٢G	OTG output is turned ON according to each input specification while input IOG is ON.
	49	[CUE] output	CUE	EUE	This output becomes ON when Up-counter becomes end. This output becomes OFF when "CCU" input is turned on.


^{2.} The setting name will display in the ascending order with each press of the [C] key.


			Setting value		
	No.	Setting name		Digital	Specification
Note1	50	[CDE] output	CDE	E d E	This output becomes ON when Down-counter becomes end. This output becomes OFF when "CCD" input is turned on.
	51	Output for the PSU counting	PSU	PSU	Output signal for the during PSU counting. PSU output will turn ON during the PSU counting.
\ \ \ \ .	52	Output for the PSD counting	PSD	PSd	Output signal for the during PSD counting. PSD output will turn ON during the PSD counting.
	53	Output for the PS1 counting	PS1	P5 !	Output signal for the during the sensor input signal PS1 counting. PS1 output will turn ON during the PS1 operation.
	54	Output for the PS2 counting	PS2	P52	Output signal for the during the sensor input signal PS2 counting. PS2 output will turn ON during the PS2 operation.
	55	[SPC] output for the reached setting speed	SPC	SPC	SPC output is turned ON when reached setting speed. The setting speed is set by [C.] in the C mode.
	56	[SPD] output for the reached setting speed	SPD	SPd	SPD output is turned ON when reached setting speed. The setting speed is set by [D.] in the C mode.
Note2	57	[SPE] output for the reached setting speed	SPE	SPE	SPE output is turned ON when reached setting speed. The setting speed is set by [E.] in the C mode.
	58	Always ON output	HI	Η.	In case of the power on, [HI] output is always ON.


2. The setting name will display in the ascending order with each press of the [C] key.

Notice The TF output and KS3 output timings are as shown below.

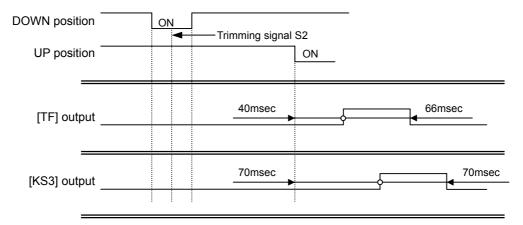

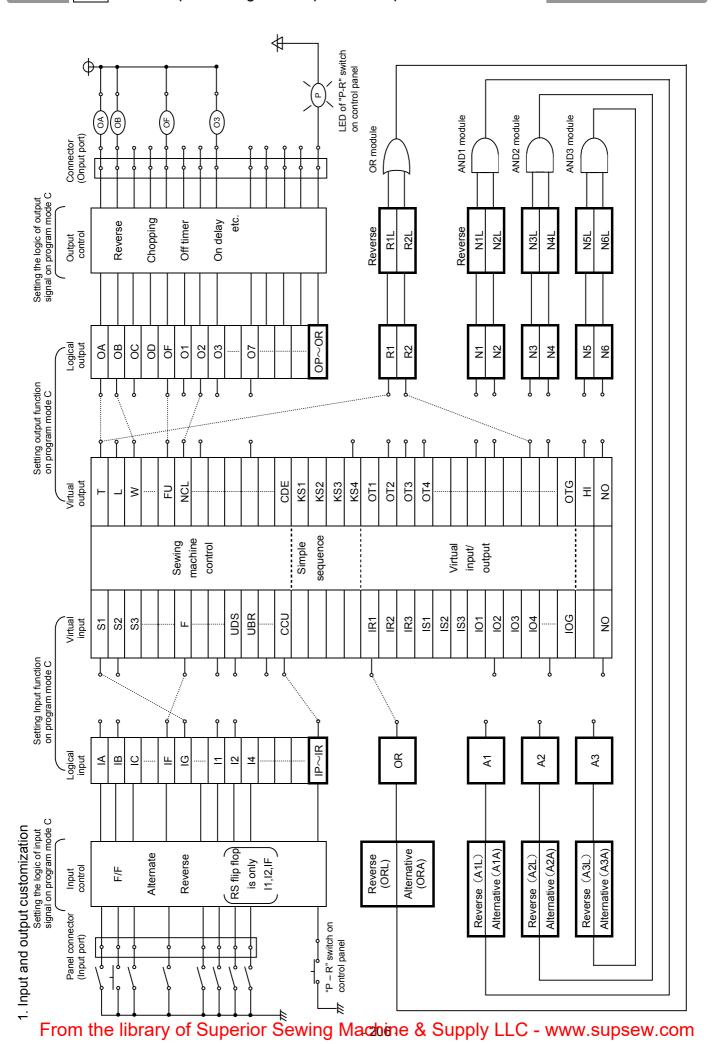


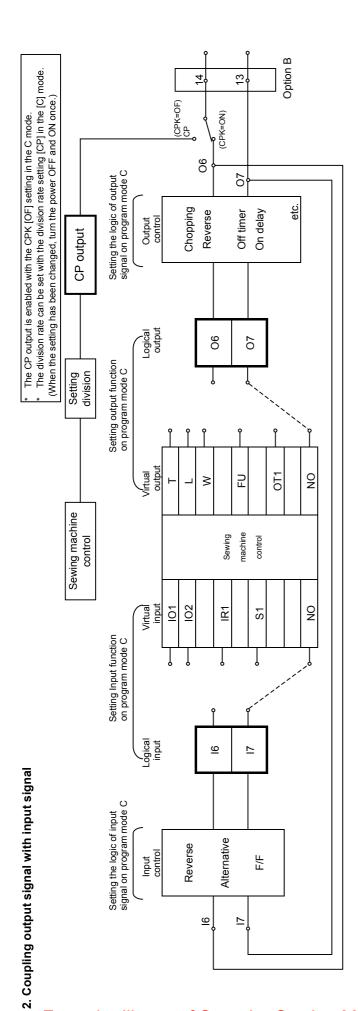

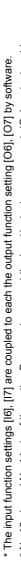


* No.13 pin and No.14 pin of the option B connector are not the input/output common port. (Only output port.)

* The factory settings of the output function settings [06], [07] and [16], [17] are all [NO].

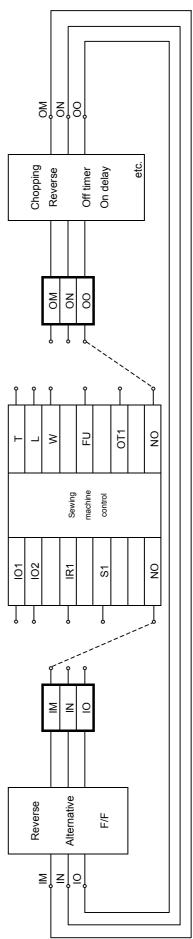


* The factory settings of the input function settings [IM], [IN], [IO] are all [NO].

* The input function settings [IM], [IN], [IO] are coupled to each the output function setting [OM], [ON], [OO] by software. * The factory setting of the output function settings [OM], [ON], [OO] are all [NO].

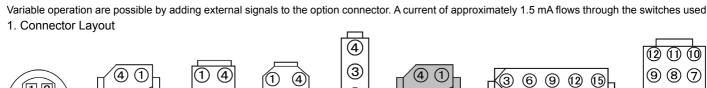



Control panel



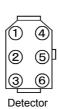

Option A Foot lifter

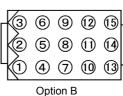

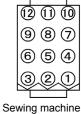

Lever (White)

Signal name	Factory setting		
0V	0V	1	
IG	S1 : Run (Variable speed)	2	<u>S1</u> →
IH	S2 : Thread trimming	3	S2
	S3 : Presser foot lifter	4	S3 External
VC	VC : Variable speed command	5	VC variable resister
+12V	+12V	6	

Communication / Control panel

· · · · · · · · · · · · · · · · · ·	
RXD1	1
RXD0	2
TXD1	3
0V	4
+12V	5
TXD0	6

Presser foot lifter

1 103301 1001 111101			F
OV	0V		· ·
IF	F : presser foot input	2	
OF	FU+ : presser foot lifter output +	3	(FU)
Oi	FU- : presser foot lifter output -	4	

E	n	CC	od	е
				-

Liicodei	
0V	1
EA	2
EB	3
+12V	4
Ground	5
-	6

Sewing machine

			Sewing machine unit
アース	Ground		<u> </u>
OB	W : Wiper output	2	- (w)-
+24V/(+30V)	+24V	3	
OA	T : Thread trimming output	4	<u> </u>
0V	0V	5	
ID	TL : Thread trimmer cancel input	6	
OD	L : Thread release output	7	(L) 'E
+24V/(+30V)	+24V	8	\$7
IE	S7 : Backstitch input	9	
O √/(+5V)	0V	10	
+24V/(+30V)	+24V	11	
OC	B : Backstitch output	12	B

Detector

1
2
3
4
5
6

Option A (Black)

0V	0V	1	PSU
IA	PSU: Up position stop input	2	
+12V/(+5V)	+12V	3	
IB	PSD : Down position stop input	4	PSD
04	UPW : Needle Up position output	5	UPW S0
IC	S0 : Low speed input	6	

Note 1 : Pin number 5 is for the signal output.

Option B

Option B			
0V	0V	1	14
14	No setting	2	
01	OT1 : Virtual output	3	VC2 O1 External variable
VC2	VC2 : Variable speed command	4	15 resister
15	No setting	5	11 10kΩ
I1	IO1 : Virtual input	6	
+5V/(+12V)	+5V	7	
+24V/(+30V)	+24V	8	0 2
12	U : Needle lift signal	9	
0V	0V	10	
+24V/(+30V)	+24V	11	
O2	NCL : Needle cooler output	12	02
07	No setting	13	07
O6/CP	No setting	14	06
O3	TF : "TF" output	15	03
			-

Note 2: Pin number 3,12,15 are for the solenoid output.

Note 3 : Pin number 13,14 are for the air valve output. (not for the solenoid output)

	1			ı	
Connector name	Pin number	The input/output signal name (Factory setting)		Physics input port name	Specification
	2	Variable speed run signal	S1	IG	This signal is equivalent to full toe down when using the pedal. It is operated at the speed which was set with the [C][D] key of control switch panel when the automatic operation AT is ON input S1 at the time of ON.
nector	3	Thread trimmer signal	S2	IH	This signal is equivalent to full heeling when using the pedal. When S2 is ON and thread trimming or needle UP position stop has been completed, the wiper will operate. After that, the automatic presser foot lifting will function while the signal is ON.
Lever connector	4	Presser foot lifter signal	S3	II	If input S3 is turned ON after trimming, the presser foot will lift. If input S3 is turned ON before trimming, the presser foot will lift after delay time. The delay time is set by S3D the [P] mode of the 132 page.
	5	Variable speed command voltage	VC1	VC1	It is speed regulation input from outside. By giving variable speed command voltage (0-11V), the speed which is proportional to the voltage is gotten.
	6	Constant voltage power supply	+12V	+12V	This is the power for the variable speed command. A DC12V (max.40mA) is out put.
	2	Wiper output	W	OB	Wiper operation starts.
ō	4	Thread trimmer output	T	OA	Thread trimming starts.
Sewing machine connector	6	Thread trimmer cancel signal	TL	ID	If pedal full heeling or thread trimmer signal S2 is turned ON while input TL is ON, the thread will not be trimmed. After the thread trimmer interlock time passes, the presser foot lifting operation will start. When TL of [D] mode signal is turned ON a little time and TLS setting is ON, next thread trimming is prohibited at once.
= =	7	Thread release output	L	OD	Thread release operation starts.
ac			 S7	IE	If in the C7 is turned ON while the couring machine is guaranteed by the plantific in the p
wing m	9	Backstitching during run signal	51	IE	If input S7 is turned ON while the sewing machine is running, backstitching (reverse feed) will start. Nothing will happen if input S7 is turned ON while the sewing machine is stopped.
Se	12	Backstitch output (Condensed stitch)	В	OC	Backstitching (reverse feed) starts. (Condensed stitch)
	2	Presser foot lifter signal	F	IF	If input F is turned ON, the presser foot lifter operation will start.
Presser foot lifter	3 4	Presser foot lifter output	FU+ FU-	OF	Presser foot lifter operation starts. The operation mode set in the [P] mode FUM function and FU function will be entered.
J.	2	Needle UP position priority stop signal	PSU	IA	If input PSU is turned ON while the sewing machine is running, the needle will stop at the UP position after swing PSU stitches and thread trimming. The no. of stitches after PSU input is set by PSU the [P] mode of 130 page.
necto	3	Constant voltage power supply	+12V	+12V	The constant voltage power supply. DC +12V (max.40mA)
Option A connector	4	Needle DOWN position priority stop signal	PSD	IB	If input PSD is turned ON while the sewing machine is running, the needle will stop at the DOWN position after swing PSD stitches. The no. of stitches after PSD input is set by PSD the [P] mode of 130 page.
Opti	5	Needle UP position output	UPW	O4	The UP position signal is output. This can be used as the signal for the stitch count, etc. The output voltage is DC 12V/5V (max. 10mA). The factory setting is 12V.
	6	Low speed run signal	S0	IC	If input S0 is turned ON, the sewing machine will run at the speed set in low speed [L].
	2	Nothing signal	NO	14	Factory setting is NO setting. Refer to the [C mode input signal setting table].
	3	Virtual output 1	OT1	O1	OT1 output is turned ON according to each input specifications while inputs IO1, IR1 and IS1 are ON.
	4	Variable speed command	VC2	VC2	This is the input for external speed command. By applying the variable speed command voltage, the speed that is relative to the voltage is obtained.
l .	5	Nothing signal	NO	15	Factory setting is NO setting. Refer to the [C mode input signal setting table].
Option B connector	6	Signal output to virtual output 1	IO1	I1	If input IO1 is turned ON, output OT1 will always be turned ON.
B con	7	Rated voltage power supply	+5V	+5V	A DC 5V is output (max.50mA). This can be used as the power source for the photoelectric switches in the amplifier.
Ĕ	9	Needle lift signal	U	12	If input U is turned ON, the needle lift operation will start.
Optio	12	Output for needle cooler	NCL	02	NCL output is turned ON while the sewing machine is running (including needle lifting).
	13	Nothing output	NO	07	This port is for the air valve output. And it is an input/output coupling port. Factory setting is NO setting. Refer to page 207.
	14	Nothing output	NO	O6/CP	This port is for the air valve output. And it is an input/output coupling port. Factory setting is NO setting. Refer to page 207. When using as the CP output, make 159 page C mode CPK OFF setting.
1	15	[TF] output	TF	O3	TF output for chain stitches. Refer to pages 93 and 94 for the output timing.
		C. A. C. T. C. C.	•		i i i i i i i i i i i i i i i i i i i

3. To use as a standing work type sewing machine. (Turn the program mode [C] function [PDS] ON.)


The sewing machine can be used as a standing work type sewing machine with the three connections below using the lever connector. However, take special care to the intrusion of noise, and use the shortest wiring possible.


[Note: Procedure for changing the lever connector]

- Be sure to turn OFF the power switch when connecting or disconnecting the lever connector.
- Do not connect the lever connector when you set the function [PDS] to ON in the program mode [C] (Direct call number = "530")

[Basic procedure]

- (1) Disconnect the lever connector after turning OFF the power switch
- (2) Turn ON the power switch and then, set the function [PDS] to ON. The lever connector still disconnects.
- (3) Connect the lever connect after turning OFF the power switch.
- (4) Turn ON the power switch and confirm the operation.
 - ※ When the error code MA is displayed, press D key and then, it is released.
- (1) When operating with an external variable resistor (Control switch panel [auto] and AT in [P] mode is OFF)
- (2) For operating with a high speed (Control switch panel [auto] and AT in [P] mode is ON)

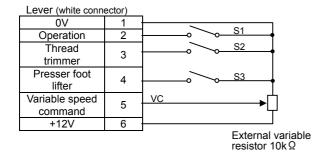


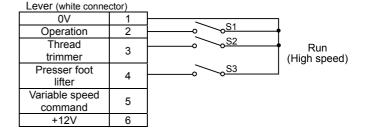

(3) When operation with high speed and inching (Control switch panel [auto] and AT in [P] mode is OFF)

A) When using the lever connector

B) When using the lever connector and the option connector

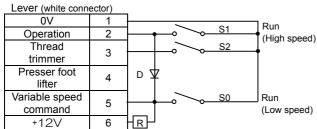

D: Equivalent to 1S953 (NEC) (VR>30V. IF>30mA) R:1k Ω 1/2W or higher

Lever (white conne	ctor)		
0V	1	S1	
Operation	2	<u>S1</u>	
Thread trimmer	3	\$2	Run
Presser foot lifter	4	<u>S3</u> ((High speed)
Variable speed command	5		
+12V	6	<u> </u>	
		_	

Option A (black connector) 0V 2 3 4 5 Operation 6 (low speed) Inching

28 Error Display

When the control box detects an error, the error code is flickered on the control switch panel display. Confirm the error code, and investigate with the following table.

Error code		Probable cause	Inspection		
		Is the power voltage too low?	Check the power voltage.		
Purof		Is the power supply capacity too small?	Check the power supply capacity.		
/POWER.OF		Note: It does this display when power supply is turned OFF, but this is not an error.			
E 1		Is the wire to the motor short-circuited?	Check the motor wiring.		
	/ E1	Is the sewing machine load torque too high?	Check the sewing machine.		
53		Is the power voltage too high?	Check the power voltage.		
ı	/ E2	Is the sewing machine inertia too high?	Lengthen the deceleration time.		
		Is the connector to the motor encoder securely inserted?	Check the connector insertion.		
	/ E3	Are the signals from the motor encoder broken ?	Check the ECA and ECB signal.		
63			(Refer to the E mode.)		
		Is the sewing machine locked?	Check the sewing machine.		
		Is the motor locked?	Check the motor.		
E 4 _{/ E4}		Is the motor connector securely inserted?	Check the motor connector insertion.		
		Are the signals from the motor connector correct?	Check the motor connector.		
88	/ E6	Is an extraordinary signal inputted? (The signal as it repeats ON/OFF at the high frequency.)	Check the input signal.		
		Does the noise from outside enter an input signal?	Remove a noise source.		
		Is the position detector connector securely inserted?	Check the detector connector insertion.		
88 / E8	/ E8	Are the signals from the detector broken?	Check the detector UP/DOWN signals.		
		(UP/DOWN signal interruption)	(Refer to the E mode.)		
E 9		Is the solenoid wiring short-circuited?	Check the solenoid wiring.		
ני	/ E9	Solenoid defect (coil defect)	Replace the solenoid.		
E 11	/ E11	Is the fuse for +12V power supply broken?	Check the fuse for the 12V power supply.		

*E11 error code is not confirmed on the control switch panel when it happens because the LEDs on the control switch panel is turned OFF, but the status display LED on the control box flickers in orange colored as the interval of 0.3 sec. It will be confirmed in error code history after returning to a normal condition.

0.5	An error of the copy mode using the control switch panel.	
115 / M5	Is the control switch panel connector securely inserted?	Check the connector insertion.
	The voltage or the type of control switch panel is difference.	Check the voltage and the type are right.
ПЯ / MA	The position data of the lever unit is defective. When power supply is turned ON, the pedal is not neutral position. (The status display LED on the control box turn on in orange colored.)	The pedal is neutralized. (It returns automatically 1 second later.) (Refer to the VCSET setting (page 39).)

Others	Probable cause	Inspection		
	Are the operation signals from the lever unit broken?	Check the lever unit signal. (Refer to [E] mode S1 signal.)		
The sewing machine does not run when the pedal pressed.	Is the input signal S6 broken ?	Check the status display LED. If flickering, reset the signal.		
		Confirm the sewing machine connector.		
	It does not display 99 in normal mode.	Change 99 using control box [D] key.		
The sewing machine does not	le the veriable aread valters with the nedel tood down low?	Check the variable speed voltage. (Refer to [E]		
run at the high speed.	Is the variable speed voltage with the pedal toed down low?	mode.)		
	Is the motor pulley diameter too small?	Check the motor pulley diameter.(Refer to [5]-3)		
The thread is not trimmed even	Is the thread trimming signal (S2) from the lever unit broken?	Check the signal S2. (Refer [E] mode.)		
with heeling.	Is the cancel thread trimmer operation S2L(mode[P]) ON?	Set S2L(mode[P]) to OFF.		
with fleeling.	Is the trim key of the control switch panel OFF?	Set the trim key to ON.		
	Is the light heeling signal (S3) or the thread trimming signal (S2) from the lever unit broken?	Check signals S2 and S3. (Refer [E] mode.)		
The presser foot lifter output	Is the presser foot lift signal (F) broken?	Check signal F. (Refer [E] mode.)		
does not operate.				
	Is the presser foot output (FU) broken?	Check FU output. (Refer [E] mode.)		

29 Specifications

Voltage and Frequency Specifications			ind Frequency	110V single phase 50/60 Hz	230V single phase, 3-phase 50/60 Hz	
	Model name			XL-G554-10 (Y)	XL-G554-20 (Y)	
	Voltage		age	100 to 120 V	200 to 240 V	
Motor		Rated output		550W		
IVIOIOI		Rated t	orque	1.47N•m (0.15kg•m)	
	Rated speed		speed	3,600) rpm	
		Wei	ght	6.9 kg (N	fain unit)	
	Model name General purpose automatic thread trimmer		matic thread	XC-GMFY-10-05	XC-GMFY-20-05	
	Voltage		age	100 to 120 V	200 to 240 V	
Control	Speed control range		Sewing machine shaft	70 to 4,000 (MAX 8,999) rpm		
box			Motor shaft	·	600 rpm	
			voltage	DC 24 \		
		•	ing Voltage	±10%		
	Am	bient tei	mperature	5 \sim 40 $^{\circ}$ C		
	Ambient humidity Storage temperature		numidity	30 \sim 95%RH (with no dew condensation)		
			nperature	-25 \sim 55°C (no freezing)		
		Altitude		Under 1000m above mean sea level		
	Weight			3.5kg (Main unit)		
Position detector			or	XC-KE-01P		

Solenoid output

Colonaid	Impedance (Ω)			
Solenoid	24VDC Setting	30VDC Setting		
OF (Presser foot lifter output FU)	8 or more (continuous time rating)	10 or more (continuous time rating)		
OA (Thread trimming output T)	4 or more (short time rating)	5 or more (short time rating)		
OB (Wiper output W)	4 or more (short time rating)	5 or more (short time rating)		
OC (back stitch output B)	4 or more (short time rating)	5 or more (short time rating)		
OD (Thread release L)	4 or more (short time rating)	5 or more (short time rating)		
O1 (Output)	4 or more (short time rating)	5 or more (short time rating)		
O2 (Needle cooler output NCL)	4 or more (short time rating)	5 or more (short time rating)		
O3 (TF output TF)	4 or more (short time rating)	5 or more (short time rating)		

Note 1. In the brackets of solenoid output, it is a factory setting.

2. The continuous time rating of "OF" output is 50 percentage of chopping duty.

3. The maximum output current rating is 3.0A for 24VDC and 2.4A for 30VDC.

4.24VDC setting is a factory setting.

Rated output current of value output

Rated maximum output current O6, O7: Total maximum current is 0.3 A.

<Re

R <u>eference> Table</u>	of digita	al displa	y							
No.	0	1	2	3	4	5	6	7	8	9
Digital display	0	1	2	3	T	5	5	C -	8	9
No.	Α	В	С	D	E	F	G	Н	I	J
Digital display	R	Ь		ъ	E	F	G	H	•	J
No.	K	L	М	N	0	Р	Q	R	S	Т
Digital display	٢	1	Π	C	0	P	9	Ļ	5	[
No.	U	V	W	Х	Υ	Z				
Digital display	U	J	8	11	7	111				

Options	Model name	Specifications
Control panel	XC-G500-Y	"XC-G500-Y" and "XC-G10" cannot be used together.
Automatic presser foot lifter	XC-FM-2	Electromagnetic type (for 24V)
inter	XC-FM-3	It is possible to use it for LS2-1380. (for 24V)
	LE-FA	Pneumatic type (common for 30V/24V)
Variable speed pedal	XC-CVS-2	3-series pedal, for standing operation sewing machine
Lever unit	XC-GL-1-SET	For one-step pedal heeling
(separated type)	XC-GL-2-SET	(installation plate, extension cable set) For two-step pedal heeling (installation plate, extension cable set)

Extention cable	Parts No.
Motor cable 1.0m (for 200V)	K14M52158002
Detector cable 0.6m	K14M71324830
Encoder cable 1.0m	K14M71725402
Detector cable for Singer machine	K14M72025530
Sewing machine cable for Basting machine	K14M72025730

Installation plate	Parts No.	Specifications
Mounting plate of motor	K14M72354001	XL-G554 motor and old control box
and control box	K14M72354101	Old motor and XC-GMFY control box

1. Motor assembly

(1) Clean periodically the dust filter in Fig. 1.

(Clogged filter causes the overheat of motor.)





Fig. 1 Dust filter

(2) Internal inspection of motor

There is no need to disassemble the motor normally. However, when the revolution is not smooth, abnormal noises are generated or the encoder is replaced, inspect it with following procedures.

- 1) Turn off the power.
- 2) Remove the belt cover, belt and motor pulley.
- 3) Disassemble the motor from the sewing machine table.
- 4) Remove the end cover mounting screws (3 pcs.). (Fig. 2.)
- 5) Remove the end cover and check for any foreign substance on the motor cooling fan, motor shaft, etc. or looseness of motor cooling fan mounting screws. To remove the motor cooling fan, unfasten the mounting screws. (Fig. 3)



Fig. 2 Cover mounting screw


Caution

Encoder appears (Fig. 4) as the motor cooling fan is removed. Since the encoder is a highly sensitive component, a sufficient care should be taken not to apply a strong shock when the motor inside is cleaned or the motor cooling fan is removed. If the motor cooling fan mounting screws become loose, abnormal noises may be generated. Lock them securely to avoid loosening. (appropriate tightening torque is about 3 N-m.) Use the screw lock agent when they are fastened.

6) When the encoder sensor is replaced, remove the encoder sensor mounting screw A, B and encoder lead wire mounting screws. (Fig. 4) When the sensor is installed, keep pressing the sensor against the sensor stop on the motor frame (toward the motor shaft) and lock the sensor mounting screw A first and B next.



Fig. 3 Motor cooling fan mounting screw

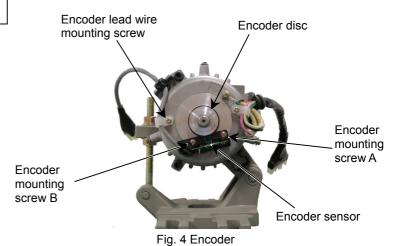

As the screws A and B are locked orderly while the motor frame stop is pressed against the sensor stop of motor frame, the gap between the sensor and the disc is determined automatically.

Since the encoder sensor (Fig. 5) is a highly sensitive component, a sufficient care should be taken not to damage it.

Motor frame stop

Fig. 5 Encoder sensor

Caution

When replacing only the encoder sensor section, the work can be done without removing the motor cooling fan explained on the previous page. When the fan has been removed, always apply a screw locking agent to fix it.

- 7) When the encoder disc is replaced, remove the disc set screws using a small hexagon wrench. To install the encoder disc, adjust the gap between the encoder disc and the encoder sensor at 0.14 ± 0.04 mm (Fig. 6) and adjust the space between the encoder disc and the motor frame at 10.0 ± 0.1 mm and fasten the lock screw. If the difference of this gap is larger, the encoder may fail to detect the motor revolution. Make sure to install it precisely.
- 8) When the bearing is replaced, remove first the encoder sensor and the disc. Remove next the encoder, then the lead wire mounting screws, motor frame lock screws and disassemble the motor frame. (Fig. 7) Separate the bearing from rotor and install a new bearing. Since the special type bearing is used, contact us if you have none in stock. After the bearing has been replaced, assemble in the order of encoder disc and encoder sensor with reference to the steps 6) and 7) above.


Lock screw $-0.14 \pm 0.04 \text{ mm}$ Encoder disc Encoder sensor $10.0 \pm 0.1 \, \text{mm}$ Motor framé Sensor stop of Motor shaft motor frame

Fig. 6 Installation of encoder disc

Caution


Fix securely the motor frame lock screws with the torque of more than 6 N-m.


9) Assemble the components in the reverse order of removal.

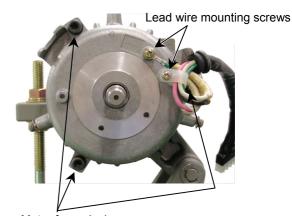

Motor frame lock screws

Fig. 7 Disassembly of motor

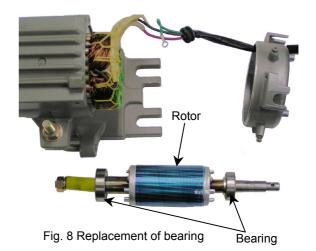

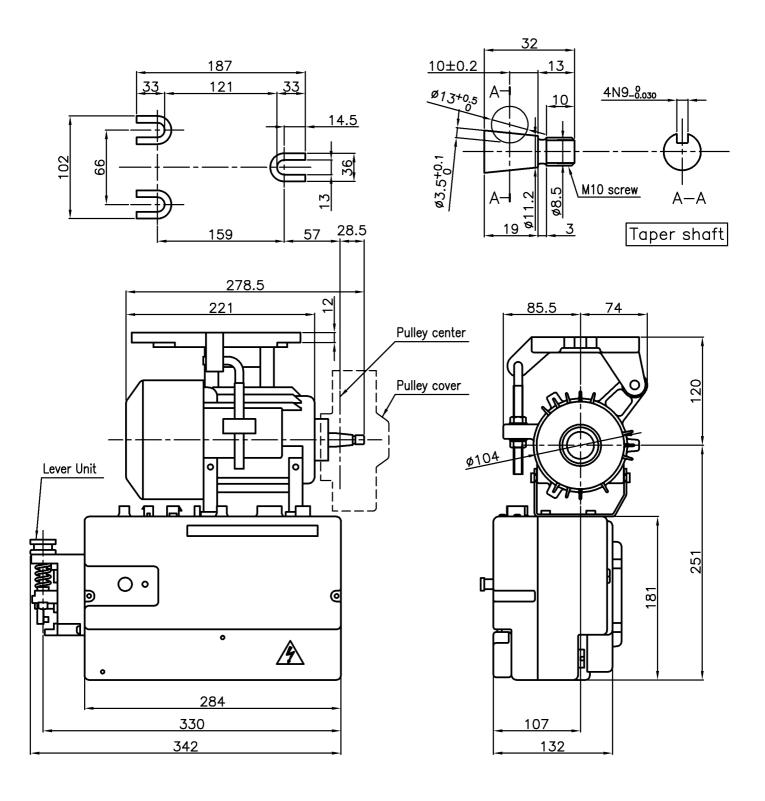



TOKYO BLDG. 2-7-3,Marunouchi Chiyoda-ku Tokyo 100-8310,Japan FAX +81-3-3218-6821